

Buenos Aires 2.0

DESCRIPTION

Shower cubicle with double 4-door book door with total free-entry opening, combined with fixed side panel. 190 cm high, adjustable on both sides, 6 mm tempered glass with easy-clean anti-limescale treatment indicated by special labels. Corner installation.







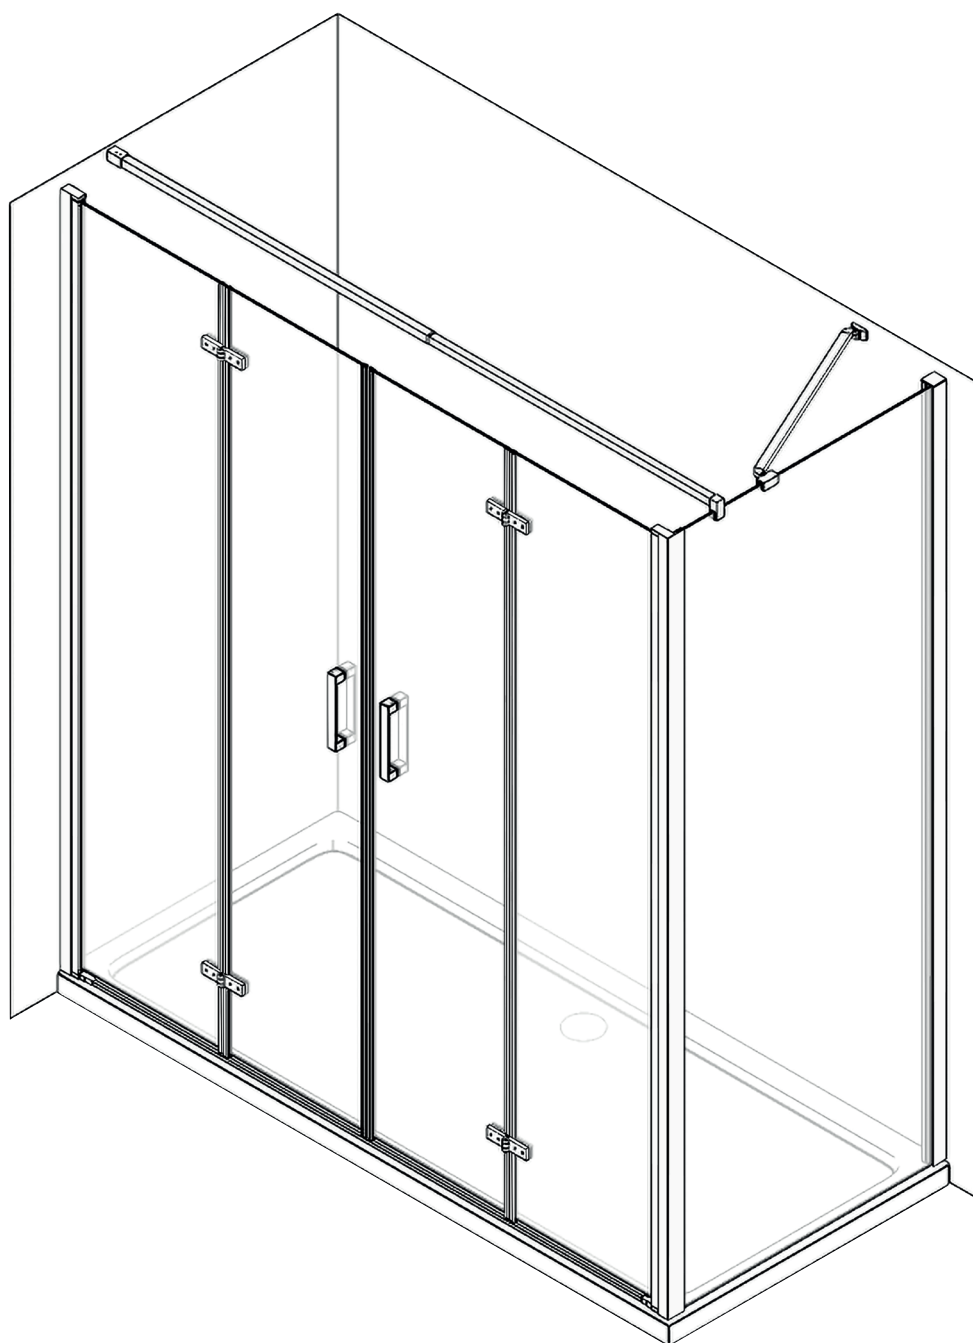


TABLE OF MEASURES


MODEL	MEASURES A
110	1085 - 1120
120	1185 - 1220
130	1285 - 1320
140	1385 - 1420
150	1485 - 1520
160	1585 - 1620
170	1685 - 1720
180	1785 - 1820
190	1885 - 1920

FIXED WALL	MEASURES B
65	625 - 650
67.5	650 - 675
70	675 - 700
75	725 - 750
77,5	750 - 775
80	775 - 800
85	850 - 875
90	875 - 900
100	975 - 1000












REVERSIBLE

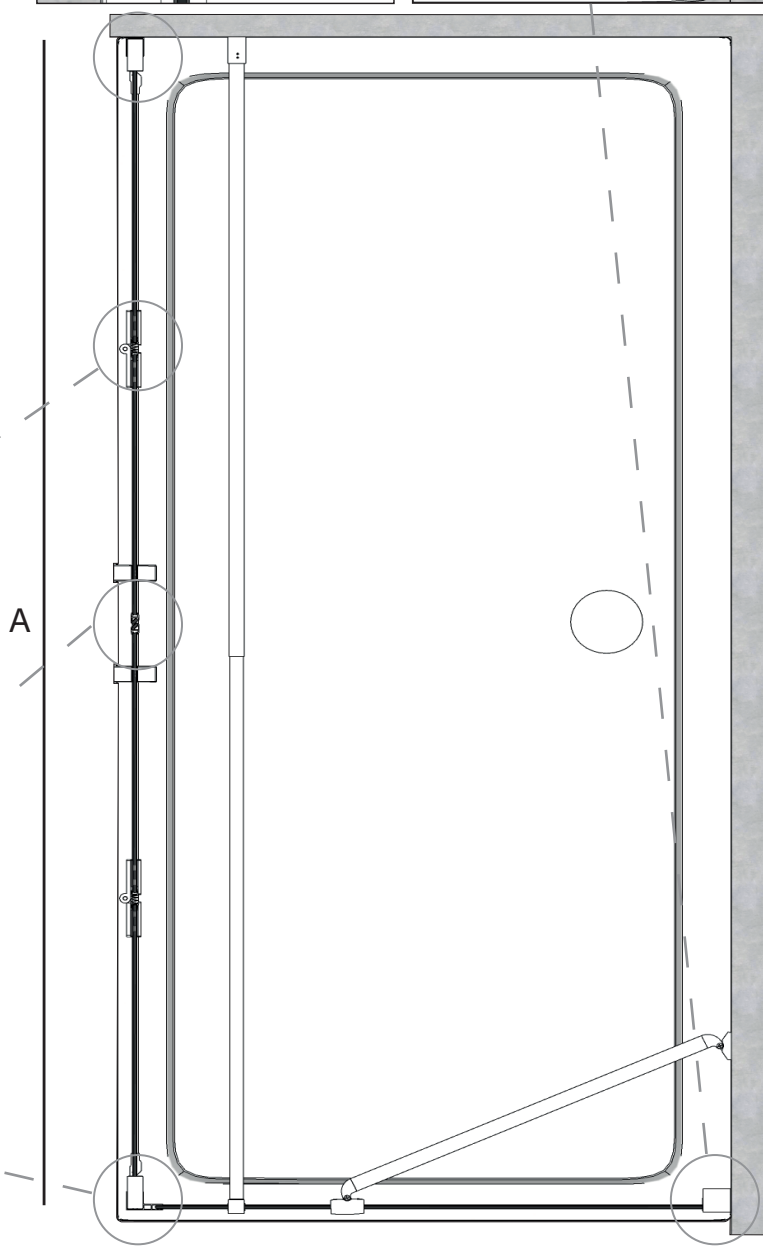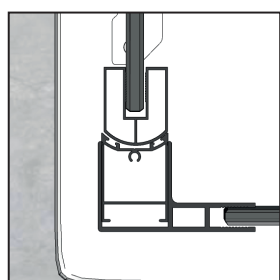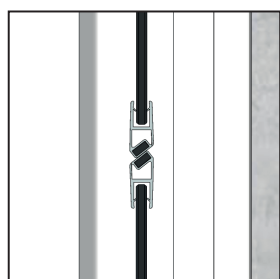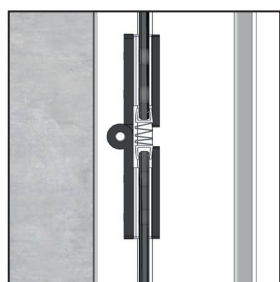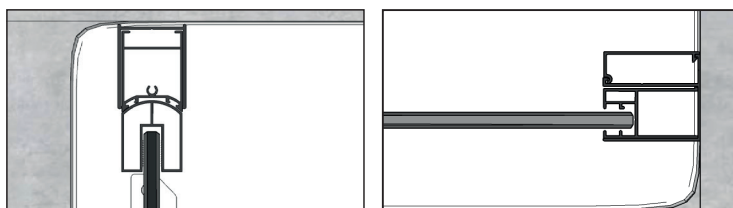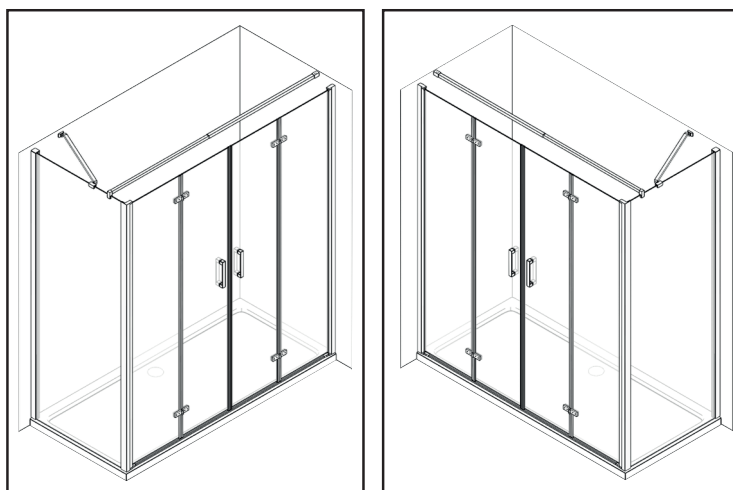

TOOLS REQUIRED

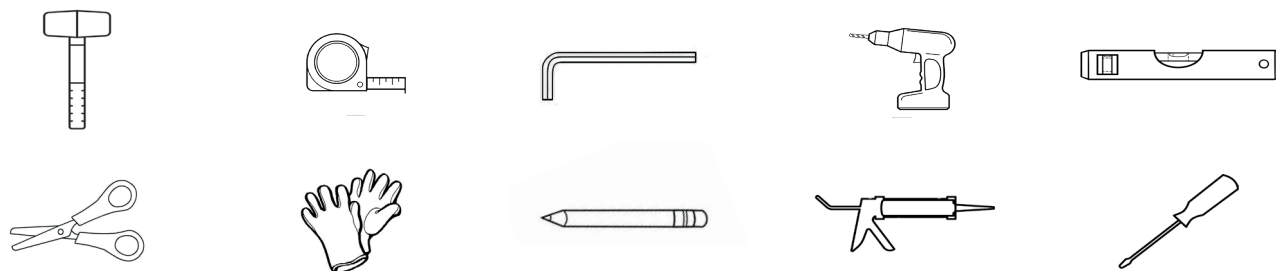

PACKAGE CONTENT (product shipped in three packages)

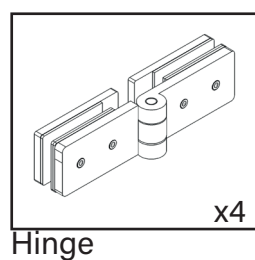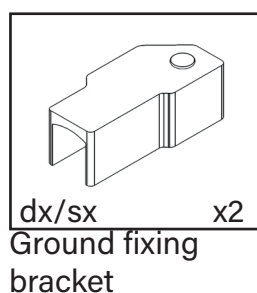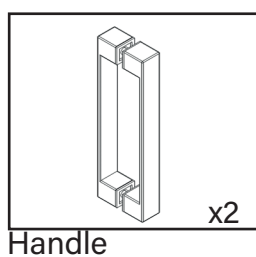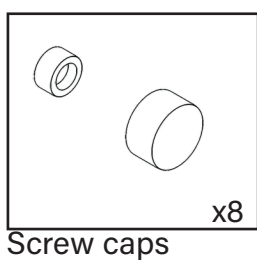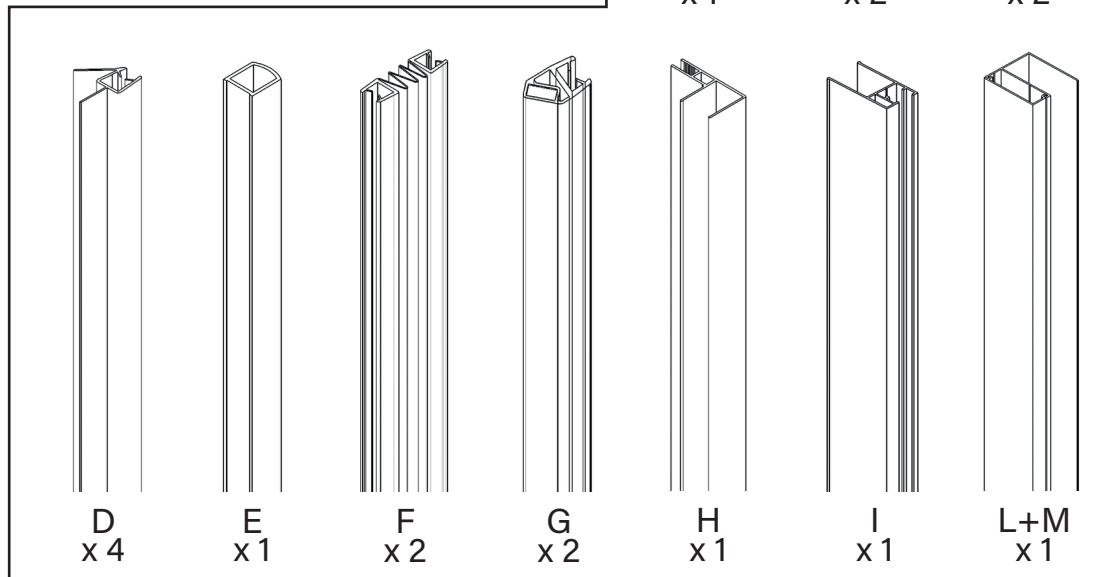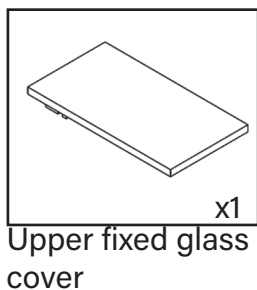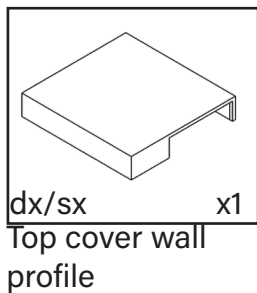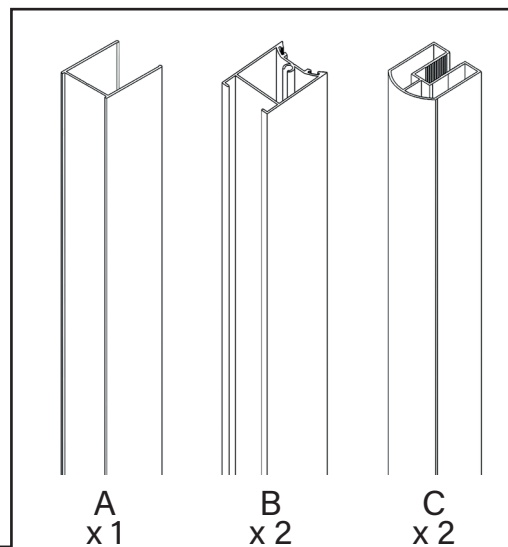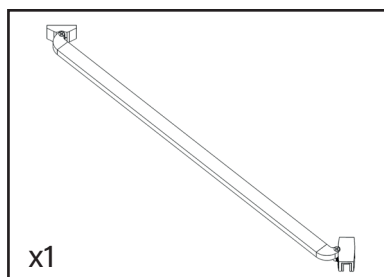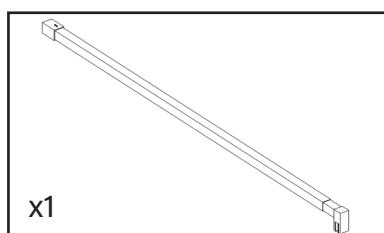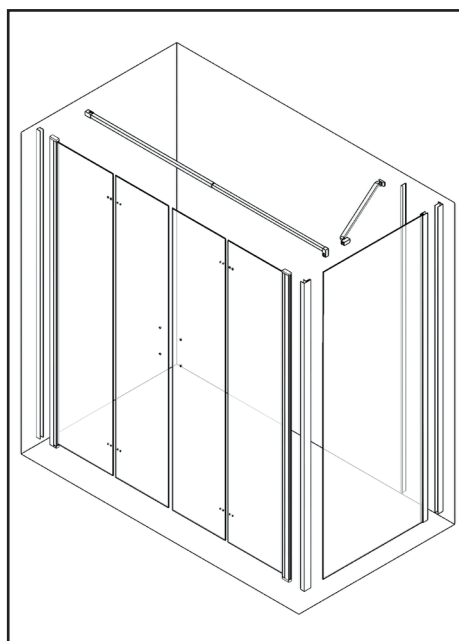





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the two profiles on the wall and use the plumb level .
3. Mark the holes in the wall with a pencil .
4. Drill the holes in the wall.
5. Insert the wall plug and screw in the screws to secure the profiles.


IMPORTANT

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimum aesthetic and functional result.

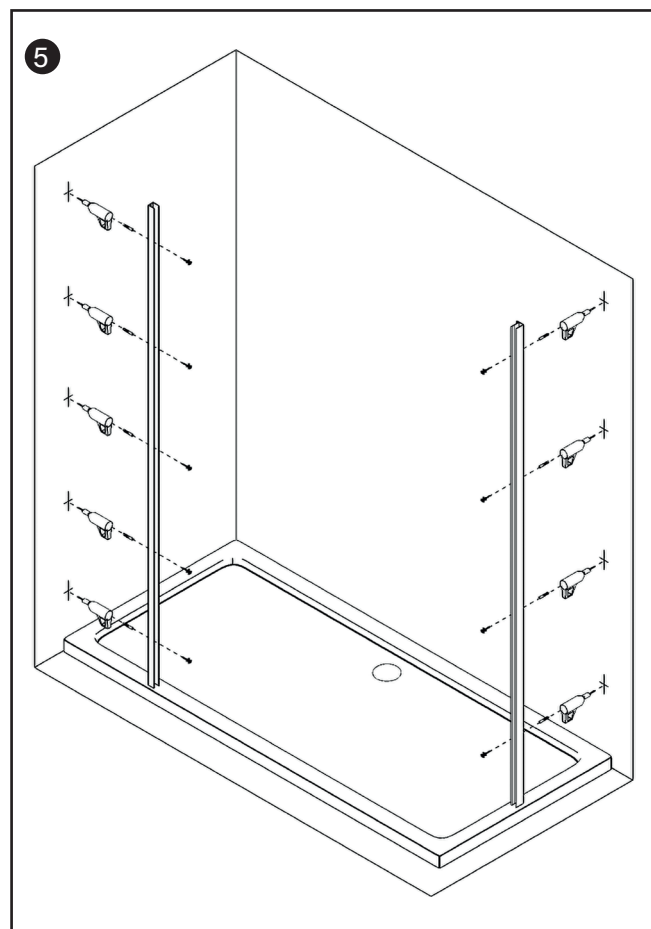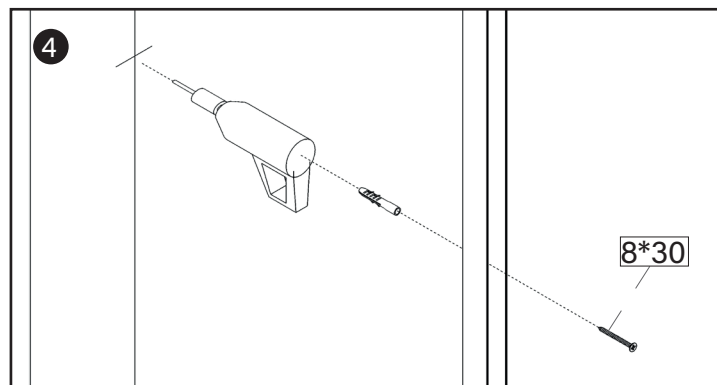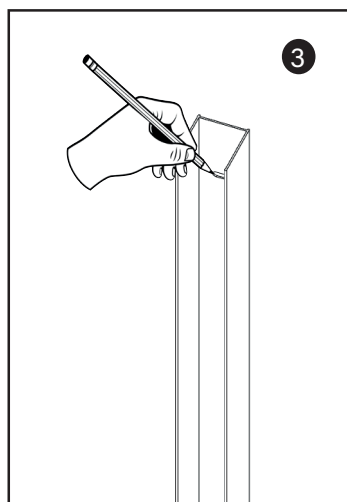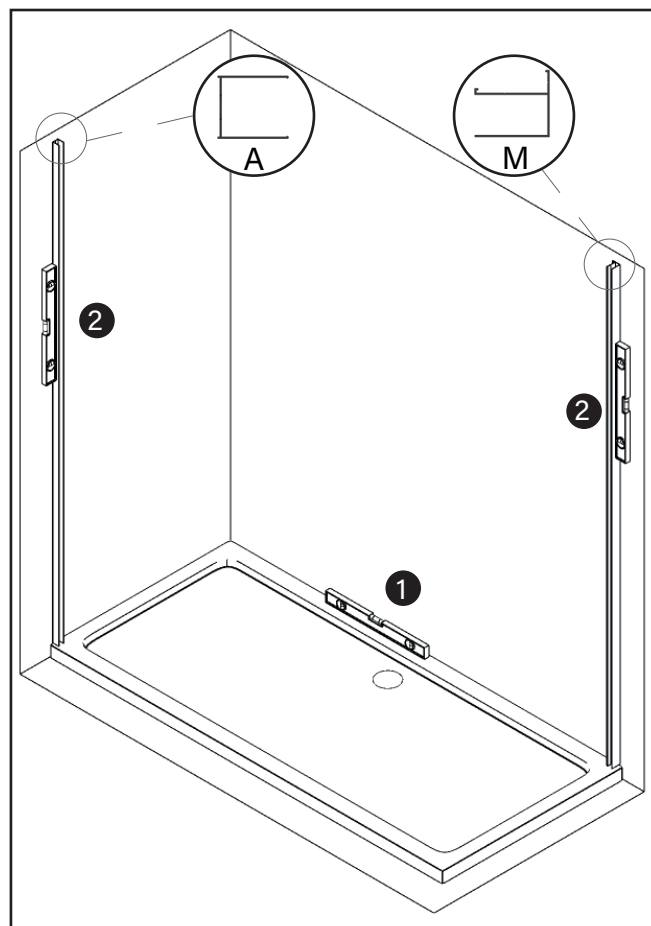

2° PASSAGE


1. Apply silicone in the groove of the angle profile.
2. Insert the fixed glass inside the corner profile.

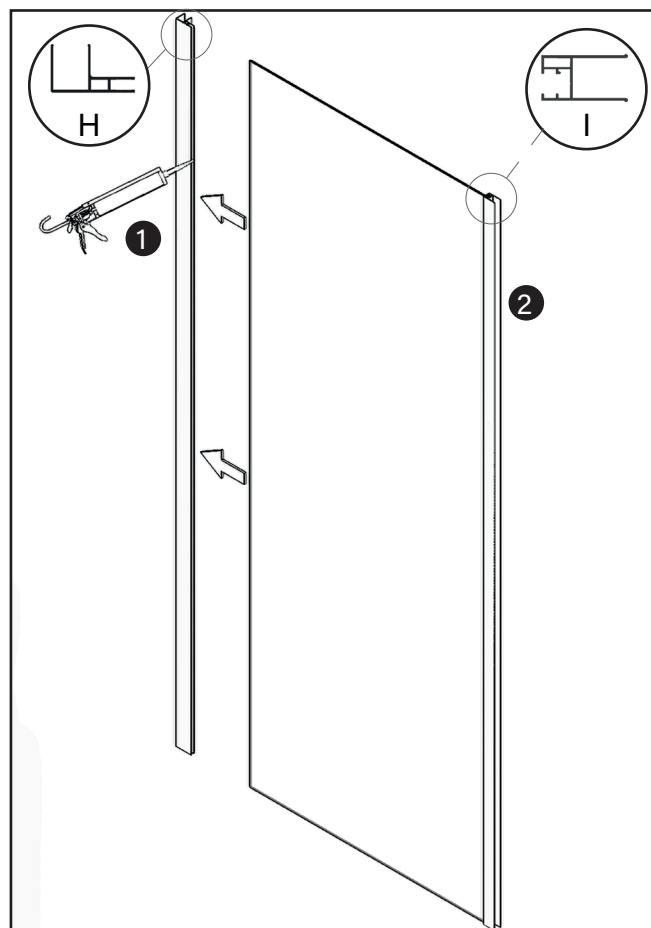

3° PASSAGE

1. Install the fixed wall to the previously fixed wall profile.








NOTE: *nothing goes under the fixed slab, it must be placed and siliconed from the outside.*

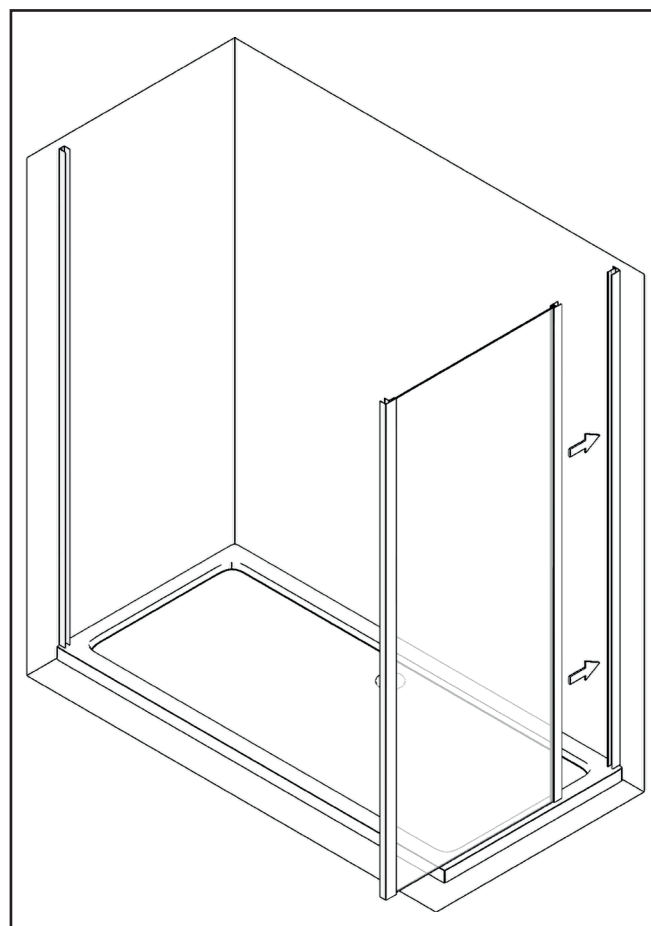

4° PASSAGE


1. Position the horizontal retaining bar holder on the wall and mark the hole with a pencil.
2. Drill the hole in the wall with the drill, insert the wall plug and screw in the screws to secure the bracket.
3. Insert the bar into the bracket and secure it with the hexagonal key.
4. Position the horizontal holding bar on the fixed wall, adjusting the extension by acting on the telescope.
5. Tighten the screws for fixing to the glass.
6. Secure the bar with the hexagonal key.

Note: the horizontal sealing bar is essential for the correct sealing of the shower enclosure, it guarantees resistance to stress on the fixed glass.

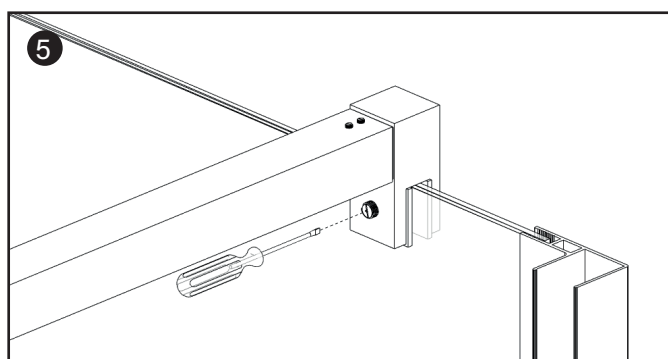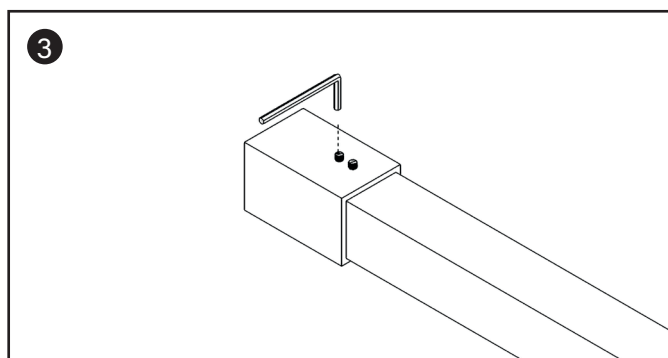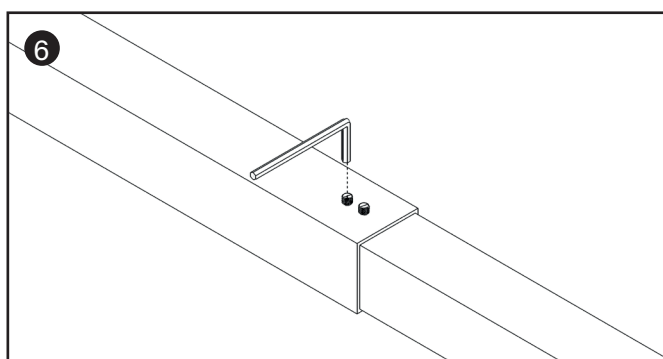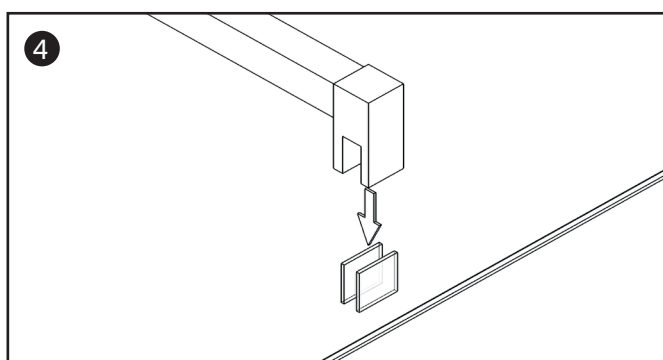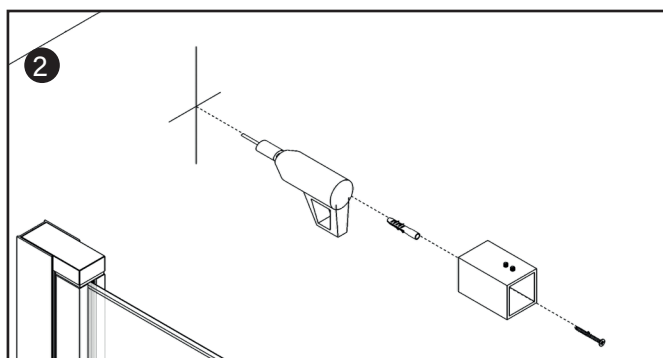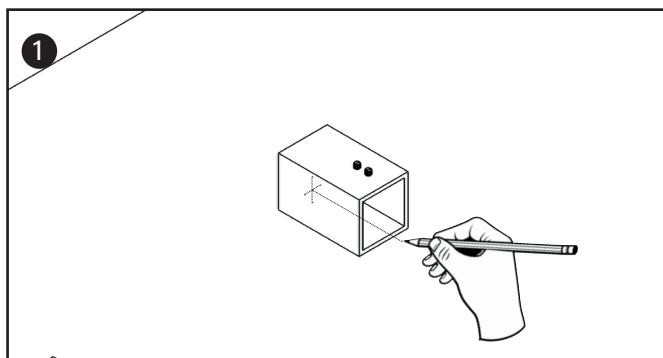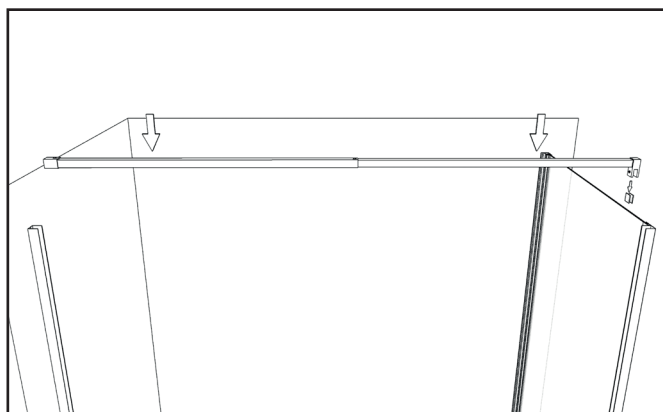



5° PASSAGE

1. Position the two panes, one inside the wall profile, the other inside the previously assembled corner profile.

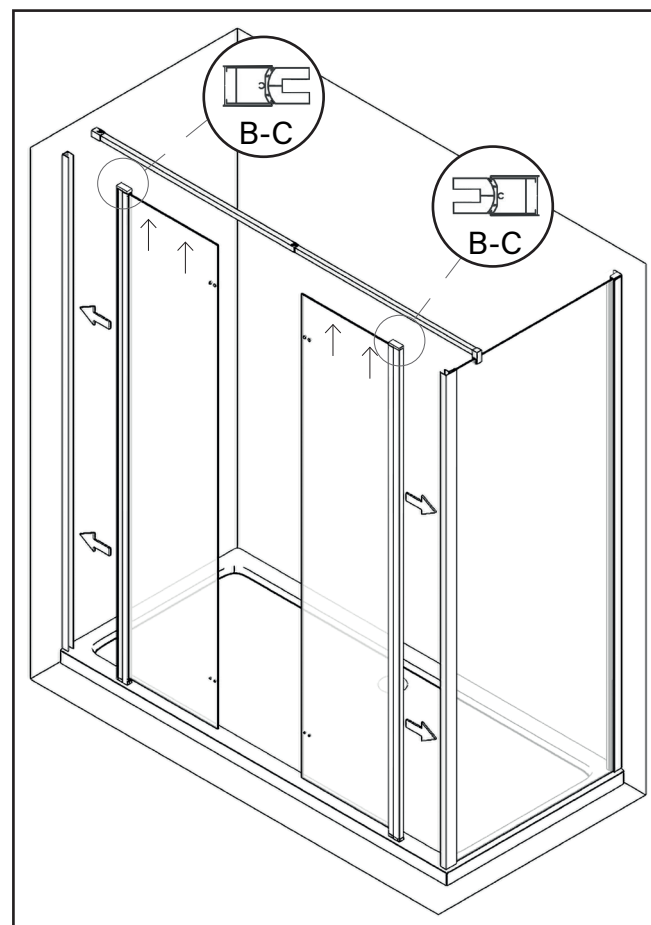



6° PASSAGE

1. Place the hinges on the two panes, one above and one below, and fasten them as shown.
2. Insert the drip seals under the glass panes.

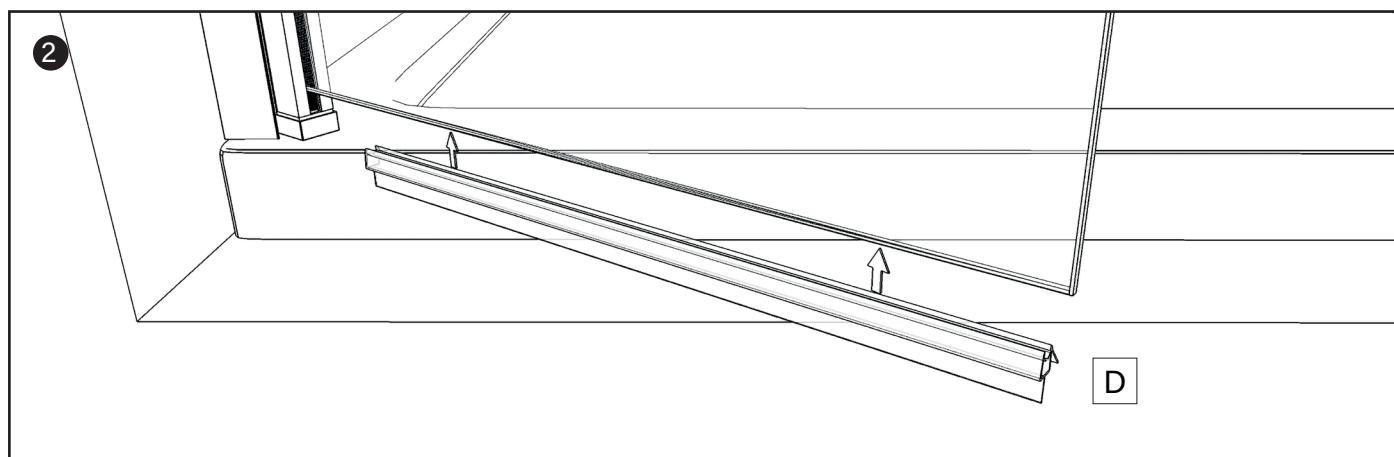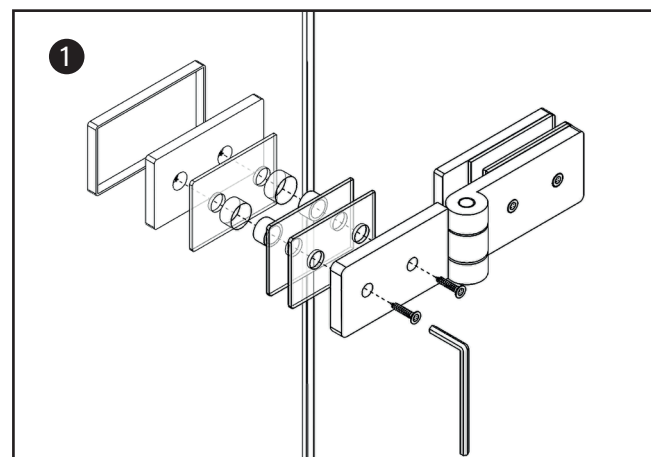



7° PASSAGE

1. Position the glass on the closing side of the door.
2. Complete the fastening of the hinges to the glass as shown.

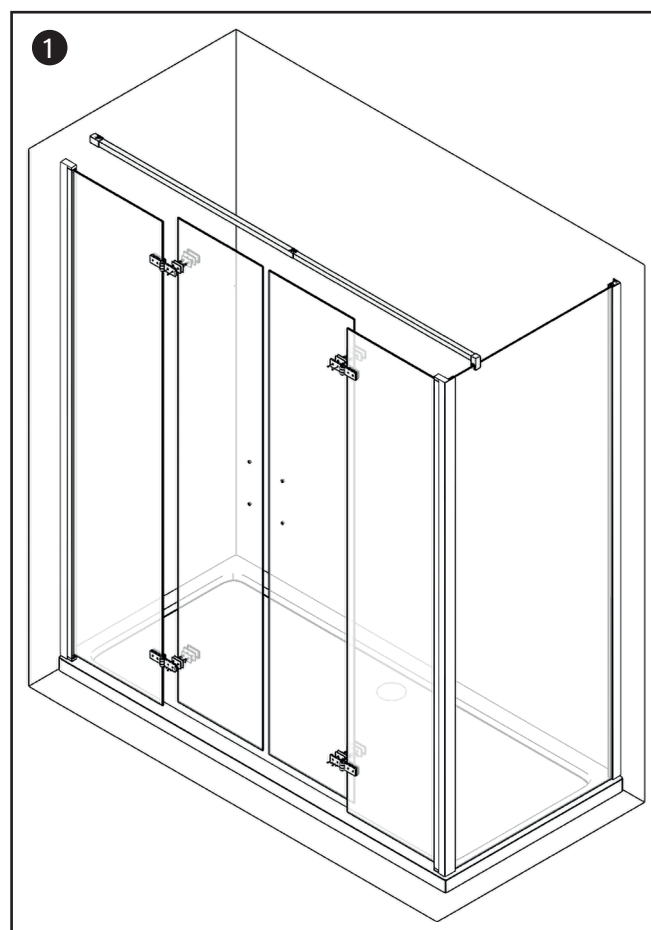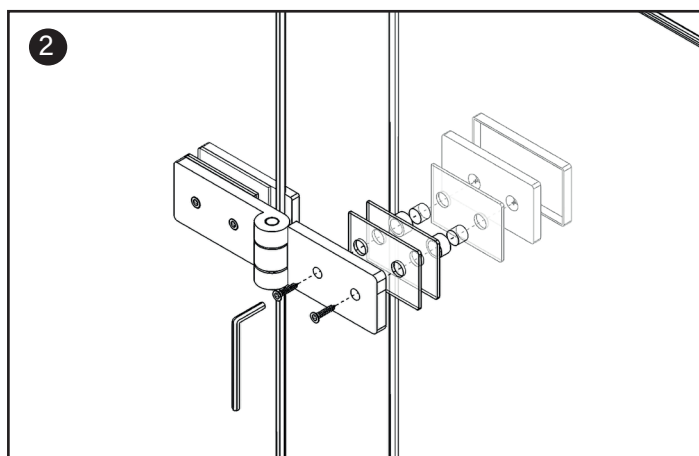

8° PASSAGE

1. Position the gaskets in the shape shown in the illustration to allow the doors to close properly and to seal against water.
2. Install the magnetic seals on the glass panes.

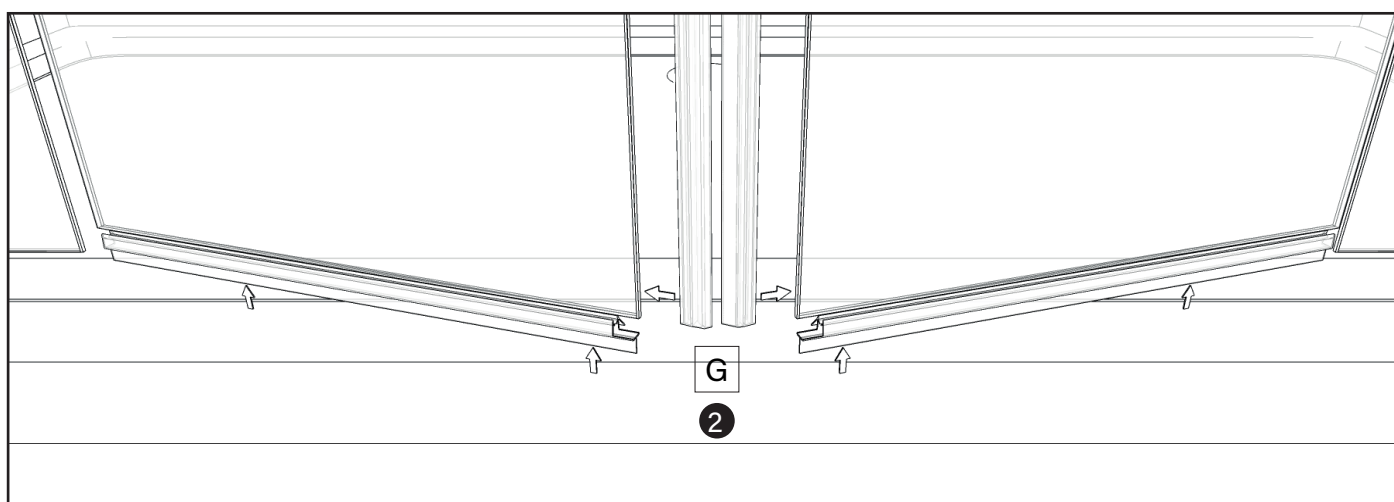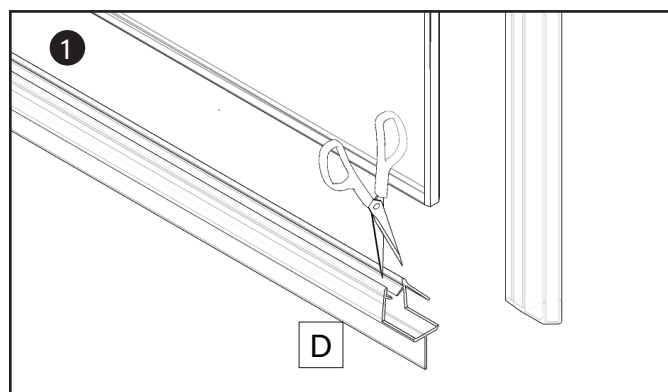





9° PASSAGE

1. Apply the extendable drip seal between the two panes with the hinge.
2. Siliconise and position the lower sealing bar.
3. Siliconise and position the left and right fixing brackets.

Note: The sealing profile can be installed with 6*16 screws if it is flush with the floor.

ATTENTION




The correct positioning of the lower retaining bar and the left and right fixing brackets is as shown in Figures 4 and 5.

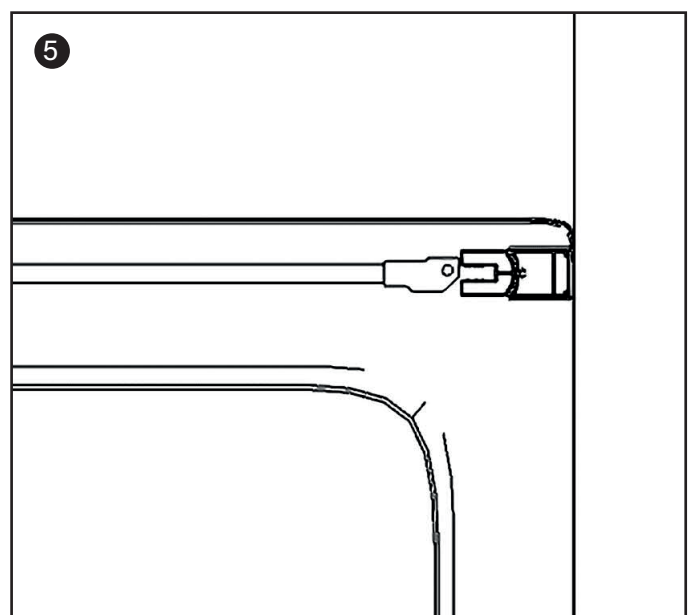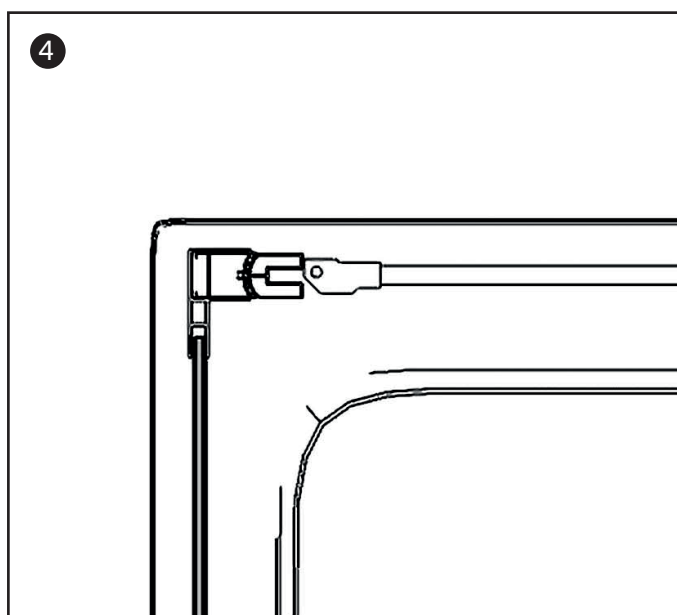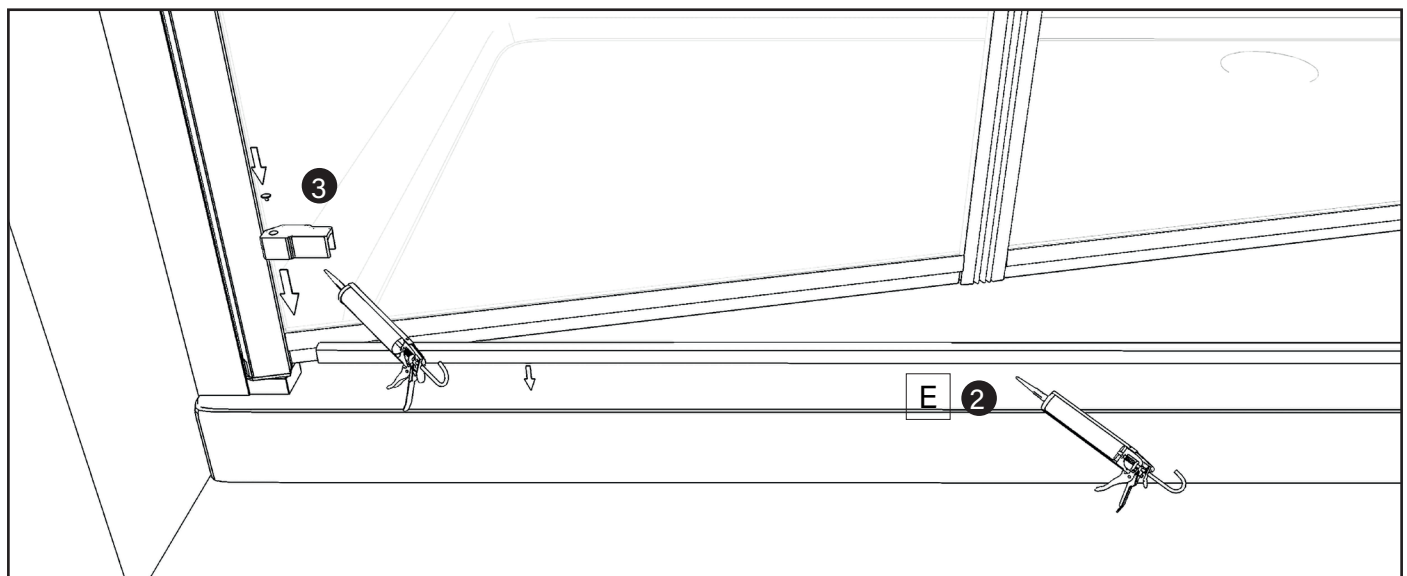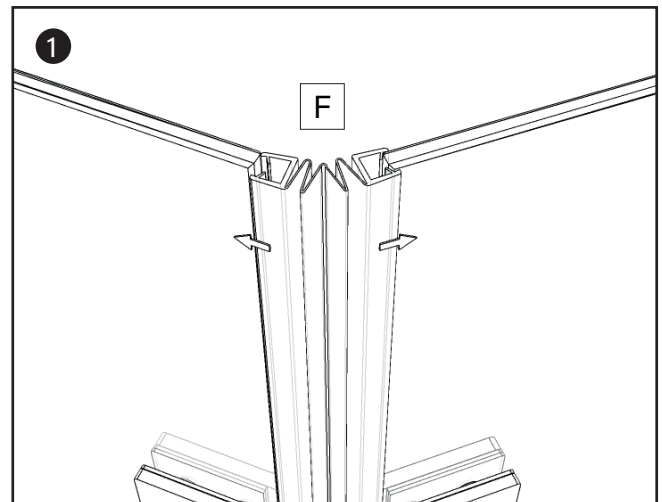

10° PASSAGE




1. Check the plumbness of the book door, then drill holes and attach the 6x16 screws for locking with the corner profile and cover the screws with the appropriate caps.
2. Repeat the operation on the folding door side of the wall profile.
3. Check the plumbness, drill holes from the inside to secure the wall fixed to the wall profile with 8x16 screws and cover with the aluminium cover, so as to hide the fixing screws and to protect them from water.

Note: A total of 6 holes must be drilled, two per profile, 1 at the top and 1 at the bottom.

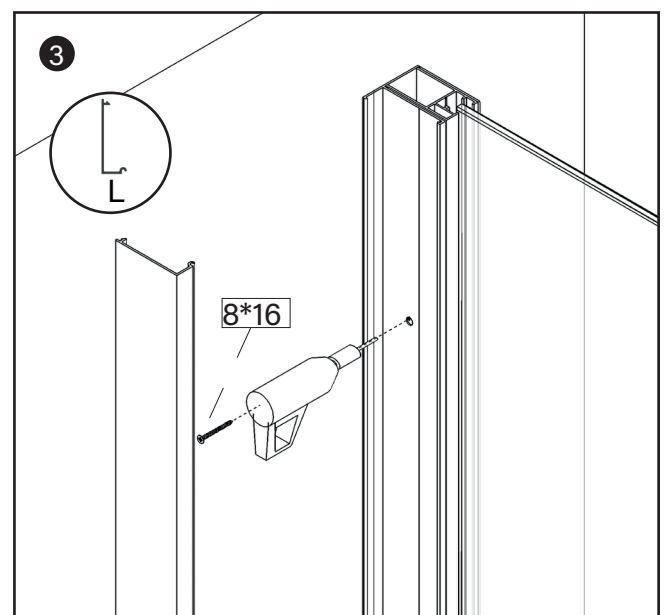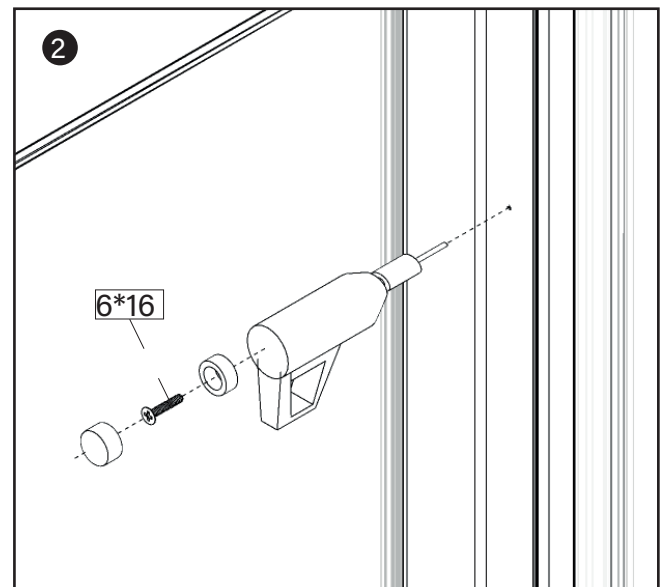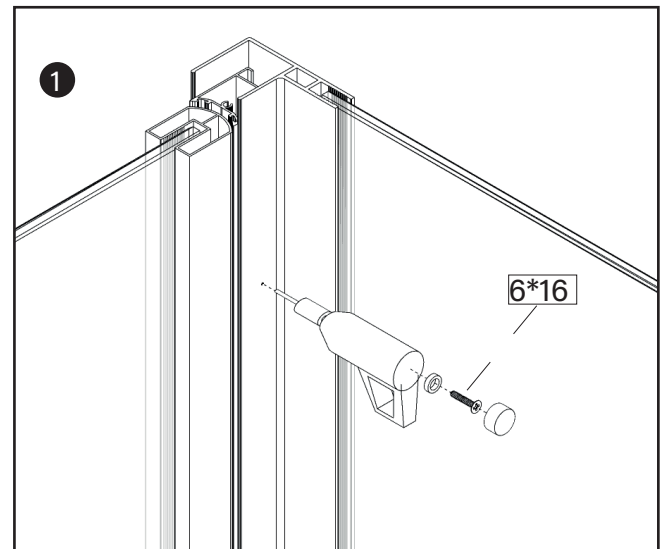

11° PASSAGE

1. Position the slanted retaining bar bracket on the wall and mark the holes in the wall with a pencil.
2. Drill the holes in the wall with the drill, insert the wall plug and screw in the screws to secure the bracket.
3. Position the sealing bar.

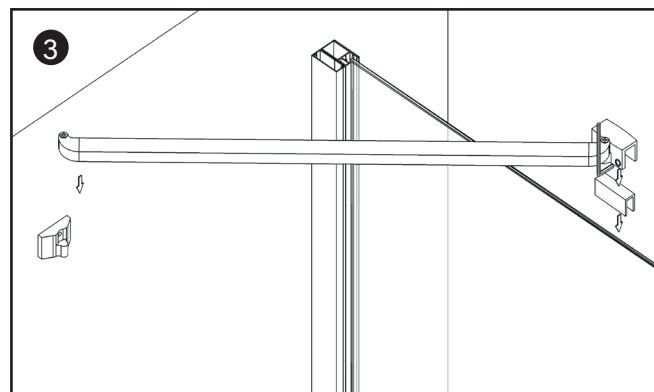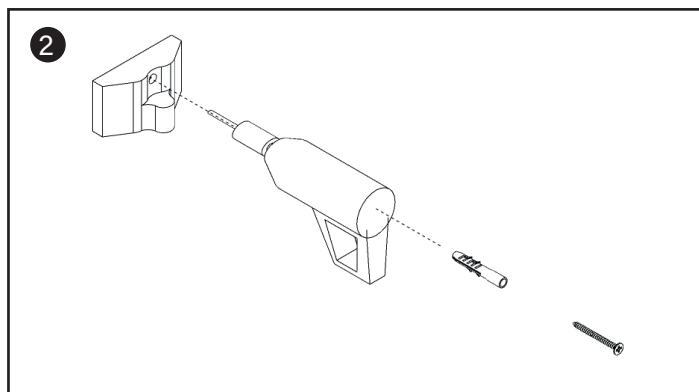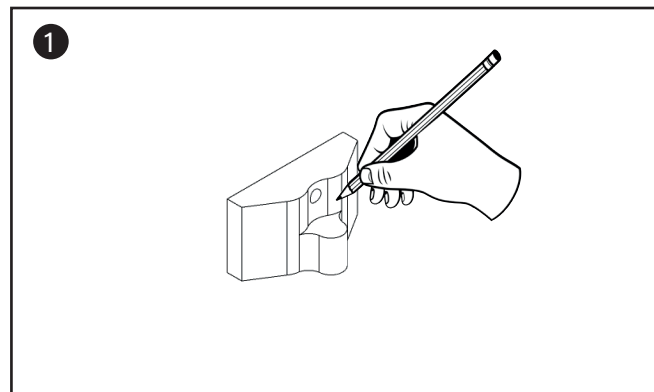

12° PASSAGE

1. Install the handles as shown in the figure (screw hole on the inside).
2. Install the deco cover on top of the wall profile.
3. Apply silicone as shown and wait 24 hours.

