

Los Angeles 3.0

DESCRIPTION

Three-sided shower enclosure with a swing door on asymmetric rotating hinges and two fixed side walls, opening inwards/outwards. Made of 8mm tempered transparent glass, with an easy-to-clean anti-limescale treatment indicated by special labels. Reversible installation, height 200 cm, black frame.





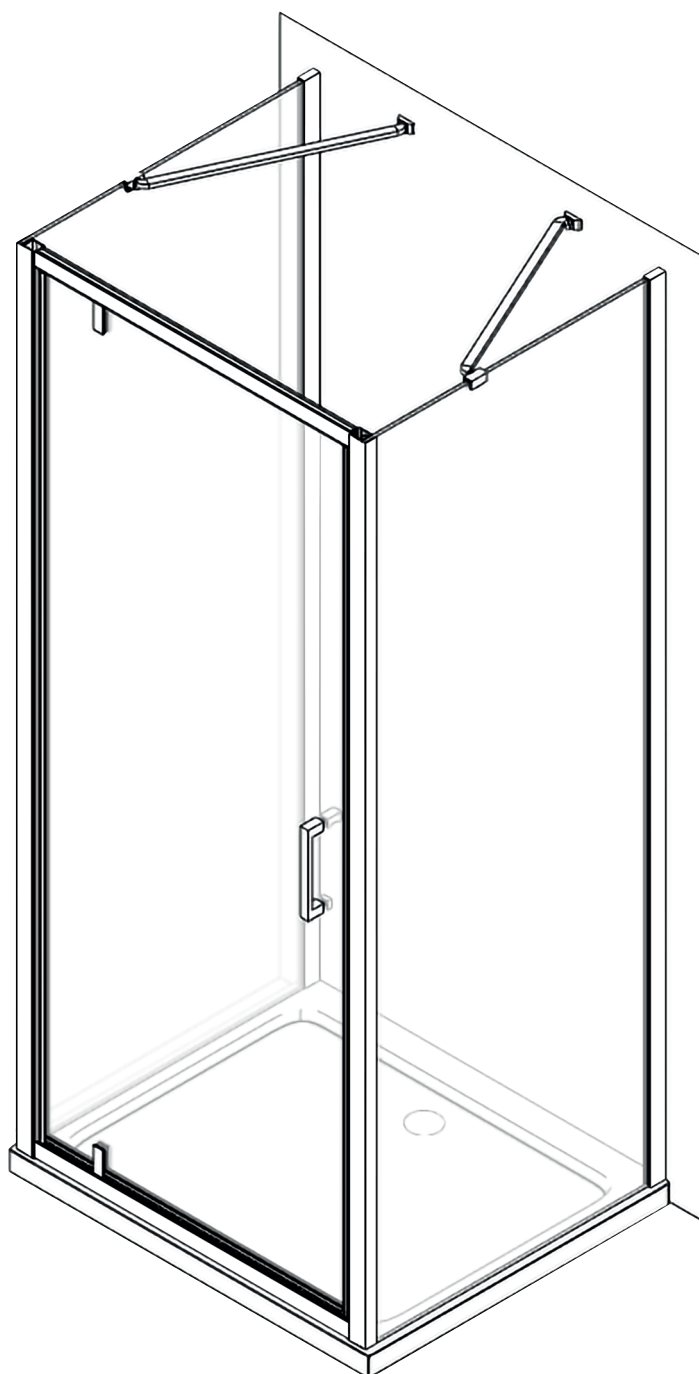


TABLE OF MEASURES


DOOR	MEASURES A
65	630 - 660
70	680 - 710
75	730 - 760
80	780 - 810
85	830 - 860
90	880 - 910
100	980 - 1010
110	1080 - 1110
120	1180 - 1210

FIXED WALL	MEASURES B
70	680 - 700
75	730 - 750
80	780 - 800
90	880 - 900
100	980 - 1000
110	1080 - 1100
120	1180 - 1200

REVERSIBLE

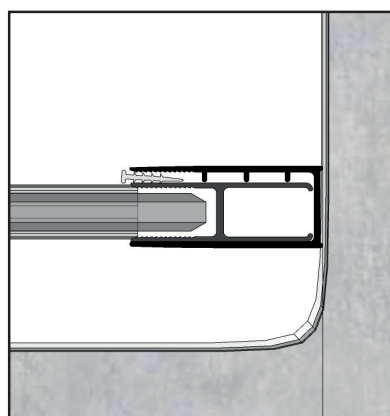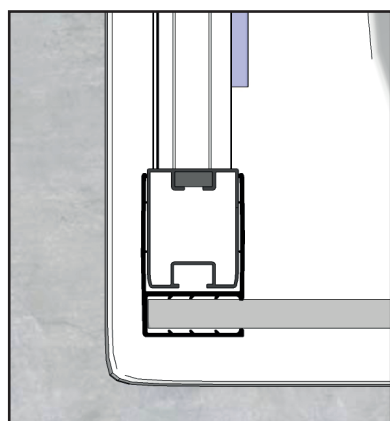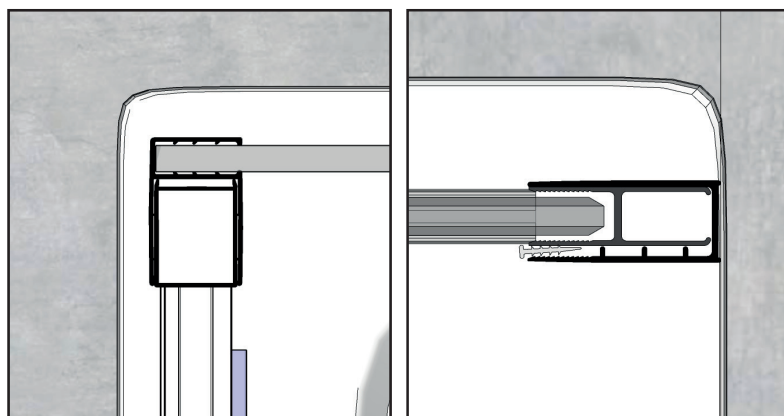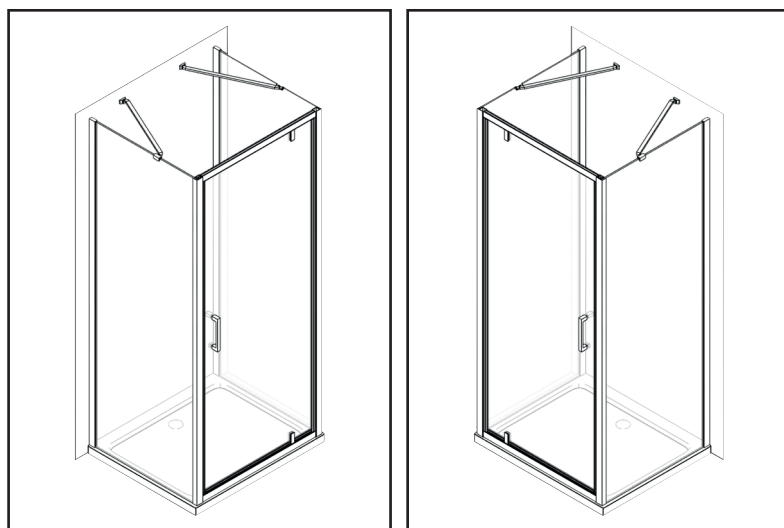


A

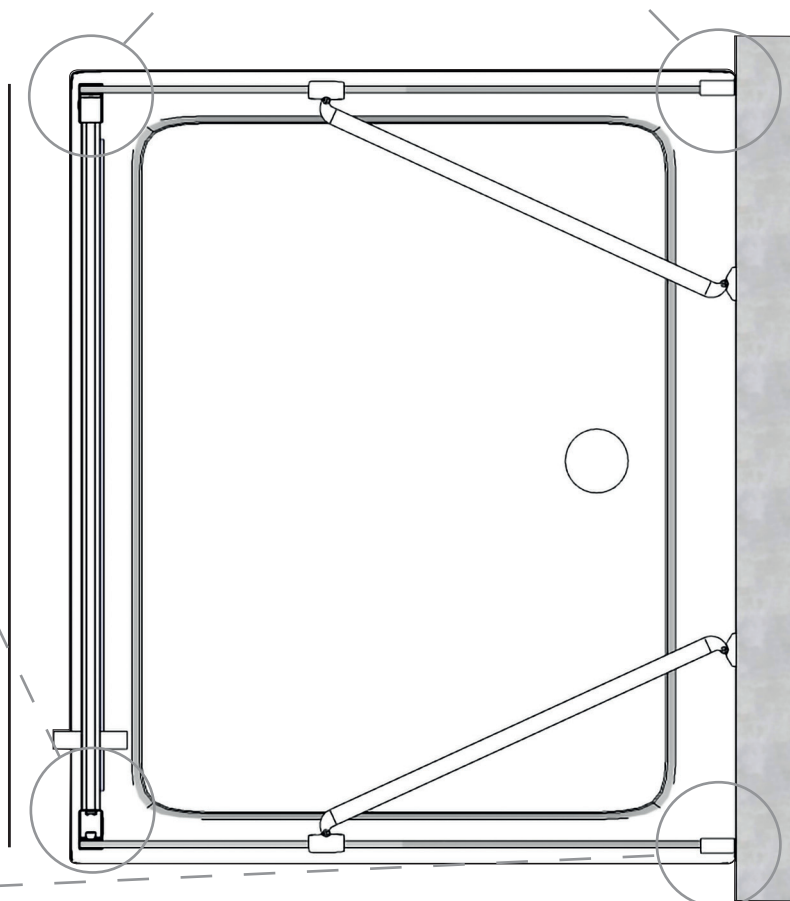


B

LOS ANGELES 3.0

TOOLS REQUIRED

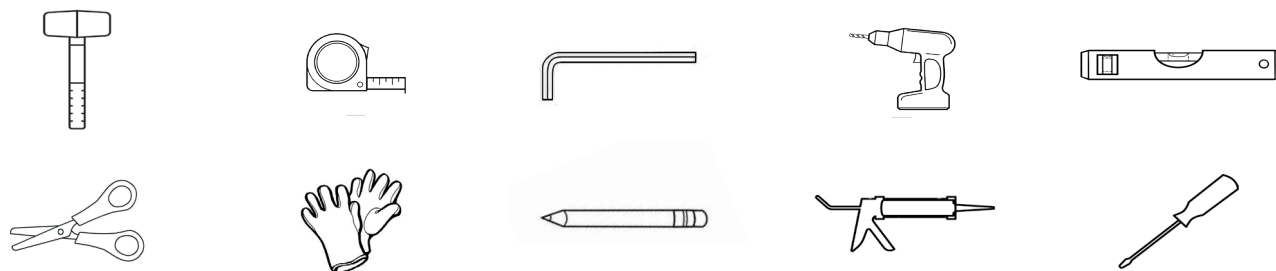

PACKAGE CONTENT (product shipped in three packages)

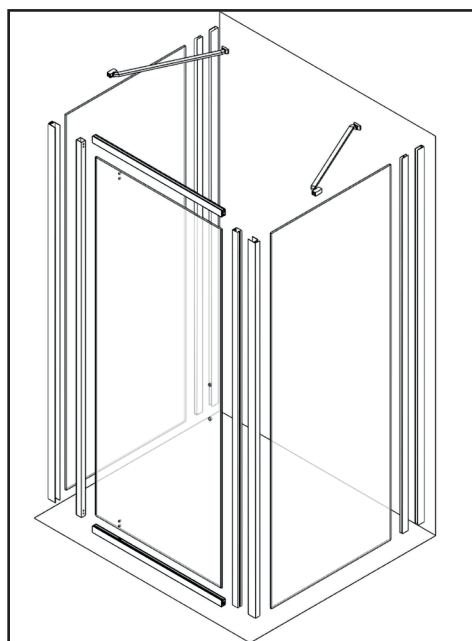





x18
8*30


x8
6*30



x2
8*18


x4
8*16



x10

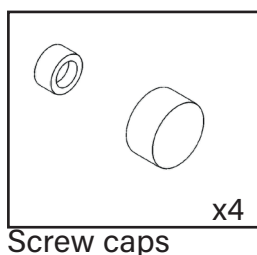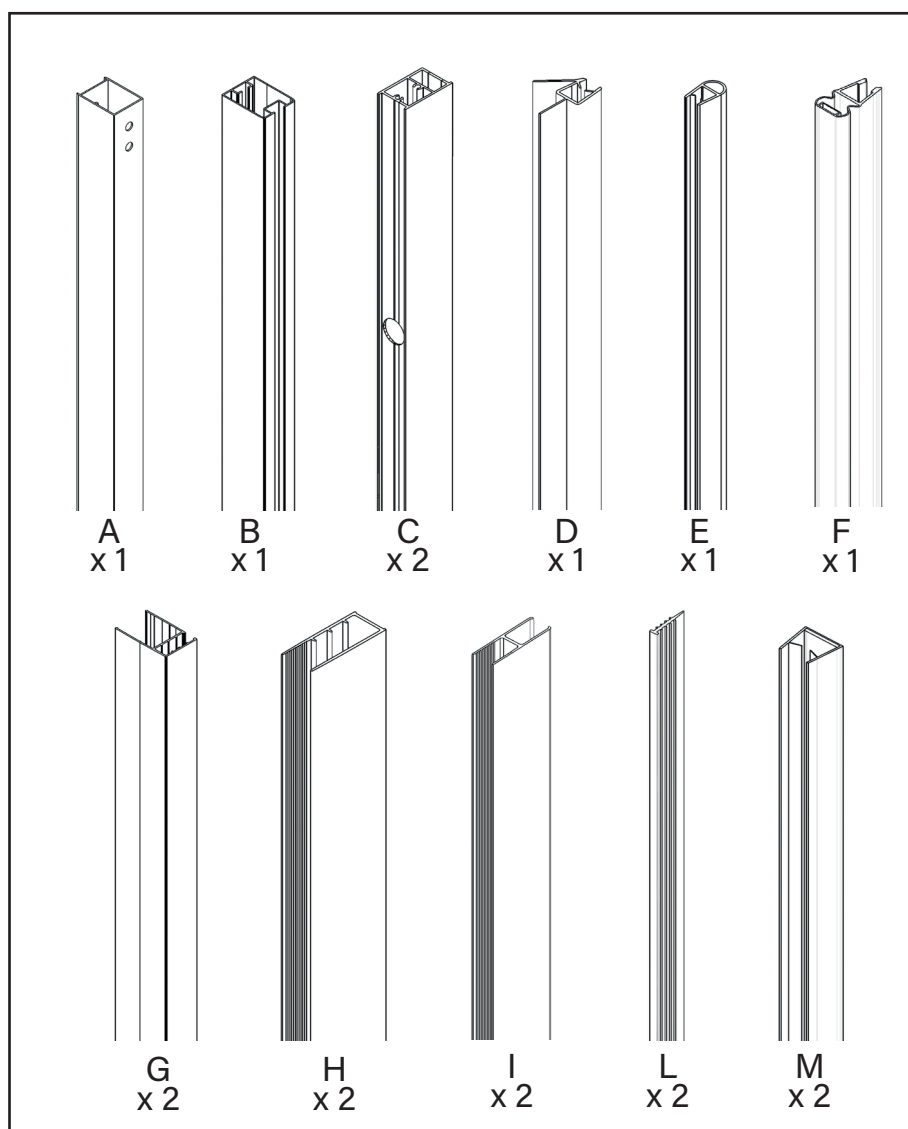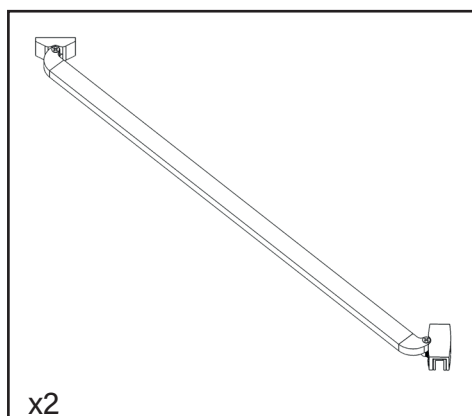


Screw caps

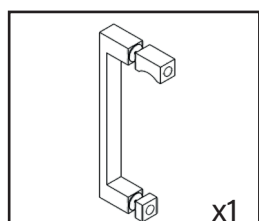

Handle

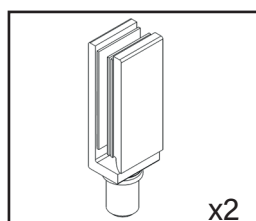

Rotating hinge




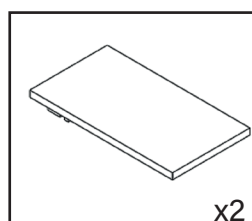


Cover profile

MOUNTING

1° PASSAGE

1. Check that the shower tray is level with the bubble level.
2. Place the wall profile and use the plumb level to set it vertically.
3. Mark the wall holes with a pencil.
4. Drill the wall holes.
5. Insert the wall plug and screw the screws to secure the profiles.

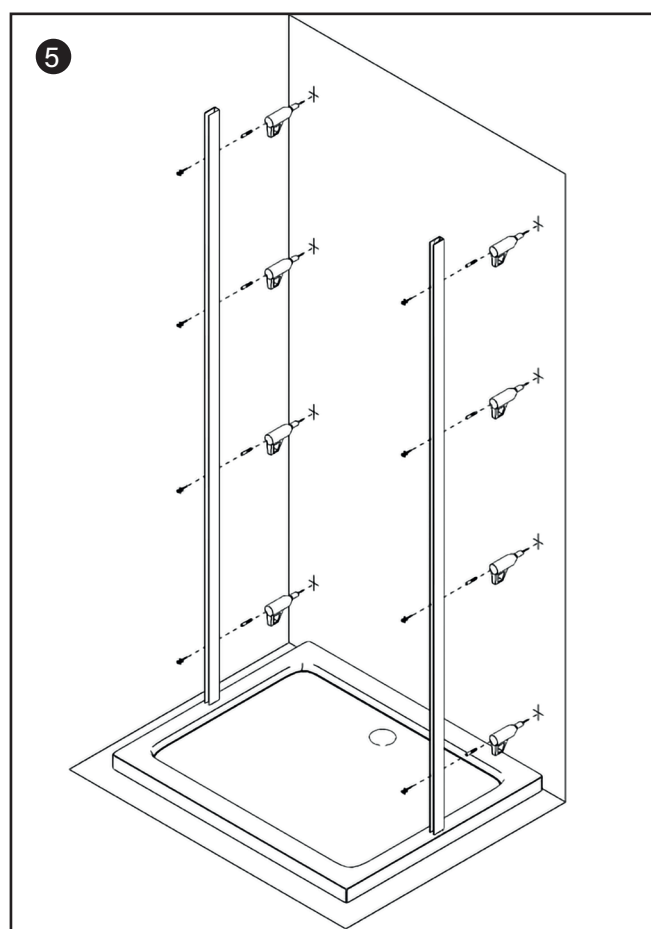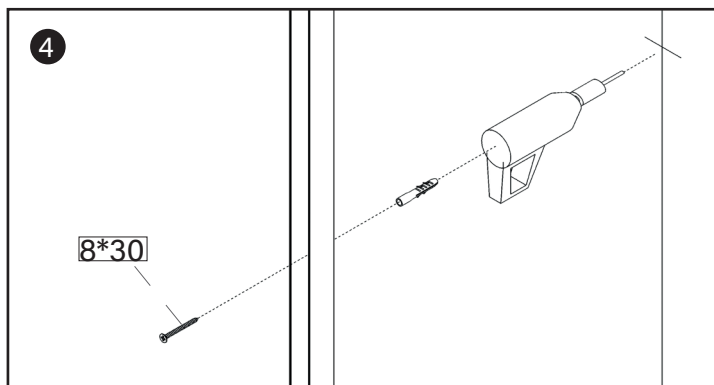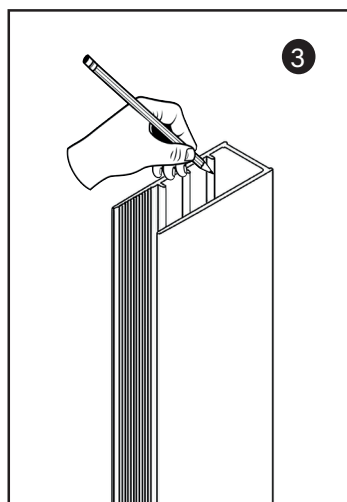
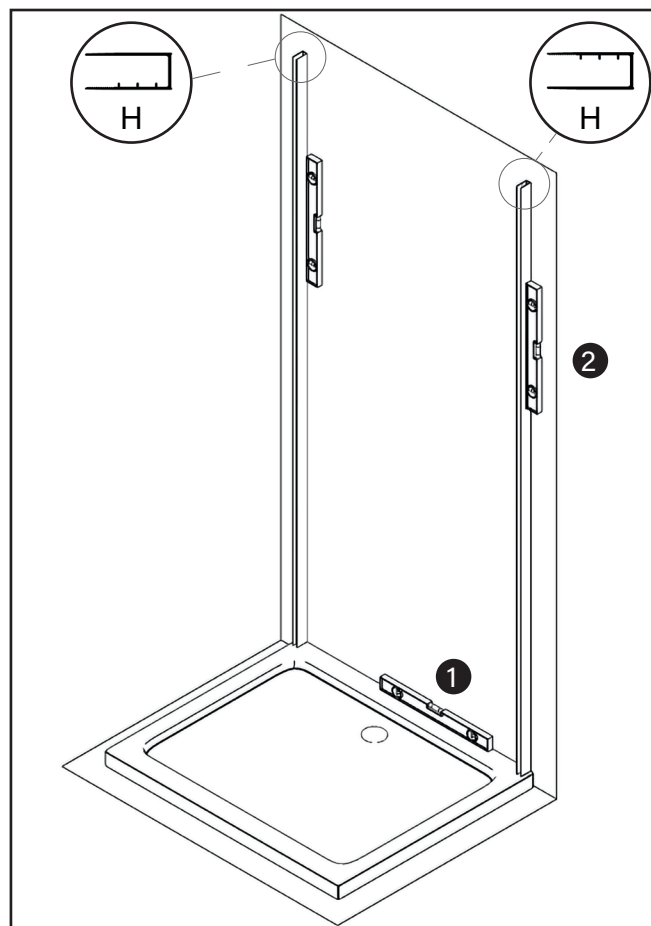


2° PASSAGE

1. Place the gaskets under the glass panels.



ATTENTION

The frame protrudes on one side compared to the glass, the protruding part serves as a seat for the gasket under the glass, so it should be oriented downward.

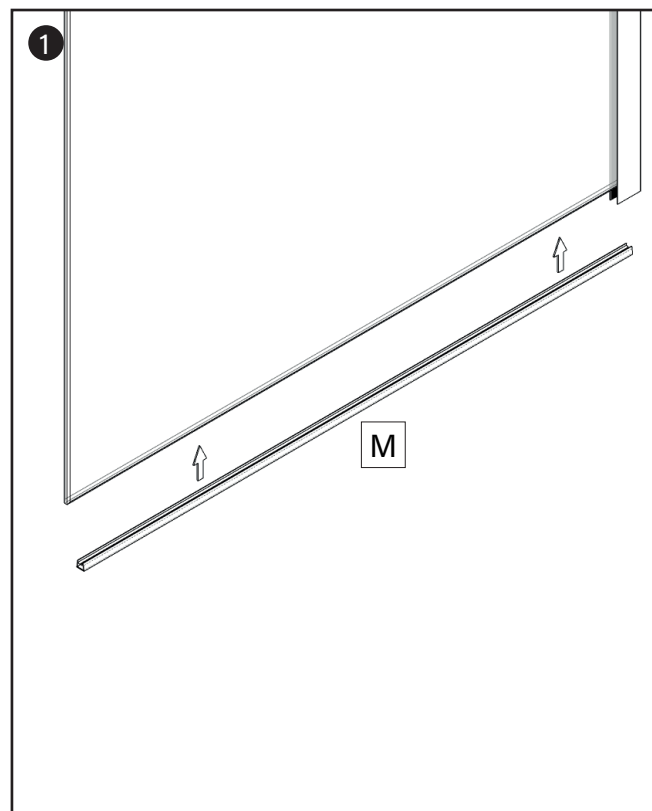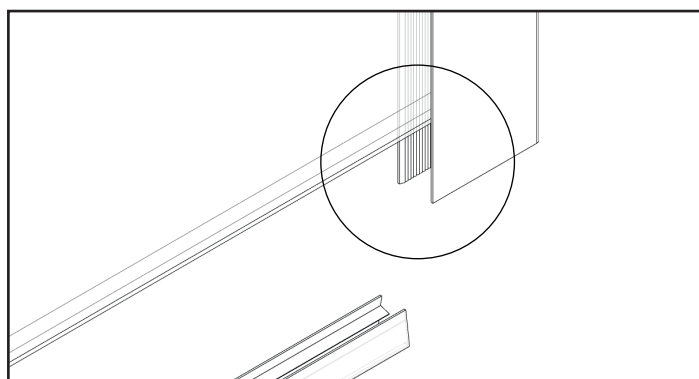

3° PASSAGE



1. Insert the two fixed glasses into the wall profiles.
2. Insert the roll gasket between the two aluminum profiles.

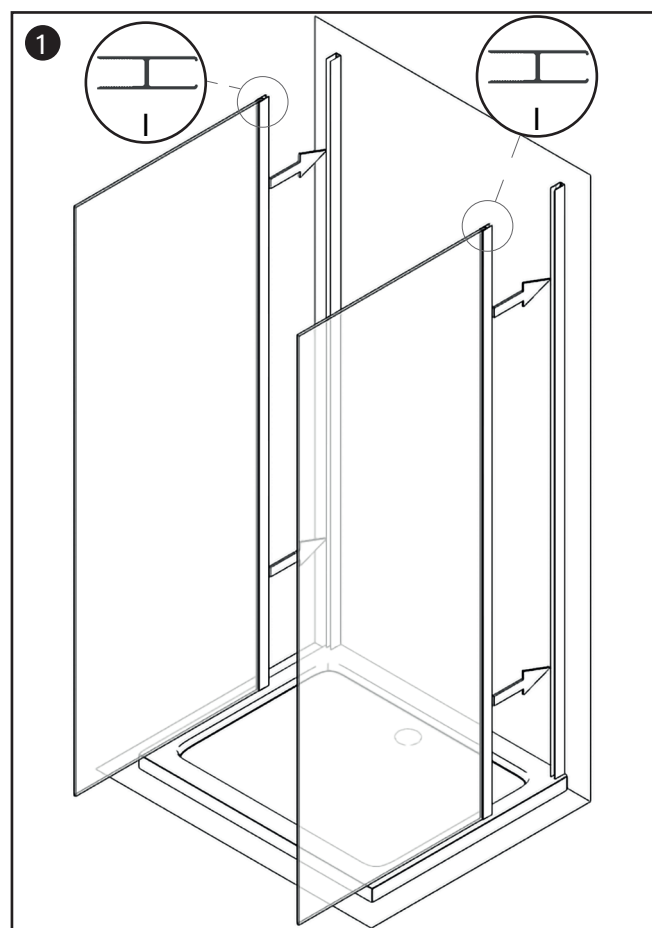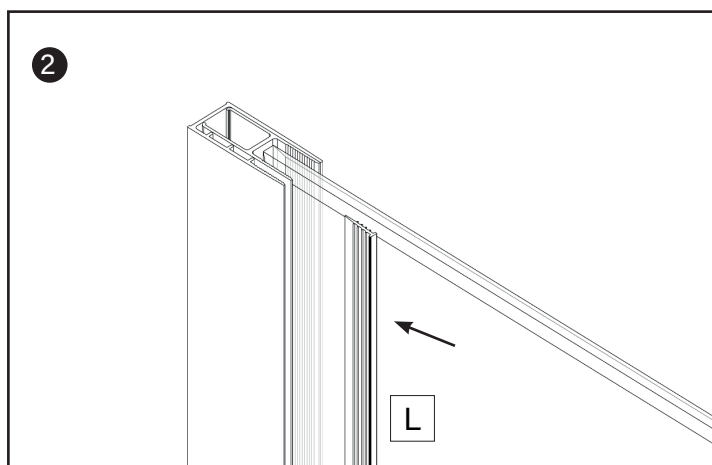

4° PASSAGE



1. Build the door frame by connecting the upper and lower profiles with the side profile on the hinge side, using 6x30 screws.

Note: Pay attention to the position of the holes for the hinge housing in the upper and lower profiles.

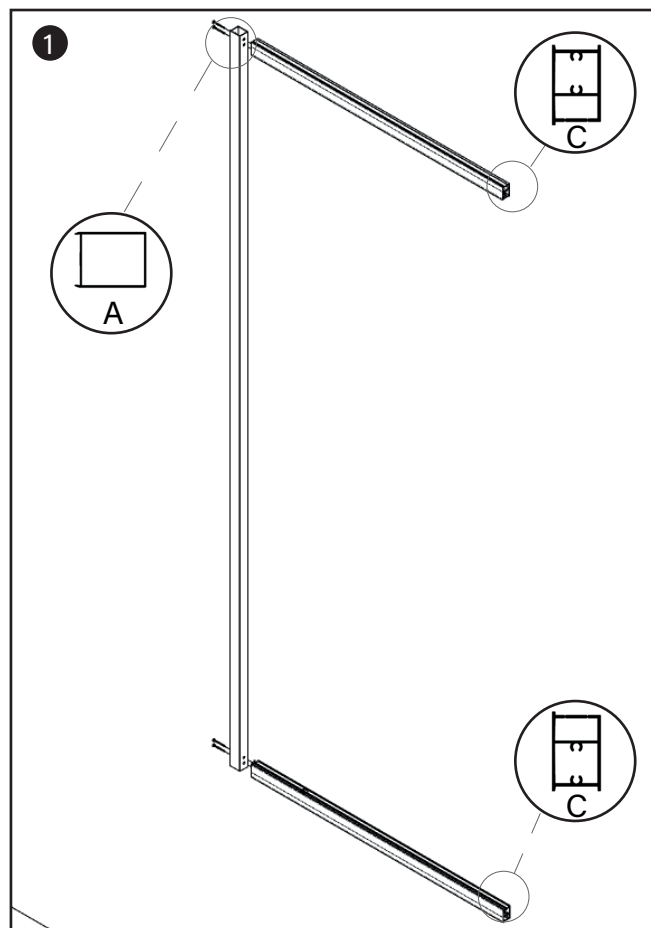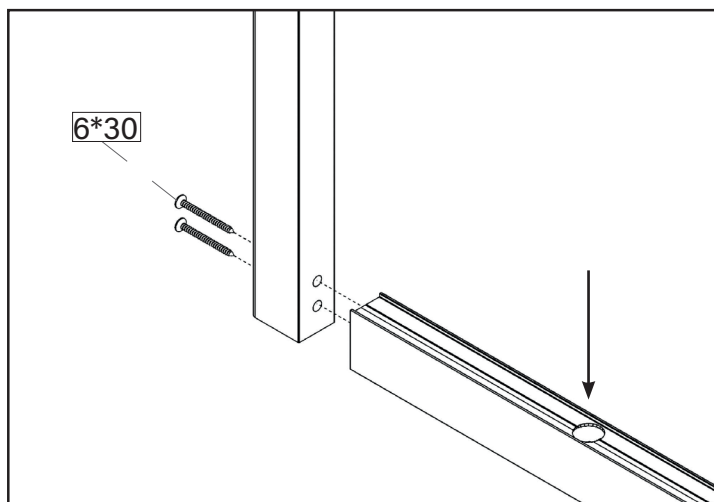



5° PASSAGE

1. Insert the magnet inside the closing profile.
2. Connect the door closing profile to the upper and lower profiles using 6x30 screws.

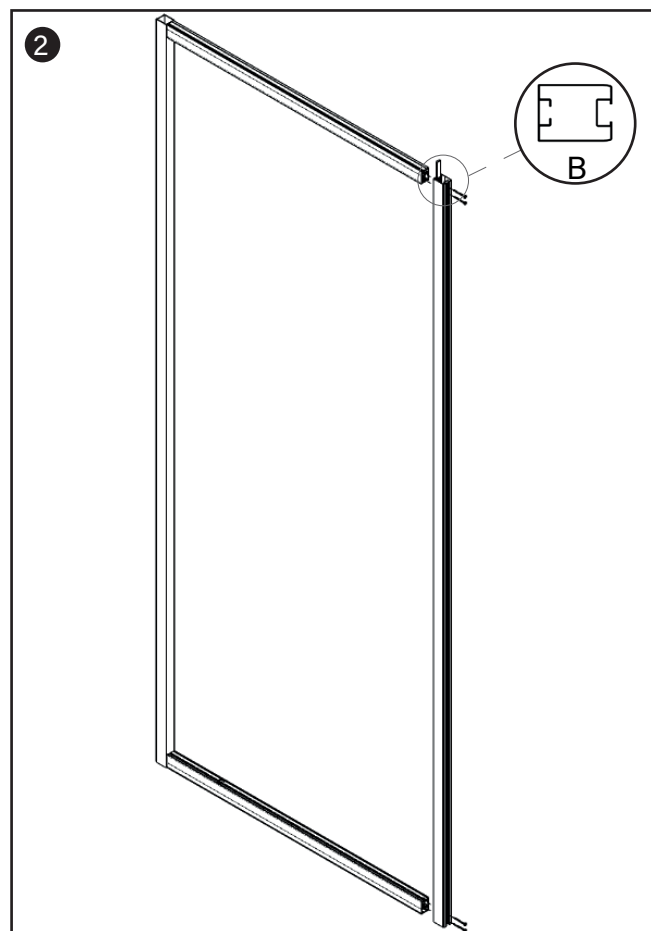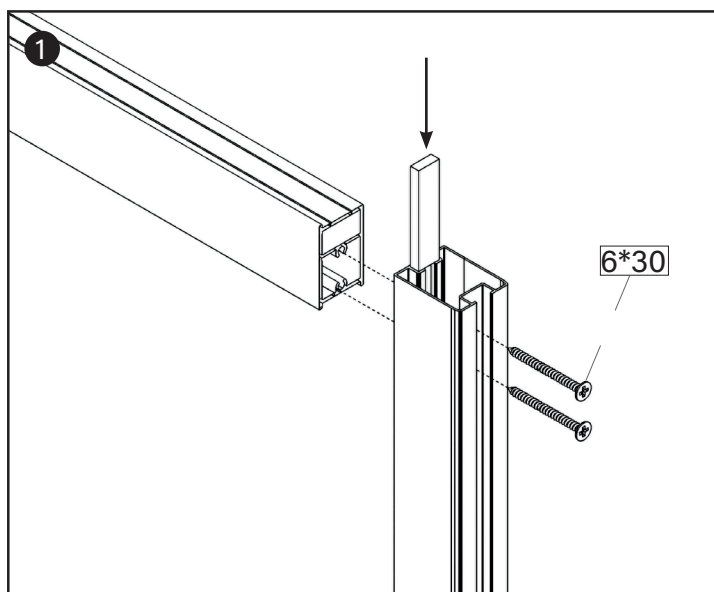

6° PASSAGE


1. Install the hinges in the upper and lower profiles using 8x18 screws.

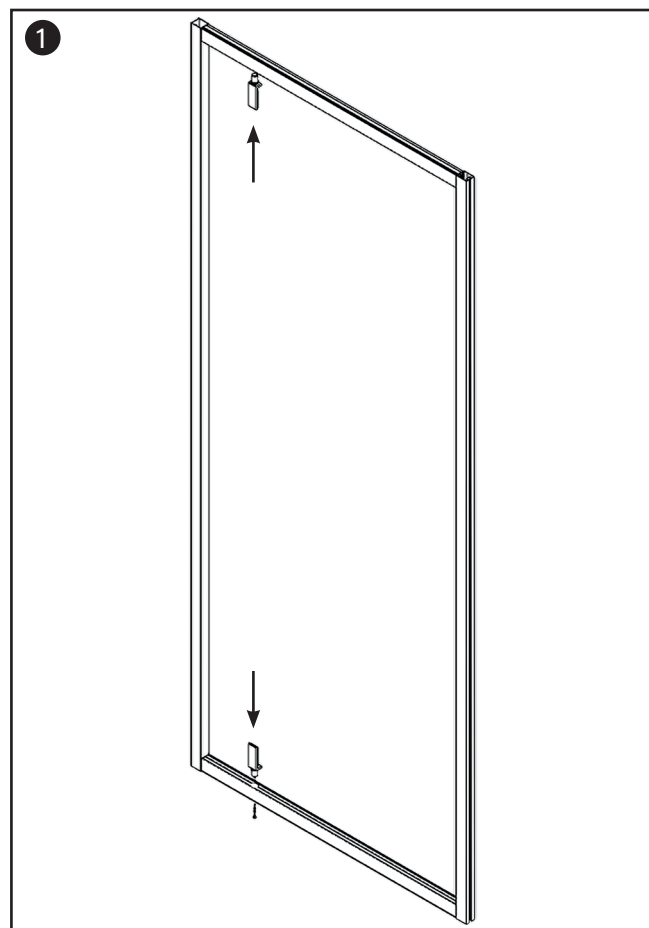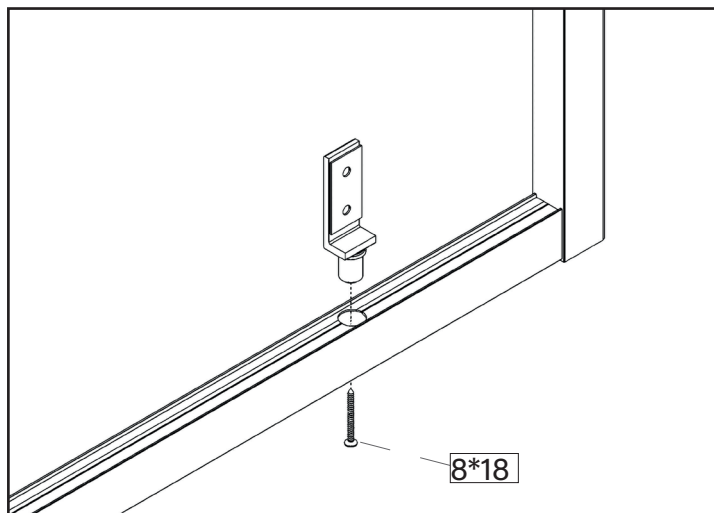

7° PASSAGE

1. Insert the wall profile and the corner profile into the side profiles of the frame.


Note: The side profiles should go inside the wall and corner profiles.

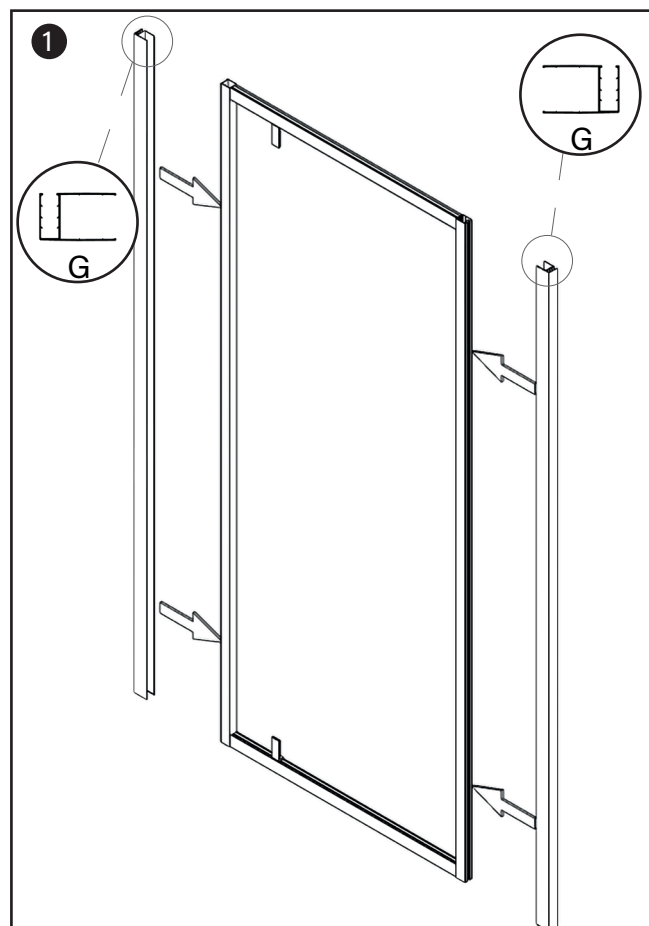

8° PASSAGE




1. Apply silicone in the groove of the corner profiles.
2. Position the previously assembled frame.

Note: Before fixing it, adjust the extension of the frame by adjusting the telescopic (one profile goes inside the other).

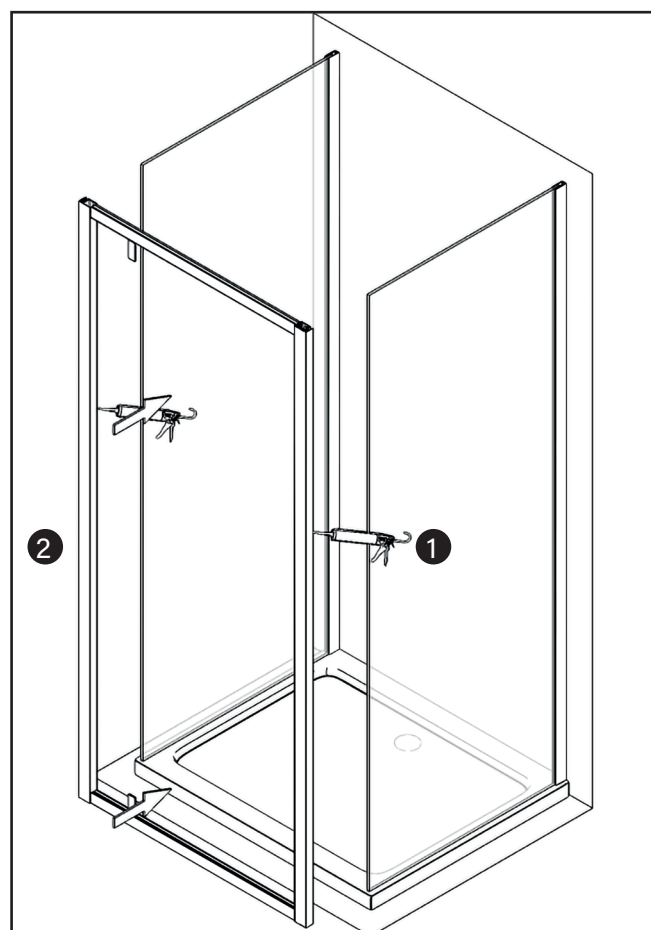



9° PASSAGE

1. Insert the magnetic closing gasket into the glass, using its full height, starting from the bottom, if it's too long, trim it from the top.
2. Insert the lower sealing gasket.
3. Insert the side sealing gasket.
4. For proper hinge installation, shape the gasket to prevent interference.

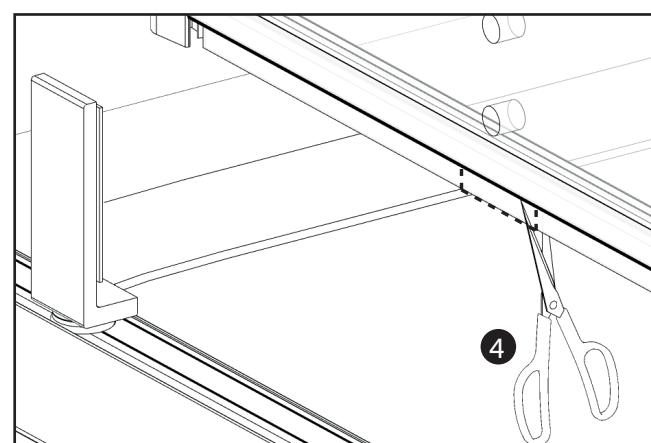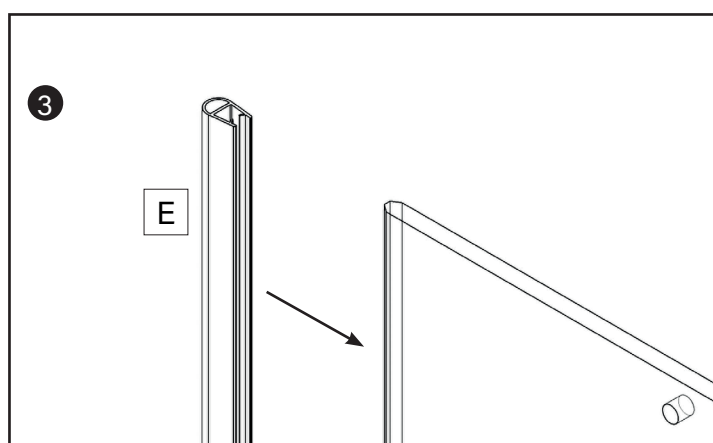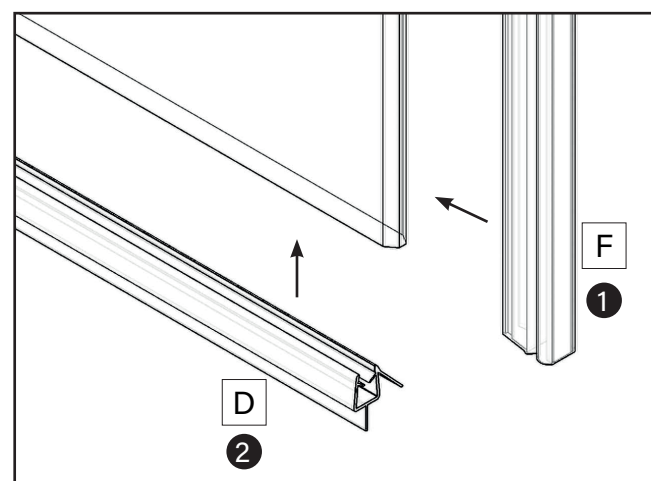




10° PASSAGE

1. Insert the glass into the frame.
2. Secure the hinges with the appropriate gaskets and screws.

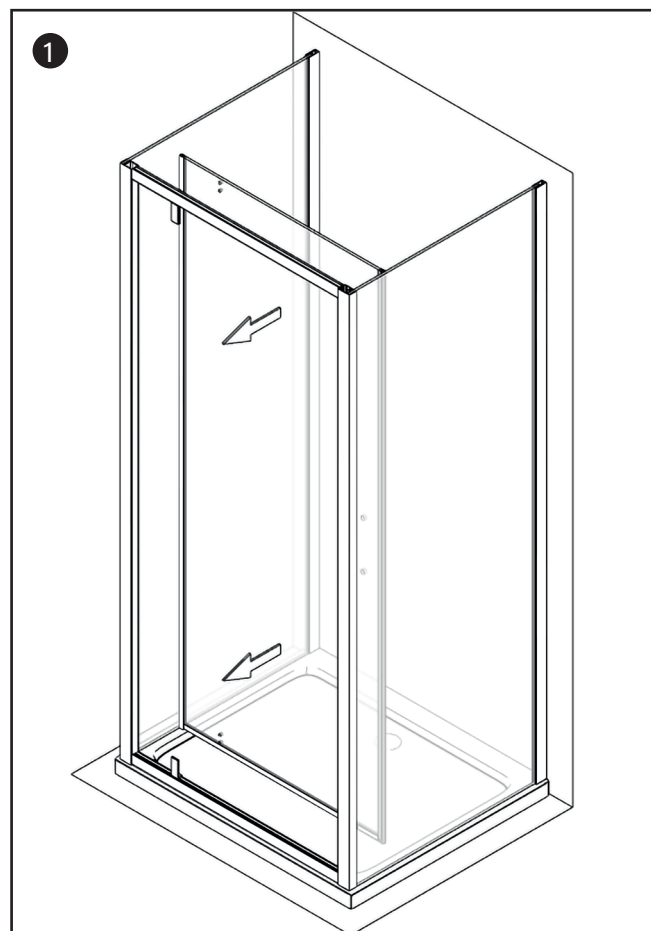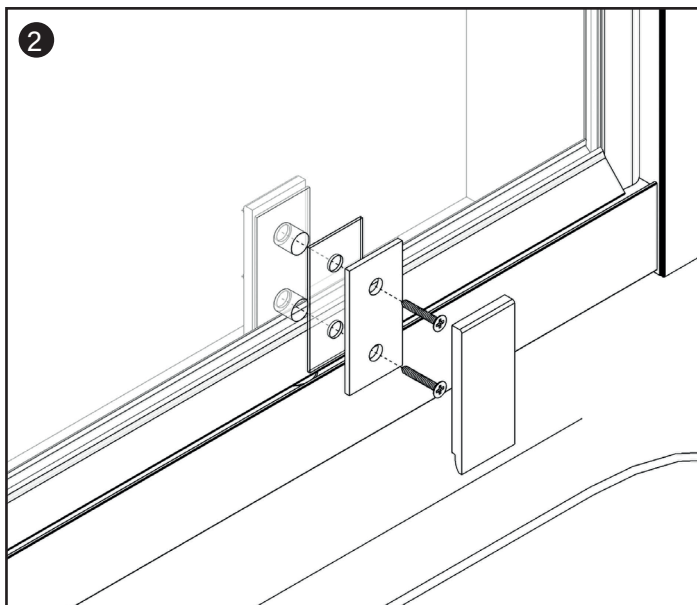

11° PASSAGE



1. Position the slanted retaining bar bracket on the wall and mark the holes in the wall with a pencil.
2. Drill the holes in the wall with the drill, insert the wall plug and screw in the screws to secure the bracket.
3. Position the sealing bar.

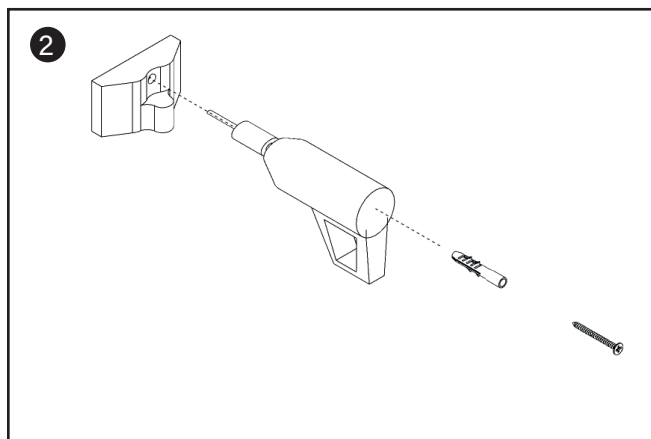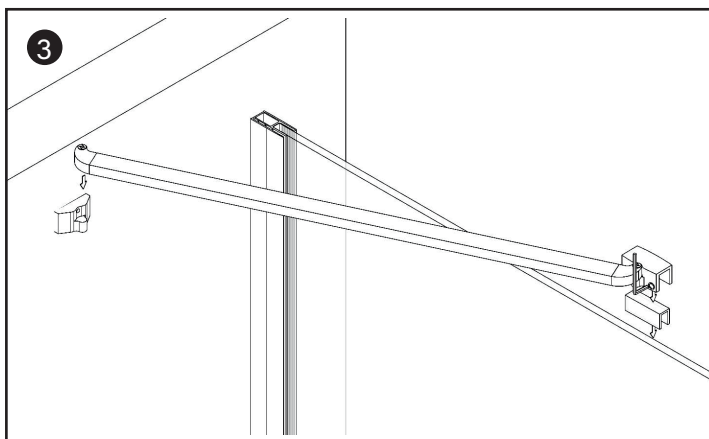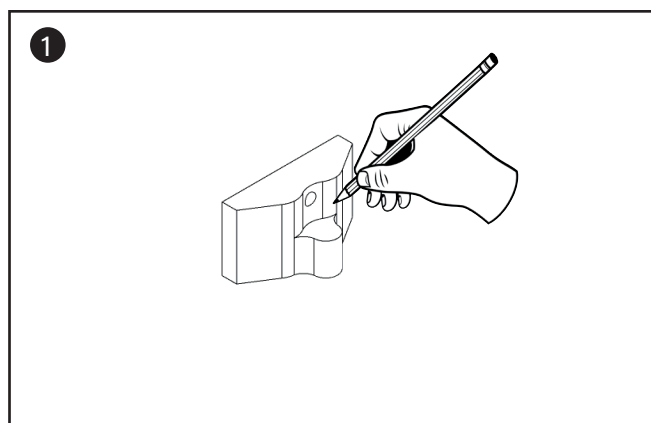

12° PASSAGE

1. Drill holes and insert the 8x16 screw from the inside to secure the frame to the corner profiles.
2. Install the handle in the glass (hole on the inside).

Note: A total of four holes must be drilled, two on the right and two on the left, one at the top and one at the bottom. The screws will be covered with chrome-plated covers.

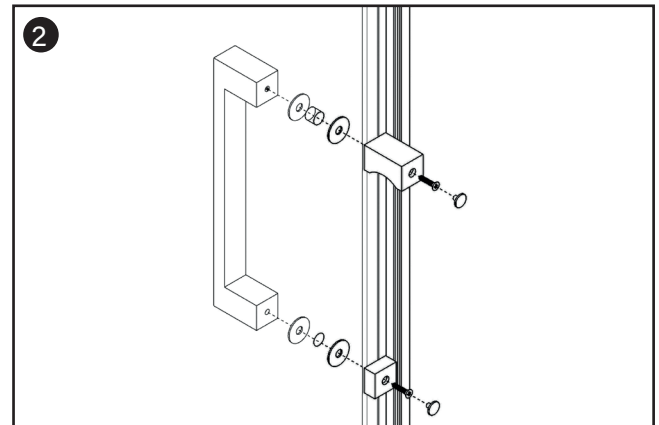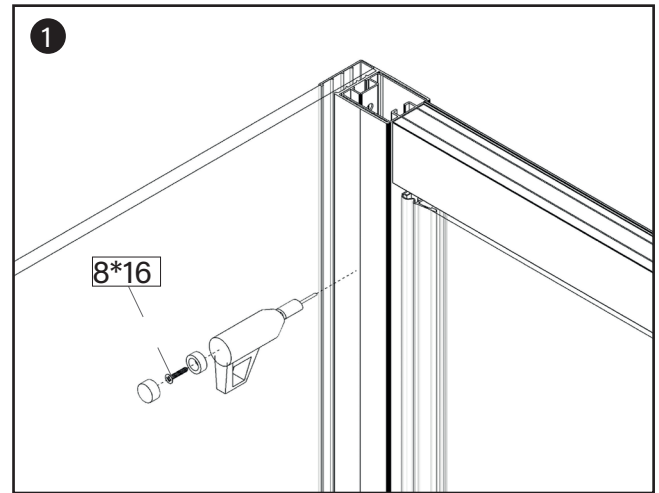

13° PASSAGE

1. Insert the decorative profile on the top of the wall profiles.
2. Seal with silicone as shown in the figure and wait for 24 hours.

