

Manhattan 3.0

DESCRIPTION

Sliding shower enclosure with central entrance and matching fixed side walls. Made of tempered glass 6mm h 190. Possibility of quick release of the lower trolleys. Manual adjustment of wall profiles 2.5 cm per side. Chromed aluminium frame and glass with anti-limescale treatment indicated by special labels.





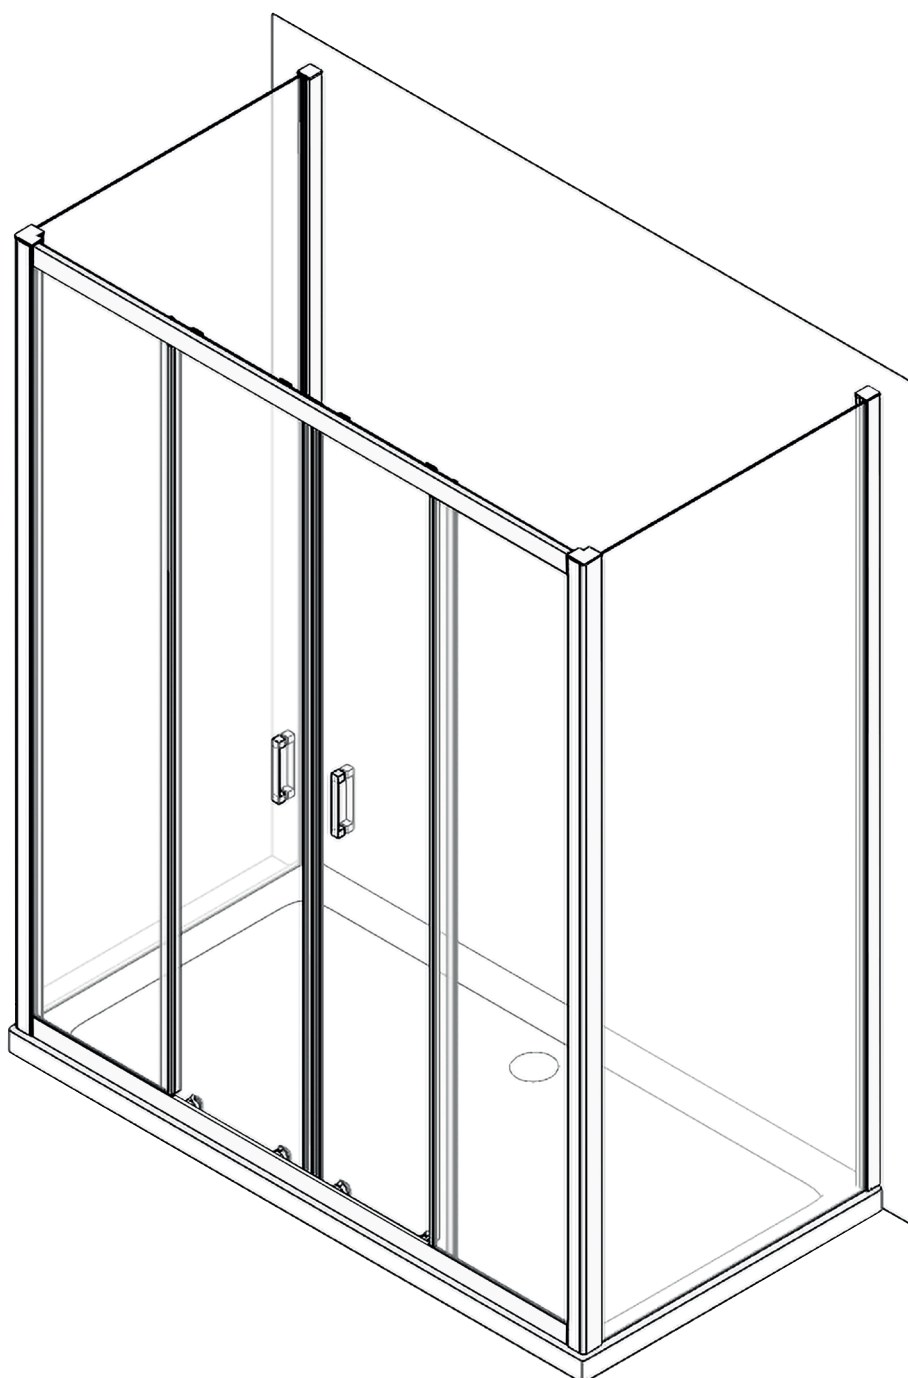


TABLE OF MEASURES


DOORS	MEASURES A	MEASURES B
130 (scrollbar measures 120)	1280 - 1330	560
135 (scrollbar measures 125)	1330 - 1380	535
140 (scrollbar measures 130)	1380 - 1430	610
145 (scrollbar measures 135)	1430 - 1480	585
150 (scrollbar measures 140)	1480 - 1530	660
155 (scrollbar measures 145)	1530 - 1580	535
160 (scrollbar measures 150)	1580 - 1630	610
165 (scrollbar measures 155)	1630 - 1680	685
170 (scrollbar measures 160)	1680 - 1730	760
175 (scrollbar measures 165)	1730 - 1780	635
180 (scrollbar measures 170)	1780 - 1830	710
185 (scrollbar measures 175)	1830 - 1880	785
190 (scrollbar measures 180)	1880 - 1930	860
195 (scrollbar measures 185)	1930 - 1980	735
200 (scrollbar measures 190)	1980 - 2030	810
205 (scrollbar measures 195)	2030 - 2080	885
210 (scrollbar measures 200)	2080 - 2130	960

FIXED WALL	MEASURES C
65	625 - 650
67.5	650 - 675
70	675 - 700
75	725 - 750
77,5	750 - 775
80	775 - 800
85	850 - 875
90	875 - 900
100	975 - 1000

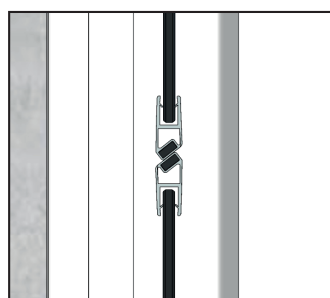
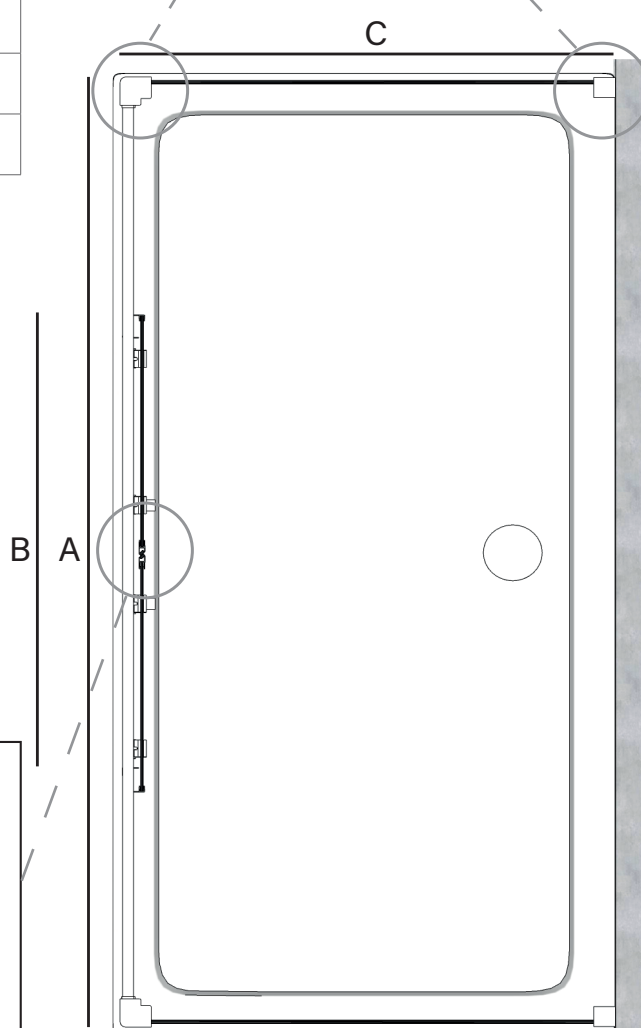
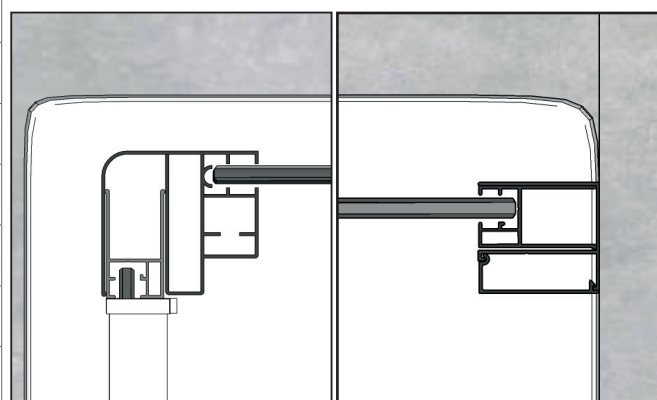
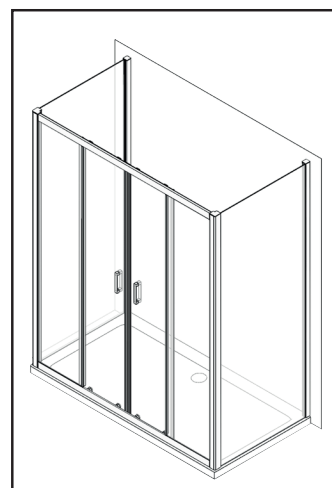


MANHATTAN 3.0

TOOLS REQUIRED

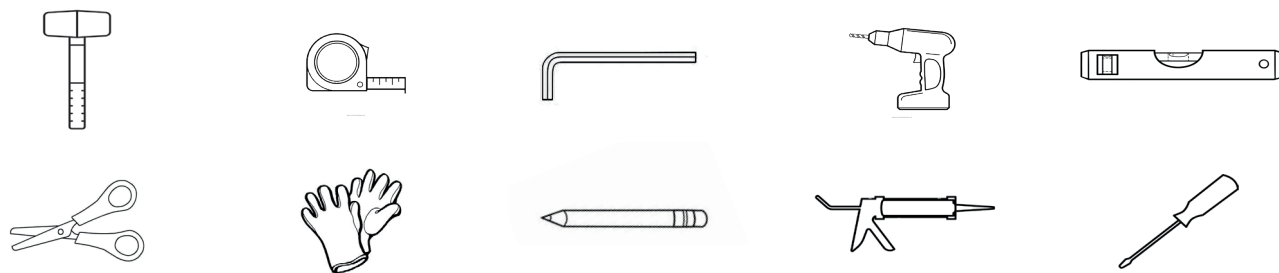


PACKAGE CONTENT (product shipped in 3 packages)

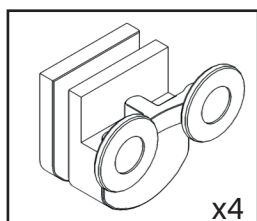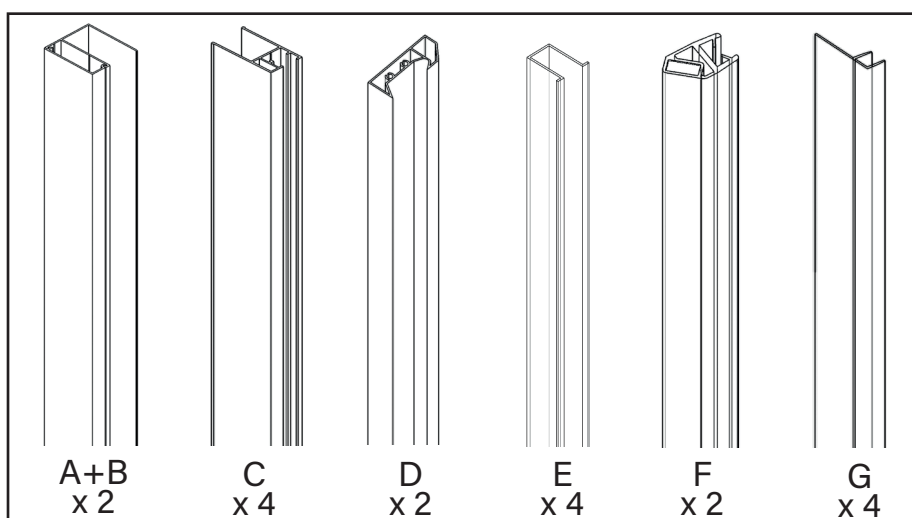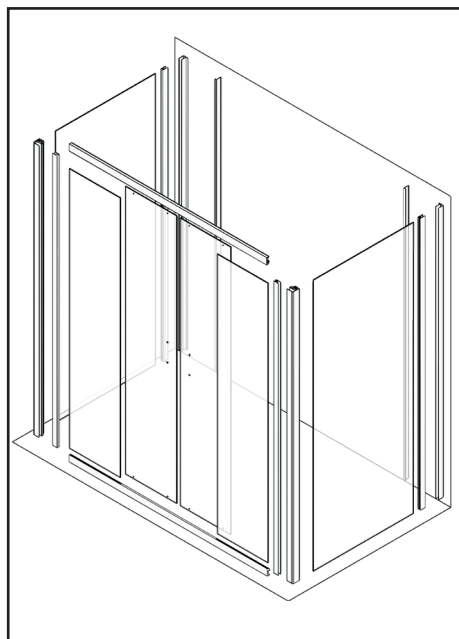


Upper wheels

x4

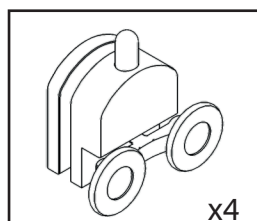


Removable lower wheels

x4

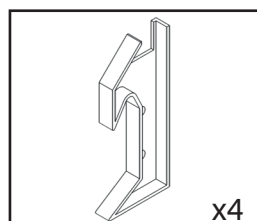


Fixed-side connector with slot

x4

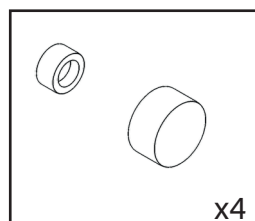


Screw caps

x4

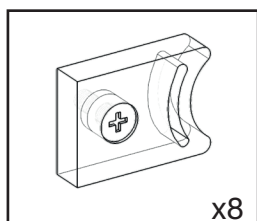


End of run

x8

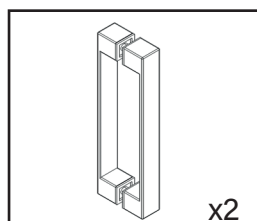


Handle

x2

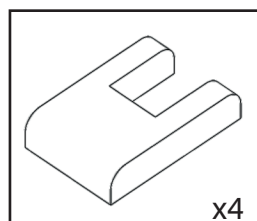

Glass retainer cover

x4

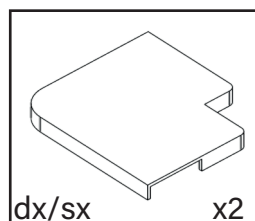

Upper cover profile corner


dx/sx

x2




H

x 4



I


x 2

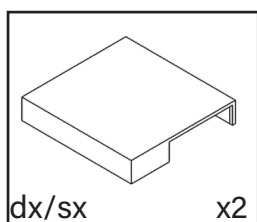

dx/sx

x2

Top cover wall profile

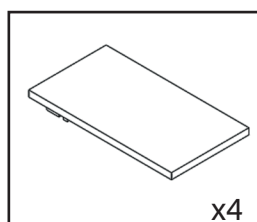

x4





Upper fixed glass cover

MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profiles on the wall and use the plumb level.
3. Mark the holes in the wall with a pencil.
4. Drill the holes in the wall.
- 5. IMPORTANT:** Only install a fixed glass profile permanently on the wall.



Note: for the second fixed glass profile, in any case insert wall plugs for the 8th step.

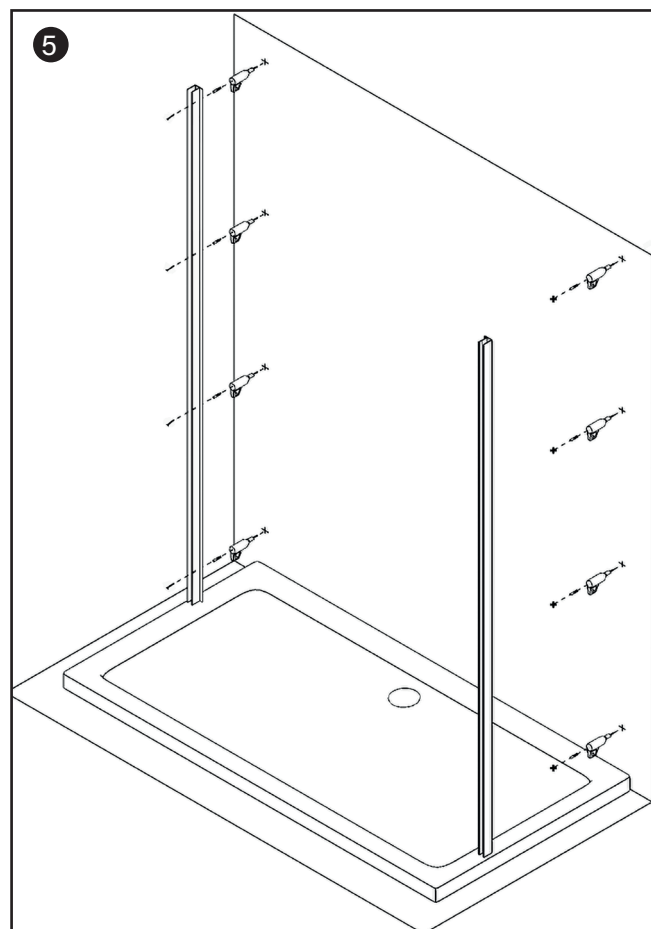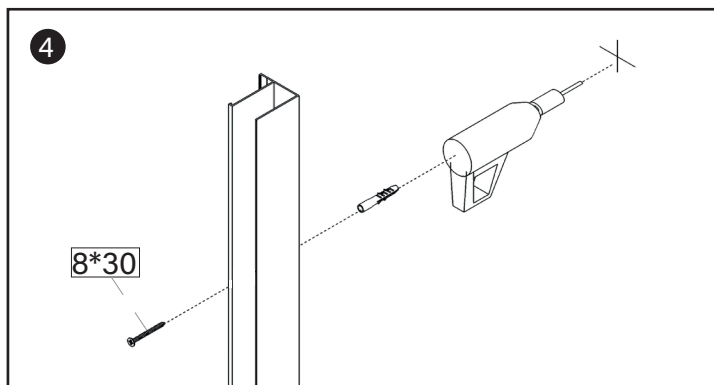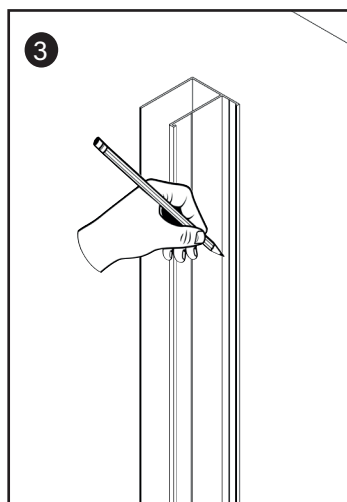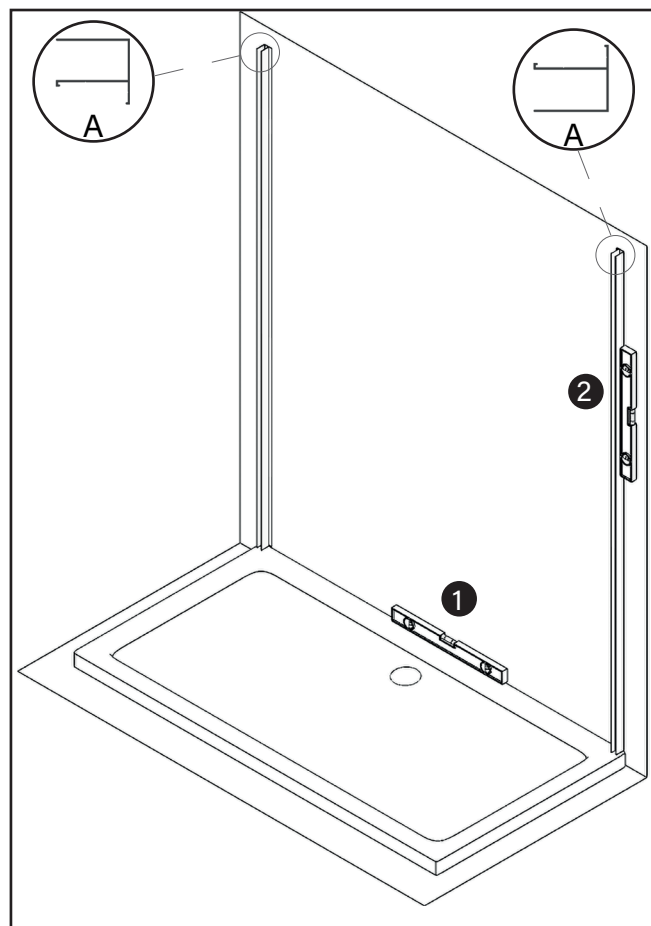

2° PASSAGE

1. Apply silicone in the groove of the angle profile.
2. Insert the fixed glass inside the corner profile and while fresh complete the next step.
3. Install the glass stop gasket between the glass and the aluminium corner profile, taking care to insert it from bottom to top.


You get it rolled up in a baggie!!!

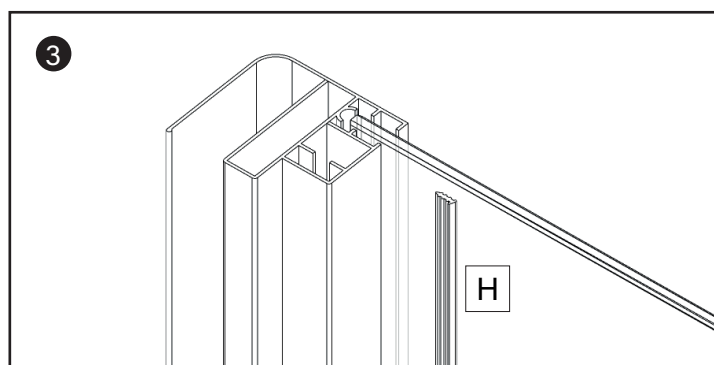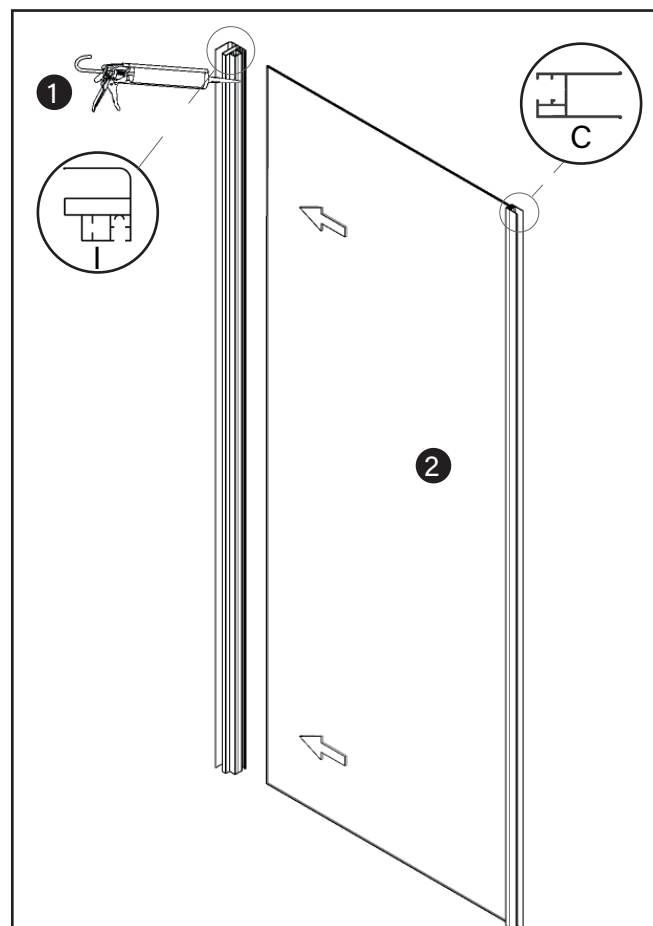

3° PASSAGE





1. Insert the fixed wall into the previously fixed wall profile.

NOTE: *nothing goes under the fixed slab, it must be laid and siliconed from the outside.*

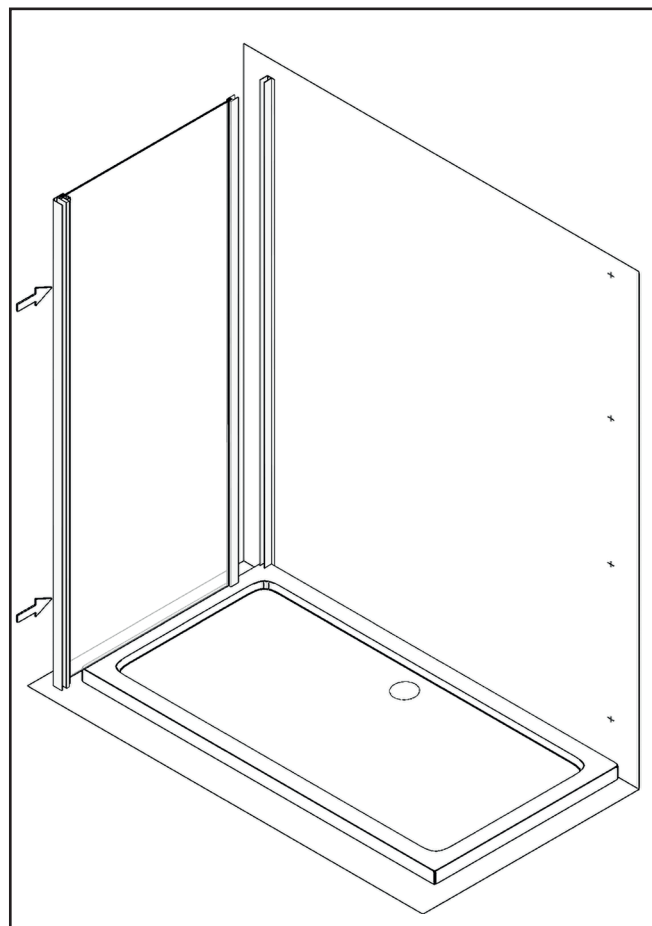



4° PASSAGE

1. Position the glass retainer cover.
2. Place the gasket in the lower profile (glass protection gasket).
3. Use the 8x30 screw to connect the lower aluminium rail with the vertical profiles; connectors must be inserted between the rail and the profiles. In this way we construct the door frame (skeleton).
4. Insert the fixed glass panes as shown.

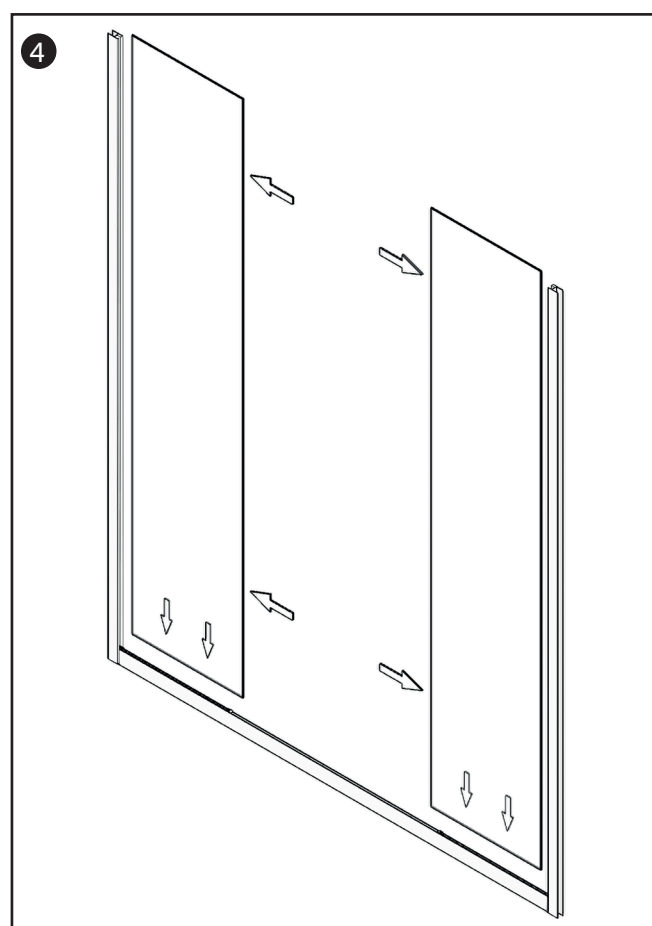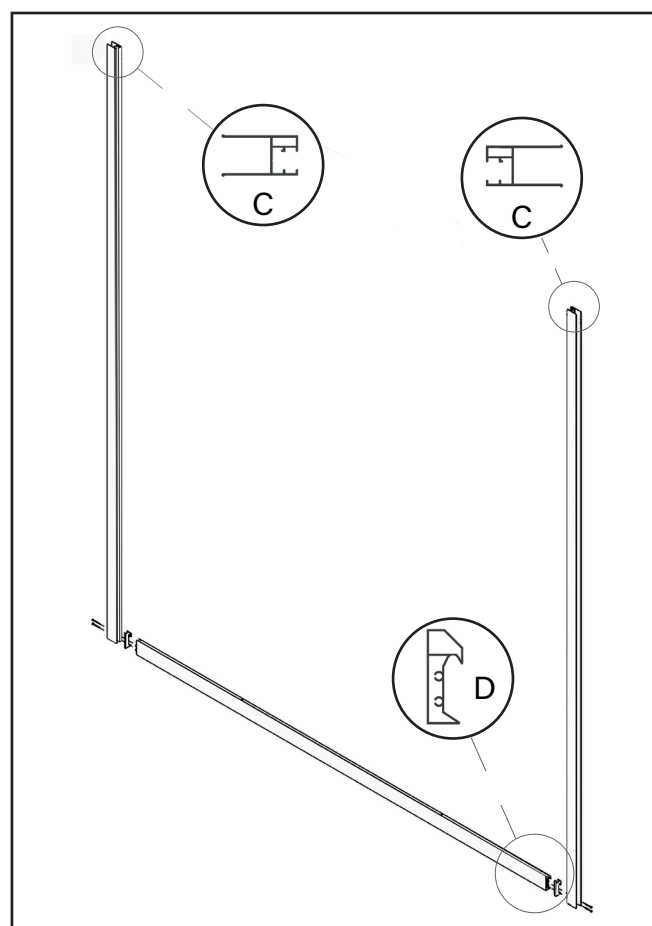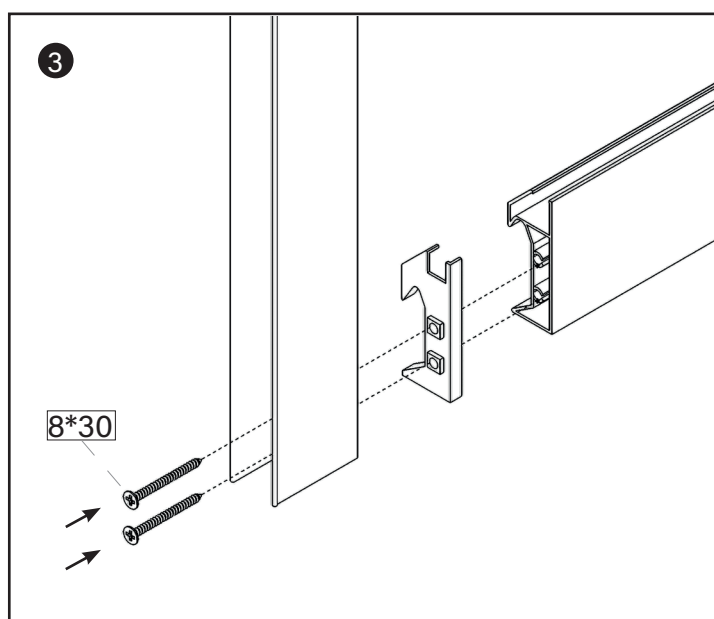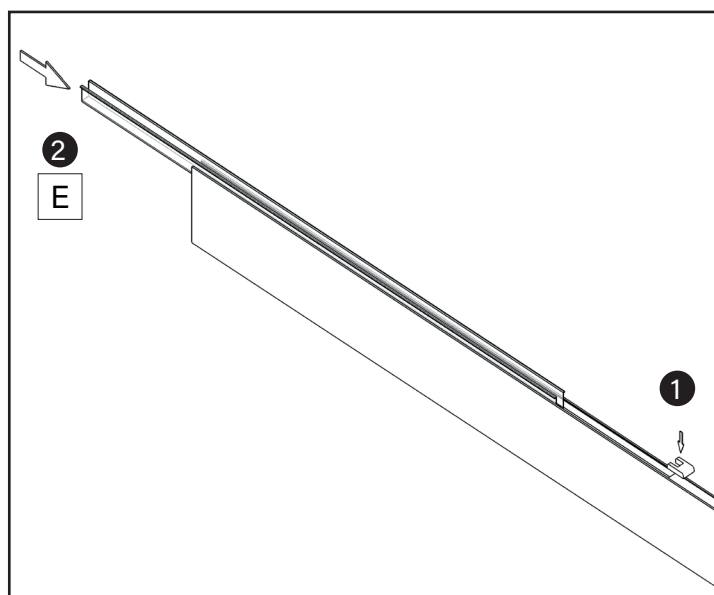



5° PASSAGE

1. Repeat the previous step (2) for the upper part of the frame.

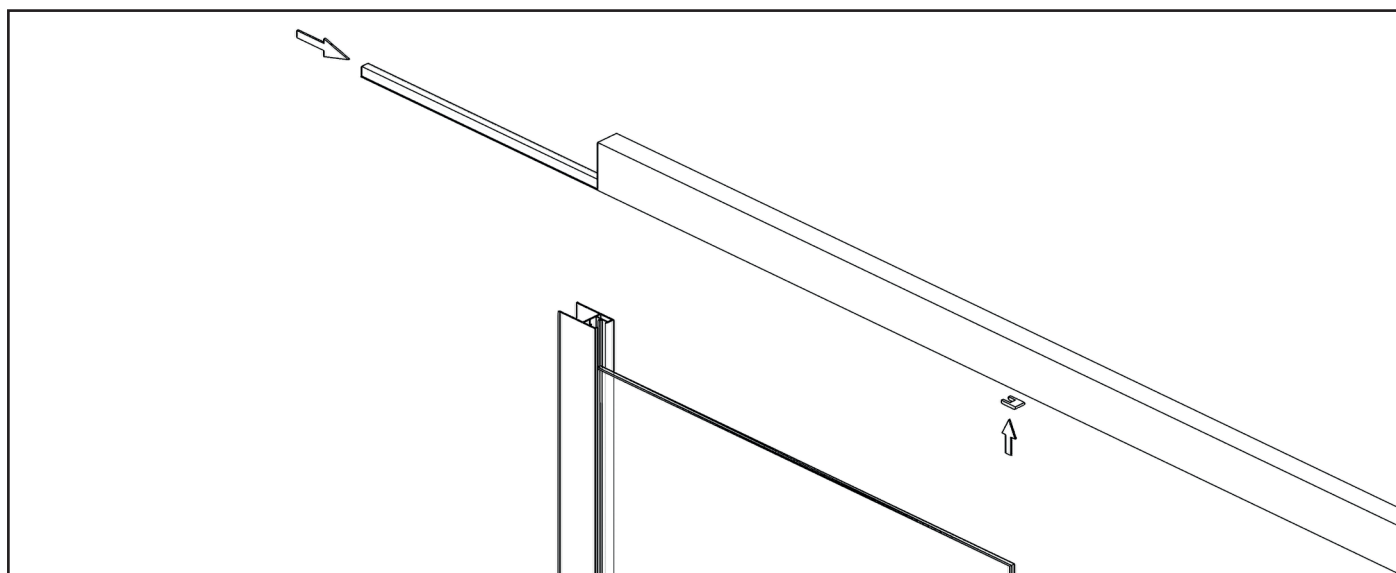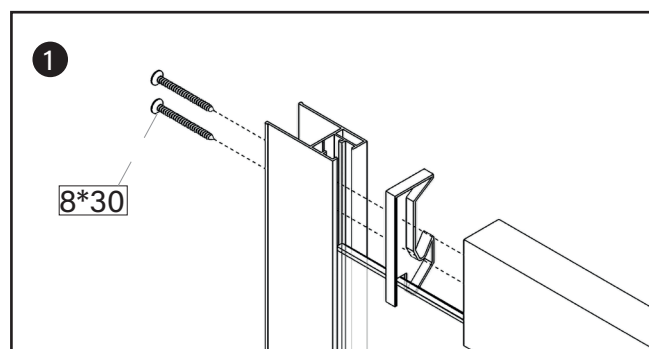

6° PASSAGE



1. Proceed with positioning the entire door on the shower tray.
2. Adjust the frame extension by acting on the telescopic (1 profile fits inside the other).

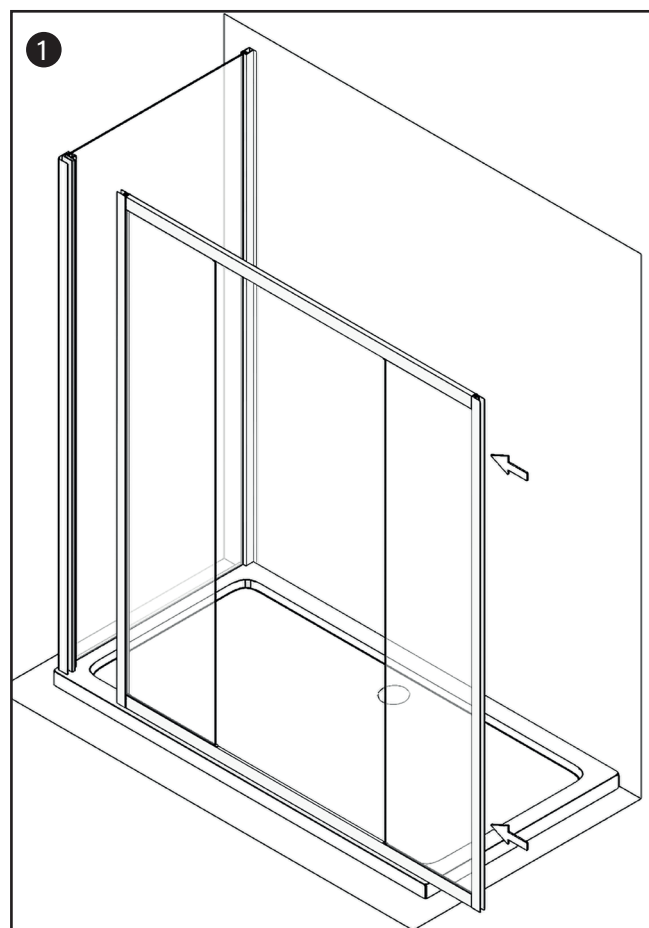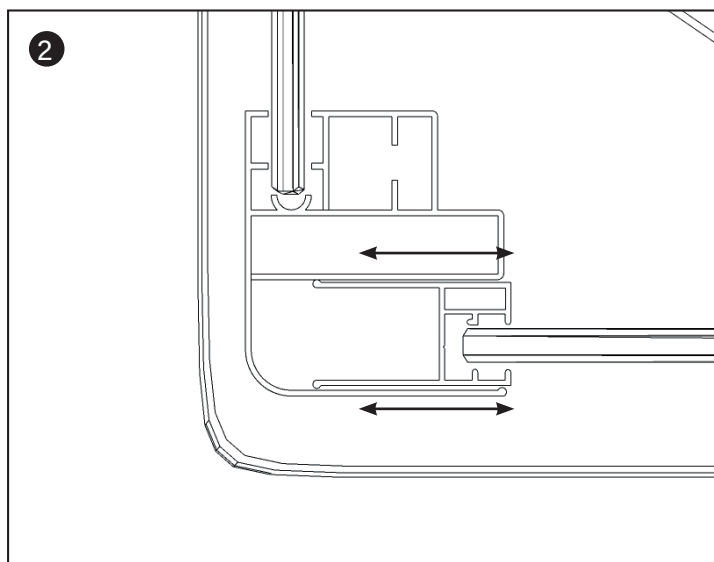

7° PASSAGE

1. Apply silicone in the groove of the angle profile.
2. Insert the fixed glass inside the corner profile and while fresh complete the next step.
3. Install the glass stop gasket between the glass and the aluminium corner profile, taking care to insert it from bottom to top.


You get it rolled up in a baggie!!!

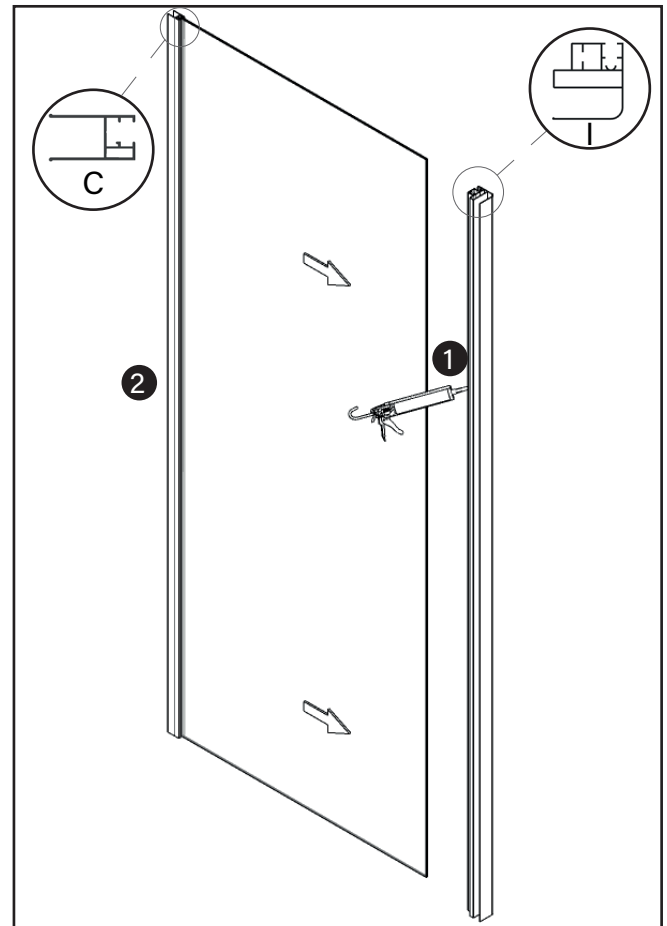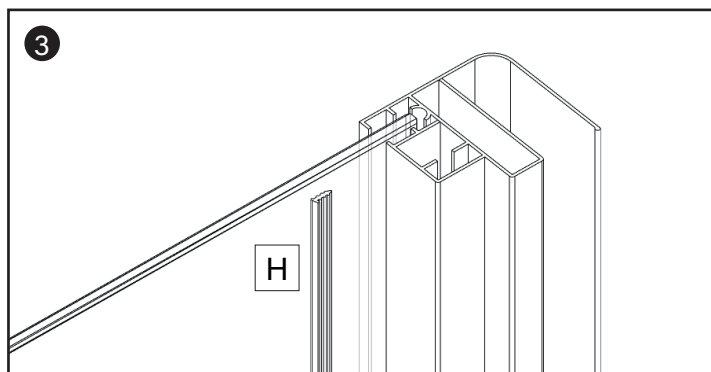

8° PASSAGE

1. Proceed with the insertion of the fixed wall into the wall profile.



IMPORTANT: *For correct installation, we recommend removing the wall profile from the wall, inserting it on the fixed glass wall and then placing the assembly on the plate; you will fix the wall profile later.*

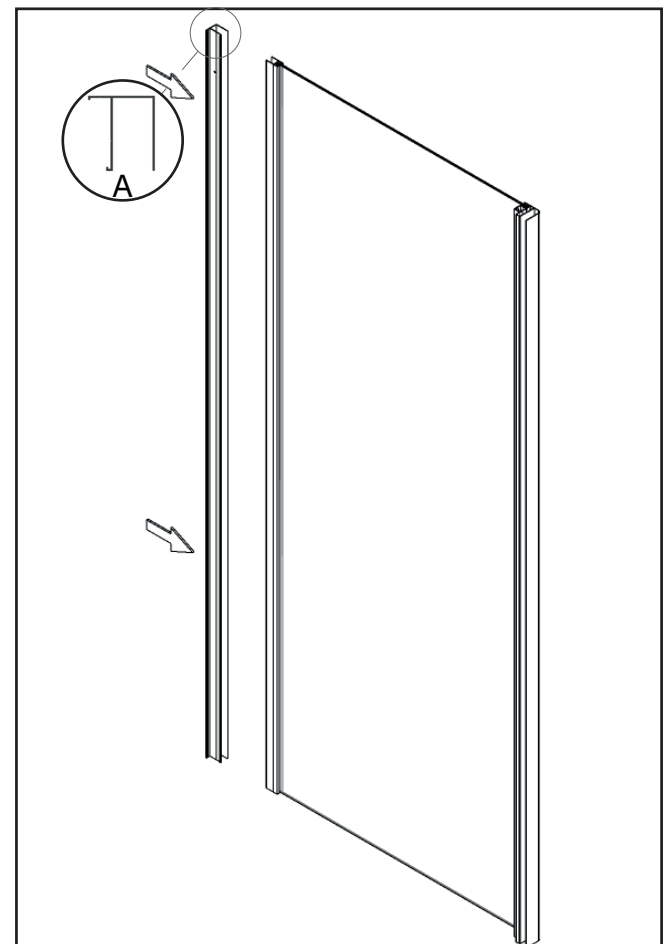

9° PASSAGE

1. Insert the fixed wall between the wall and the aluminium profile of the sliding wall.
2. Finish by fixing the wall profile to the wall using screws on previously inserted wall plugs.

NOTE: nothing goes under the fixed slab, it must be placed and siliconed from the outside.

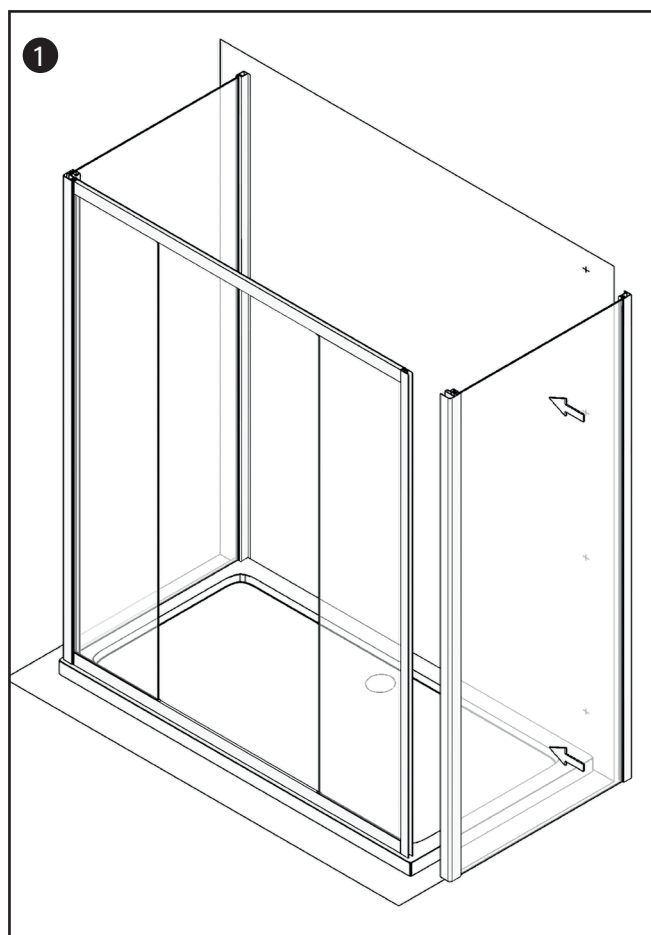
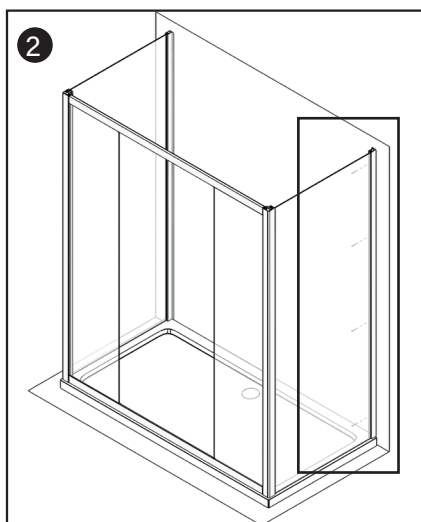


10° PASSAGE

1. Install the upper running wheels in the two panes.

Note: The upper castors are adjustable; if, after fitting the shower enclosure, the doors do not slide smoothly, they can be adjusted using the lower screw on the upper bearing.

2. Install the lower running wheels (with quick release button).

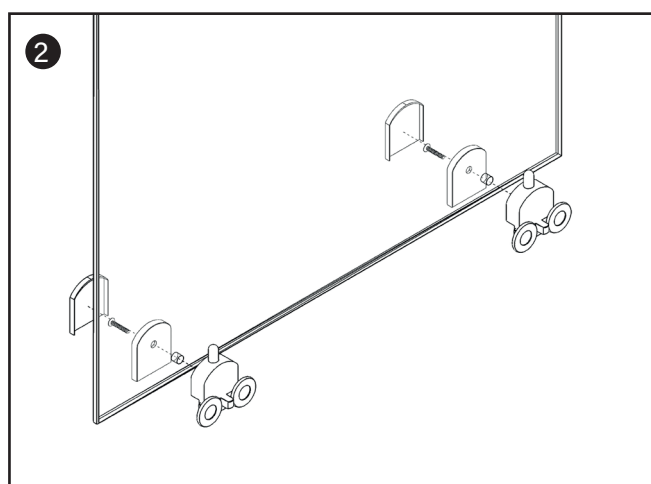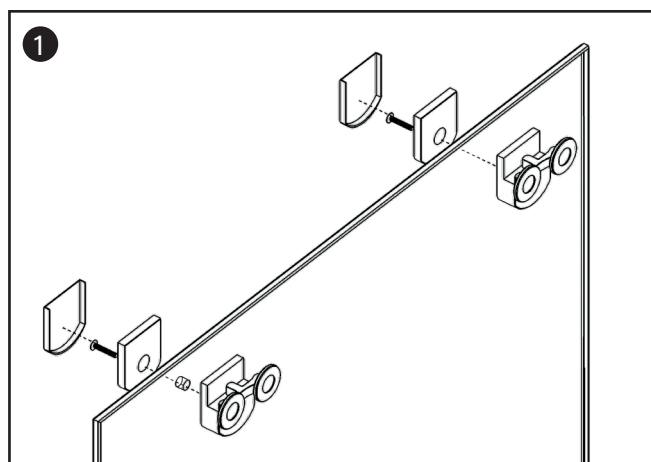




11° PASSAGE

1. Hook the sashes on the top sliding track.

Note: Make sure the door is on axis, see previous step for adjustment.

2. Hook the wheels onto the lower rail.



Note: the lower running wheels are detachable to facilitate routine cleaning and maintenance.

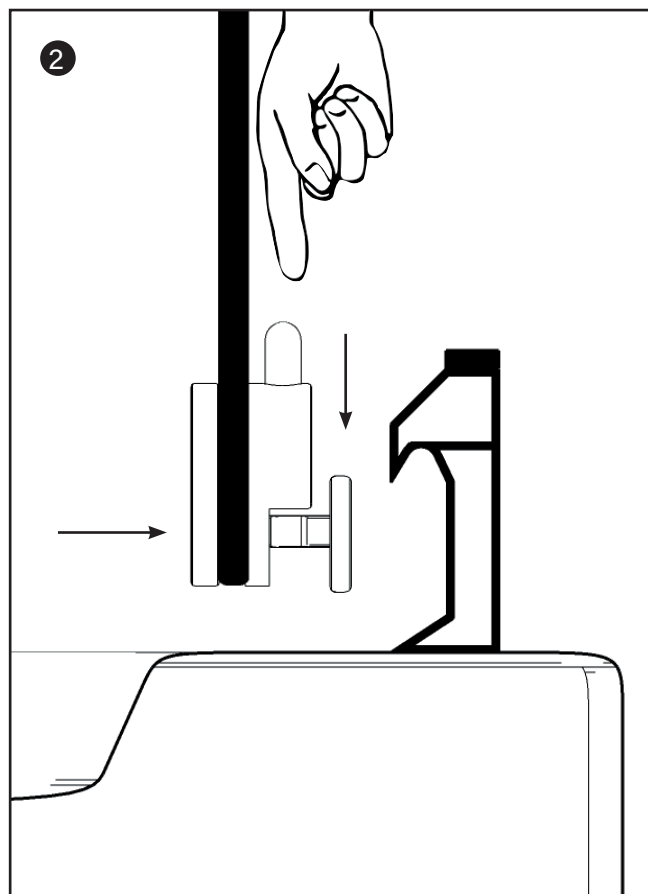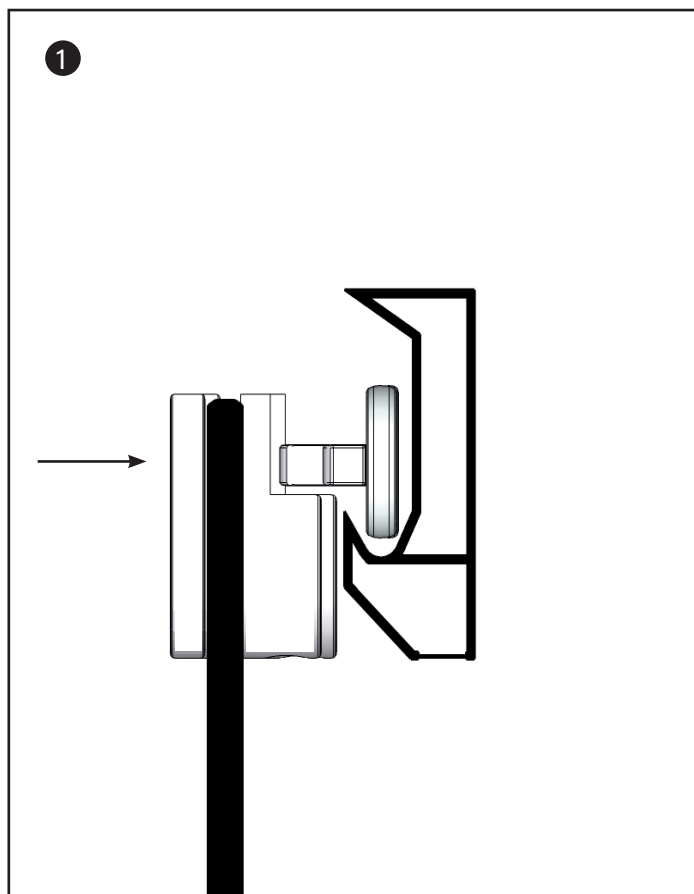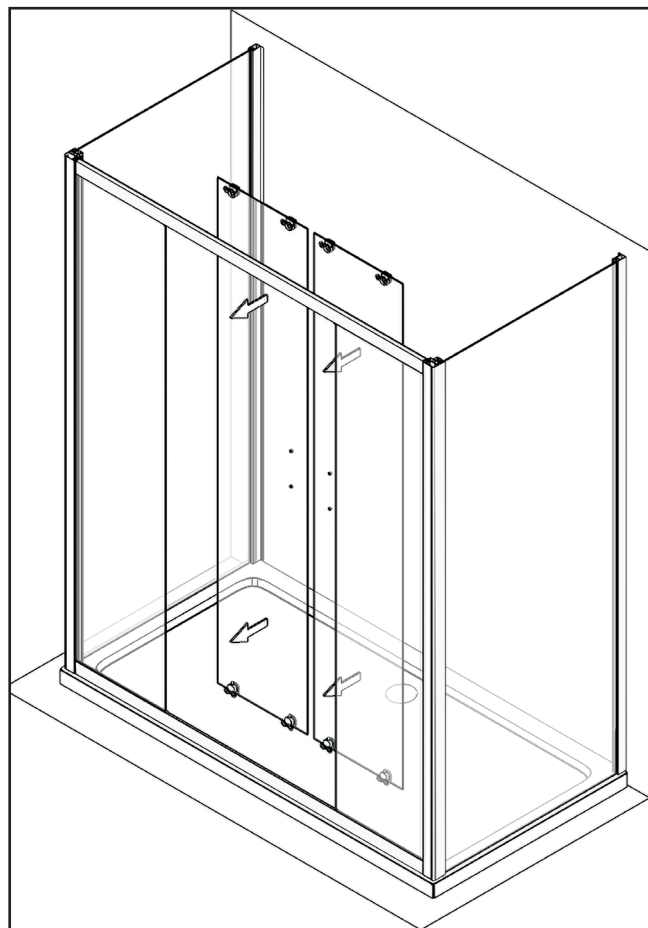

12° PASSAGE

1. Install the magnetic closing seals on the sliding glass panes.
2. Install the sealing gasket between fixed glass and sliding door.

Note: there is a higher and a lower gasket supplied, the lower one goes in the fixed glass, the higher one in the sliding glass.

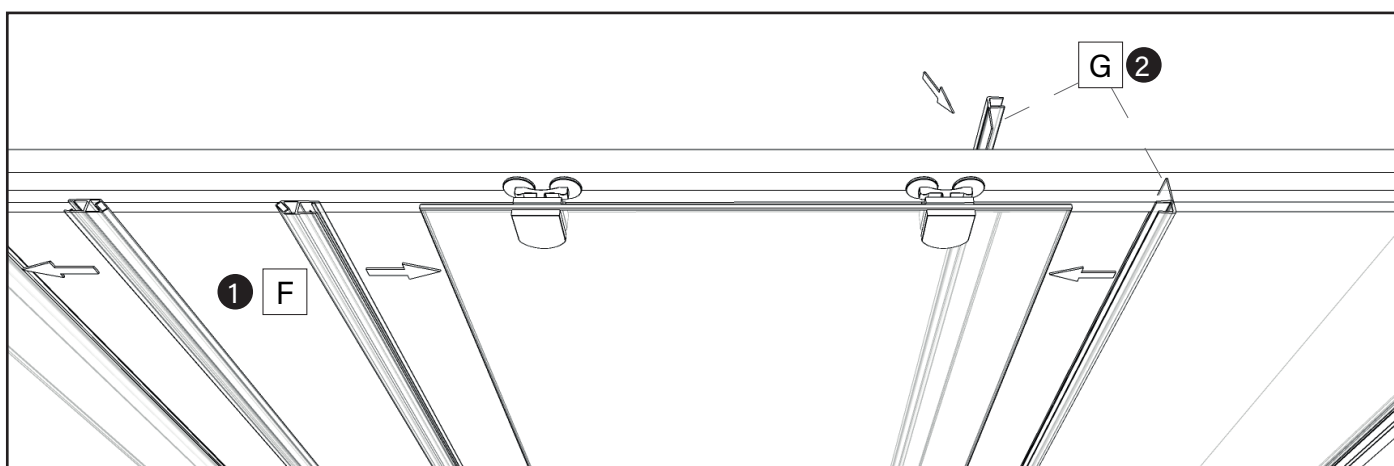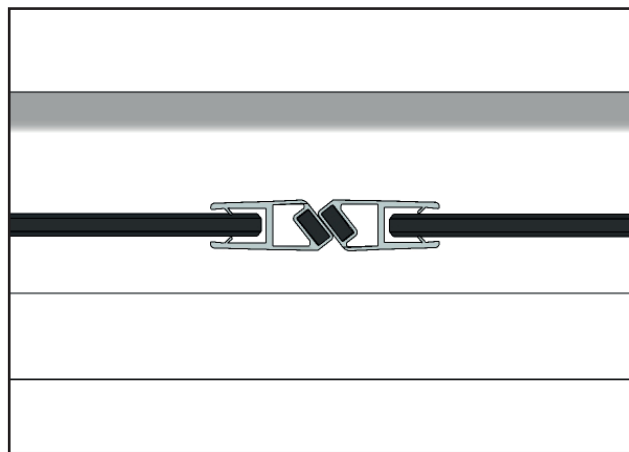



13° PASSAGE

1. Check the plumbness, drill holes from the inside to secure the shower wall to the profiles, to the wall with 8x16 screws and to the corner profile with 6x20 screws.

IMPORTANT: maximum fixed glass adjustment 2.5 cm.

Note: A total of 8 holes must be drilled, 2 holes per profile, 1 at the top and 1 at the bottom.

2. Cover the wall profile of the fixed wall with the aluminium cover to conceal the fixing screws and to protect them from water.
3. Cover the screws of the angle profile with screw caps.

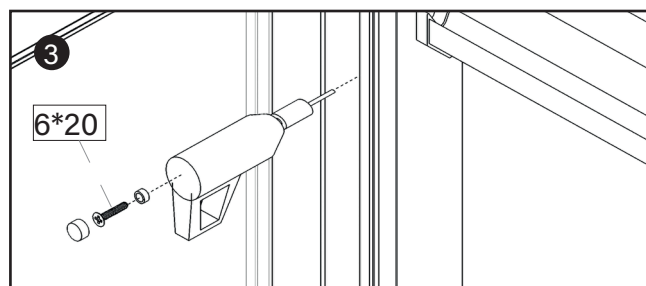
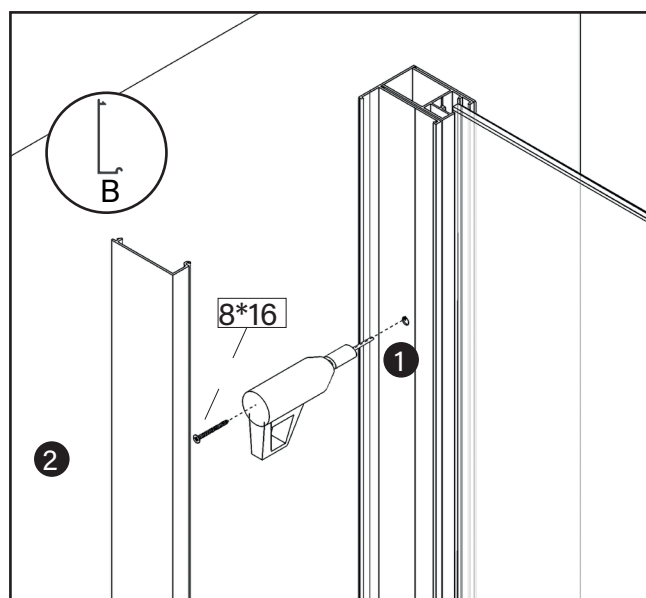


14° PASSAGE

1. Insert the flat gasket between the fixed glass and the aluminium profile (inner side).

You get it rolled up in a baggie!!!

2. Install the end stop on the top and bottom rails. Use the supplied 8x12 screws, otherwise you risk drilling holes in the visible side of the slide rail.

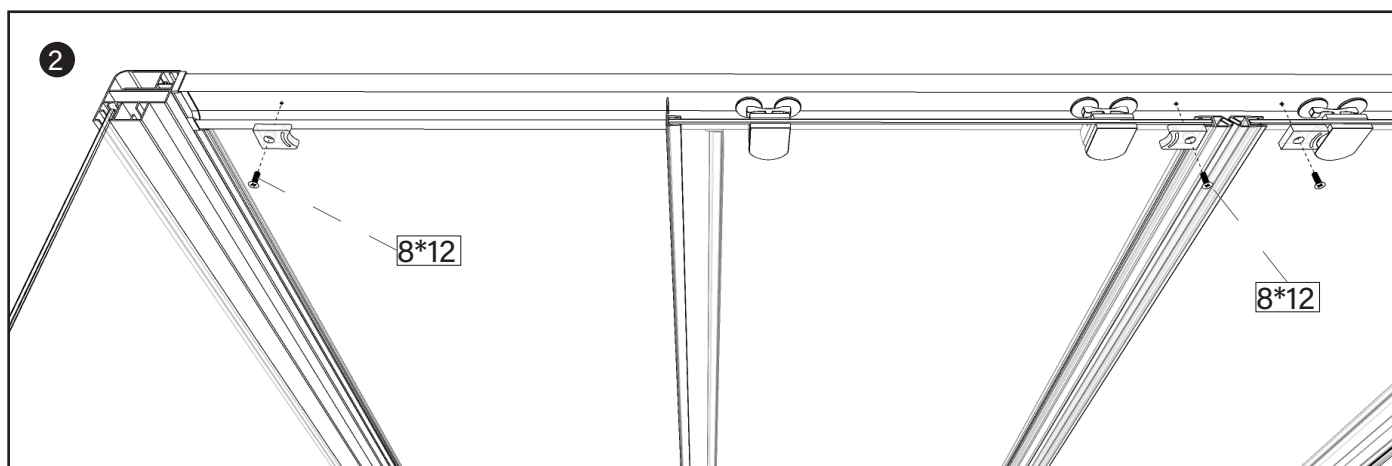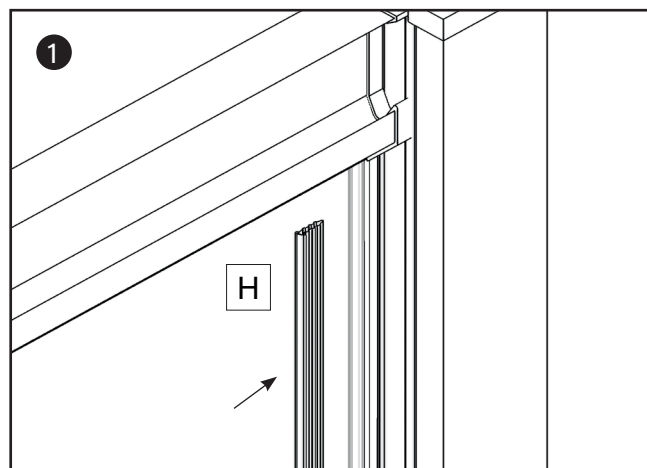

15° PASSAGE

1. Install handles (hole on inside).
2. Install the cover caps at the top of the aluminium profiles.
3. Siliconise the outside of the shower enclosure around the entire perimeter and wait 24 hours.

