

Manhattan

DESCRIPTION

Sliding shower door with central entrance, made of 6 mm toughened glass. Possibility of quick release of the lower carriages. Manual adjustment of wall profiles 2.5 cm per side, chrome-plated aluminium frame and glass with anti-limescale treatment indicated by special labels.






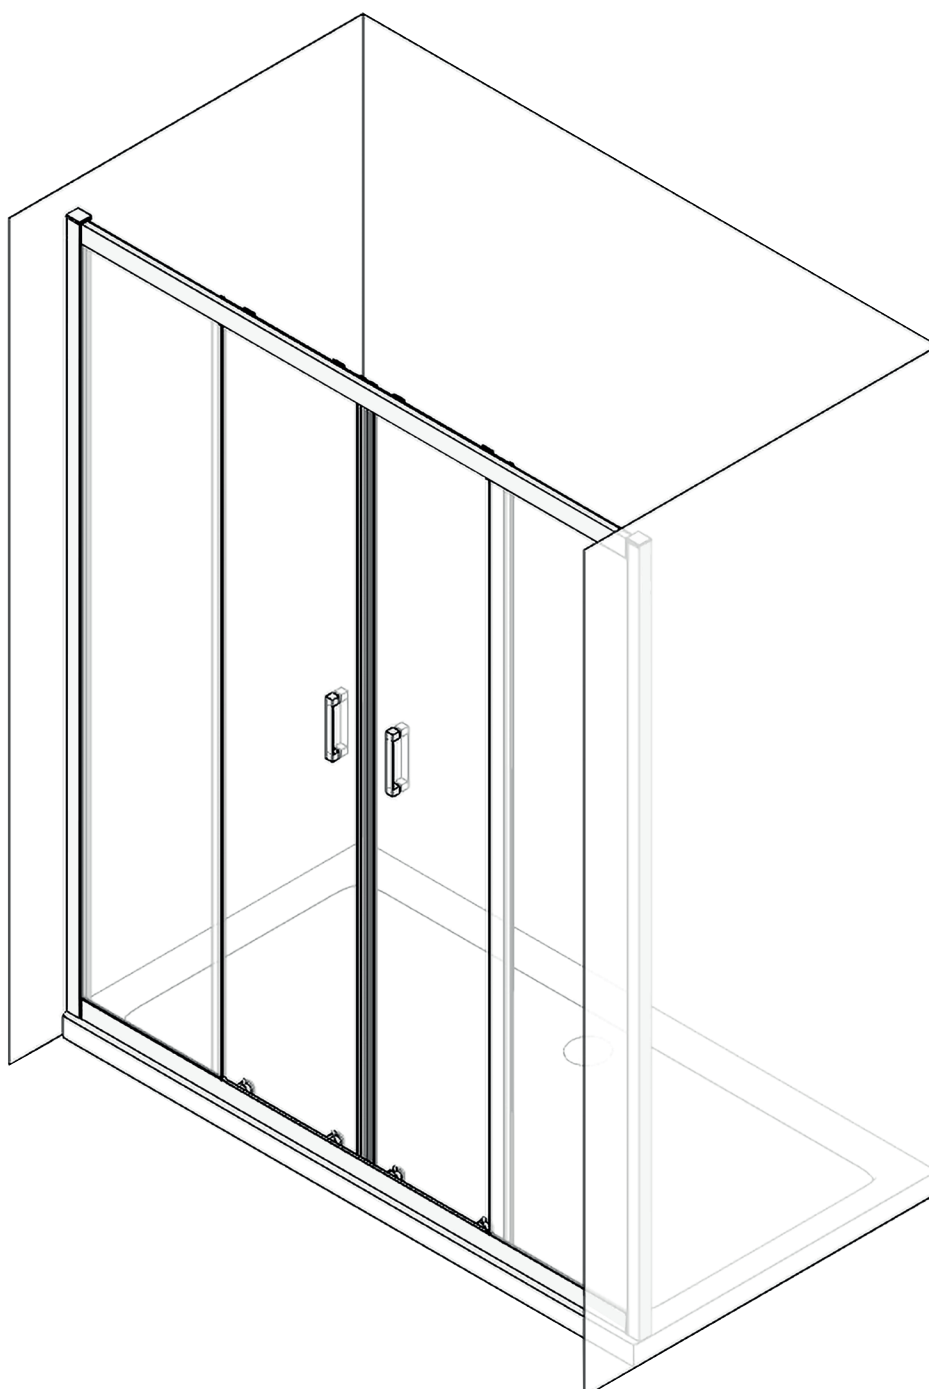


TABLE OF MEASURES





DOORS	MEASURES A	MEASURES B
130 (scrollbar measures 120)	1280 - 1330	560
135 (scrollbar measures 125)	1330 - 1380	535
140 (scrollbar measures 130)	1380 - 1430	610
145 (scrollbar measures 135)	1430 - 1480	585
150 (scrollbar measures 140)	1480 - 1530	660
155 (scrollbar measures 145)	1530 - 1580	535
160 (scrollbar measures 150)	1580 - 1630	610
165 (scrollbar measures 155)	1630 - 1680	685
170 (scrollbar measures 160)	1680 - 1730	760
175 (scrollbar measures 165)	1730 - 1780	635
180 (scrollbar measures 170)	1780 - 1830	710
185 (scrollbar measures 175)	1830 - 1880	785
190 (scrollbar measures 180)	1880 - 1930	860
195 (scrollbar measures 185)	1930 - 1980	735
200 (scrollbar measures 190)	1980 - 2030	810
205 (scrollbar measures 195)	2030 - 2080	885
210 (scrollbar measures 200)	2080 - 2130	960

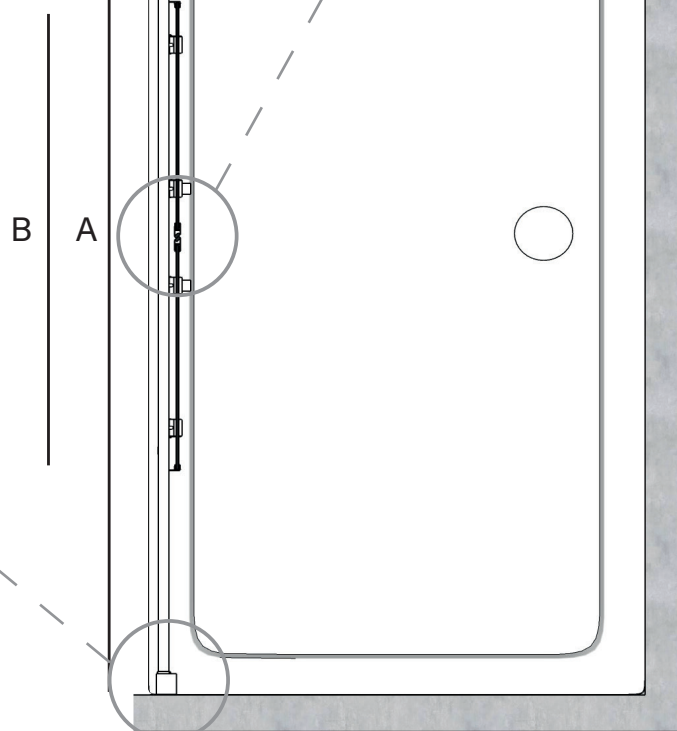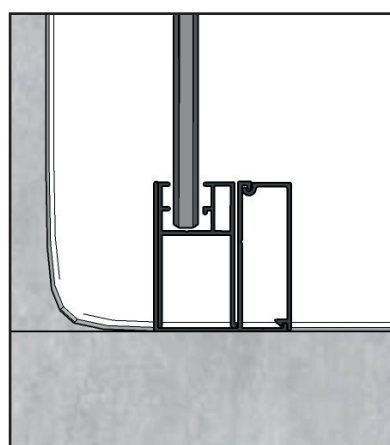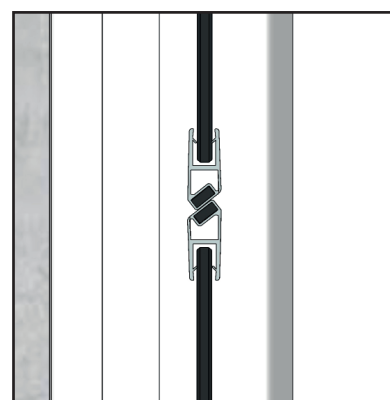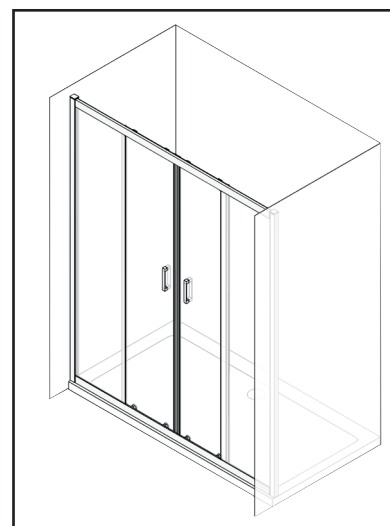

TOOLS REQUIRED

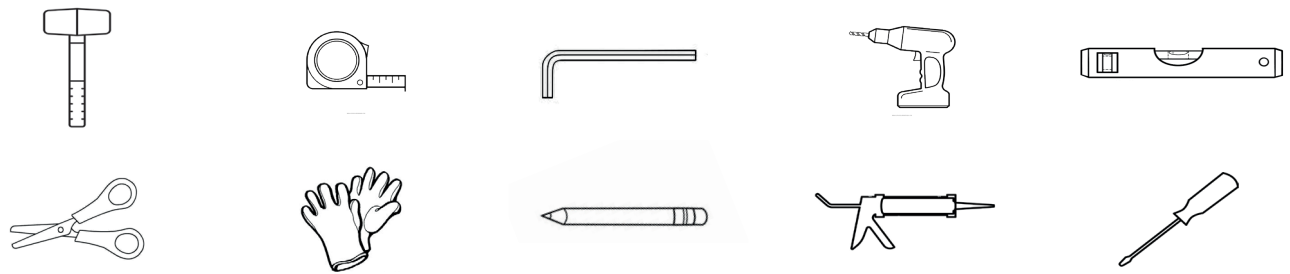


PACKAGE CONTENT (product shipped in two packages)

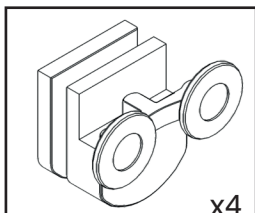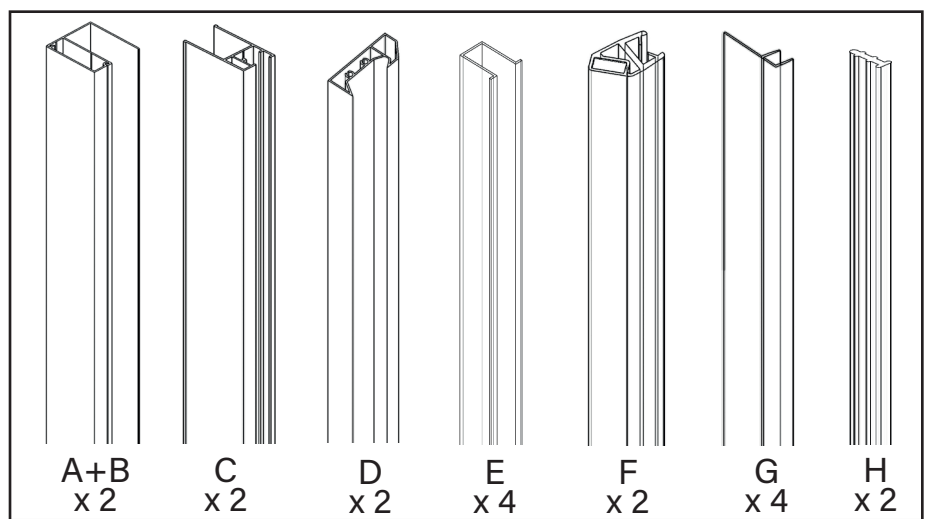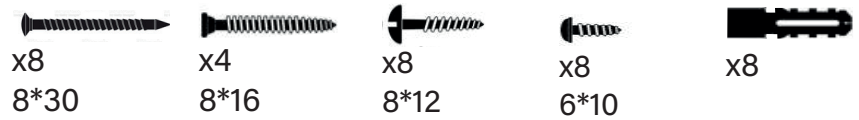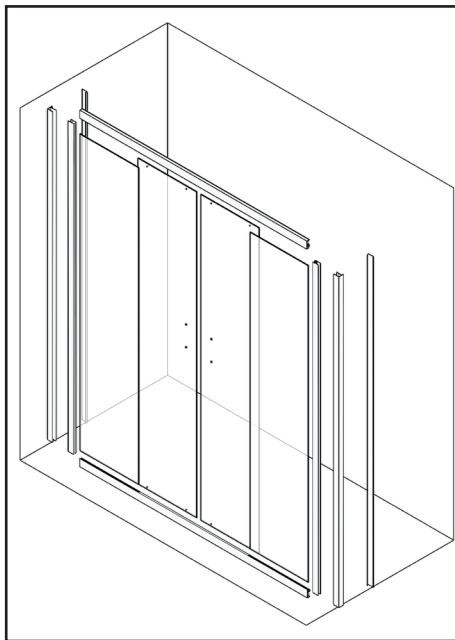


Upper wheels

x4

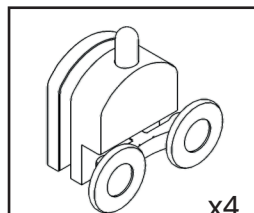


Removable lower wheels

x4

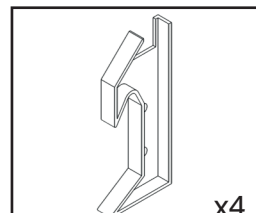


Fixed-side connector with slot

x4

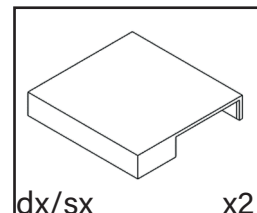


Top cover wall profile

x2

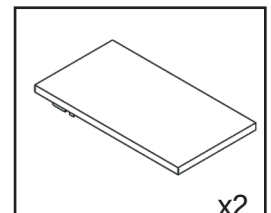


Upper fixed glass cover

x2

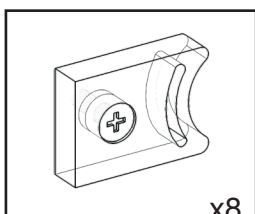


End of run

x8

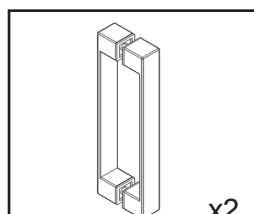

Handle

x2

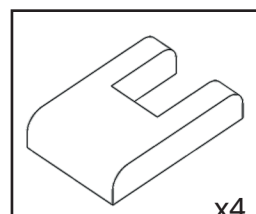

Glass retainer cover

x4





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profiles on the wall and use the plumb level .
3. Mark the holes in the wall with a pencil .
4. Drill the holes in the wall.
5. Insert wall plug, prepare for subsequent fixing of the wall profiles, we recommend not fixing them for the time being.





IMPORTANT

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimum aesthetic result.

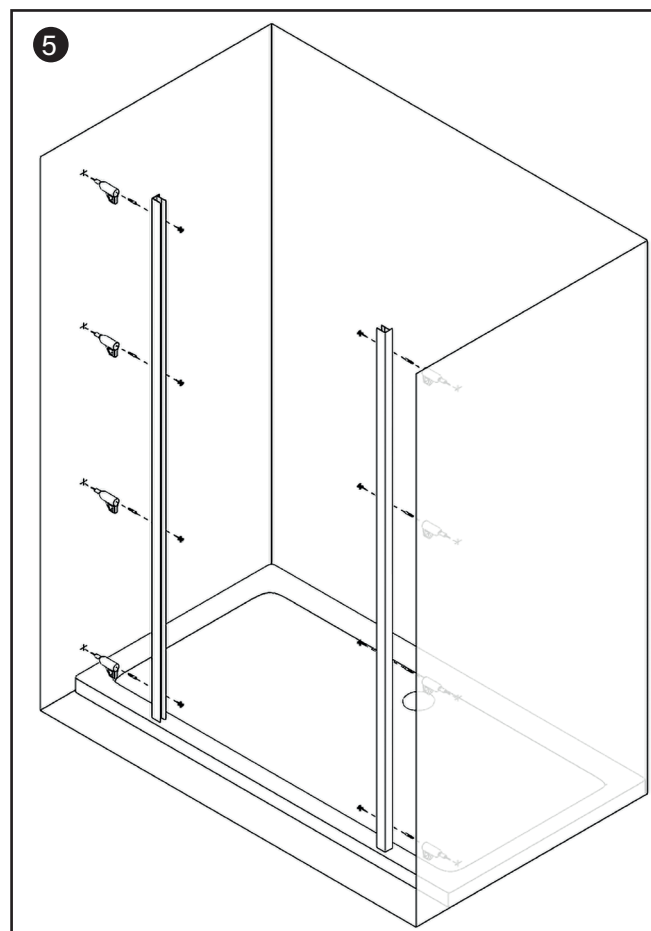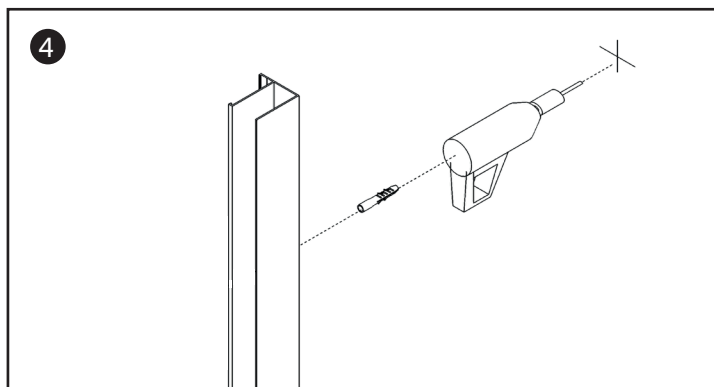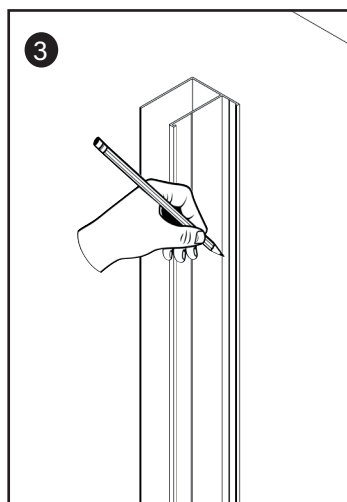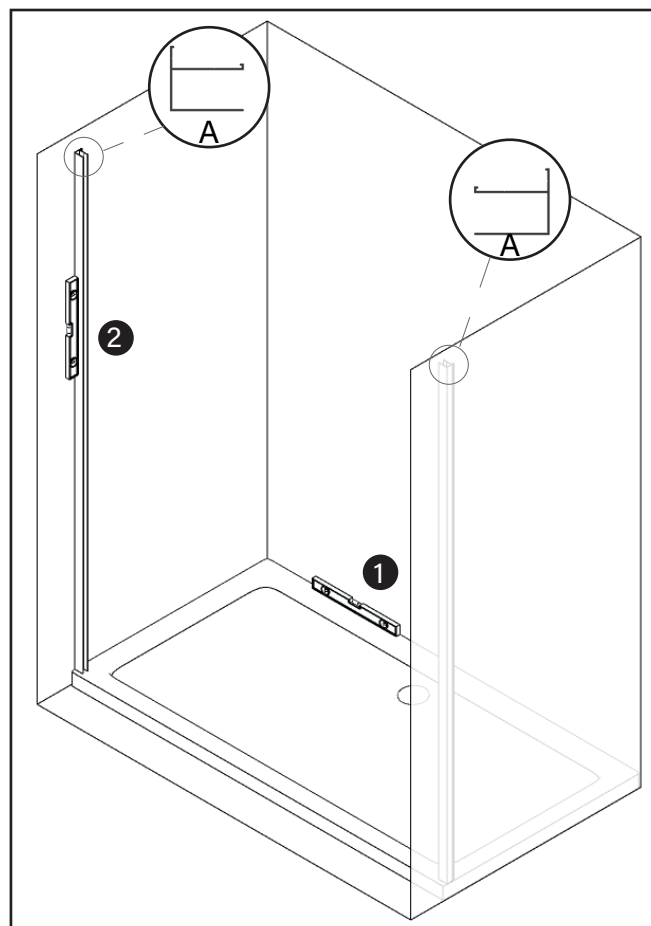



2° PASSAGE

1. Position the glass retainer cover.
2. Place the gasket in the lower profile (glass protection gasket).
3. Use the 8x30 screw to connect the lower aluminium rail with the vertical profiles; the connectors must be inserted between the rail and the profiles.
In this way we construct the door frame (skeleton).
4. Insert the fixed glass panes as shown.

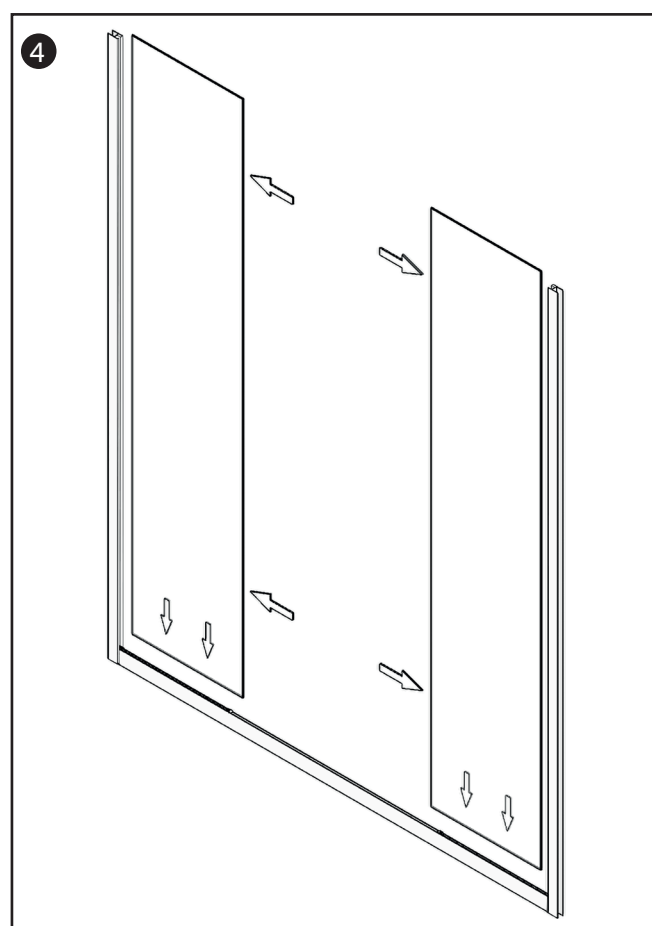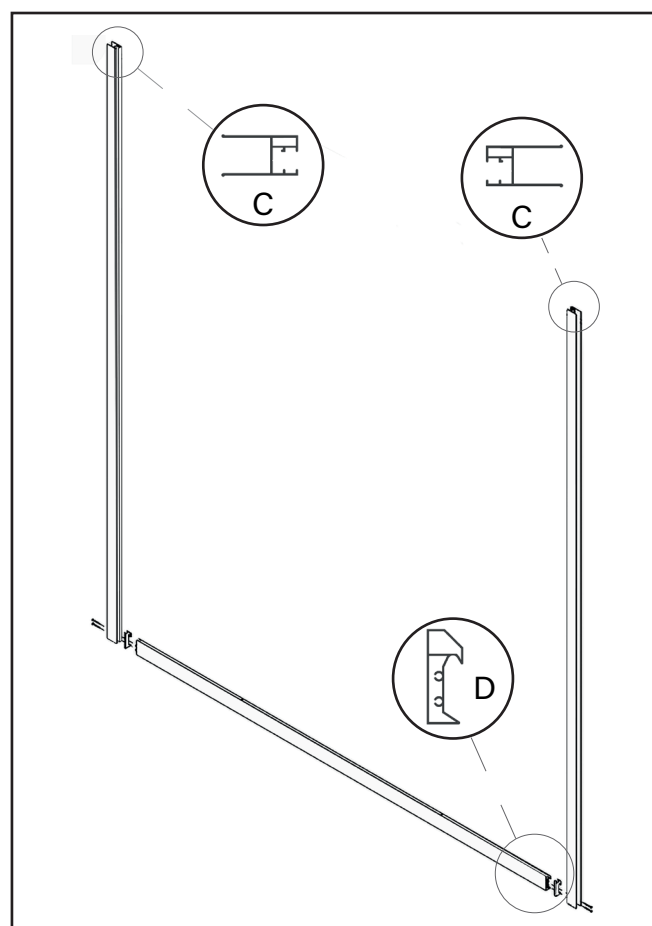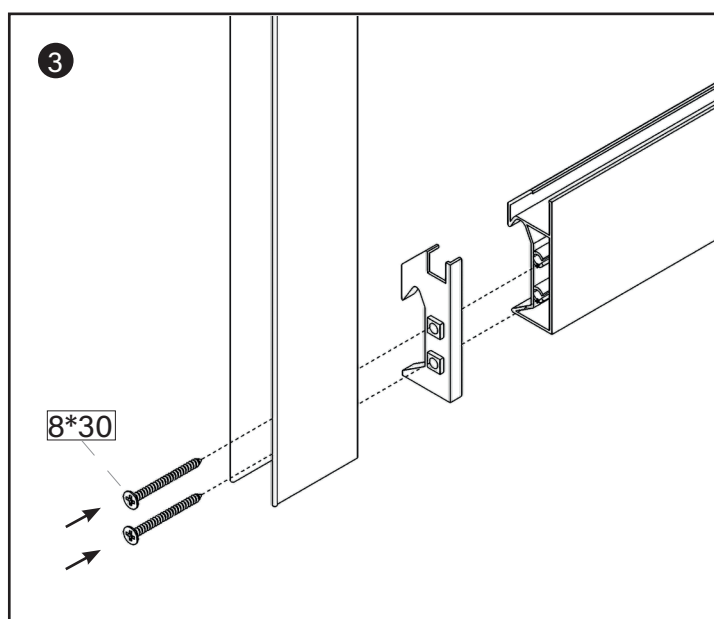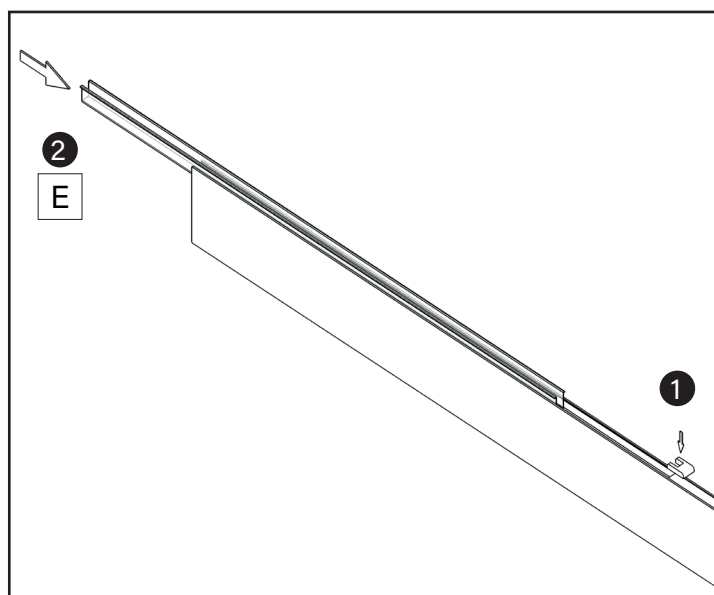


3° PASSAGE

1. Repeat the previous step (2) for the upper part of the frame.

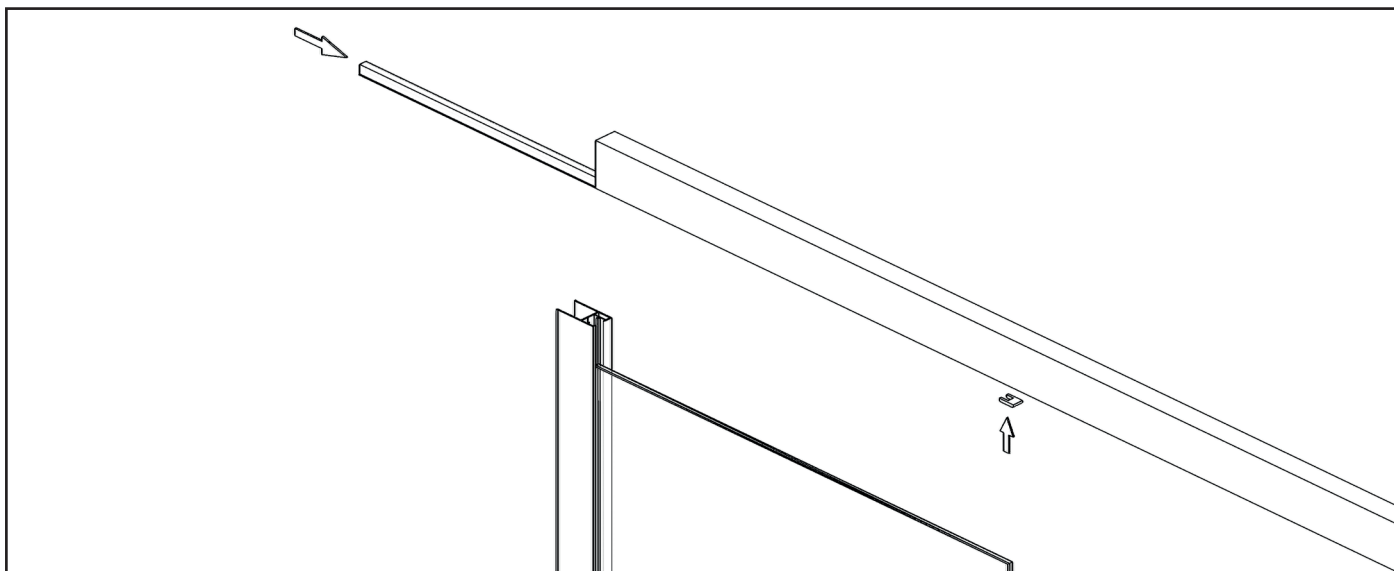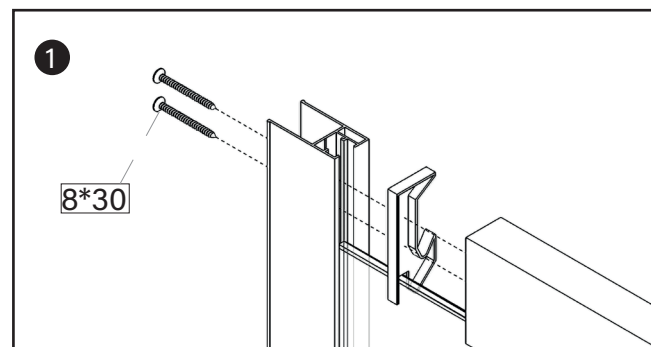



4° PASSAGE

1. Assemble the previously assembled frame/skeleton with the wall profiles.

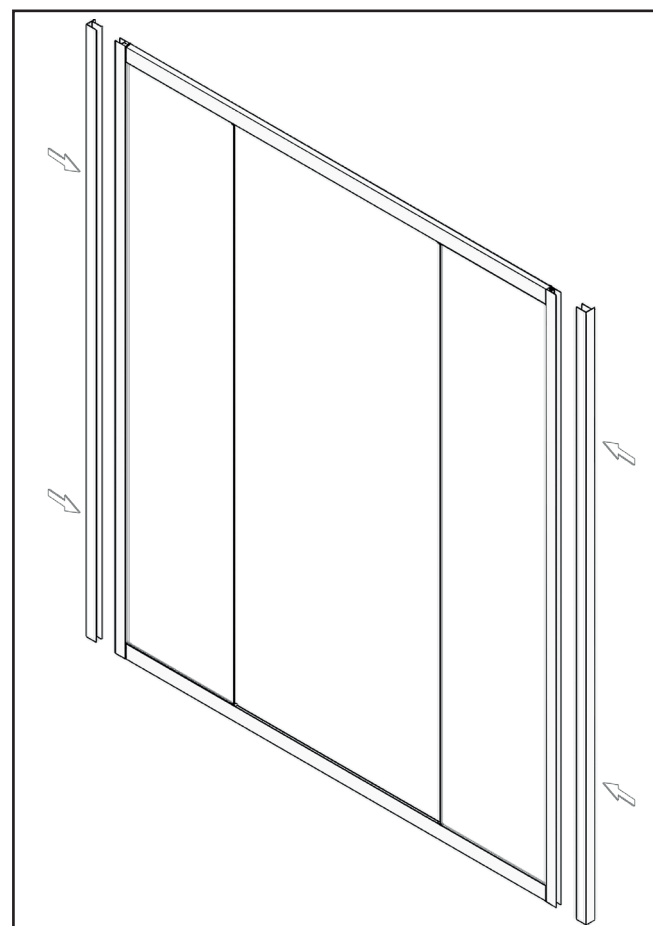



5° PASSAGE

1. Proceed with positioning the entire door on the shower tray.
2. Adjust the frame extension by acting on the telescopic (1 profile fits inside the other).

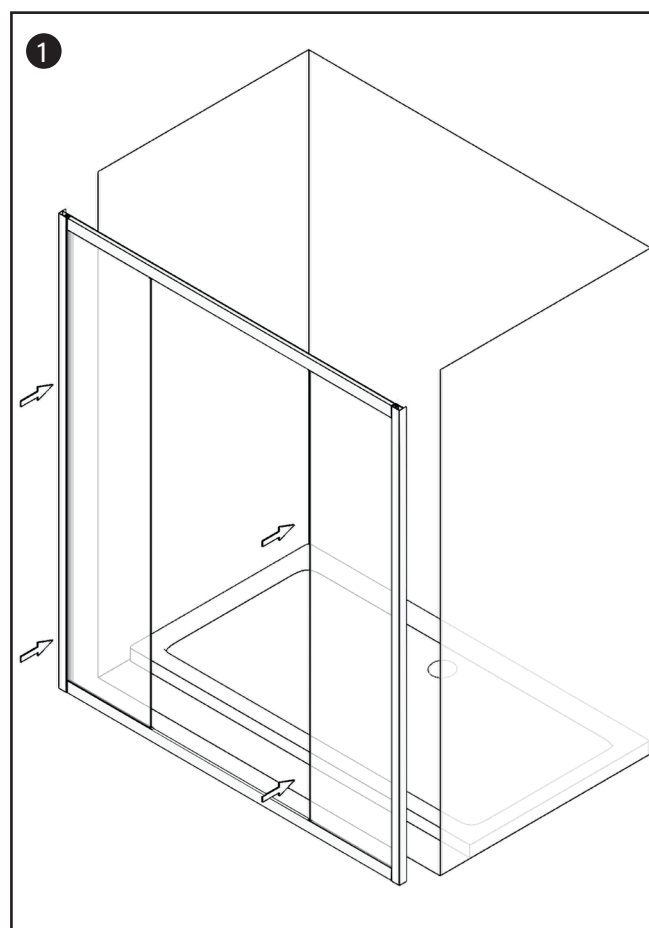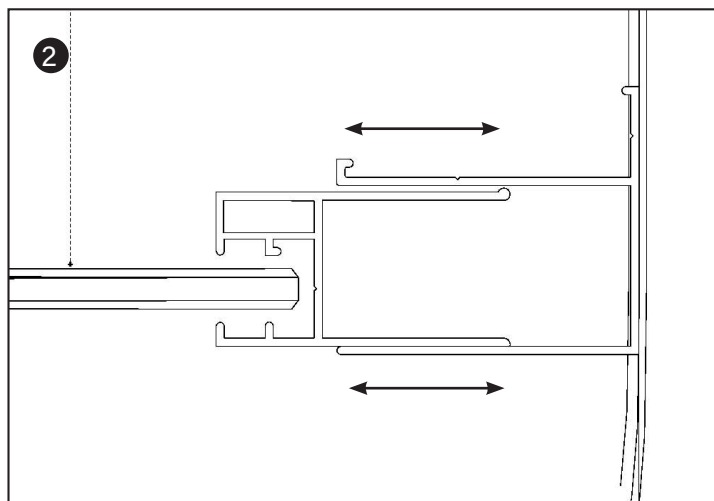

6° PASSAGE

1. Finish by fixing the wall profile (fixed glass side) to the wall using 8x30 screws and plugs previously inserted in the wall.

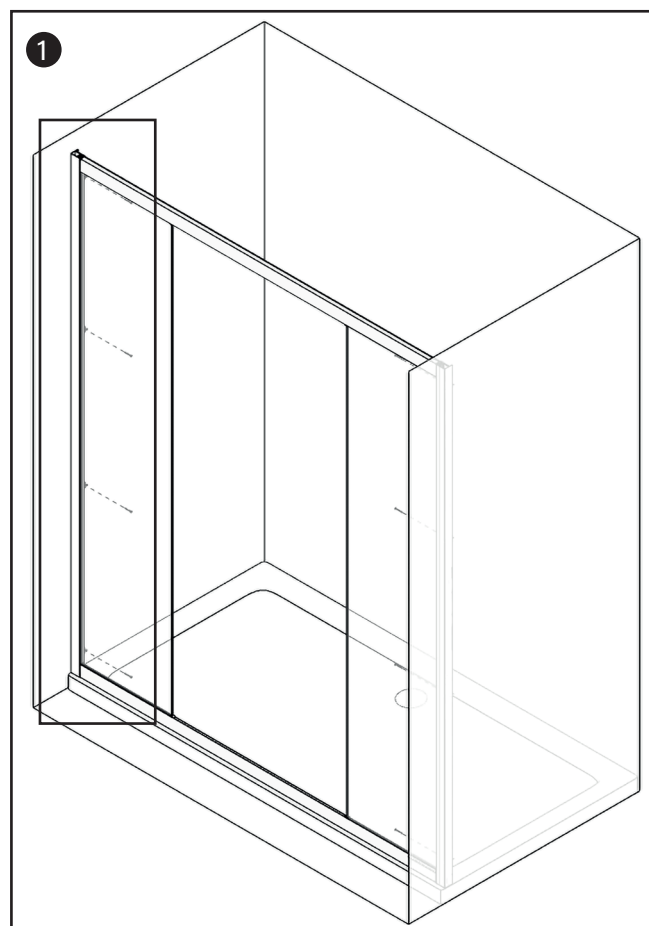
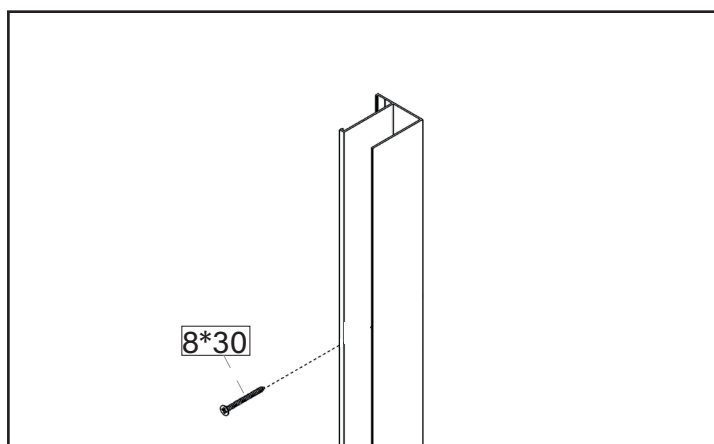


7° PASSAGE

1. Install the upper running wheels in the two panes.

Note: The upper castors are adjustable; if, after fitting the shower enclosure, the doors do not slide smoothly, they can be adjusted using the lower screw on the upper bearing.

2. Install the lower running wheels (with quick release button).

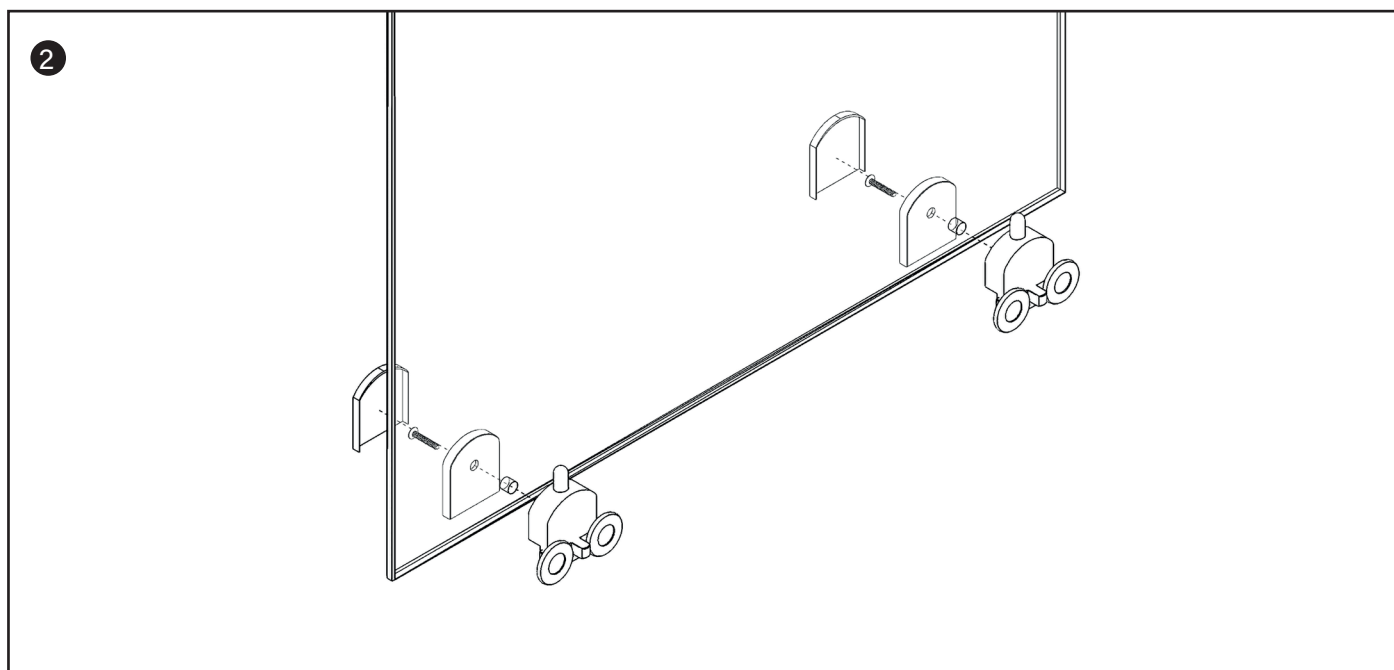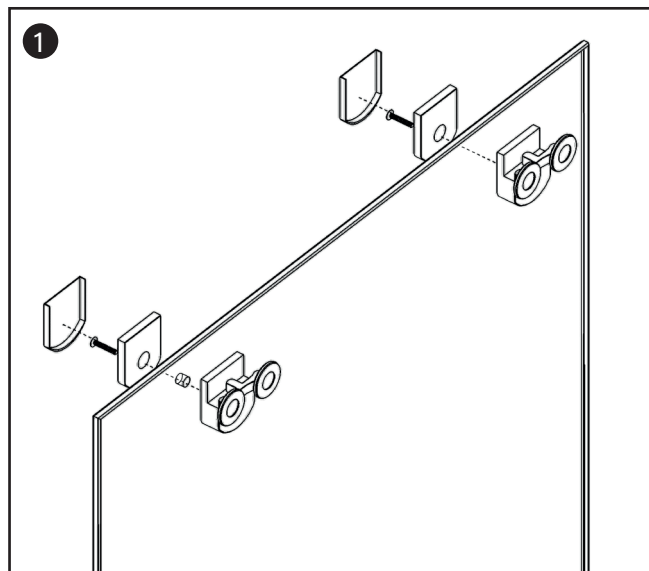




8° PASSAGE

1. Hook the sashes on the top sliding track.

Note: Make sure the door is on axis, see previous step to adjust.

2. Hook the wheels onto the lower rail.



Note: the lower running wheels are detachable to facilitate routine cleaning and maintenance.

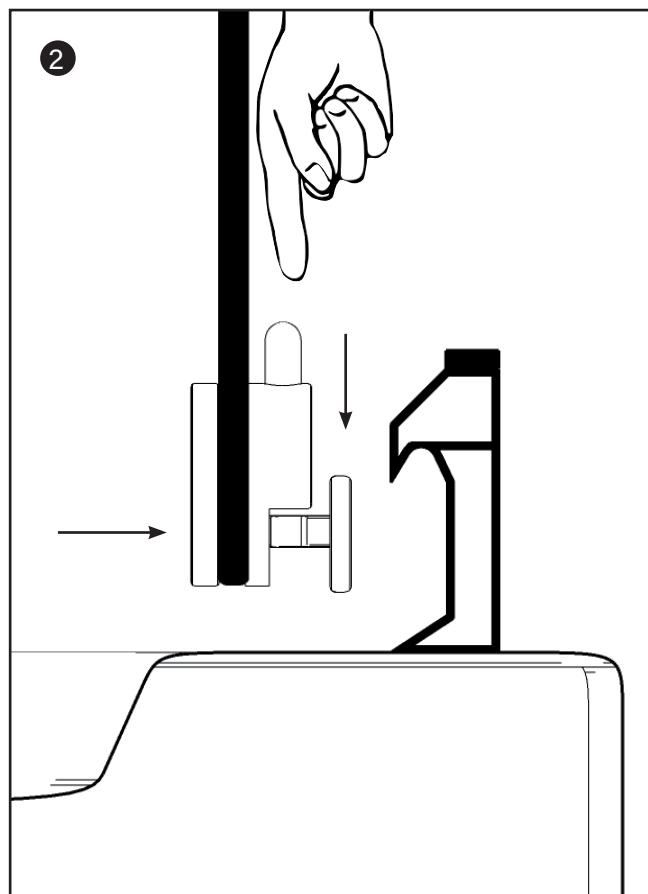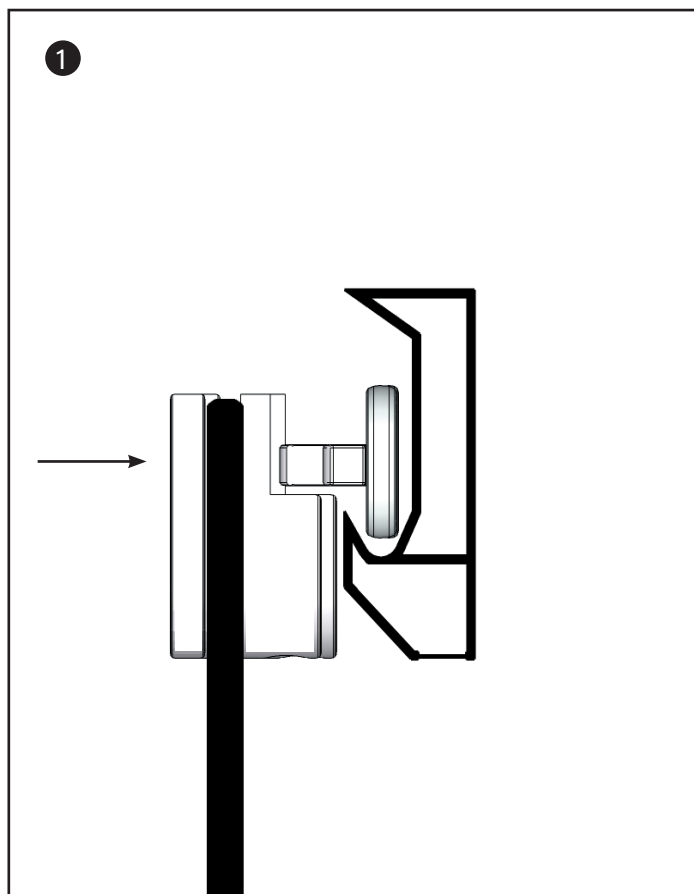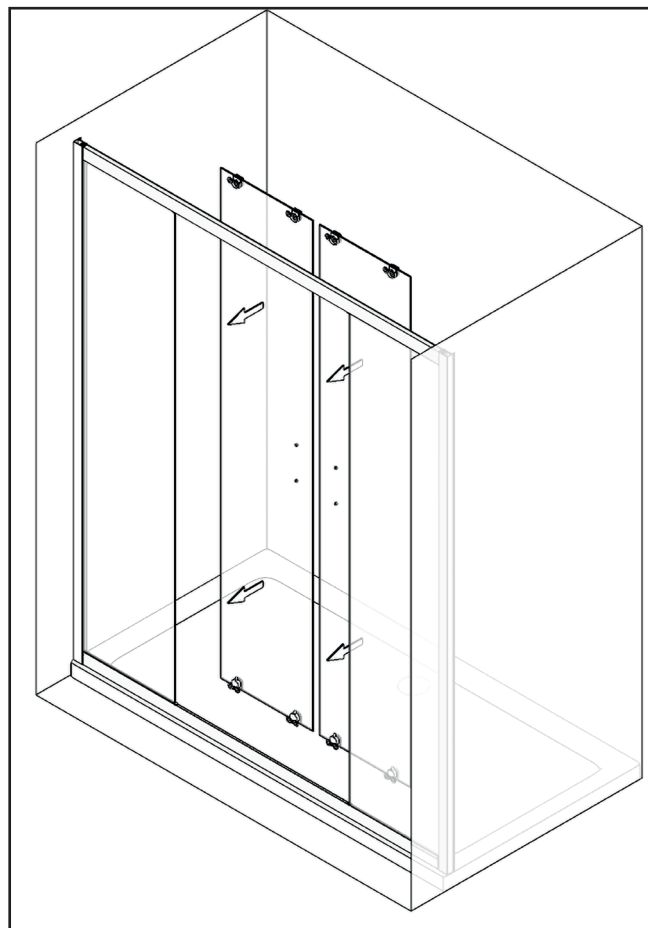

9° PASSAGE

1. Install the magnetic closing seals on the sliding glass panes.
2. Install the sealing gasket between fixed glass and sliding door.

Note: there is a higher and a lower gasket supplied, the lower one goes in the fixed glass, the higher one in the sliding glass.

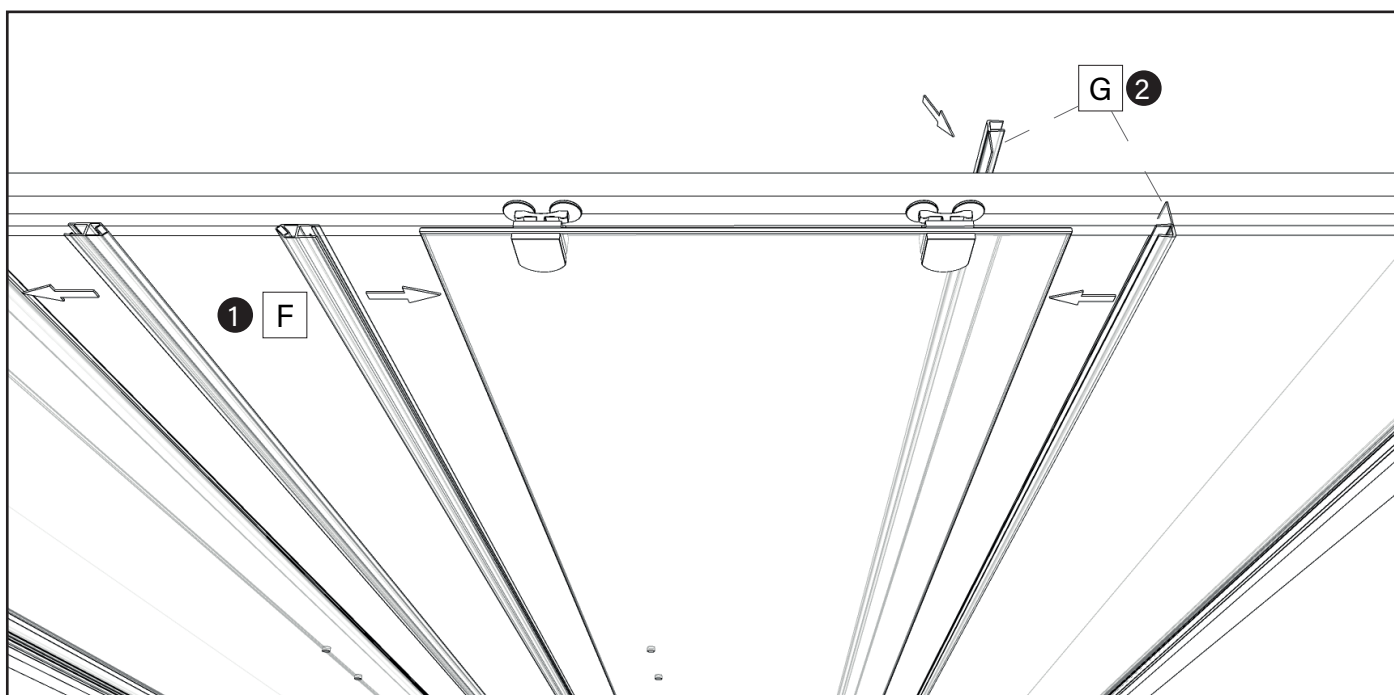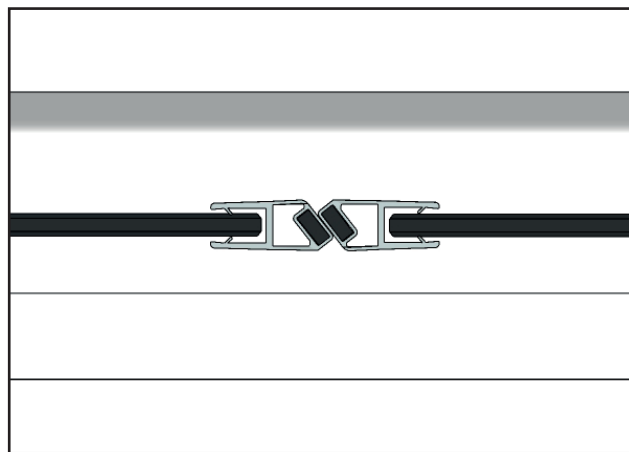


10° PASSAGE

1. Check plumbness, drill holes from the inside to secure the shower wall to the wall profiles using the 8x16 screws.

IMPORTANT: maximum fixed glass adjustment 2.5 cm.

Note: A total of 4 holes must be drilled, 2 holes per profile, 1 at the top and 1 at the bottom.

2. Cover the wall profile of the fixed wall with the aluminium cover to conceal the fixing screws and to protect them from water.


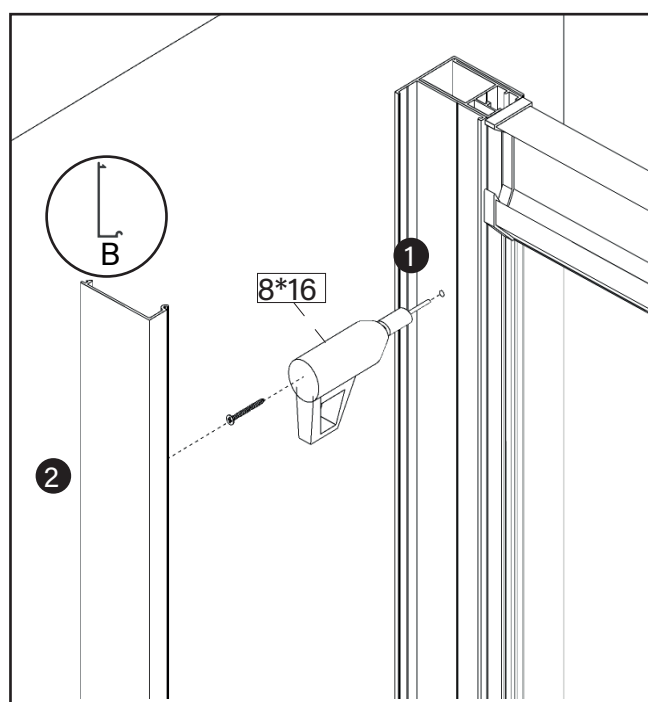


11° PASSAGE

1. Insert the flat gasket between the fixed glass and the aluminium profile (inner side).

You get it rolled up in a baggie!!!

2. Install the end stop on the top and bottom rails. Use the supplied 8x12 screws, otherwise you risk drilling holes in the visible side of the slide rail.

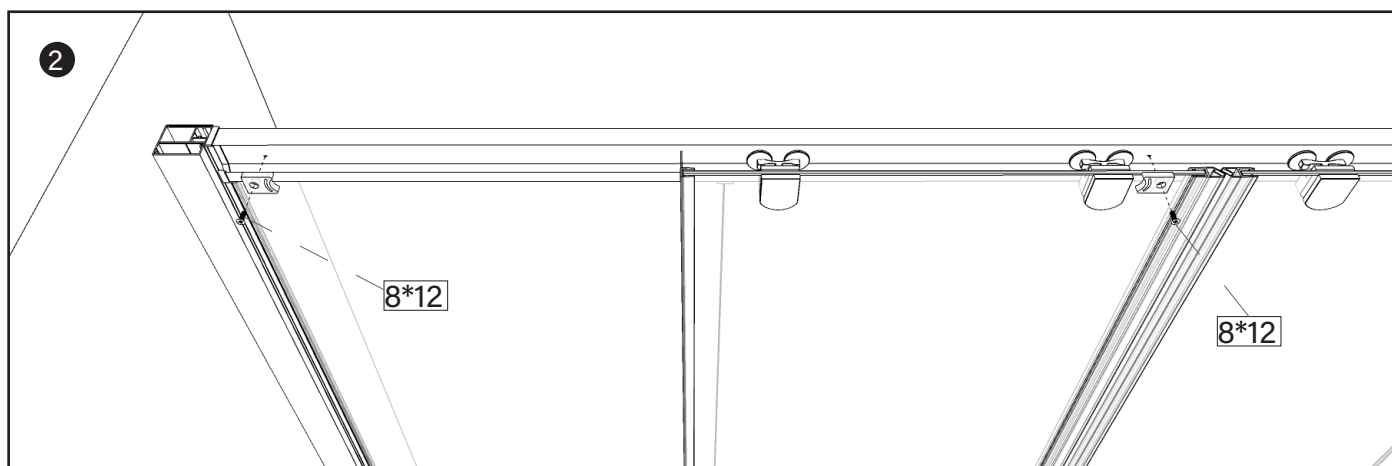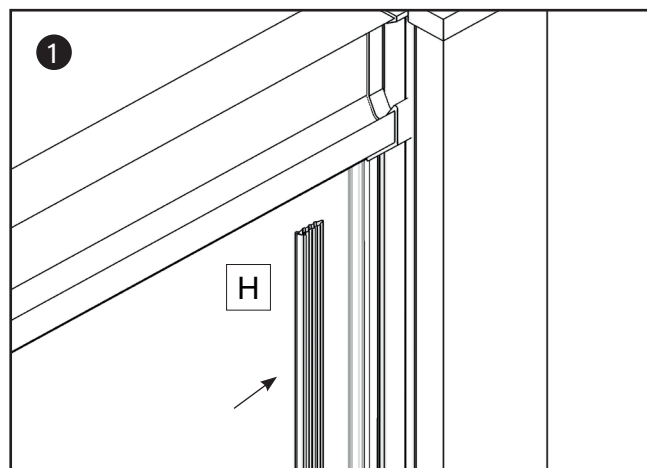

12° PASSAGE

1. Install the handles (screw hole on the inside).
2. Install the cover caps at the top of the aluminium profiles.
3. Siliconise the outside of the shower enclosure around the entire perimeter as shown in the picture and wait 24 hours.

