

Houston

DESCRIPTION

Swinging shower door, made of 8 mm thick transparent tempered glass, with an easy-to-clean treatment indicated by appropriate labels. Height of 200 cm, reversible installation, chrome aluminum profiles



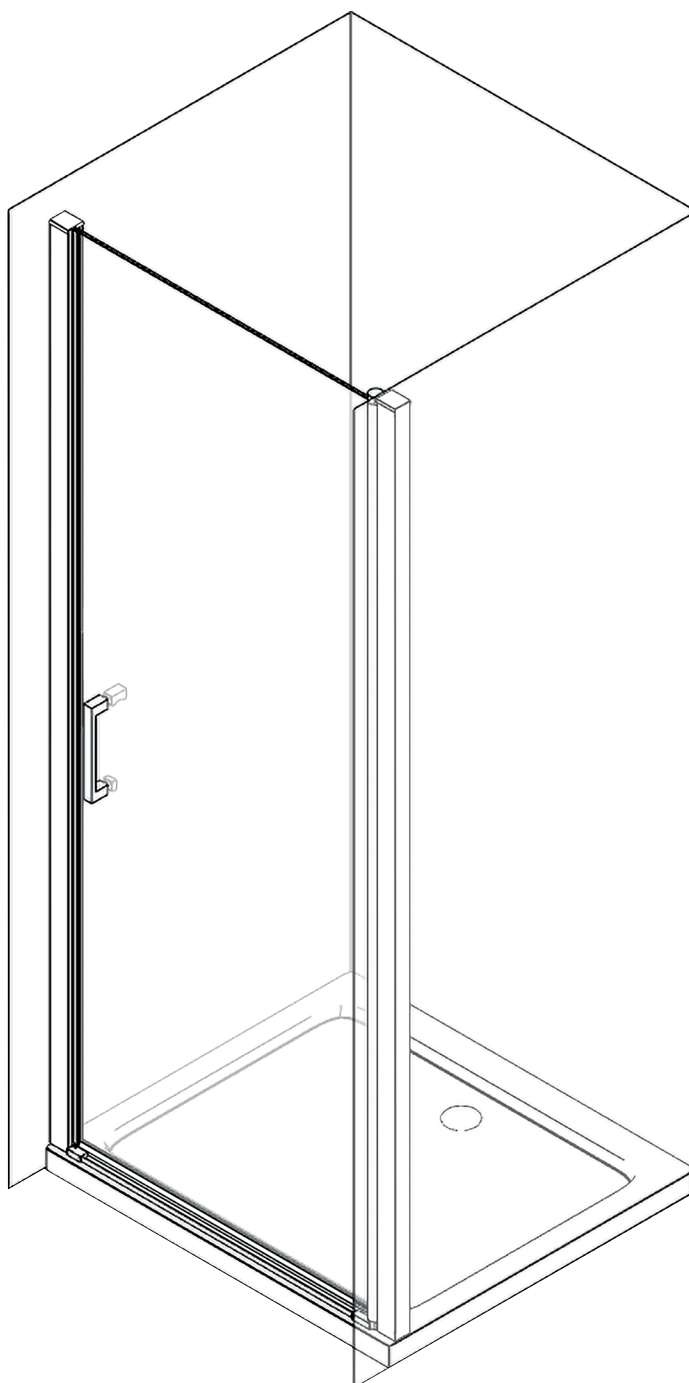




TABLE OF MEASURES

MODEL	MEASURES A
65	640 - 680
70	690 - 730
75	740 - 780
80	790 - 830
85	840 - 880
90	890 - 930


REVERSIBLE

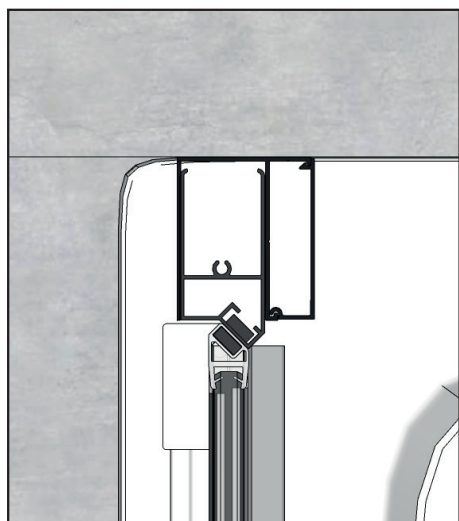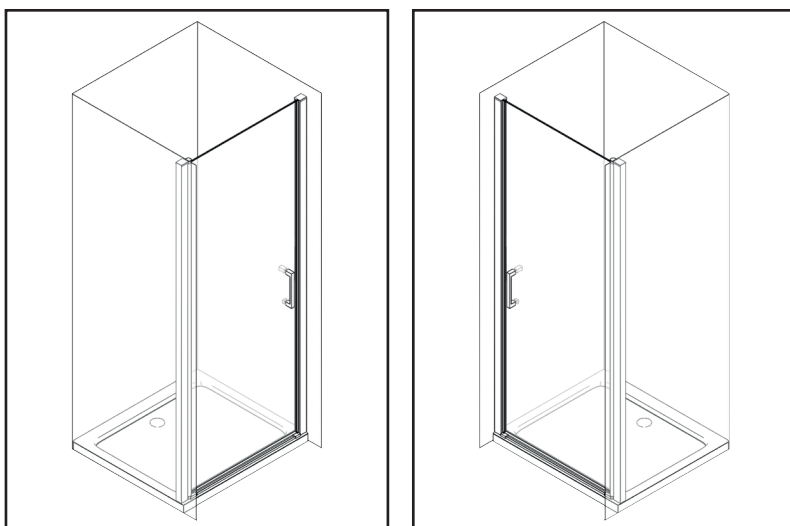


A

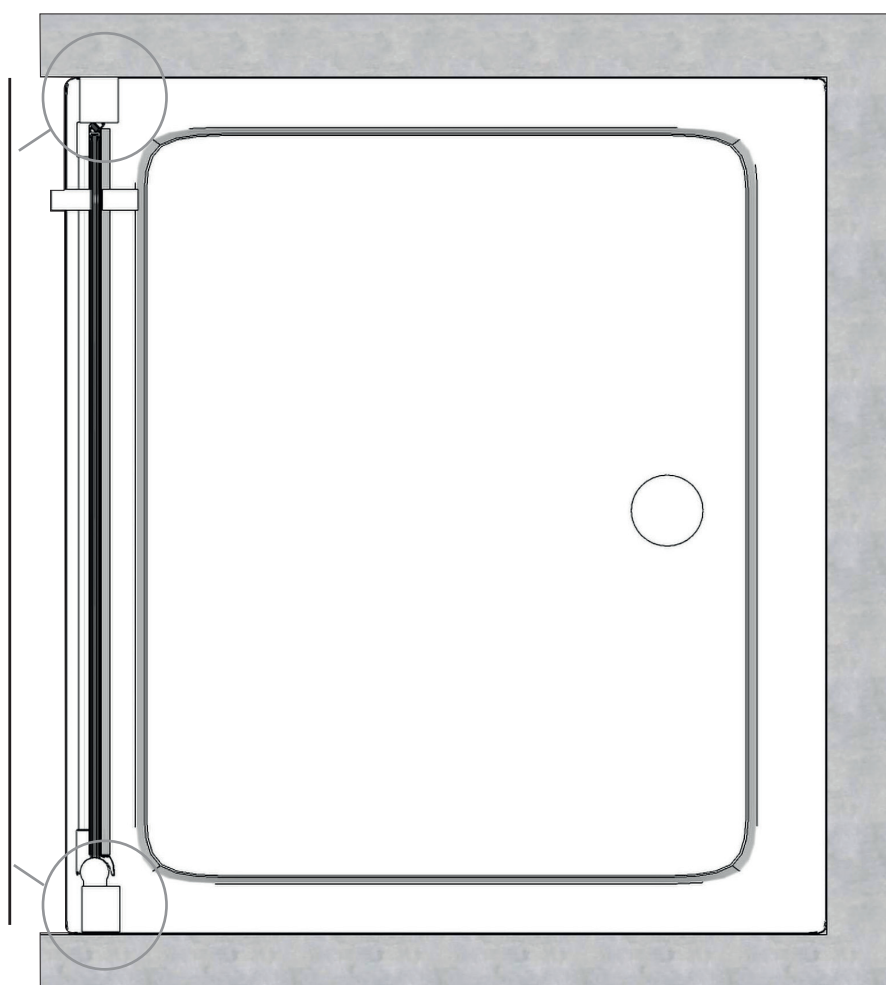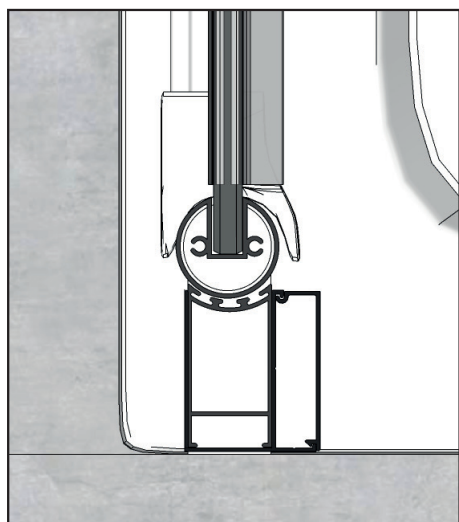

TOOLS REQUIRED

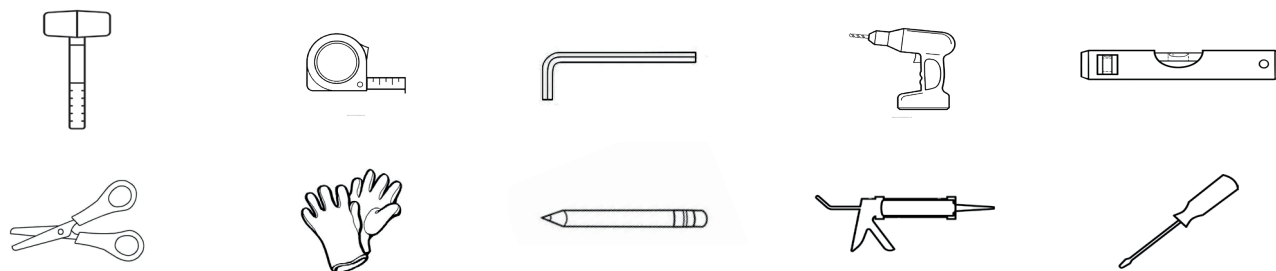

PACKAGE CONTENTS

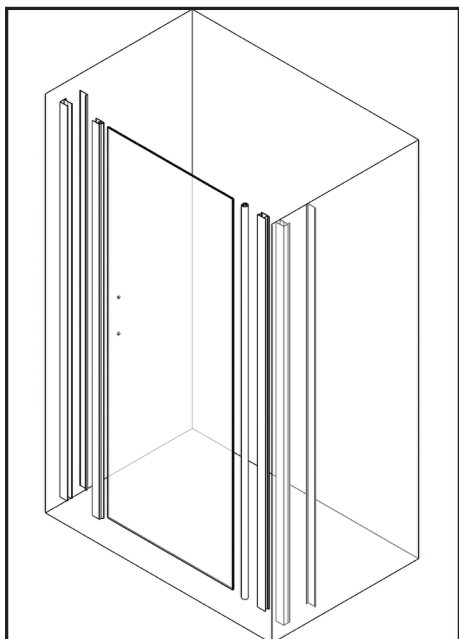

x4
8*16





x10
8*30




x2
6*16




x12

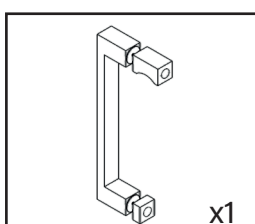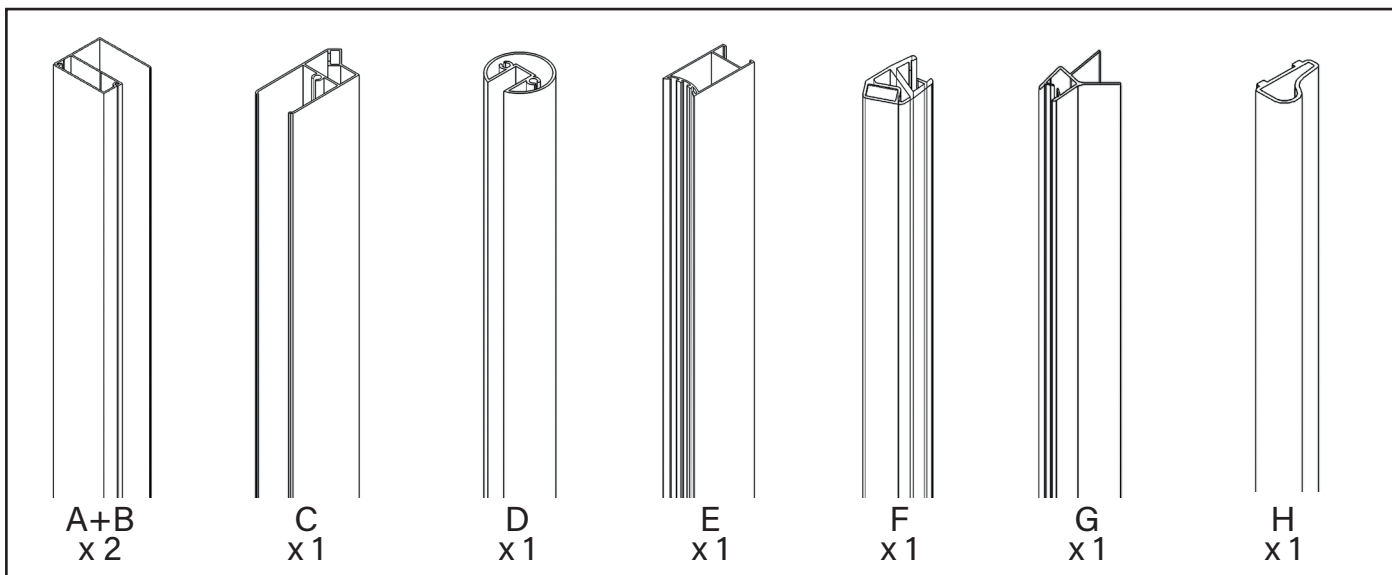


Handle

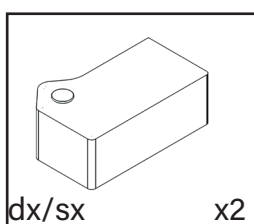

Ground fixing
bracket

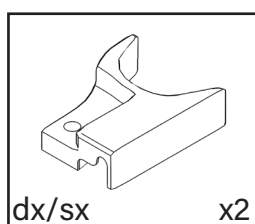

Ground fixing
bracket

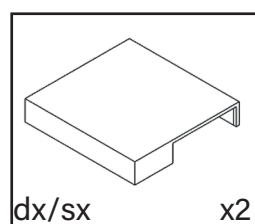

Top cover wall
profile






MOUNTING

1° PASSAGE

1. Check the level alignment of the shower tray using a spirit level.
2. Place the profile against the wall and use the level to align it vertically.
3. Mark the wall holes with a pencil.
4. Drill the holes in the wall using a drill.
5. Insert the wall plugs and screw in the screws to secure the profile.
6. Repeat these steps for the other profile.


IMPORTANT

It is recommended not to mount the profiles directly against the outer edge of the shower tray. Always leave about 1 cm for optimal aesthetic and functional results.

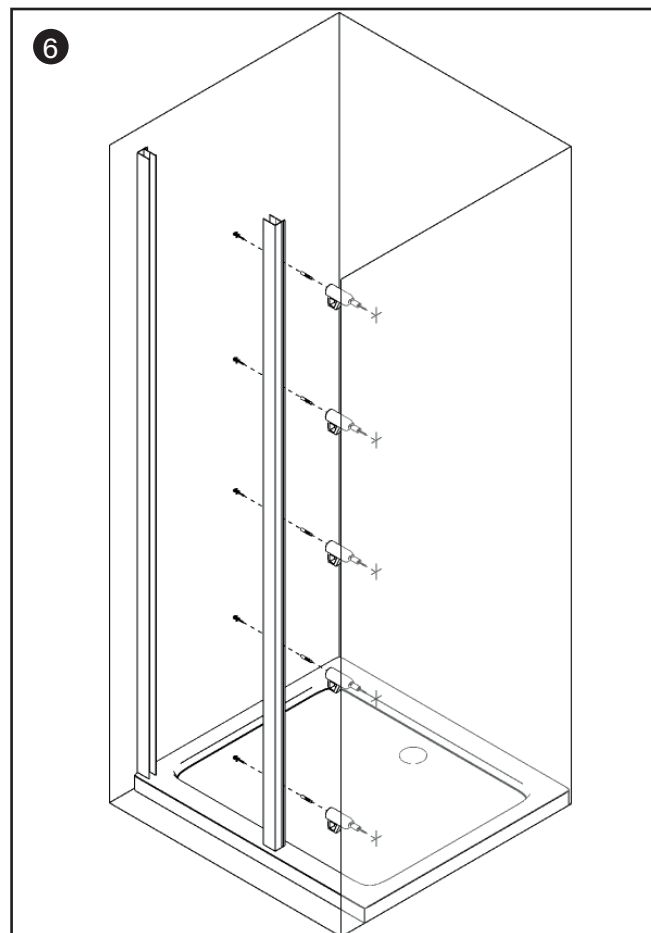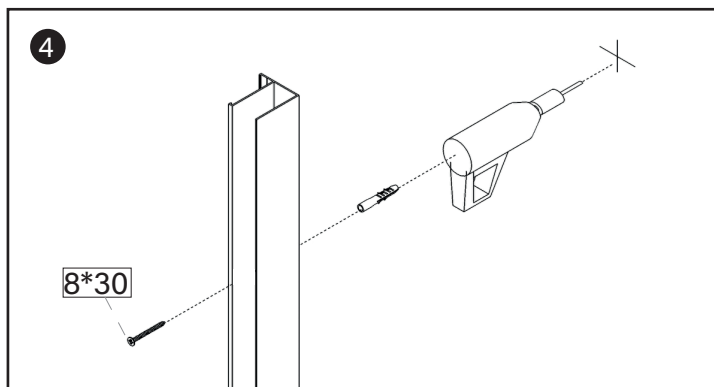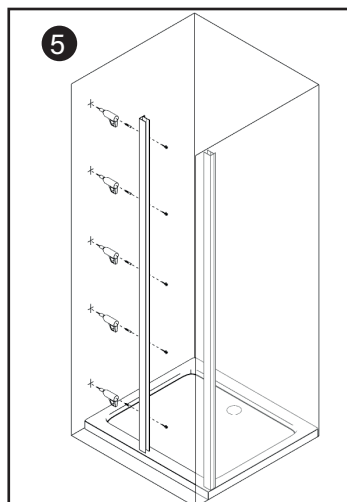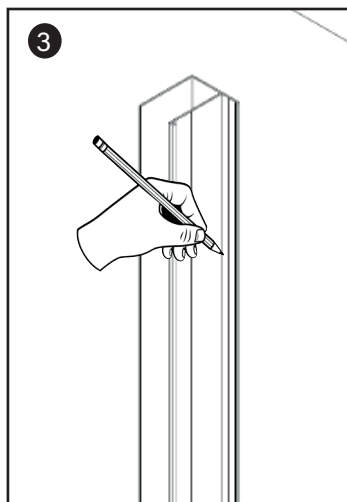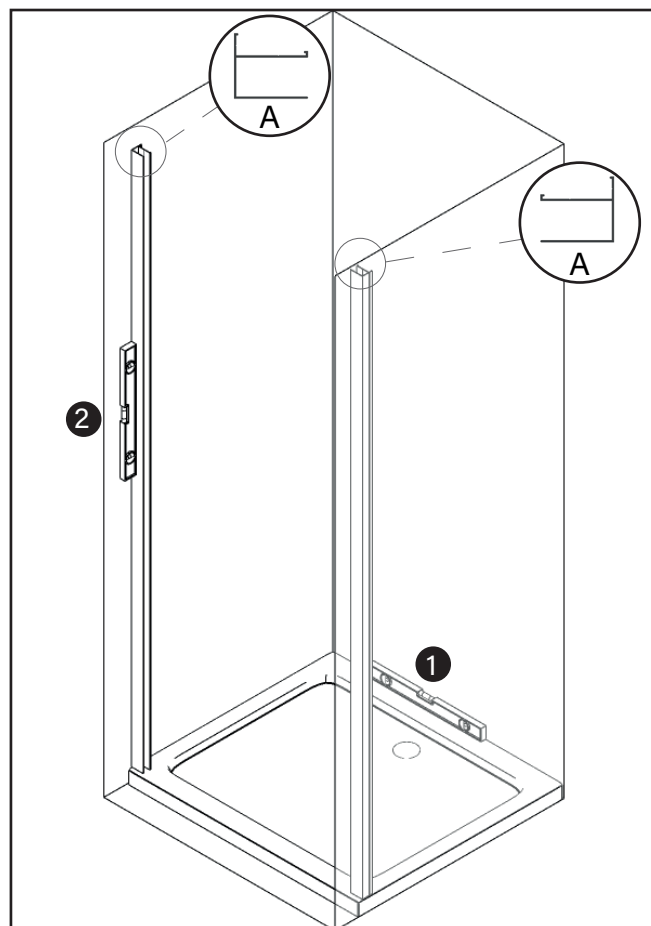


2° PASSAGE

1. Insert the magnetic stop profile inside the wall profile.

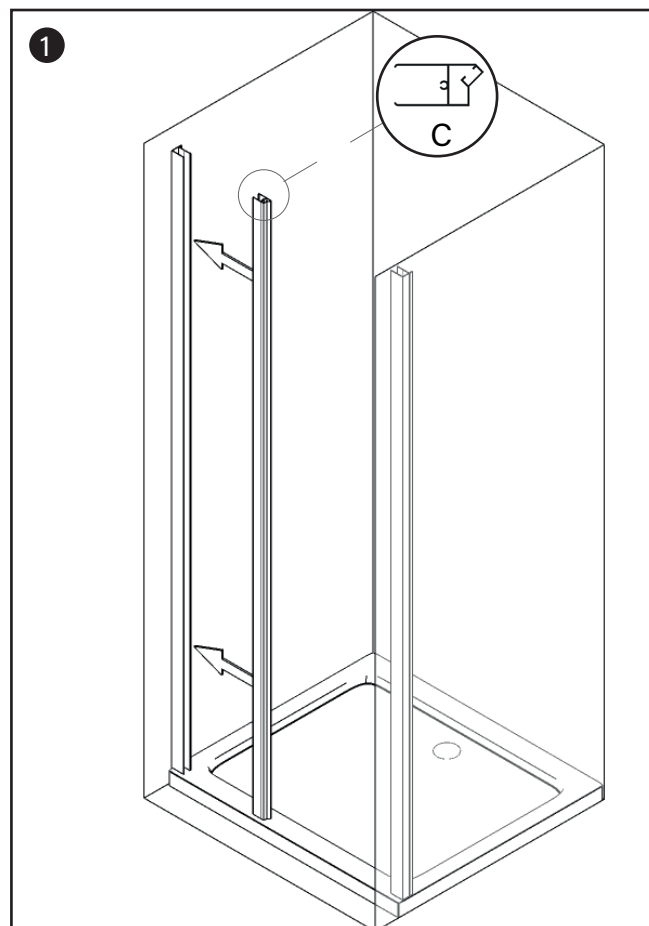



3° PASSAGE

1. As shown in the illustration, proceed with installing the door into the wall profile.

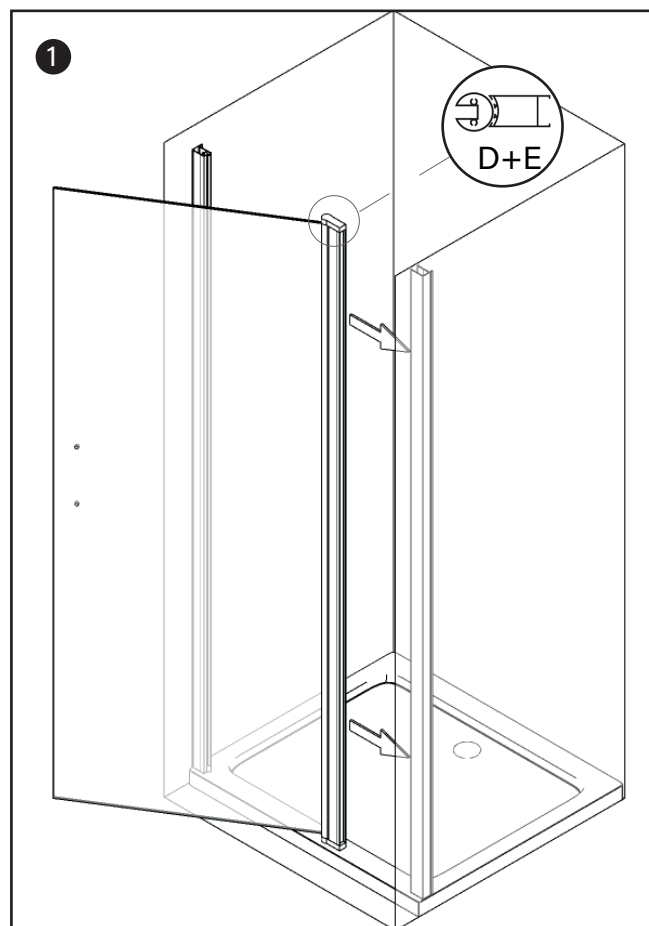


4° PASSAGE

1. Install the magnetic closing gasket on the door, starting from the bottom. If the gasket is too long, trim it from the top.
2. Install the lower sealing gasket on the glass, shaping it as needed to prevent interference with the magnetic gasket, ensuring that the lip provides proper water sealing.

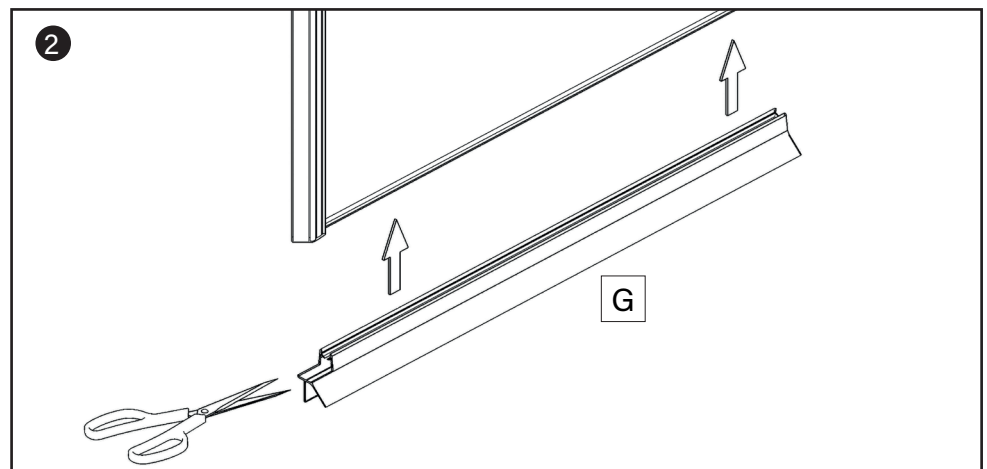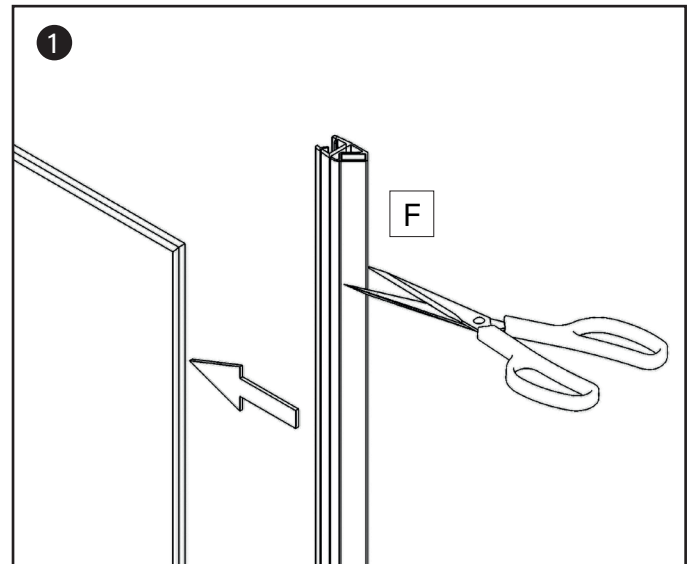**5° PASSAGE**

1. Install the aluminum sealing profile on the shower tray along with the two right and left supports, securing it with silicone. No need to drill holes.

Note: The screws provided are used in case of floor-level installation.

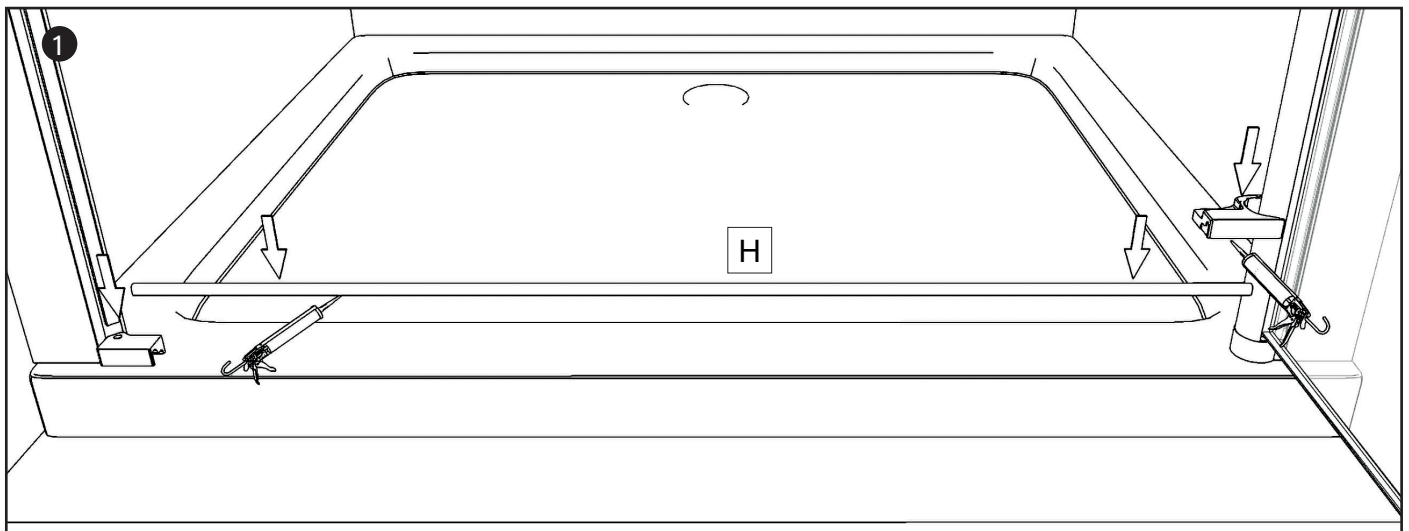



6° PASSAGE

1. Drill holes from the inside to secure the shower wall and the magnetic profile to the wall profiles using 8x16 screws. Cover with the aluminum cover.

IMPORTANT: Adjust a maximum of 2 cm on each side.

Note: A total of 4 holes need to be drilled, 2 holes per profile, 1 top and 1 bottom.

2. Insert the decorative cover on top of the wall profiles.

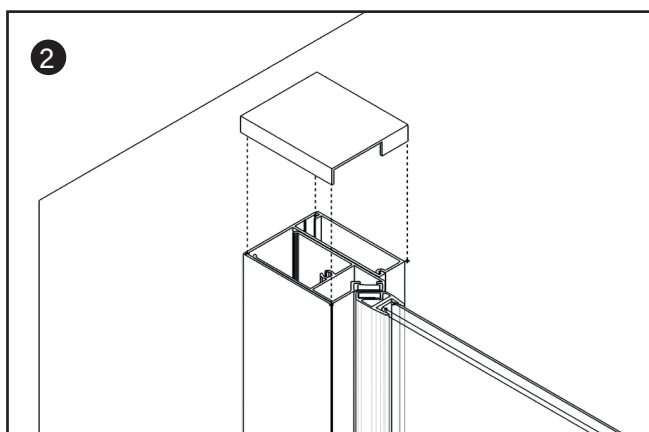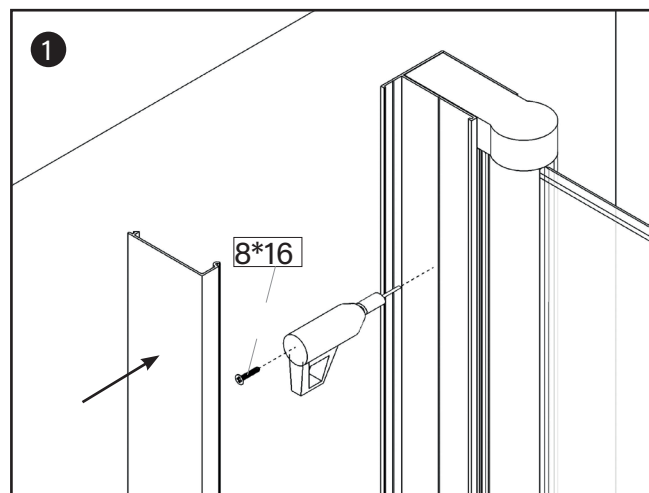

7° PASSAGE

1. Install the handle on the door (inside).
2. Seal with silicone as shown in the figure and wait for 24 hours.

