

Los Angeles 2.0

DESCRIPTION

Shower enclosure with swing door on asymmetric rotating pins and fixed side panel, opens inwards/outwards. Made of 8mm tempered transparent glass, with easy-to-clean anti-limescale treatment indicated by special labels. Reversible installation, height 200 cm, black frame.


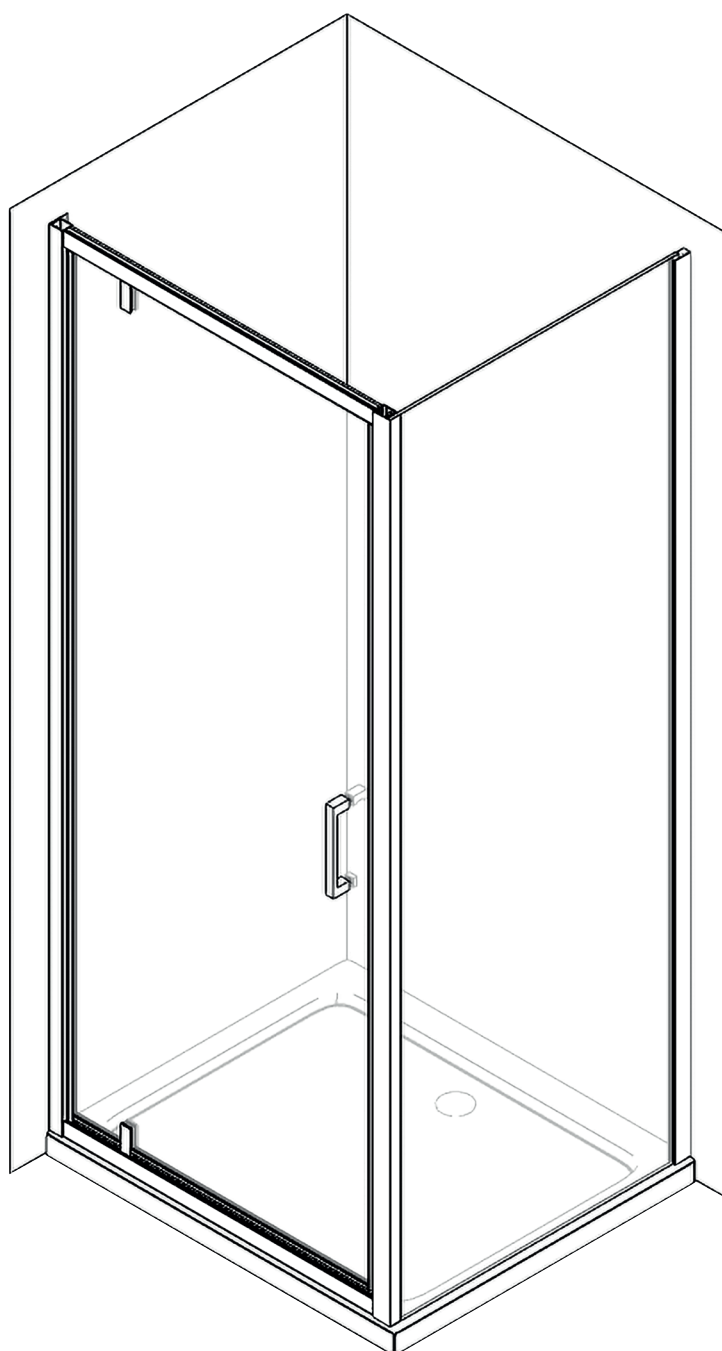


TABLE OF MEASURES

DOOR	MEASURES A
65	620 - 650
70	670 - 700
75	720 - 750
80	770 - 800
85	820 - 850
90	870 - 900
100	970 - 1000
110	1070 - 1100
120	1170 - 1200


FIXED WALL	MEASURES B
70	680 - 700
75	730 - 750
80	780 - 800
90	880 - 900
100	980 - 1000
110	1080 - 1100
120	1180 - 1200

REVERSIBLE

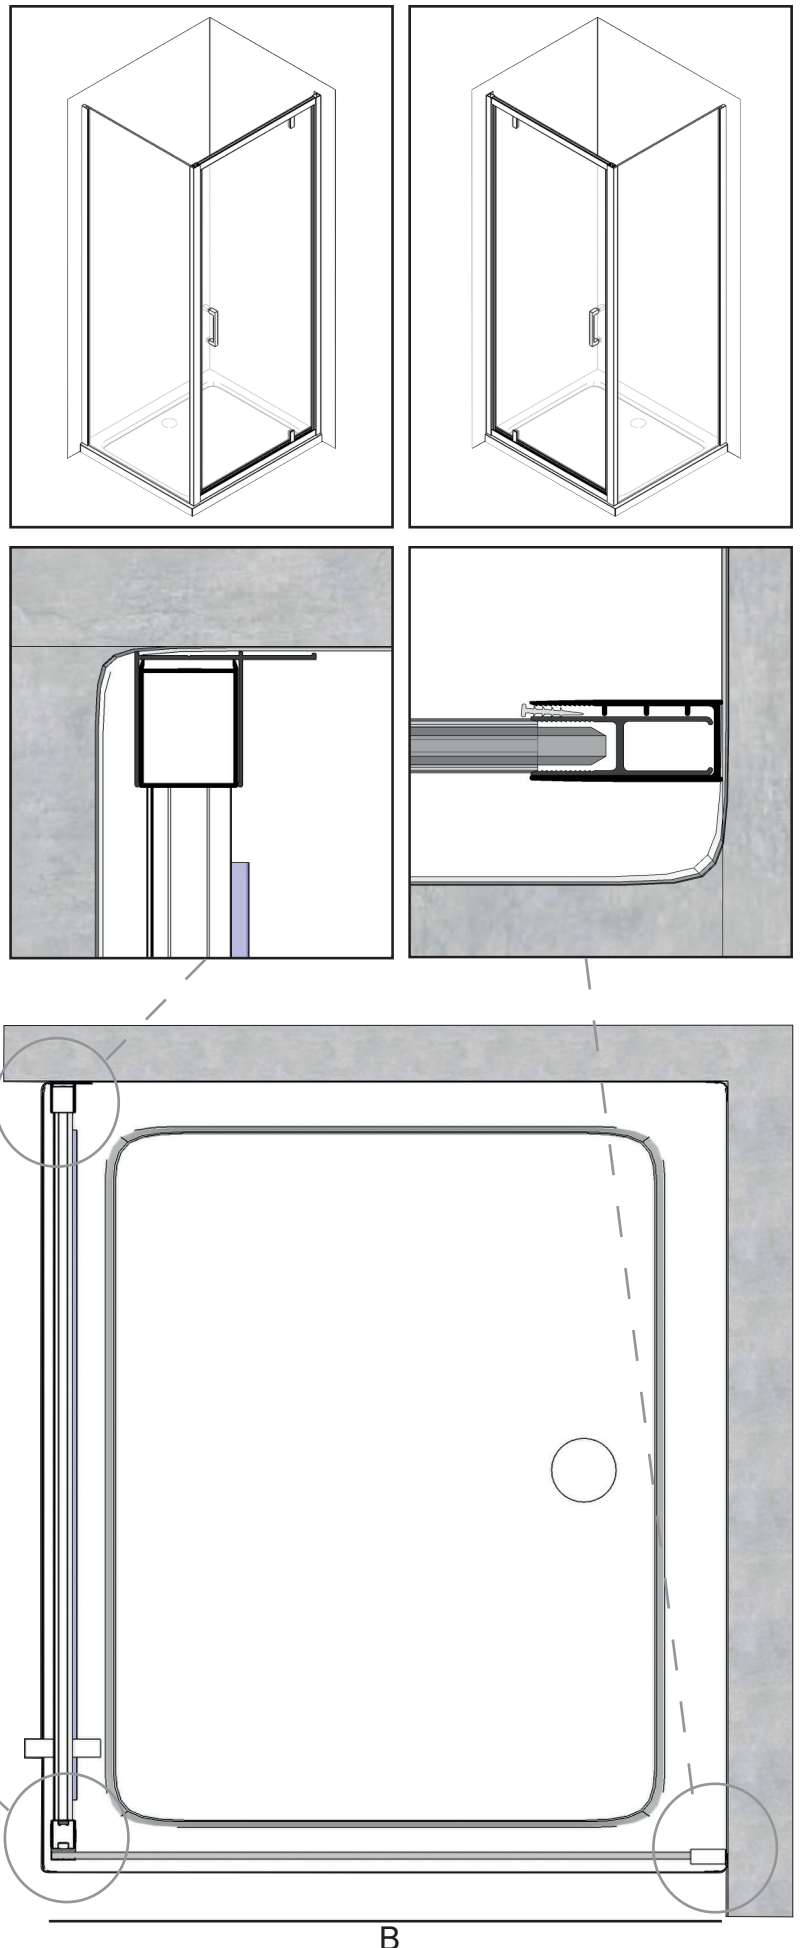


LOS ANGELES 2.0

TOOLS REQUIRED

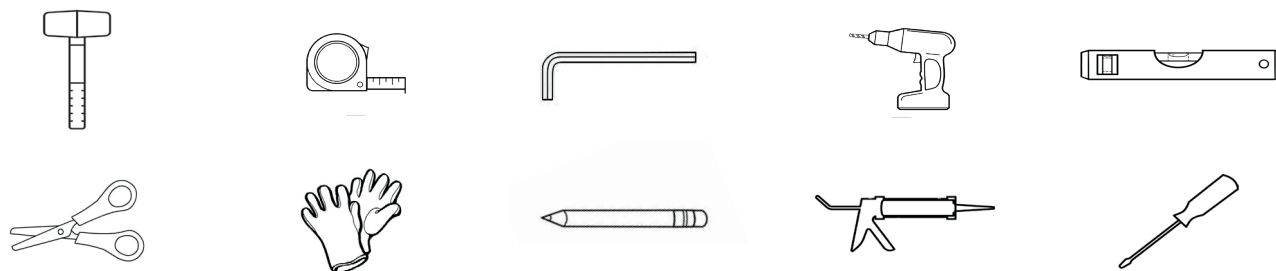

PACKAGE CONTENT (product shipped in two packages)

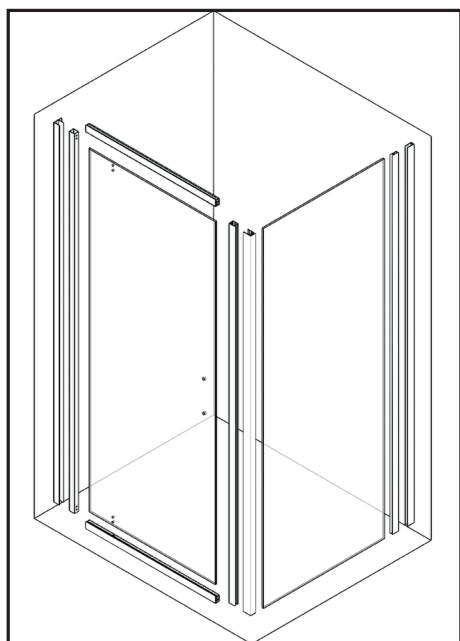




x14
8*30


x8
6*30



x2
8*18


x4
8*16



x10

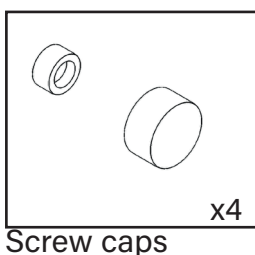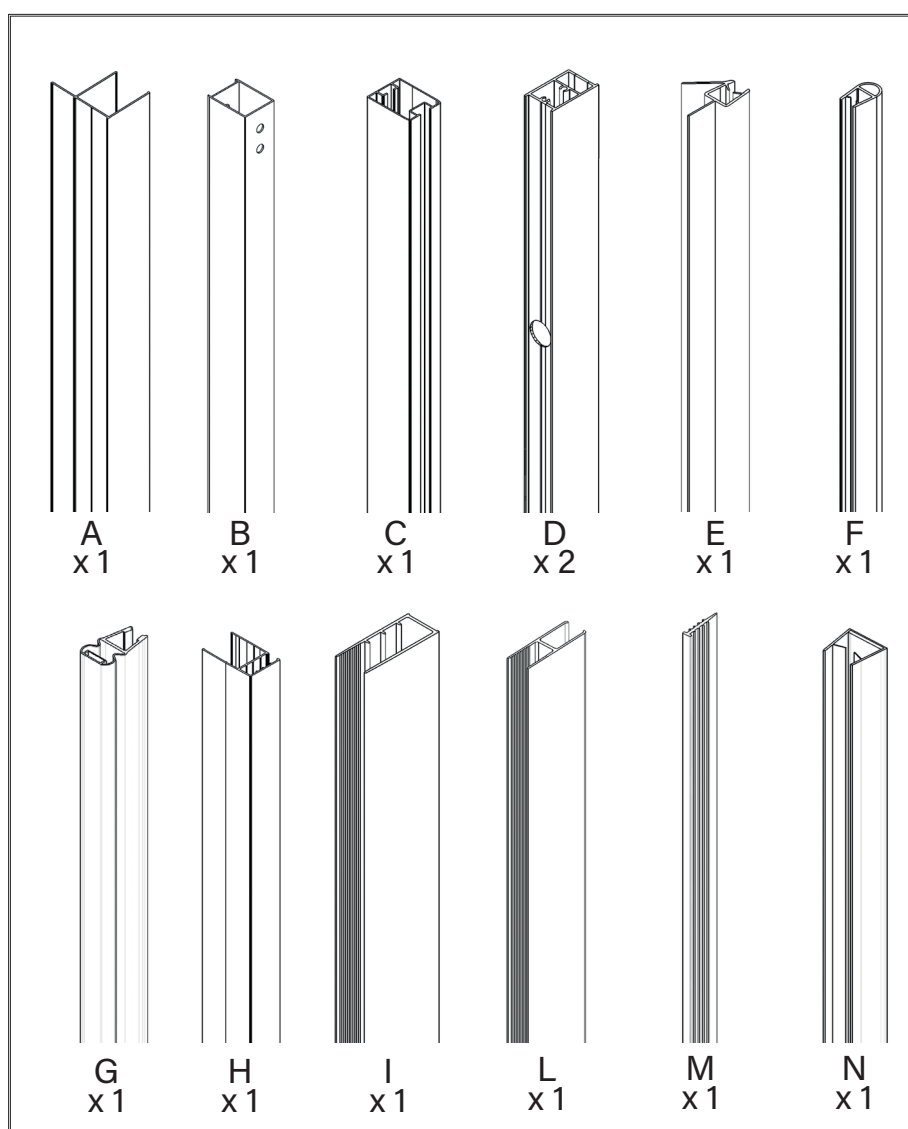


Screw caps

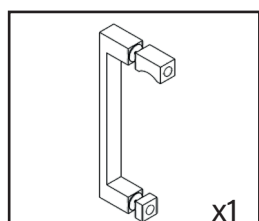

Handle

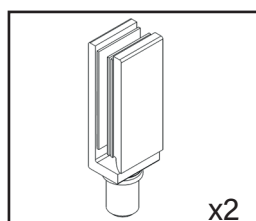

Rotating hinge




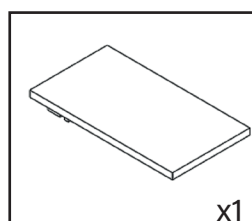


Cover profile

MOUNTING

1° PASSAGE



1. Check the alignment of the shower tray with the level.
2. Place the wall profile and use the level for plumb.
3. Mark the holes in the wall with the pencil.
4. Drill the holes in the wall.
5. Insert the wall plug and screw the profiles.

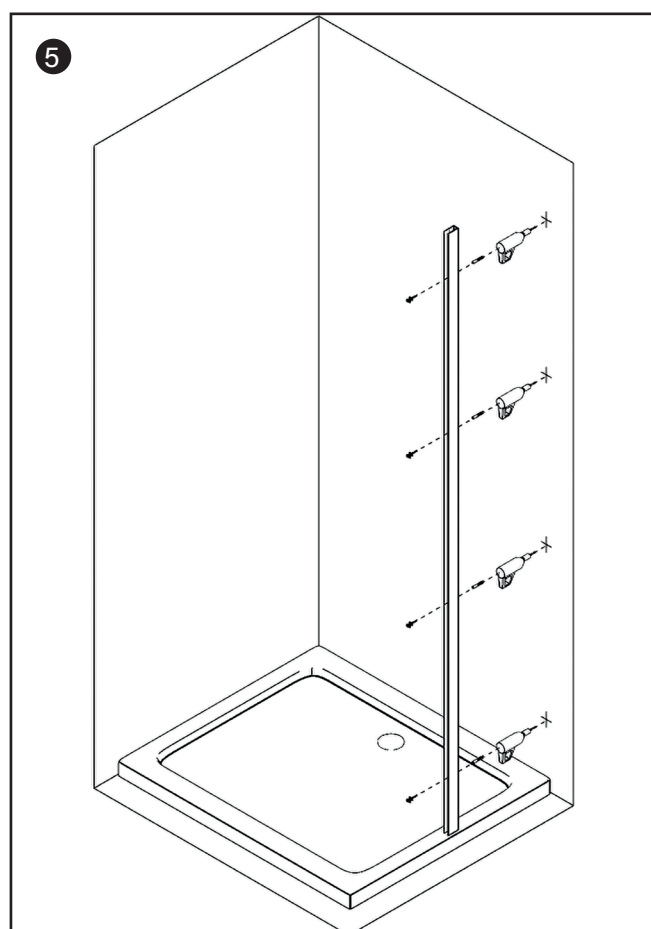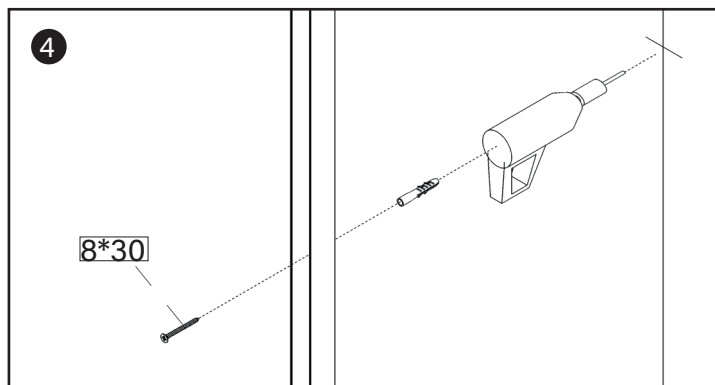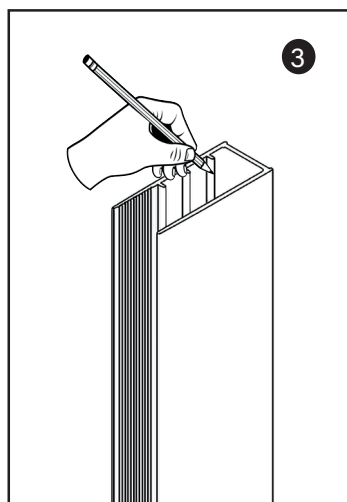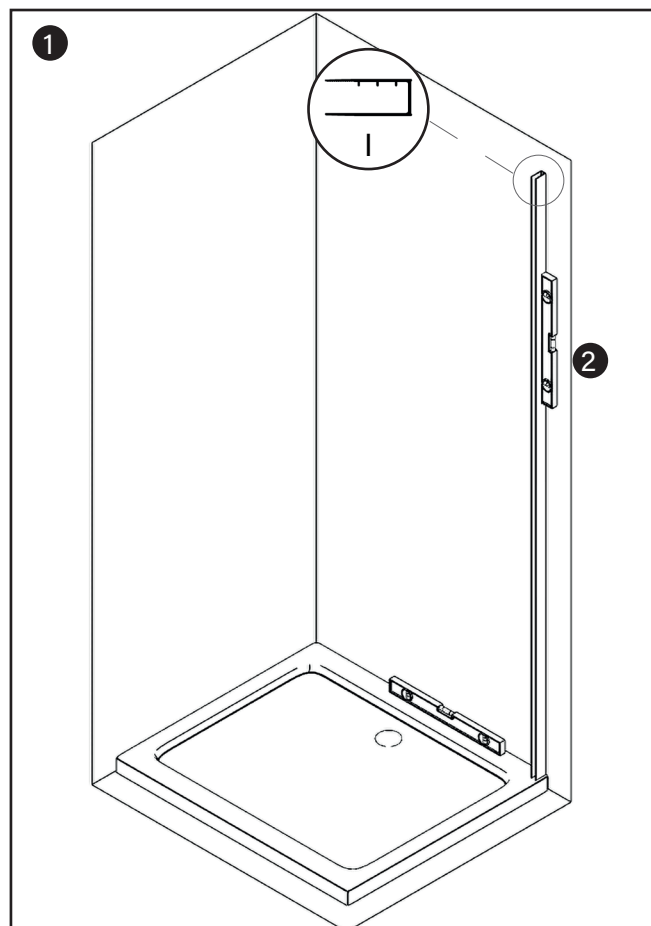

2° PASSAGE



1. Insert the gasket under the glass sheet.

ATTENTION: *The frame protrudes on one side compared to the glass, the protruding part serves as a seat for the gasket under the glass, so it should be oriented downwards.*

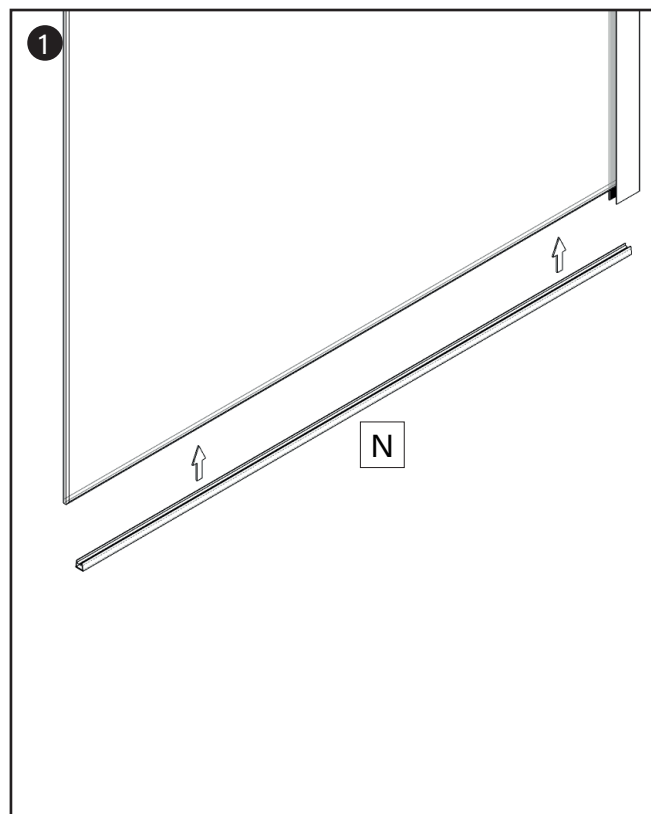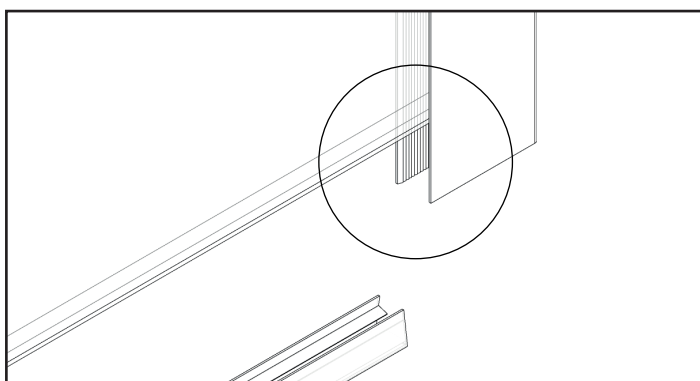

3° PASSAGE



1. Insert the fixed glass into the wall profile.
2. Insert the roll gasket between the two aluminum profiles.

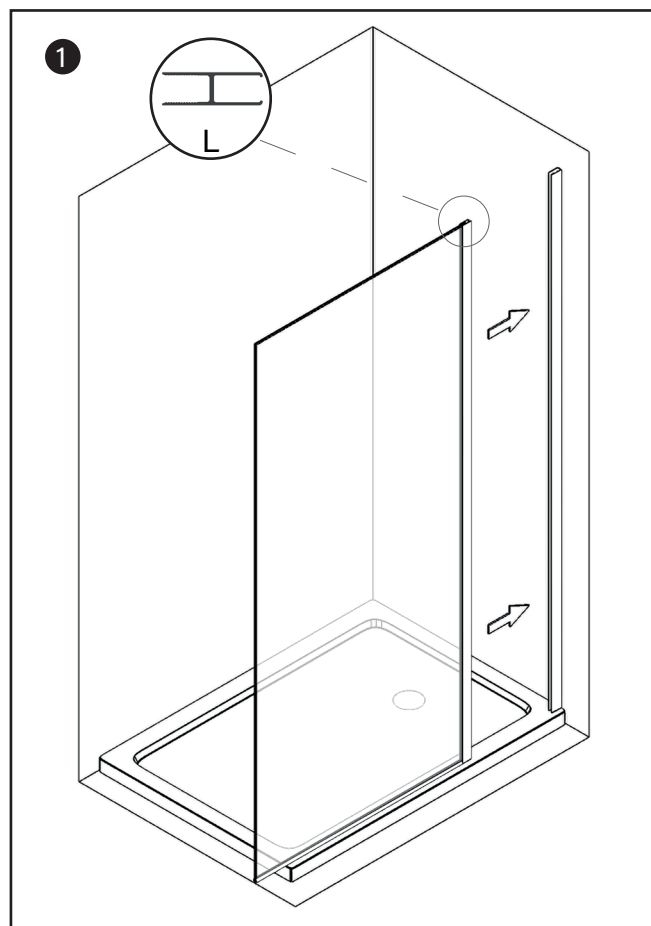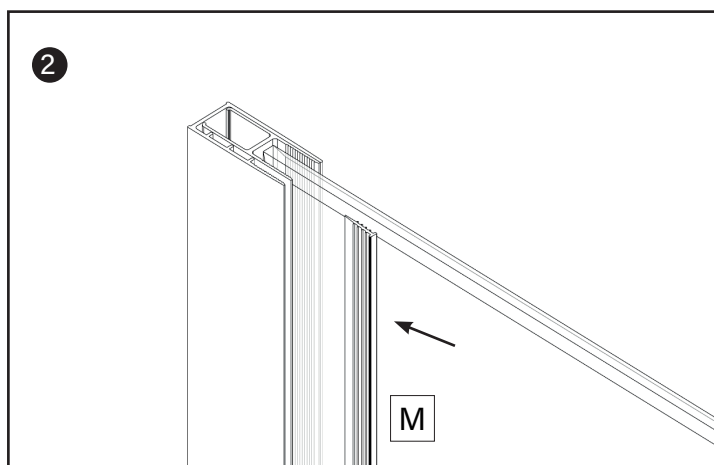

4° PASSAGE



1. Build the door frame by connecting the upper and lower profile with the side profile on the hinge side using screws 6x30.

Note: Pay attention to the position of the holes for the hinge in the upper and lower profile.

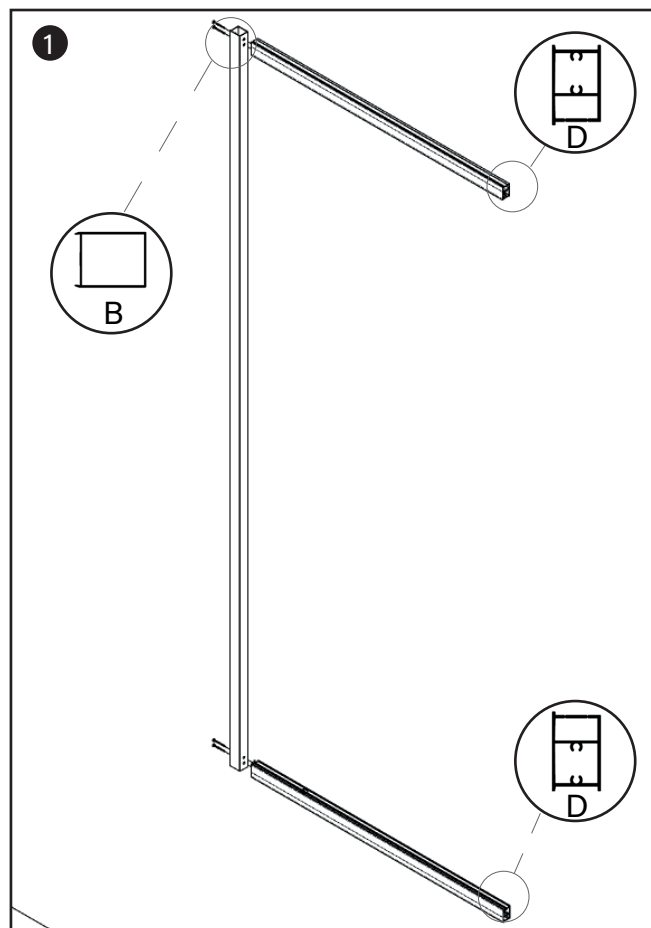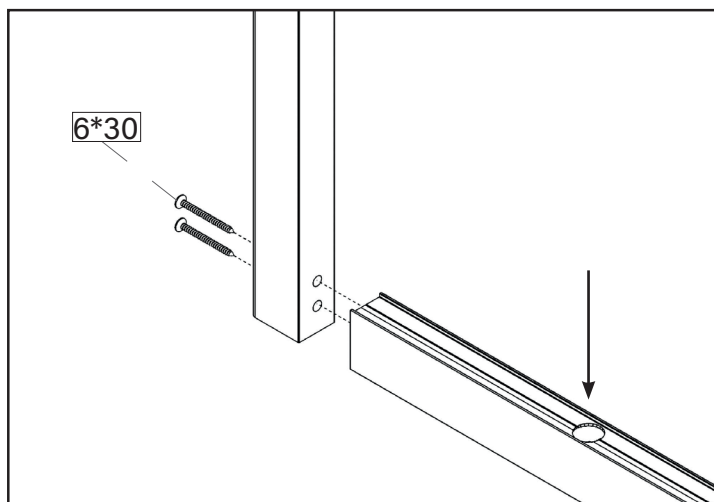



5° PASSAGE

1. Insert the magnet inside the closing profile.
2. Connect the door closing profile to the upper and lower profile using screws 6x30.

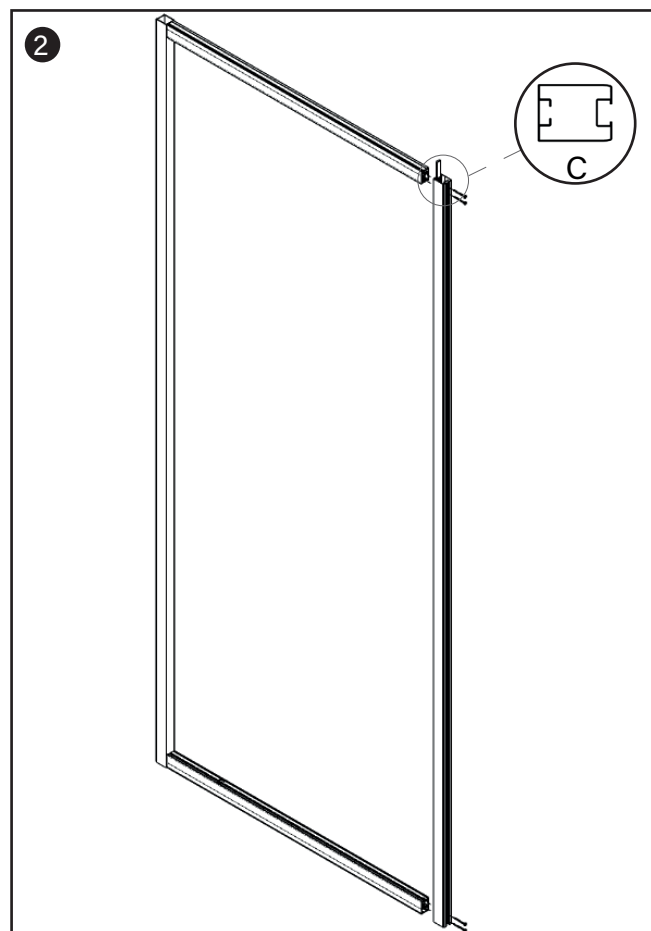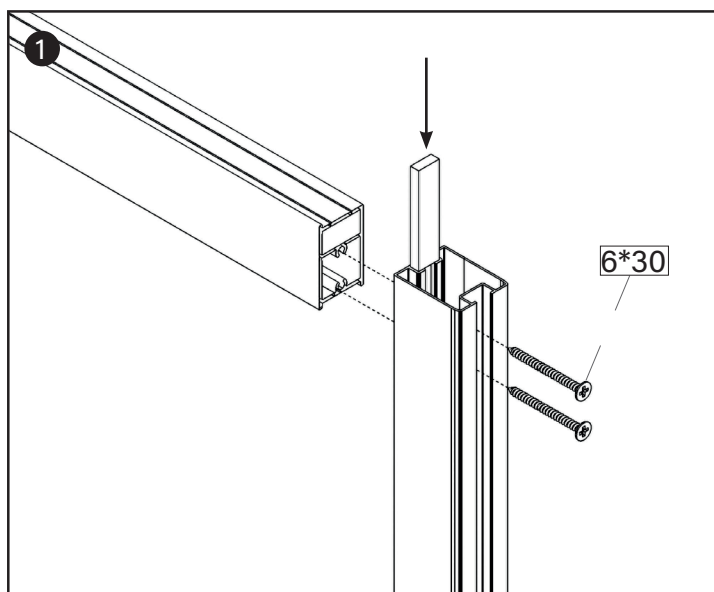

6° PASSAGE


1. Install the hinges in the upper and lower profile using screws 8x18.

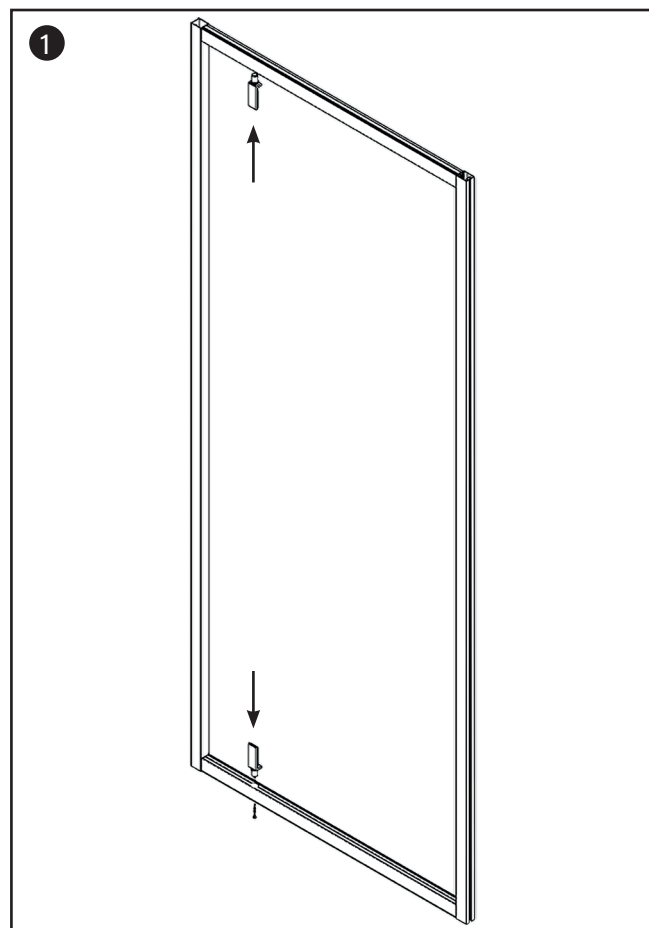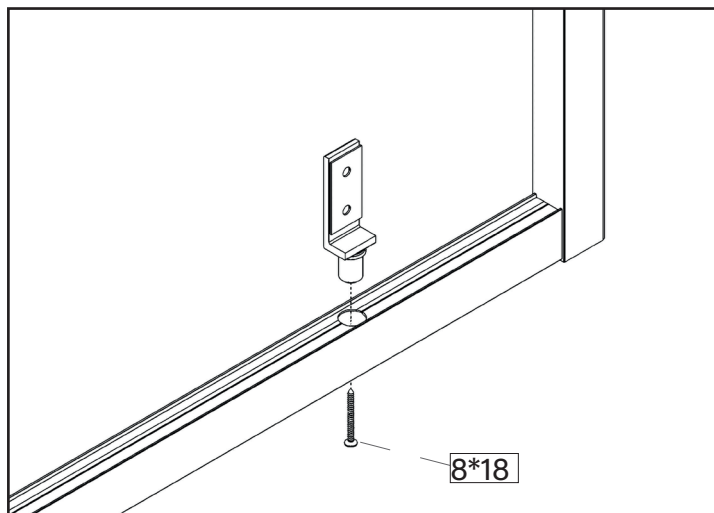

7° PASSAGE

1. Insert the wall profile and the corner profile into the side profiles of the frame.


Note: The side profiles must go inside the wall and corner profiles.

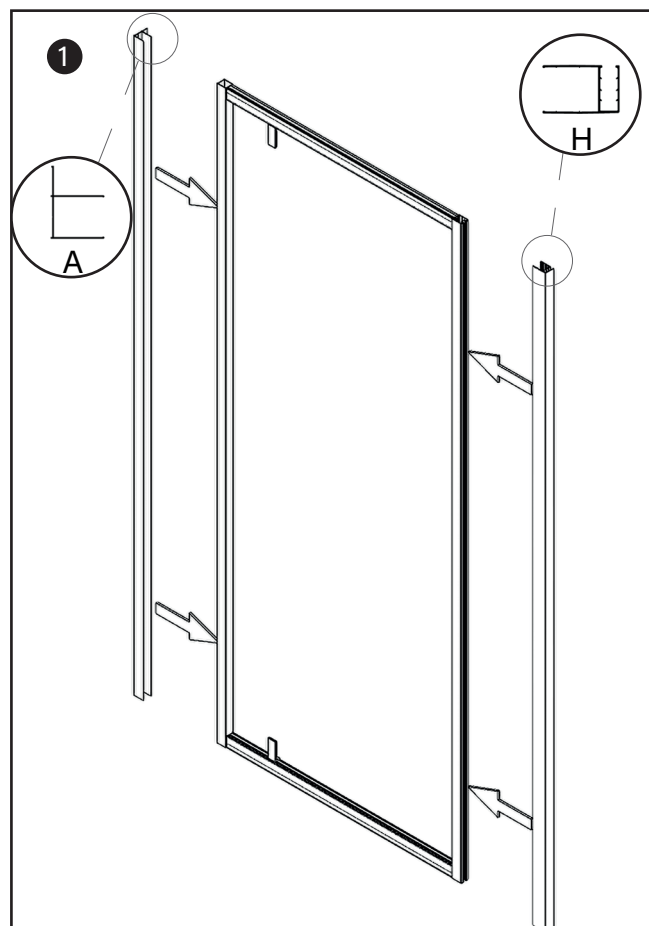

8° PASSAGE


1. Apply silicone to the groove of the corner profile.
2. Place the previously assembled frame.

Note: Before fixing, adjust the frame extension by operating the telescopic (one profile goes into the other).

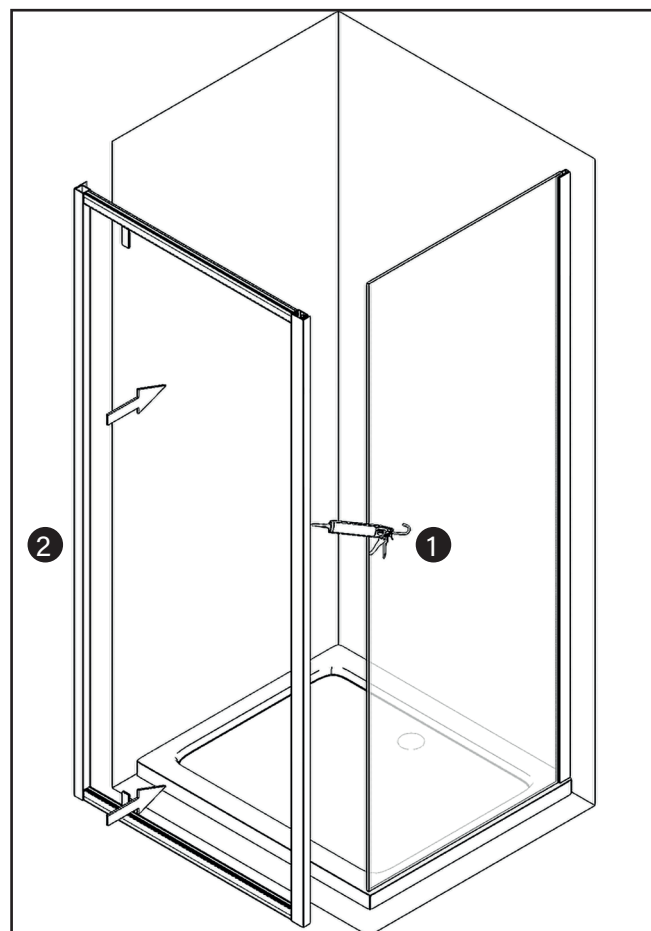




9° PASSAGE

1. Place the wall profile and use the level for plumb.

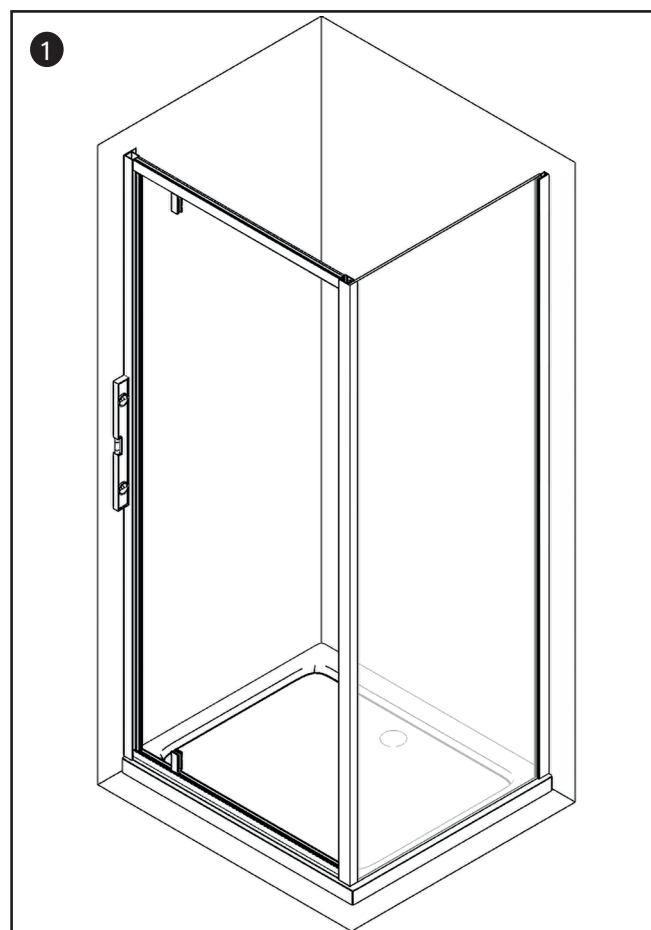




10° PASSAGE

1. Proceed with fixing the shower door.
2. Mark the holes in the wall with the pencil.
3. Drill the holes in the wall, insert the wall plug and screw the profiles.

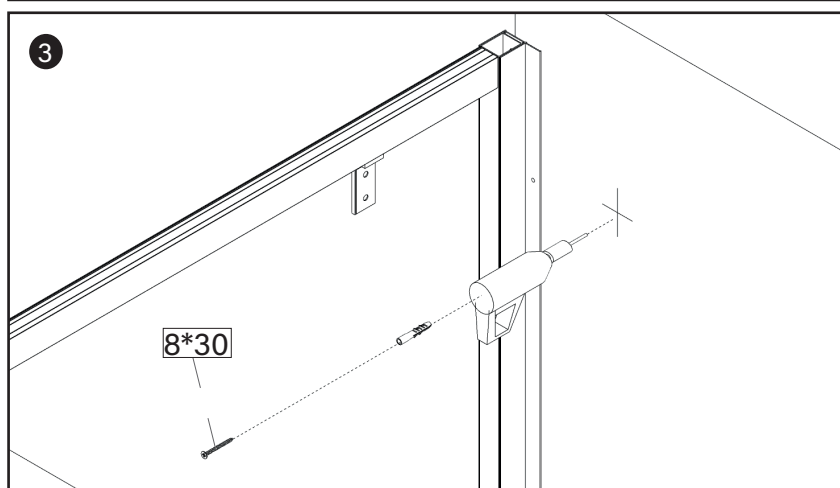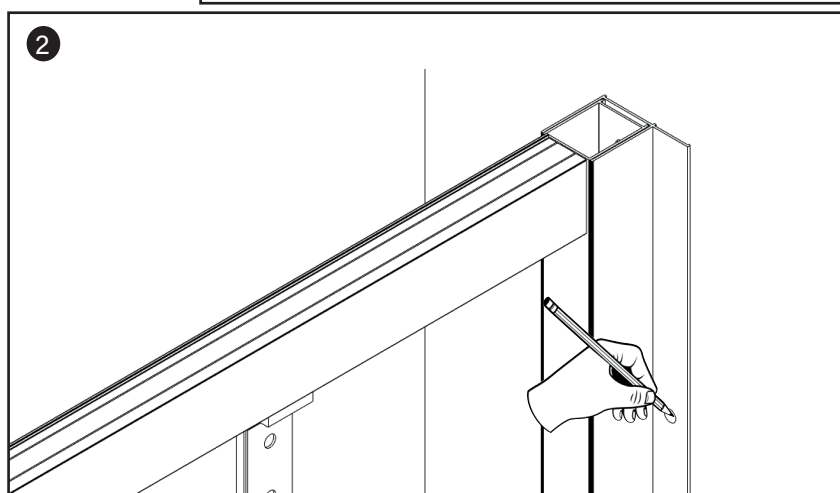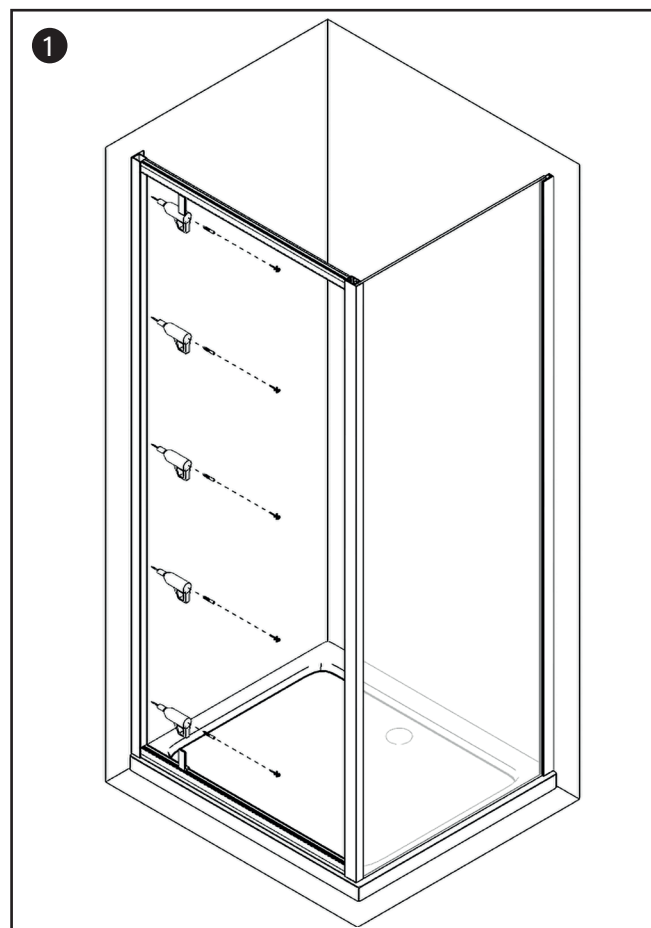



11° PASSAGE

1. Insert the magnetic closing gasket into the glass, utilizing the entire height, starting from the bottom. If it's too long, trim it from the top.
2. Insert the lower sealing gasket.
3. Insert the side sealing gasket.
4. To ensure proper installation of the hinge, shape the gasket to prevent interference.

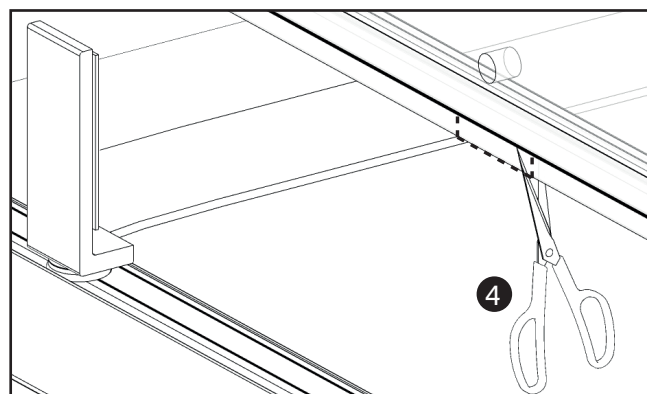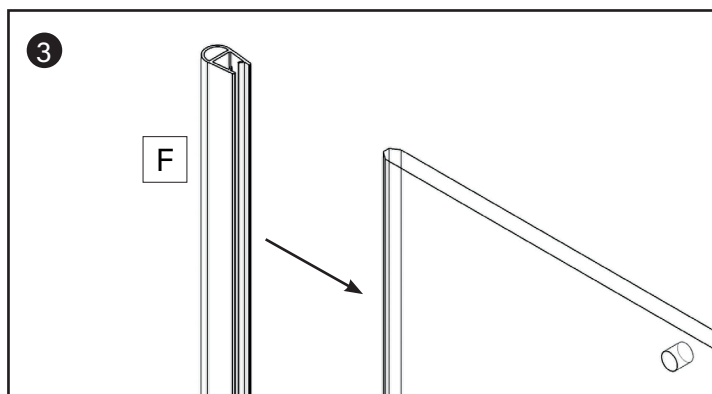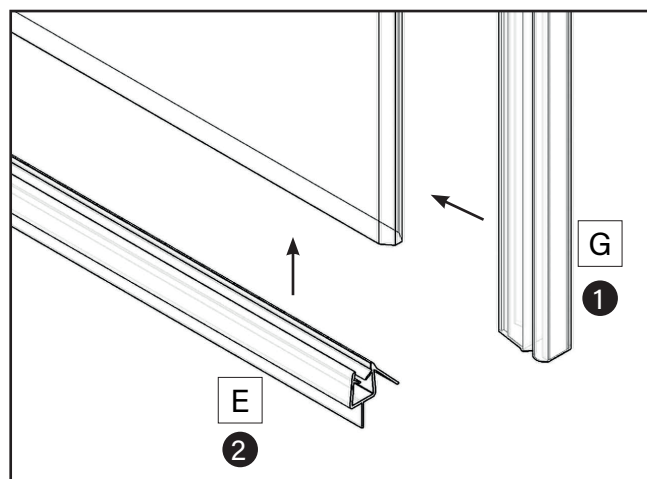

12° PASSAGE



1. Insert the glass into the frame.
2. Secure the hinges with the appropriate gaskets and screws.

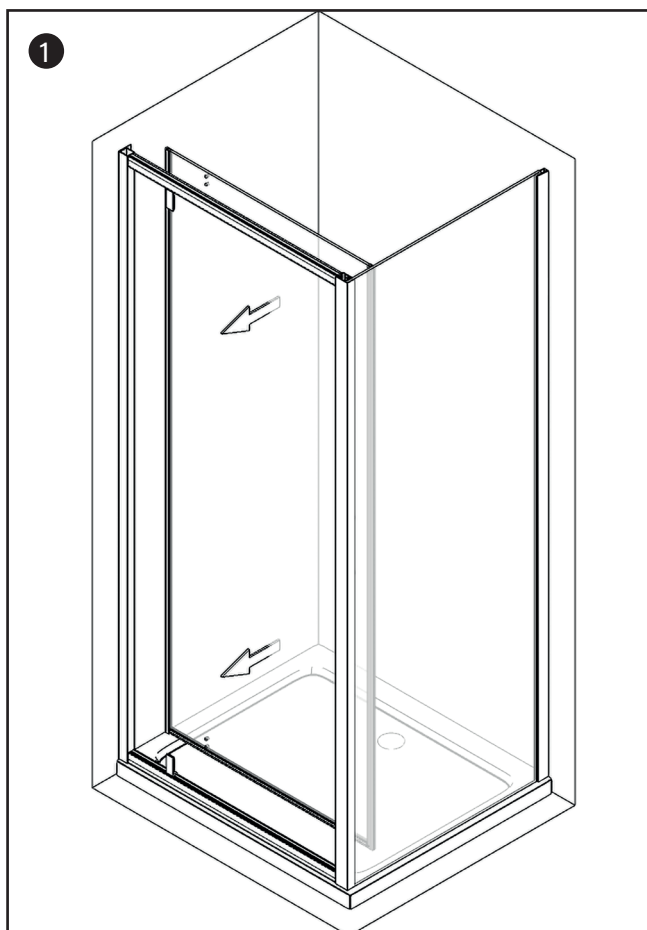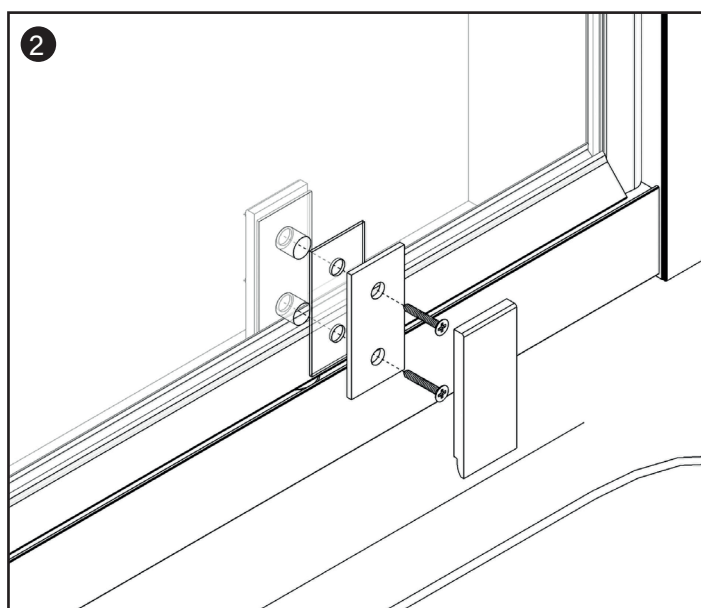

13° PASSAGE

1. Drill holes and apply the screw from the inside to secure the frame to the wall profile with screws 8x16.
2. Repeat the step to attach the frame to the corner profile.

Note: A total of 4 holes must be drilled, two on the right and two on the left, one at the top and one at the bottom. The screws will be covered with suitable chrome covers.

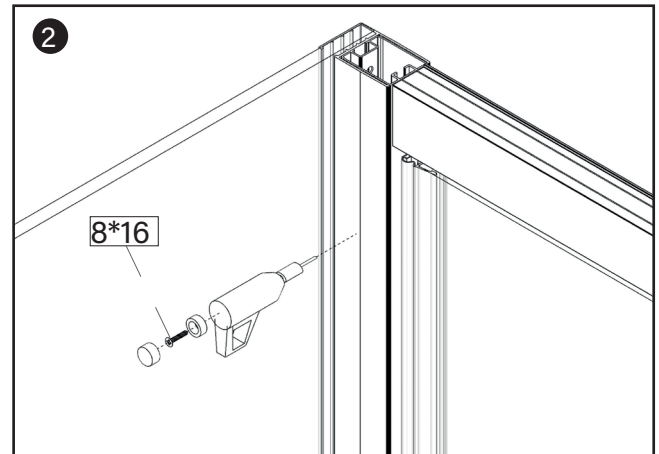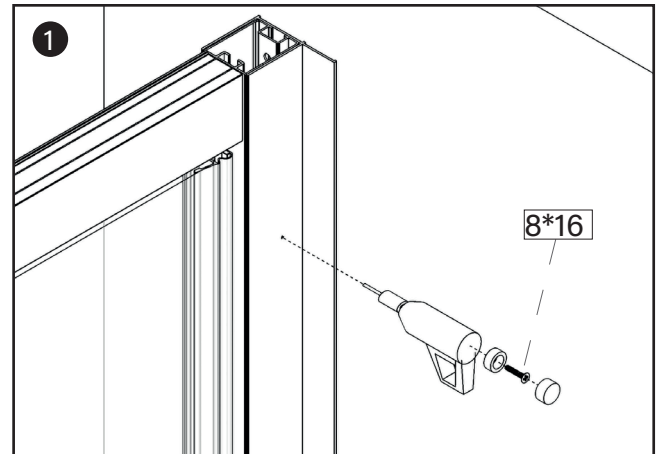

14° PASSAGE

1. Install the handle on the glass (hole on the inside).
2. Place the decorative profile on top of the wall profile.
3. Seal it with silicone as shown in the figure and wait for 24 hours.

