

Texas 3.0

DESCRIPTION

Saloon' type shower enclosure with two doors opening in/out and two fixed side walls h 190 made of 6 mm glass. Manual adjustment of wall profiles 2 cm per side. Rotating door lifting system. Chromed aluminium frame and glass with anti-limescale treatment indicated by special labels.





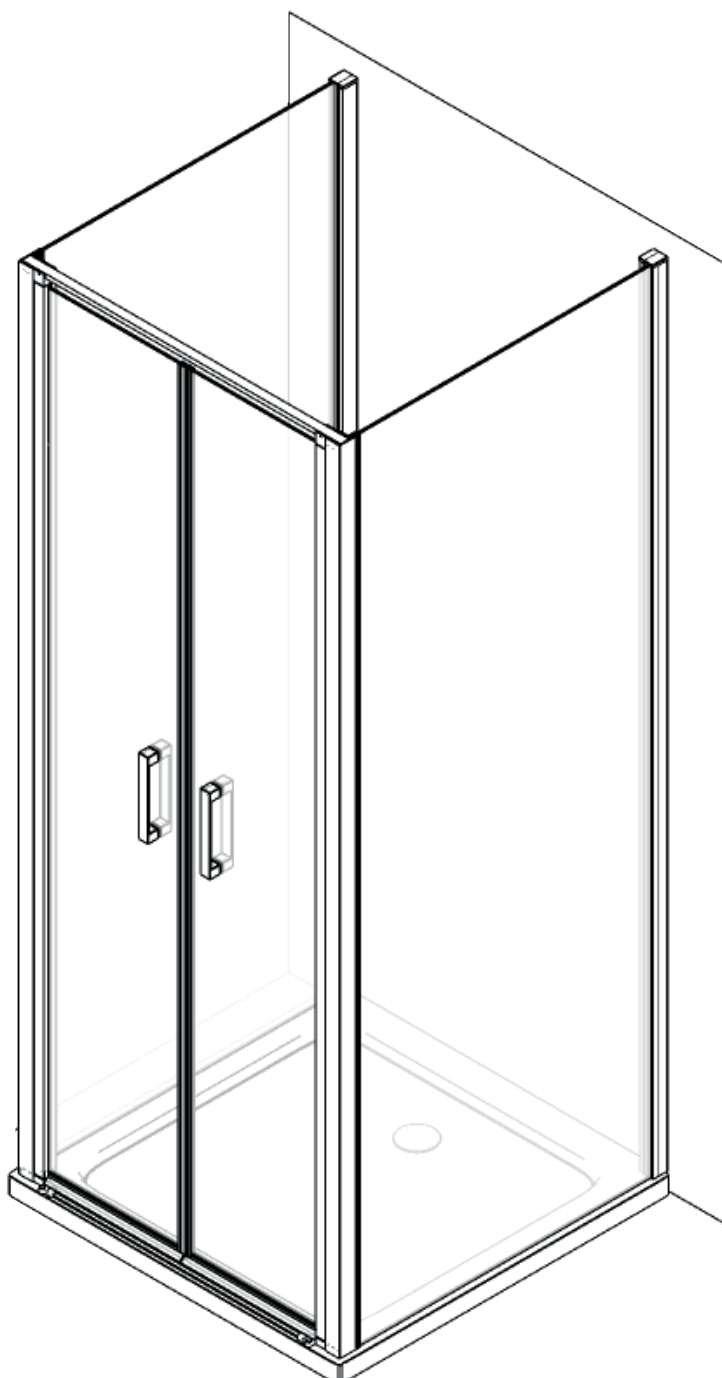



TABLE OF MEASURES

DOORS "SALOON"	MEASURES A
70	670 - 710
75	720 - 760
80	770 - 810
85	820 - 860
90	870 - 910
100	970 - 1010
110	1070 - 1110
120	1170 - 1210











FIXED WALL	MEASURES B
65	625 - 650
67,5	650 - 675
70	675 - 700
75	725 - 750
77,5	750 - 775
80	775 - 800
85	850 - 875
90	875 - 900
100	975 - 1000

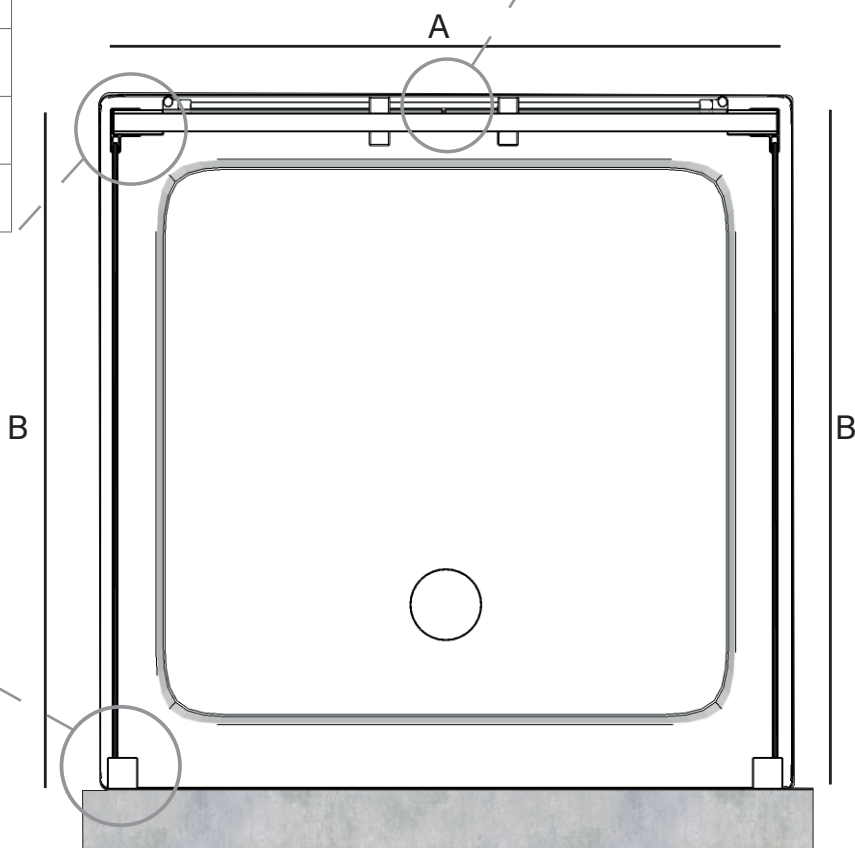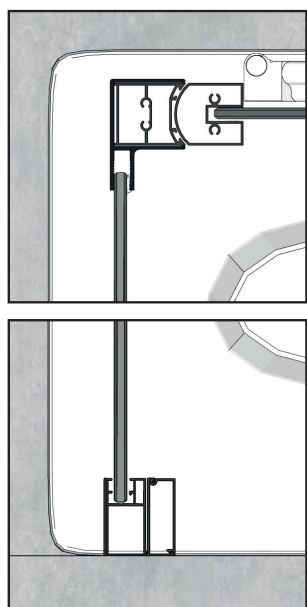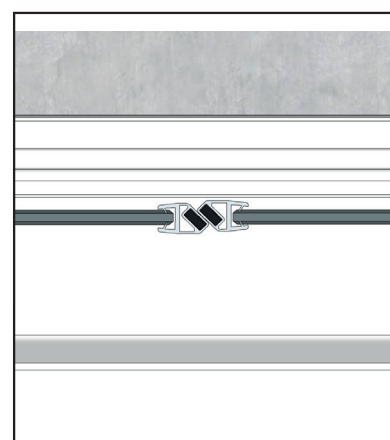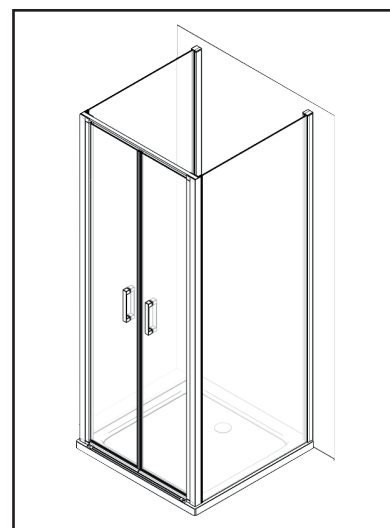


TOOLS REQUIRED

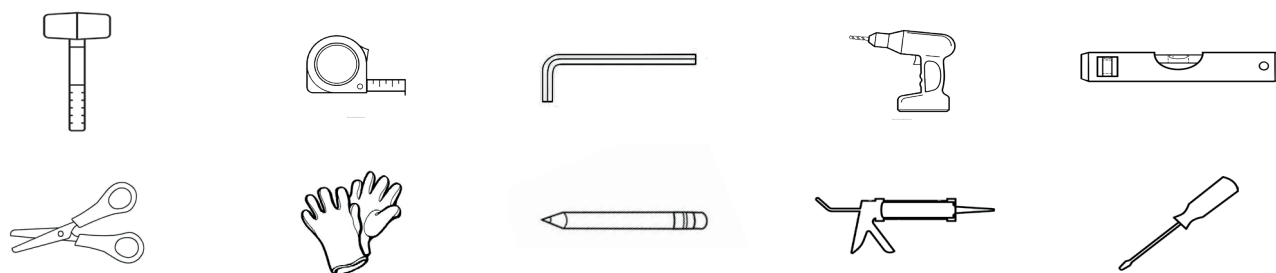


PACKAGE CONTENT (product shipped in 3 packages)

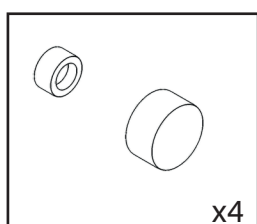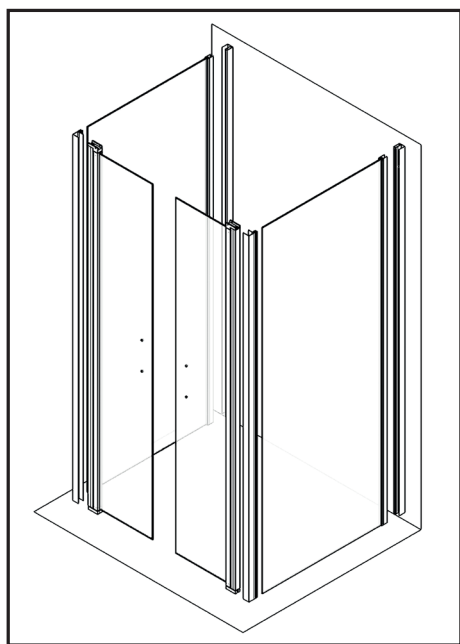


Screw caps

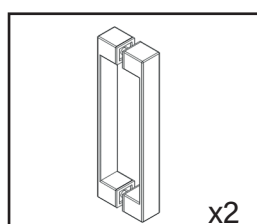


Handle

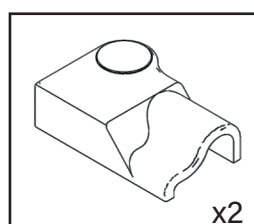

Ground fixing bracket

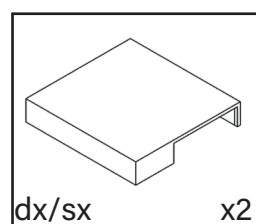

Top cover wall profile

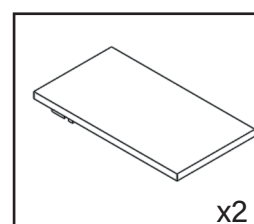

Upper fixed glass cover





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profile on the wall and use the plumb level.
3. Mark the holes in the wall with a pencil.
4. Drill holes in the wall.
5. Insert the wall plug and tighten the screws to secure the profile. Repeat steps for the other profile.

IMPORTANT



it is good practice not to mount the saloon door profiles close to the outer edge of the shower tray, always leave about 1 cm for optimum aesthetic and functional results.

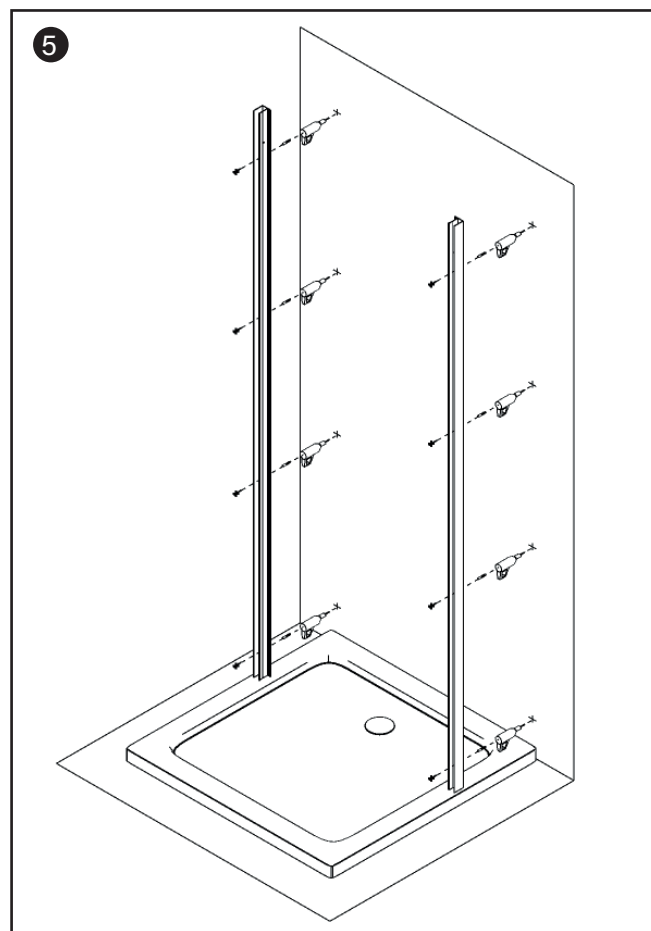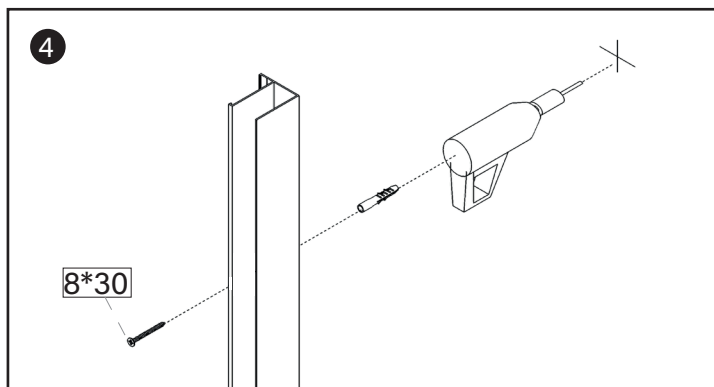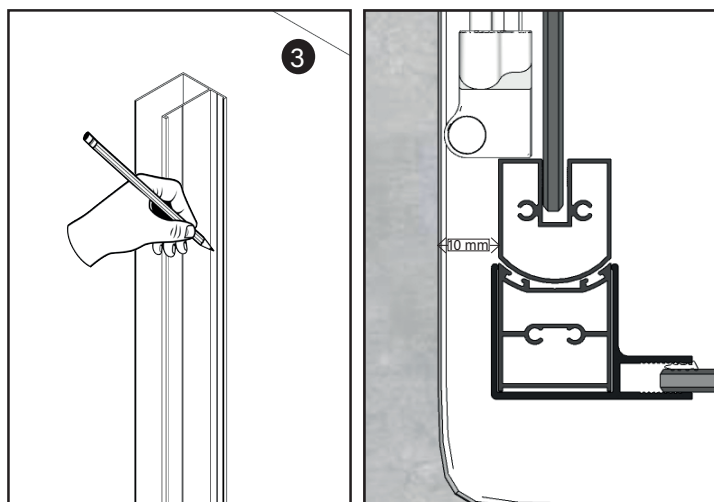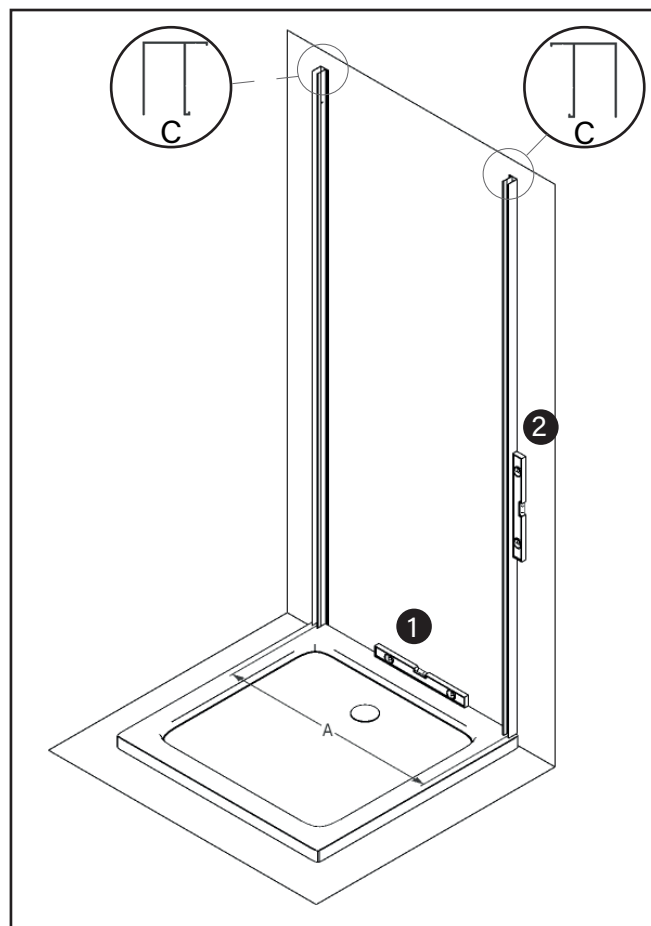

2° PASSAGE

1. Apply silicone in the groove of the angle profile.
2. Insert the fixed glass inside the corner profile, while it is cool to complete the next step.
3. Install the glass stop gasket between the glass and the aluminium corner profile, taking care to insert it from the bottom upwards. Repeat the steps for the other profile.

You can find it rolled up in a sachet!

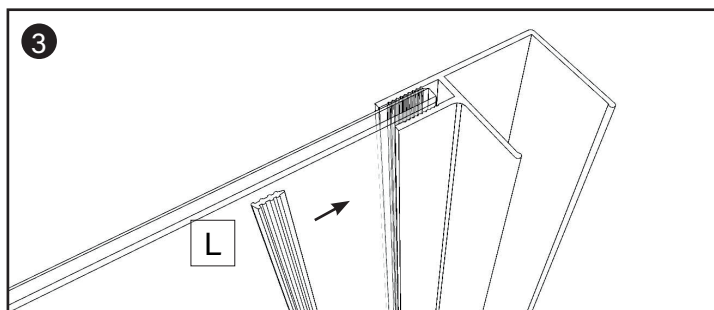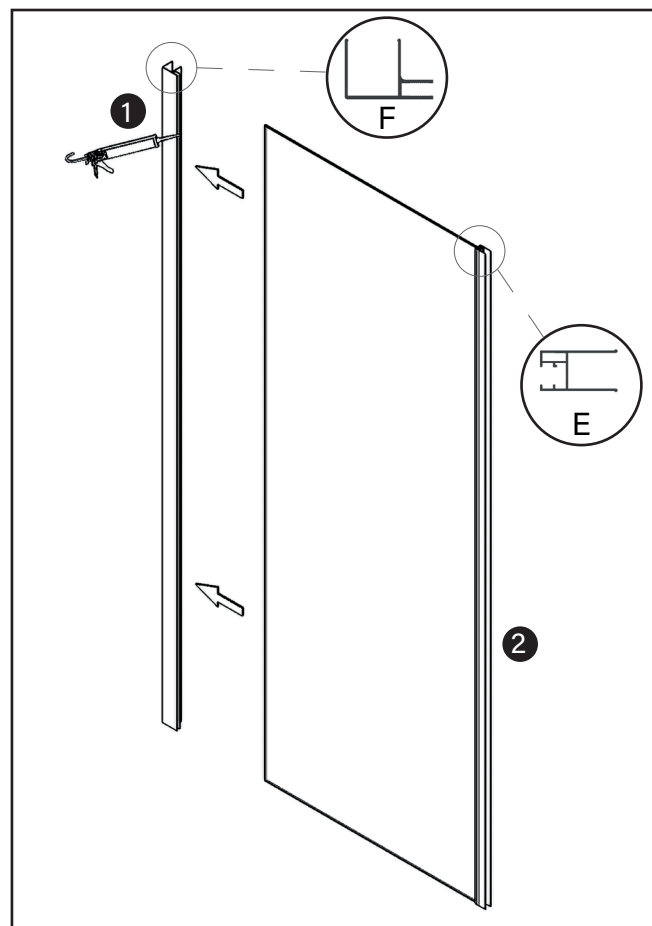


3° PASSAGE

1. Install the fixed walls on the wall.

IMPORTANT:

For correct installation, we recommend removing the wall profile from the wall, inserting it on the fixed glass wall and then placing it on the plate; you will fix the wall profile later.



PLEASE NOTE: *nothing goes under the fixed slab, it must be placed and silenced from the outside.*

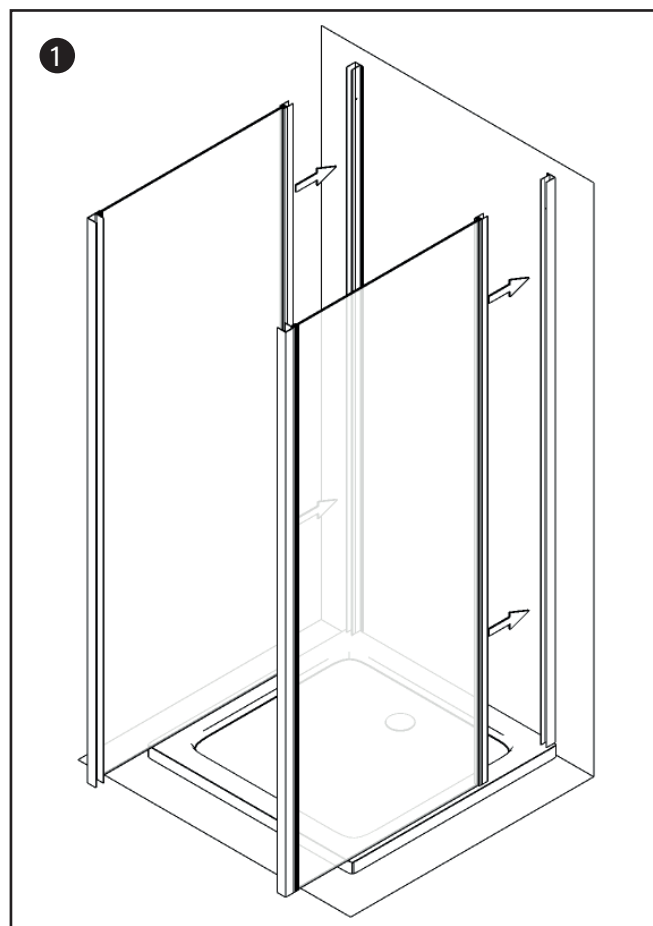

4° PASSAGE

1. As shown in the picture, install the glass saloon doors inside the wall profiles.

Note: Observe the direction of the arrows, on the glass surface, indicating the direction of installation.

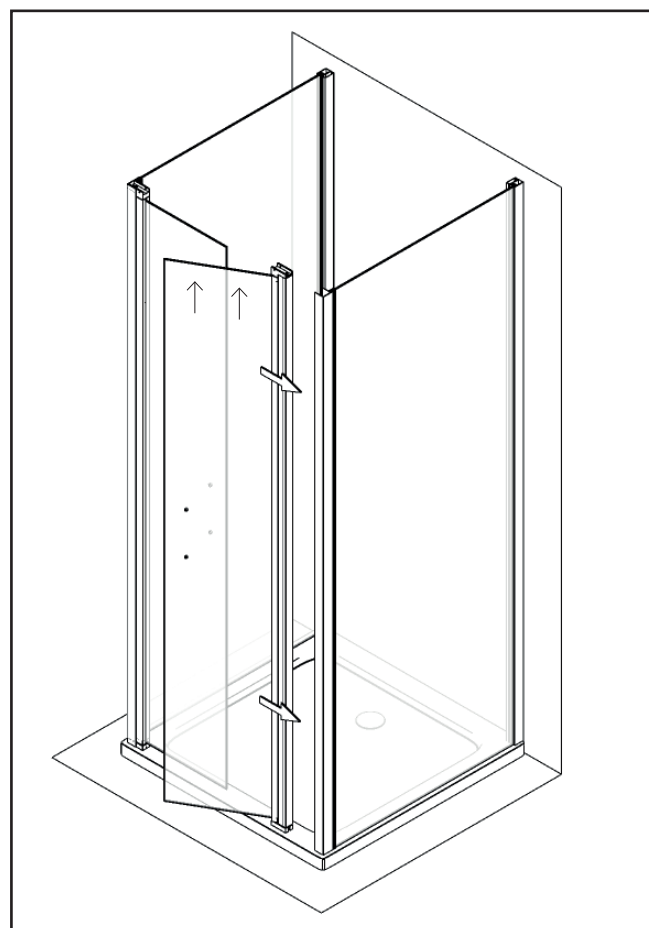
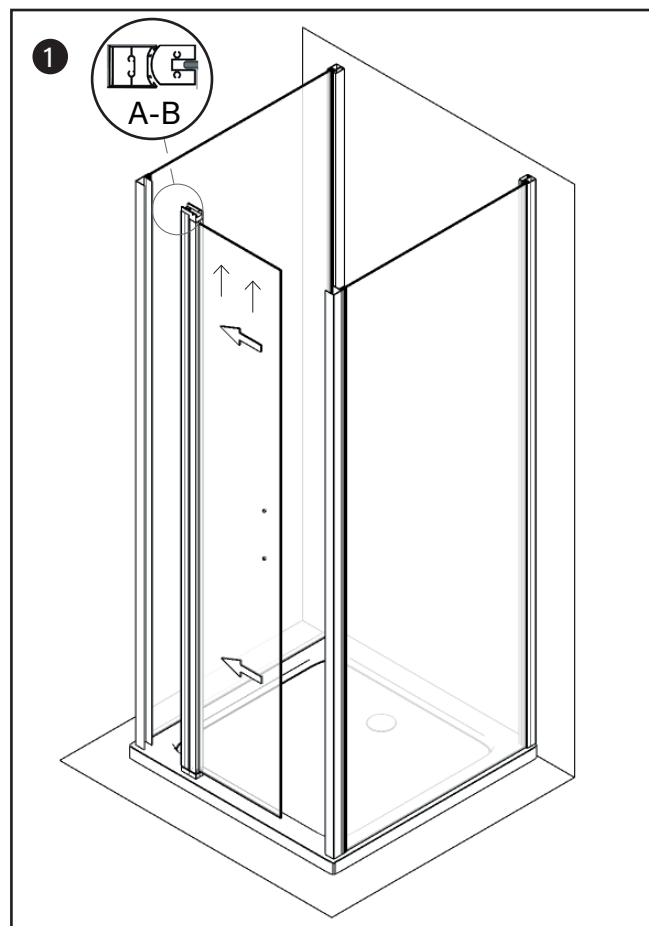


5° PASSAGE

1. Proceed with fastening the upper support bar as shown.

ATTENTION

the upper sealing bar does not act as an adjuster but has a precise seat and must be installed tip to tip between the two sashes. Adjustment is done via the wall profiles.

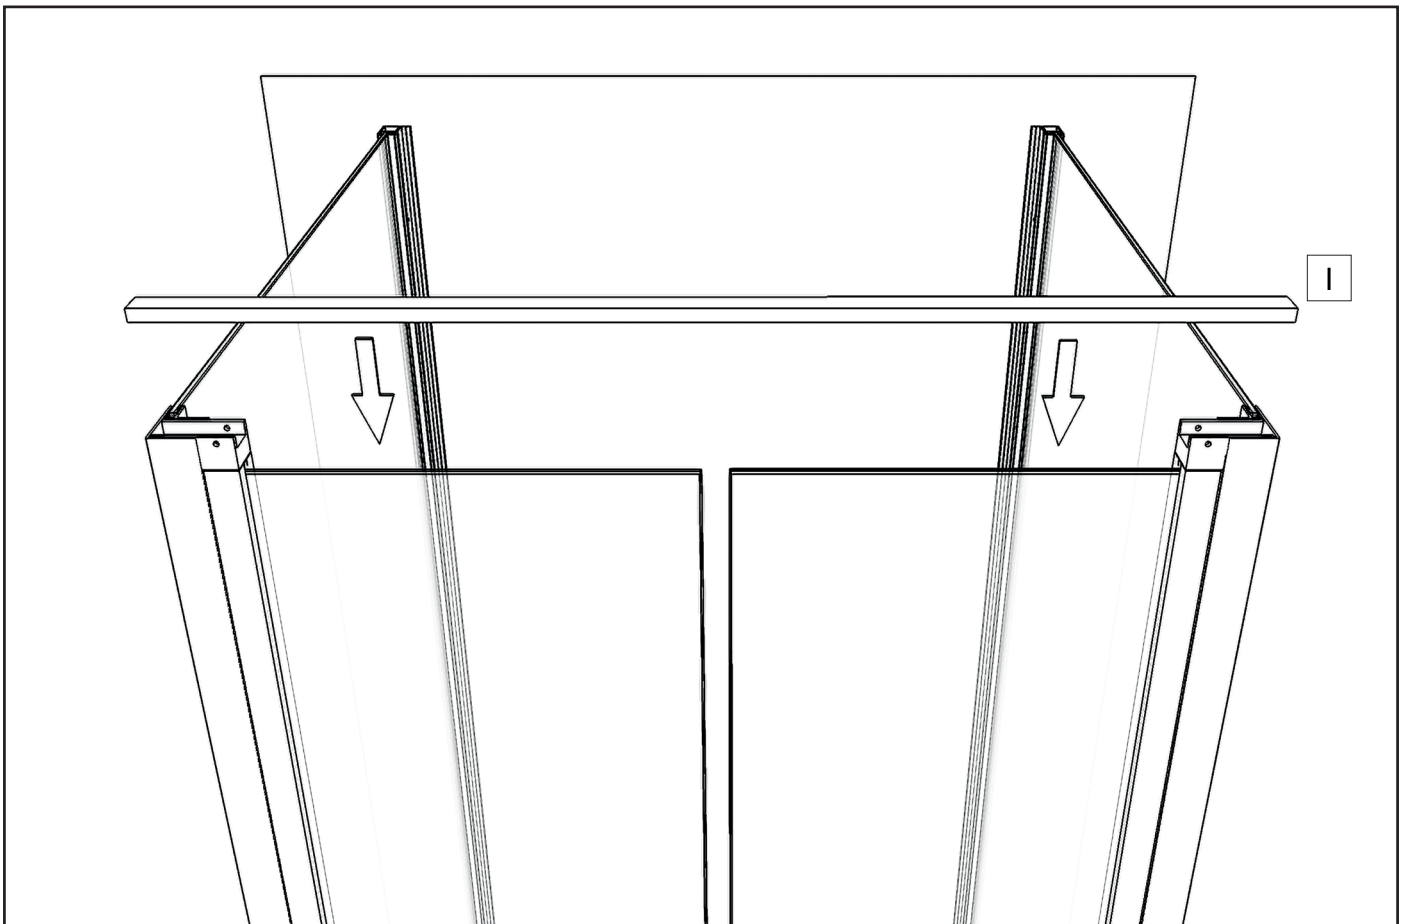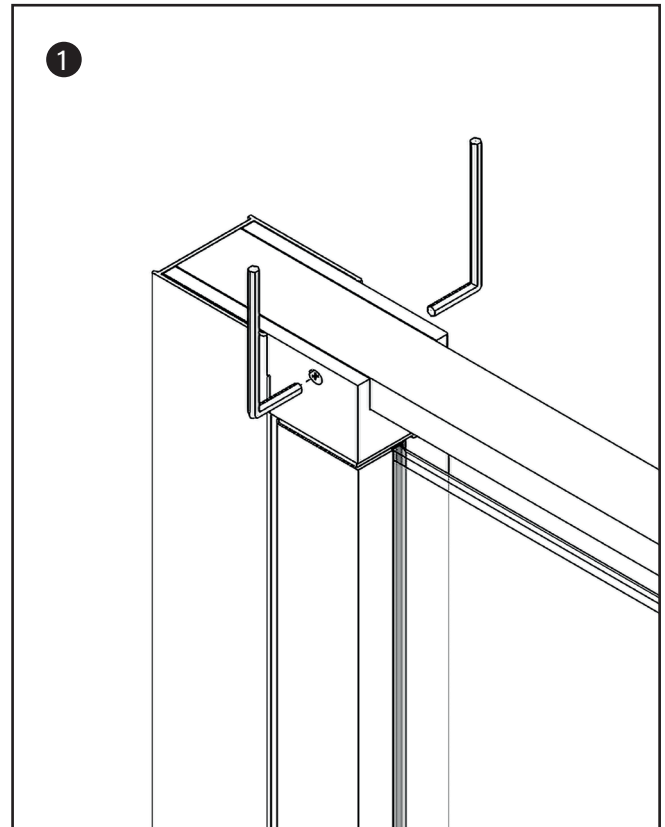



6° PASSAGE

1. Install the aluminium sealing profile together with the two right and left supports on the plate, fixing it with silicone, no need to drill holes.

Note: The supplied screws are used for flush mounting.





ATTENTION

For proper functioning of the water sealing system, the drip profile and the two supports must be mounted slightly outwards from the frames, otherwise they will interfere with the operation of the under-glass seals.

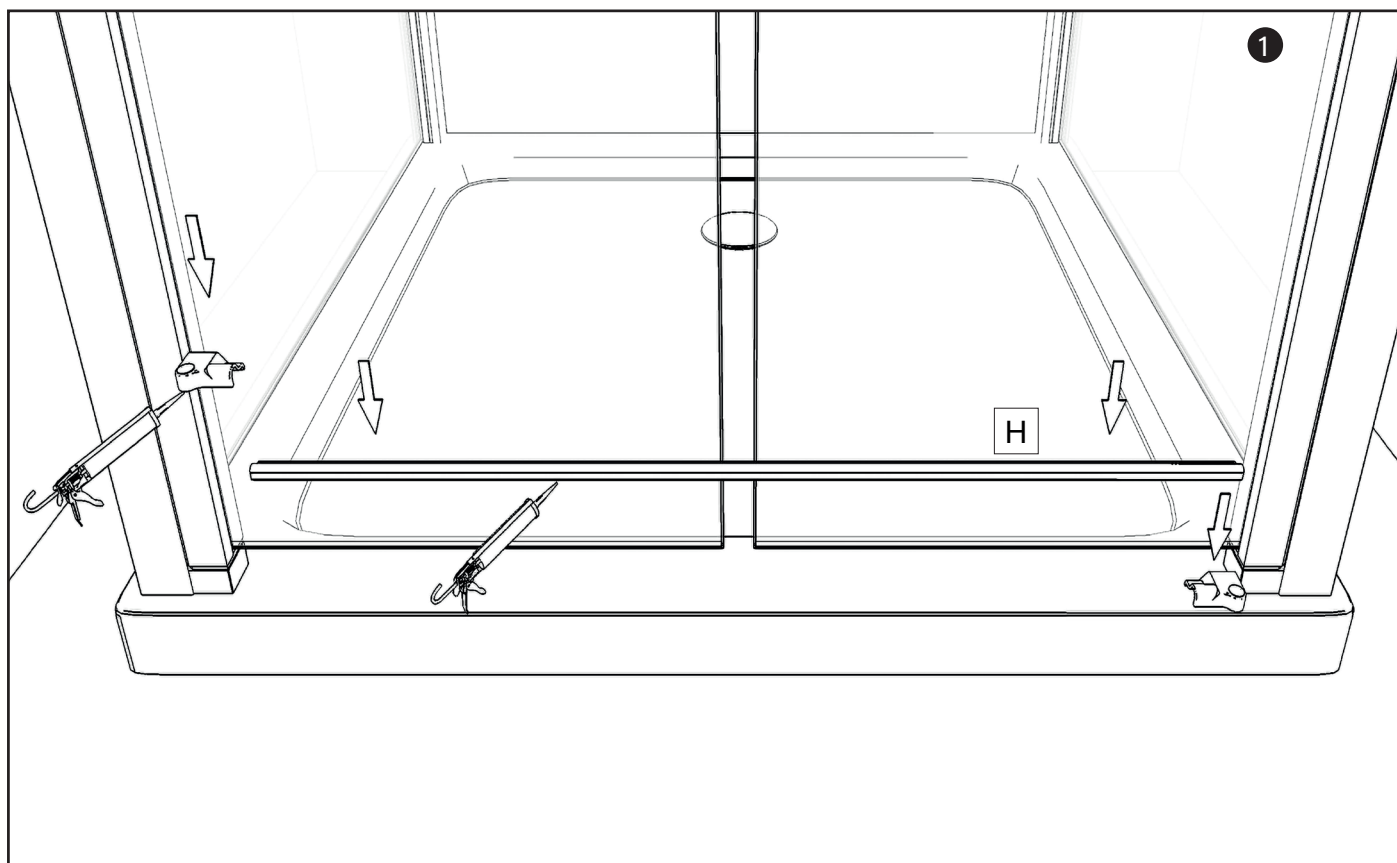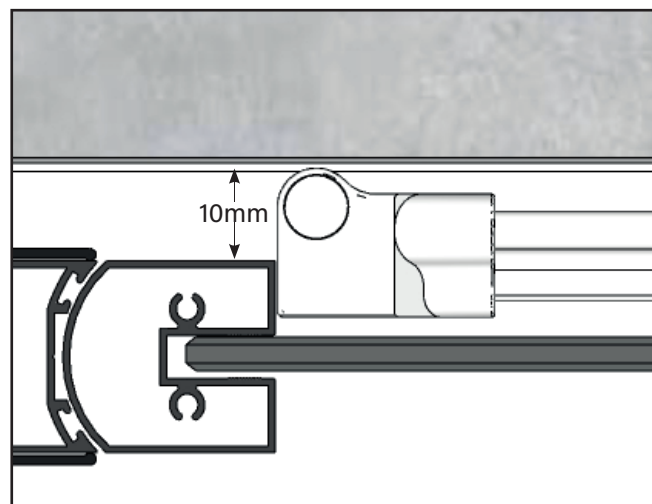

7° PASSAGE

1. Install the magnetic seals on the windows without cutting them, using the full height, starting from the bottom; if they are too long, trim them from the top.
2. Install the two lower sealing gaskets in the panes by shaping them ad hoc, so that they do not get in the way of the vertical magnet gaskets, safeguarding the fin so that it gives the correct water seal .

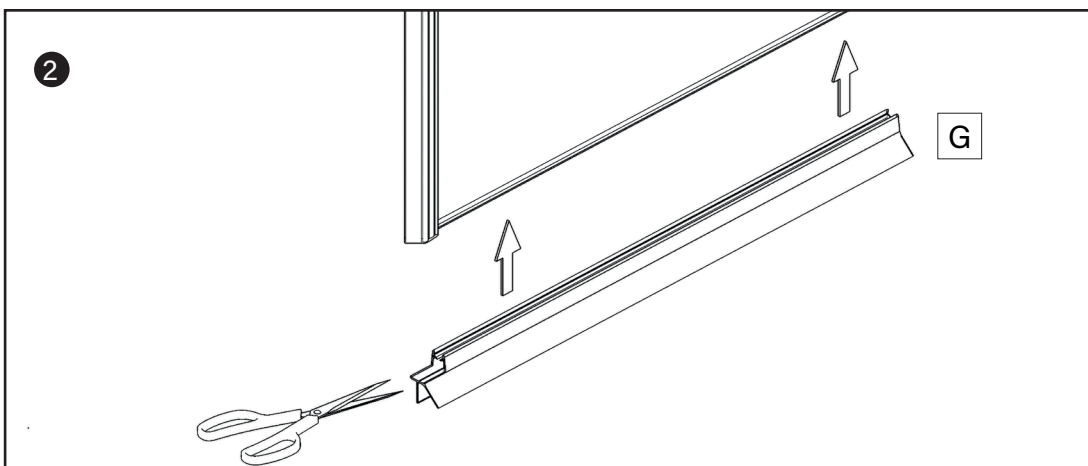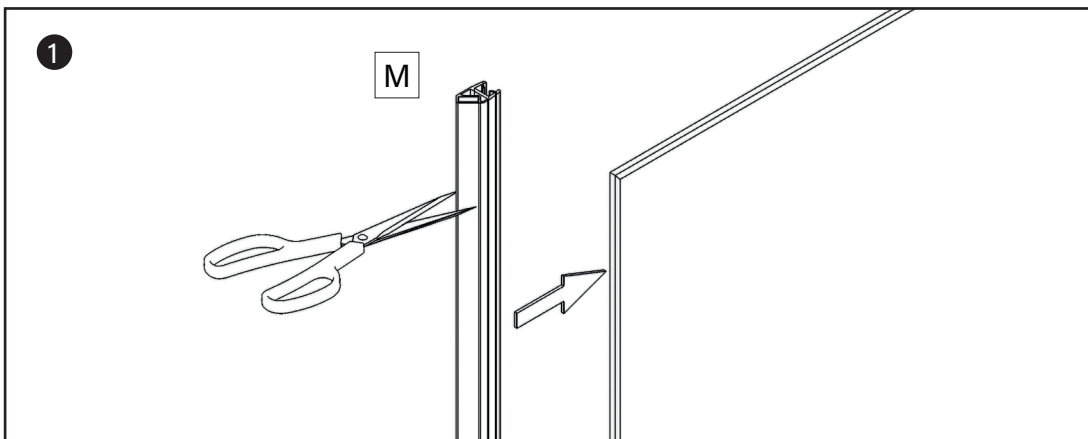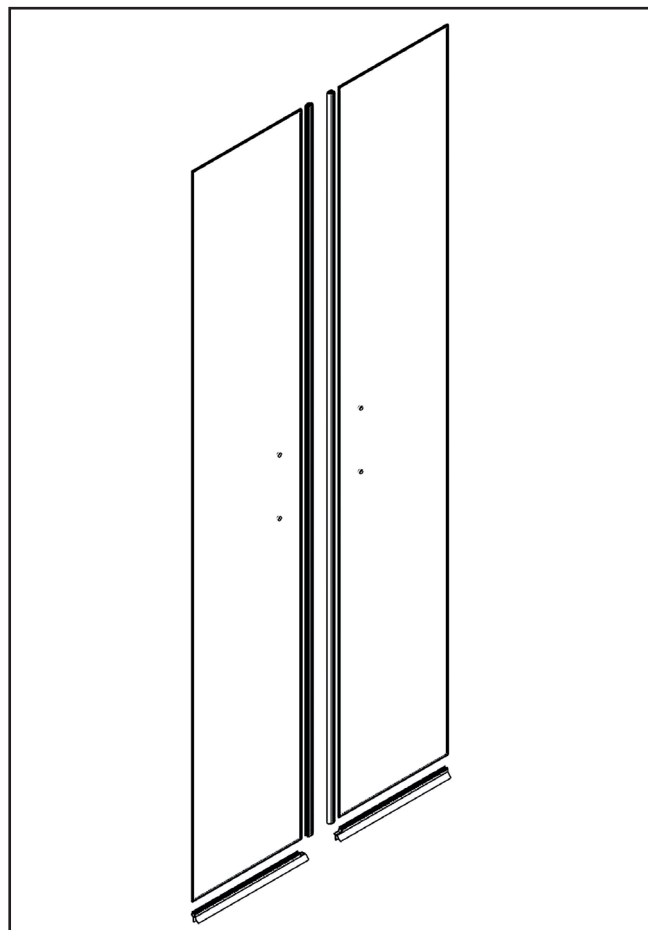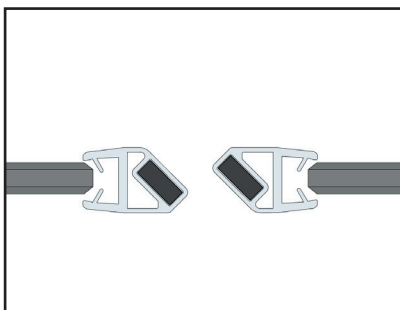

8° PASSAGE



1. Drill holes and attach the screw from the inside to secure the shower wall to both the wall and corner profiles using the 8x16 screws.

IMPORTANT: maximum saloon door adjustment 2 cm, fixed glass 2.5 cm.

Note: A total of 8 holes must be drilled, 2 holes per profile, 1 at the top and 1 at the bottom.

The screws will be covered with chrome-plated covers in the saloon door profiles.

2. Cover the wall profile of the fixed wall with the aluminium cover to conceal the fixing screws and to protect them from water.

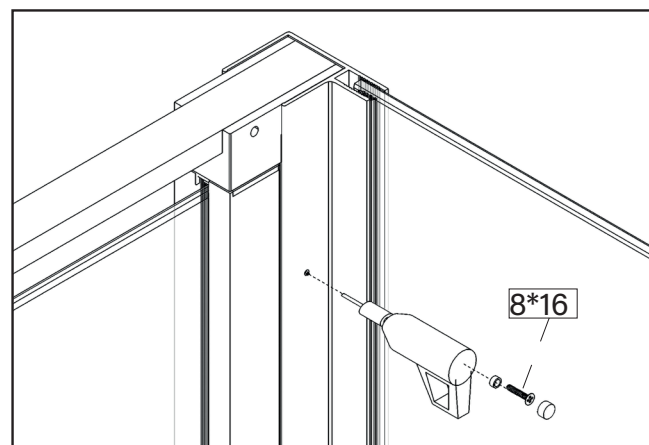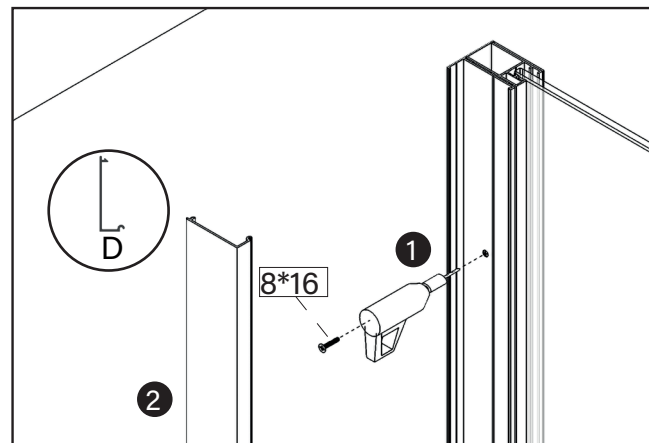

9° PASSAGE

1. Install the handles as shown in the figure (screw hole from the inside).
2. Install the deco cover on top of the wall profiles.
3. Apply silicone as shown and wait 24 hours.

