

Atlanta 3.0

DESCRIPTION

Three-sided sliding shower enclosure, consisting of two sliding sides and a fixed glass h 1.90 reversible . Made of 6mm tempered glass. Reversible installation. Manual adjustment of wall profiles 2.5 cm per side. Chromed aluminium frame, glass with anti-limescale treatment indicated by special labels.






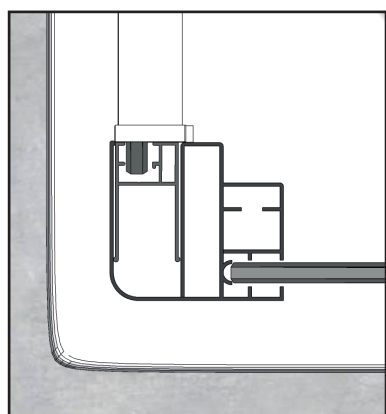


TABLE OF MEASURES

SLIDING DOORS	MEASURES A-B
70	675 - 700
75	725 - 750
80	775 - 800
90	875 - 900
100	975 - 1000
110	1075 - 1100
120	1175 - 1200
130	1275 - 1300
140	1375 - 1400


FIXED WALL	MEASURES C
65	625 - 650
67,5	650 - 675
70	675 - 700
75	725 - 750
77,5	750 - 775
80	775 - 800
85	850 - 875
90	875 - 900
100	975 - 1000

REVERSIBLE

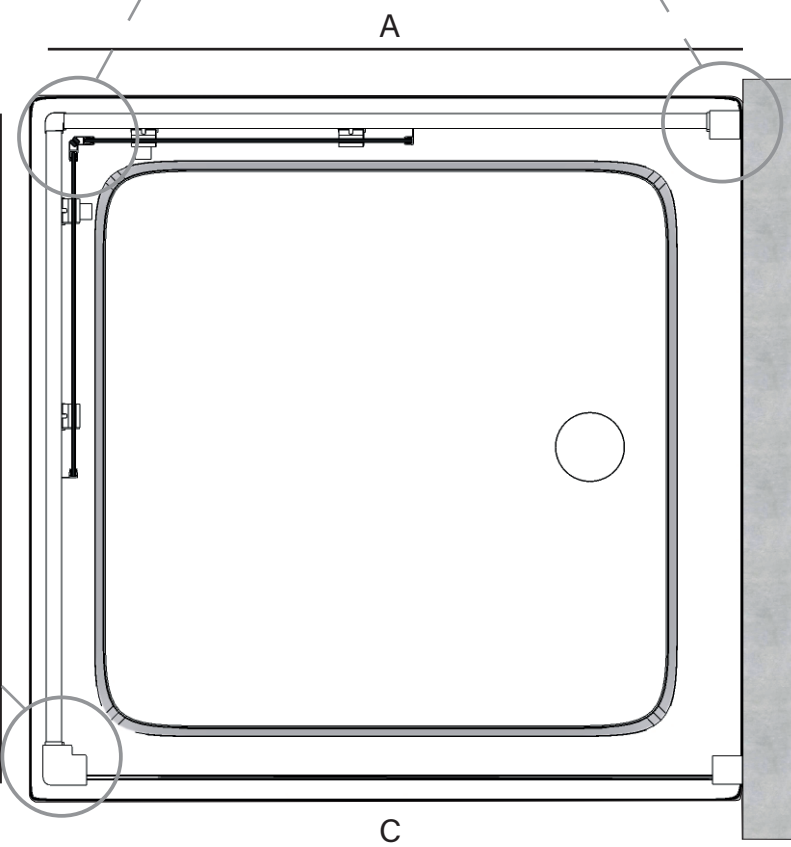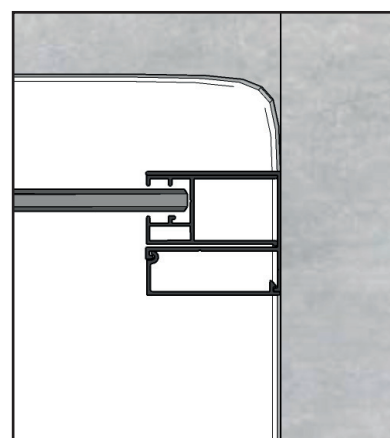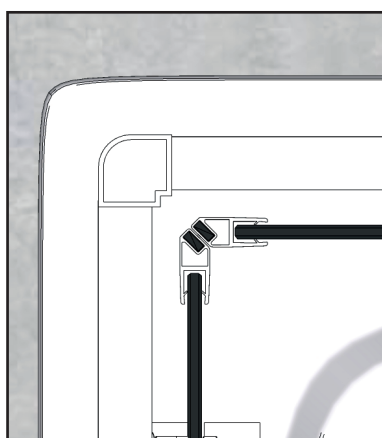
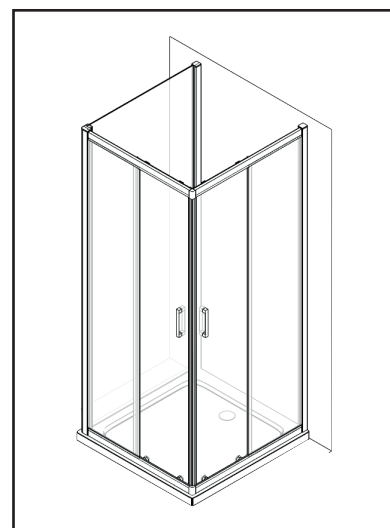
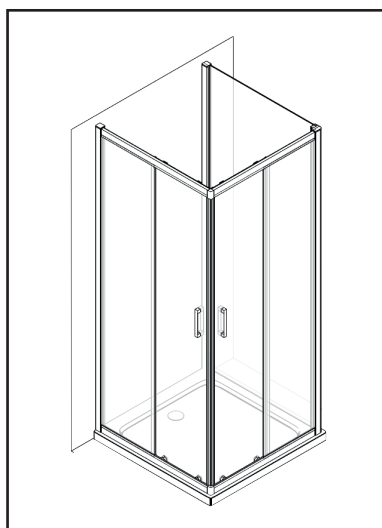


ATLANTA 3.0


TOOLS REQUIRED

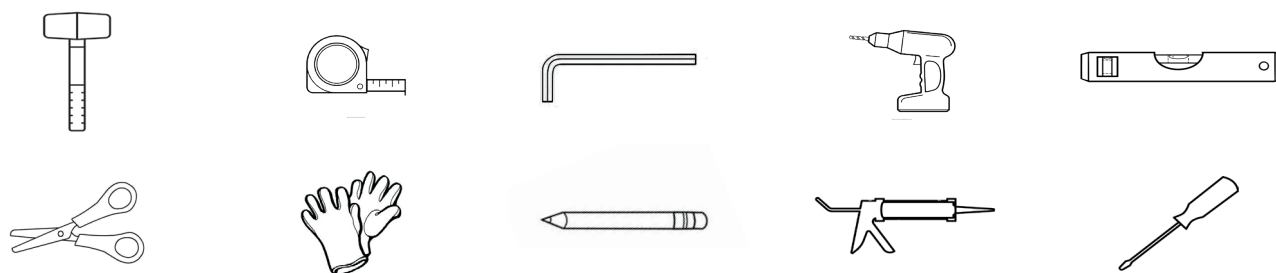


PACKAGE CONTENT (podotto shipped in 3 packages)

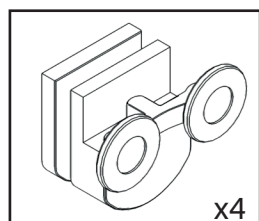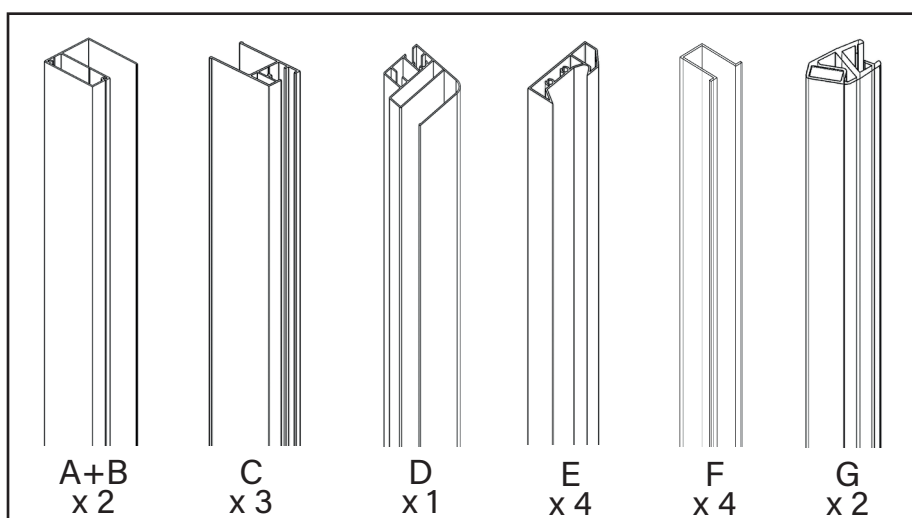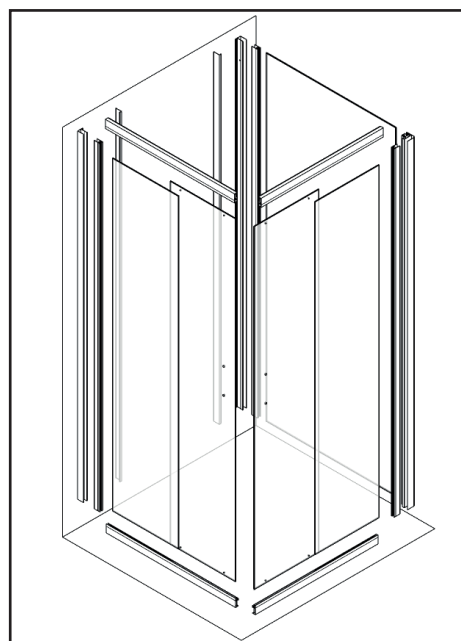


Upper wheels

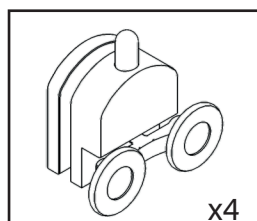


Removable lower wheels

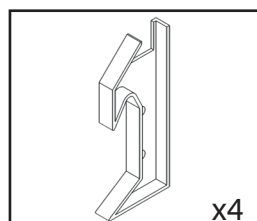


Fixed-side connector with slot

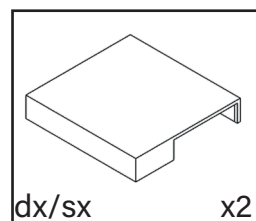


Top cover wall profile

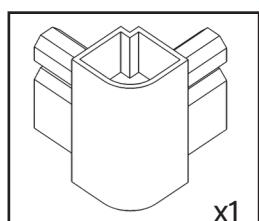


Upper corner connection

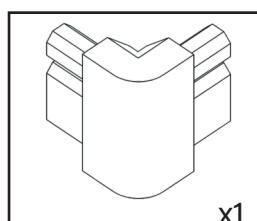



Bottom corner connection

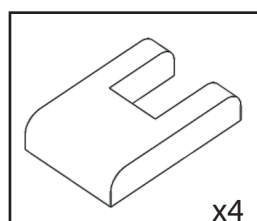


Glass retainer cover

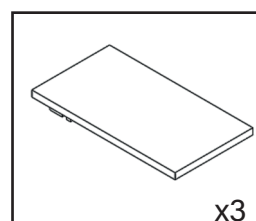


Upper fixed glass cover

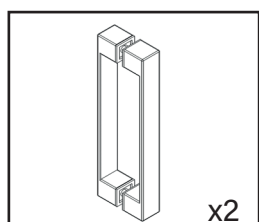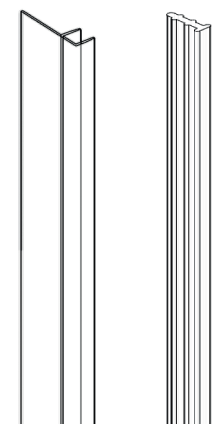


Handle

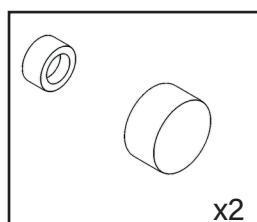

Screw caps

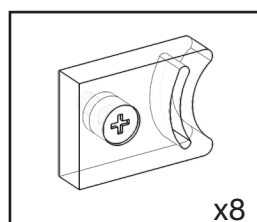

End of run




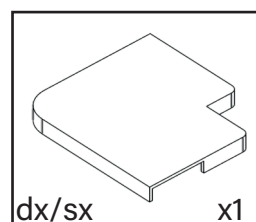


Upper cover profile corner

MOUNTING

1° PASSAGE



1. Check that the shower tray is level.
2. Place the profile on the wall and use the plumb level.
3. Mark the holes in the wall with a pencil.
4. Drill holes in the wall.
5. Insert the wall plug and screw in the 8x30 screws to secure the profile. Repeat steps for the other profile.

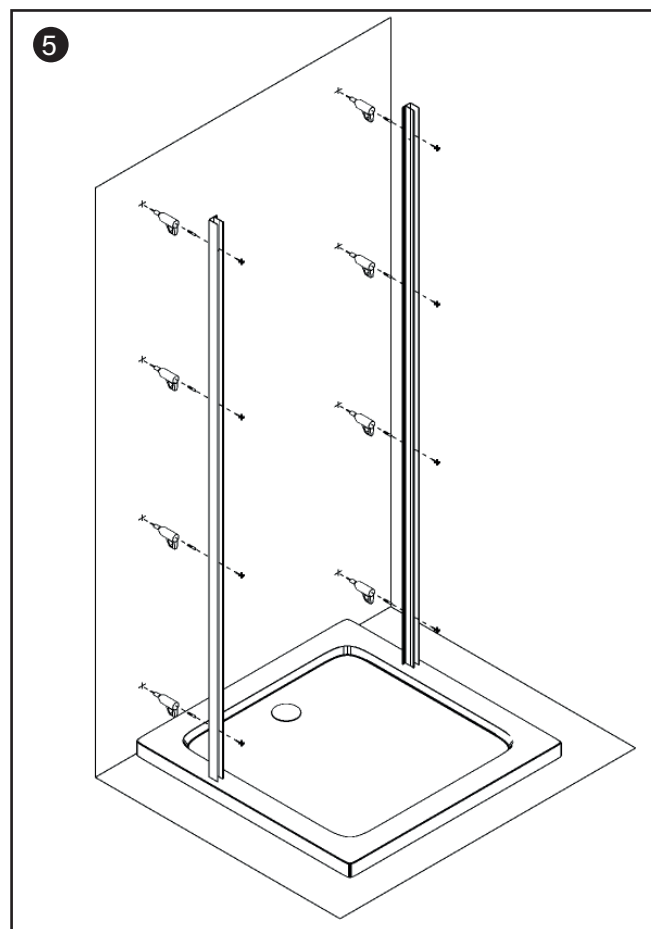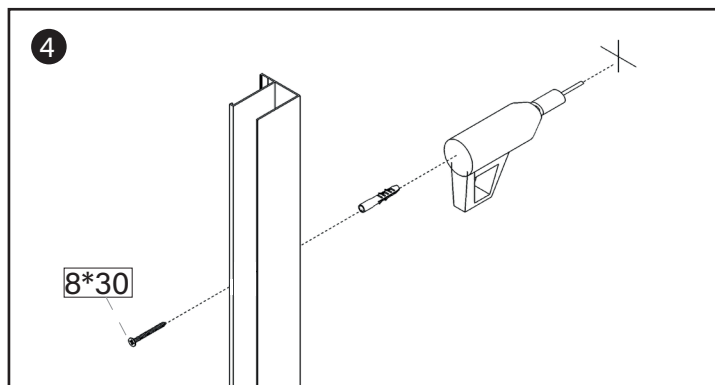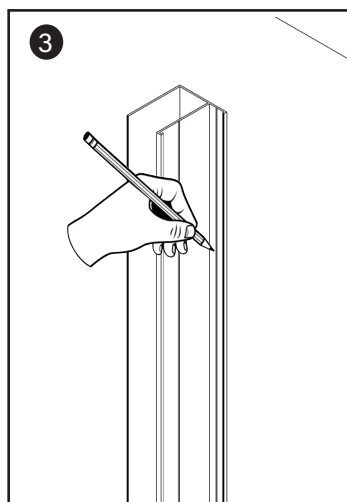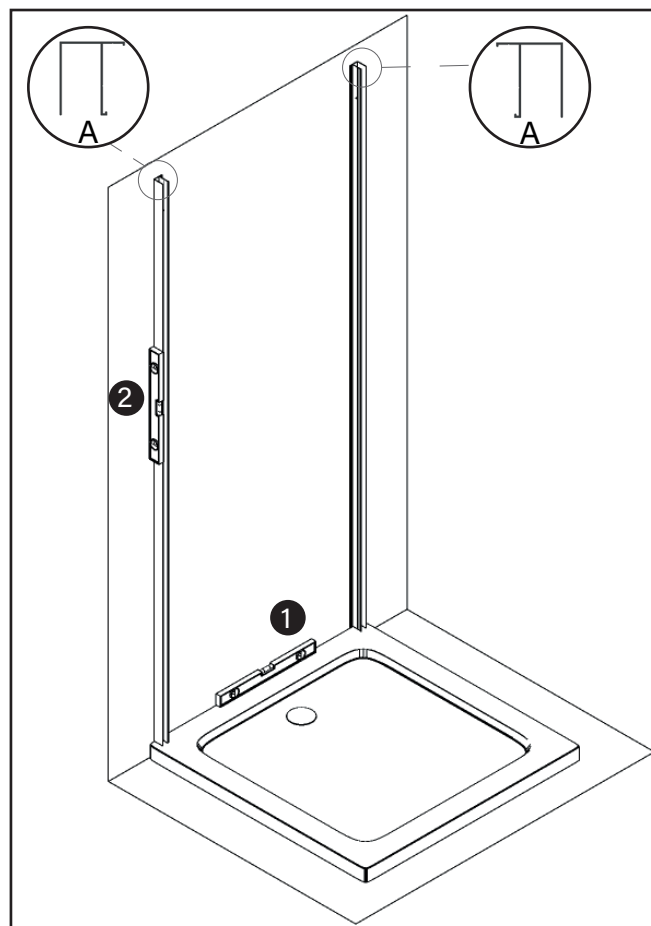

2° PASSAGE

1. Apply silicone in the groove of the angle profile.
2. Insert the fixed glass inside the corner profile and while fresh complete the next step.
3. Install the glass stop gasket between the glass and the aluminium corner profile, taking care to insert it from bottom to top.

You get it rolled up in a baggie!!!

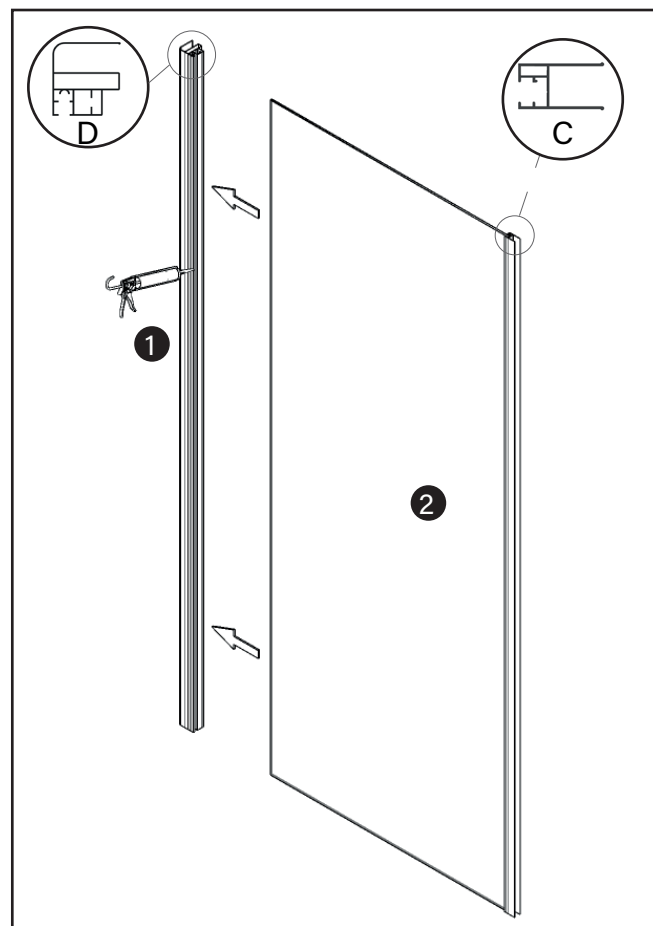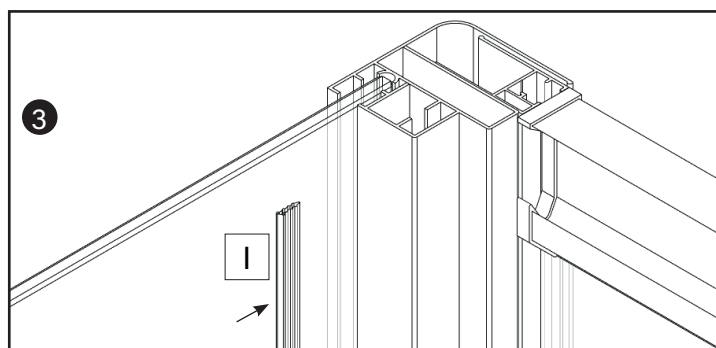


3° PASSAGE

1. Installing the fixed wall.

IMPORTANT:





For correct installation, we recommend removing the wall profile from the wall, inserting it on the fixed glass wall and then placing it on the plate; you will fix the wall profile later.

NOTE : *nothing goes under the fixed slab, it must be placed and siliconed from the outside.*

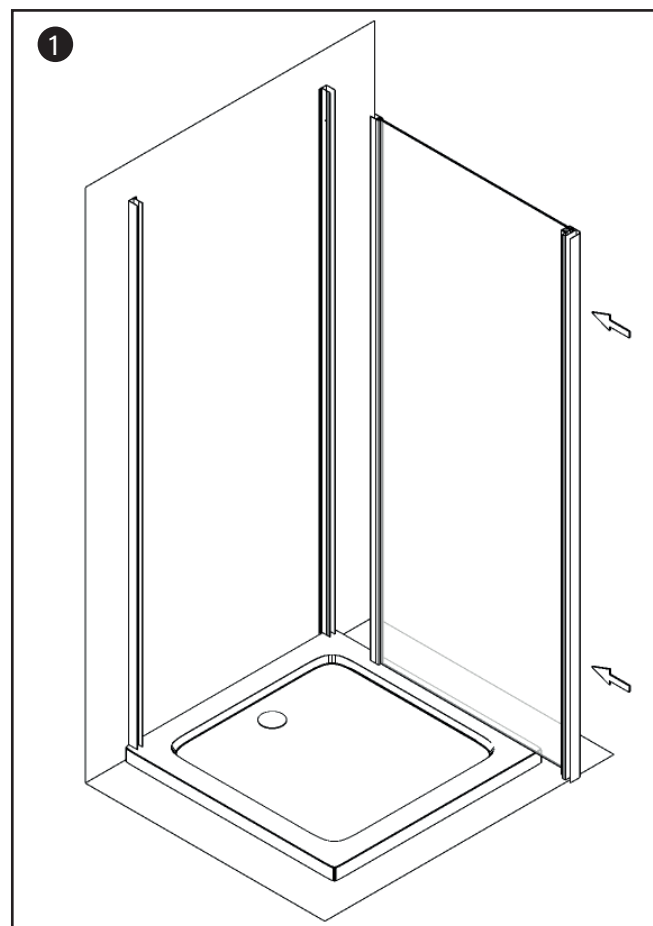



4° PASSAGE

1. Position the glass retainer cover.
2. Place the gasket in the lower profile (glass protection gasket).
3. Use the 8x30 screw to connect the lower aluminium rail with the vertical profile; the connector must be inserted between the rail and the profile. In this way we construct the door frame (skeleton).
4. Insert the fixed glass as shown.

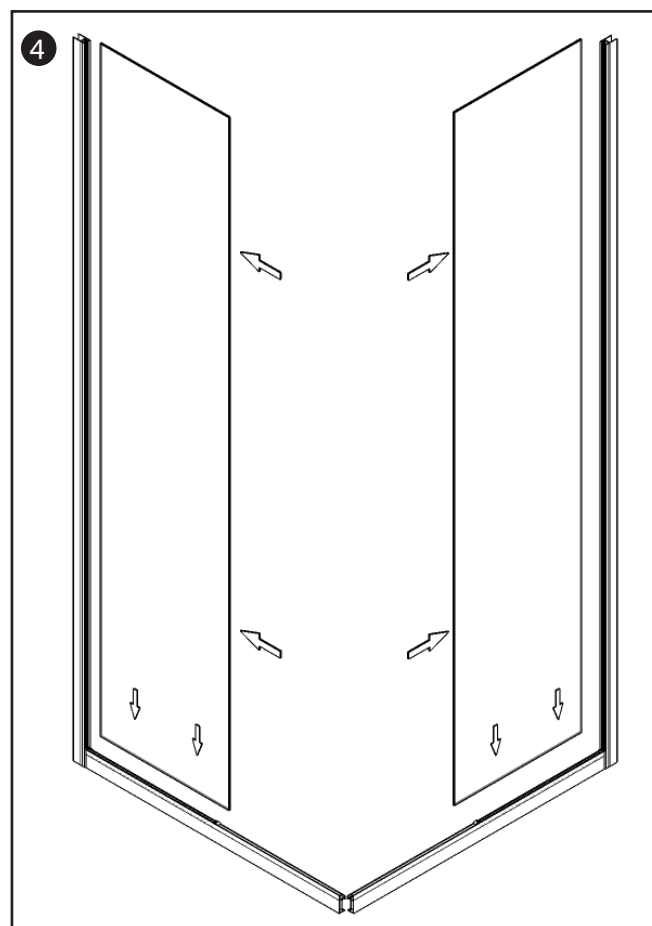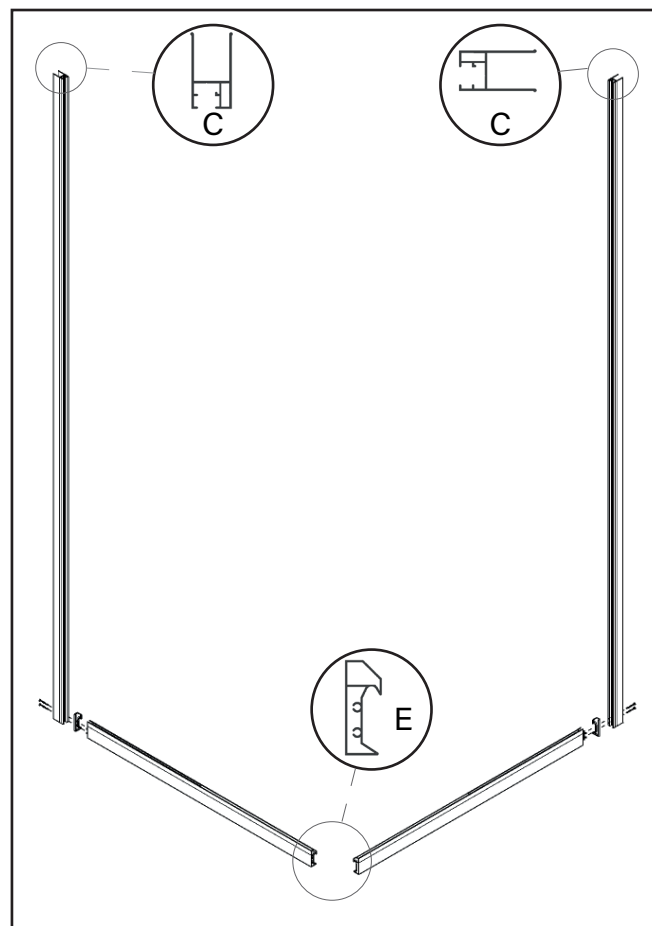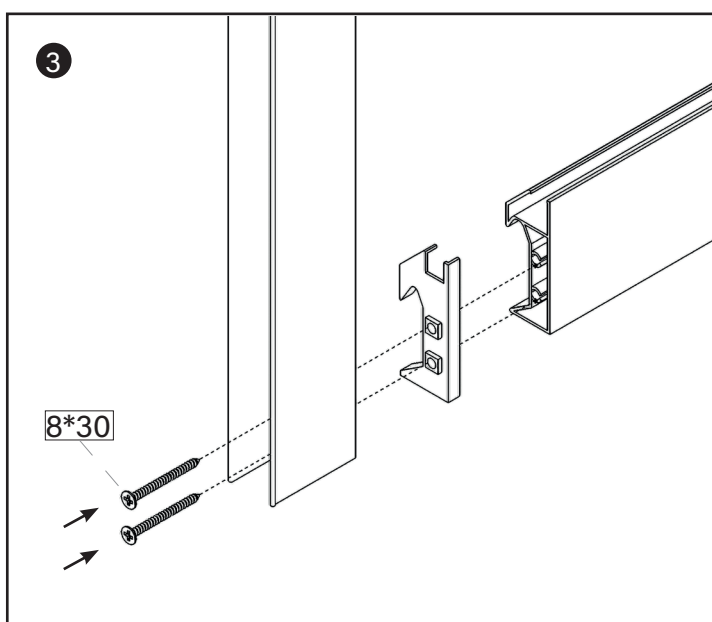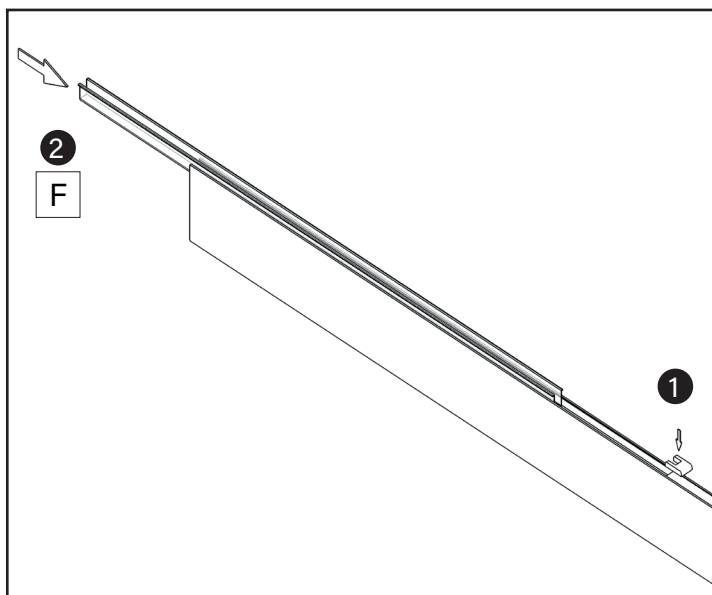



5° PASSAGE

1. Repeat the previous step for the upper part of the frame.

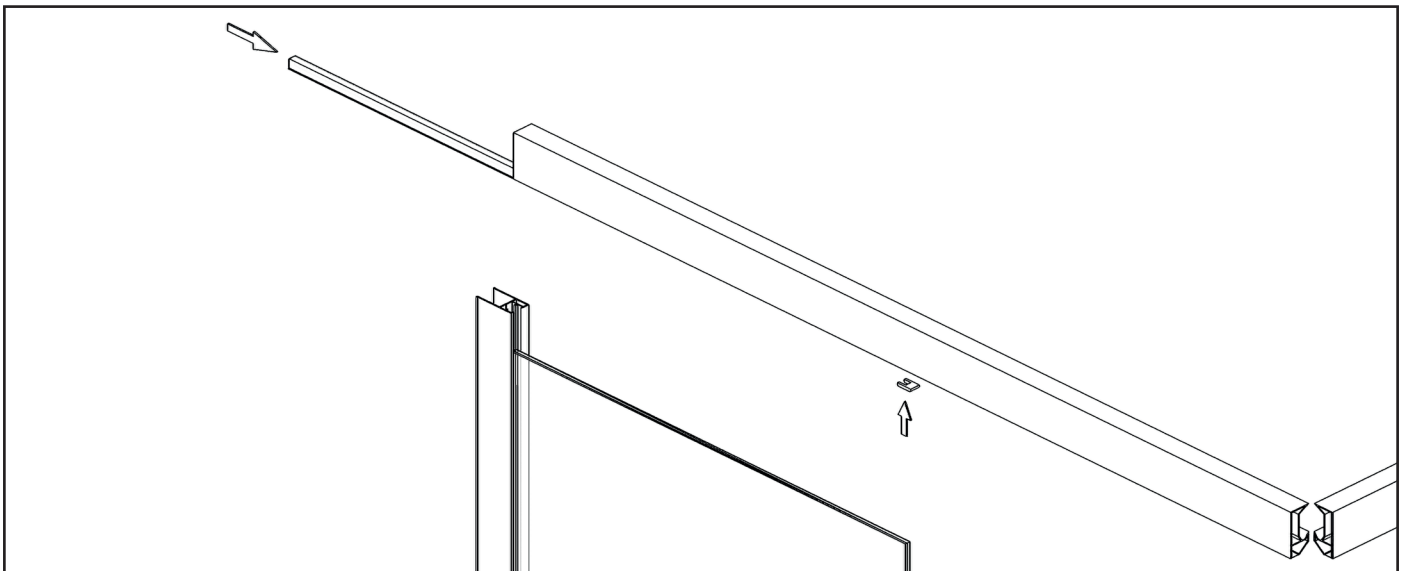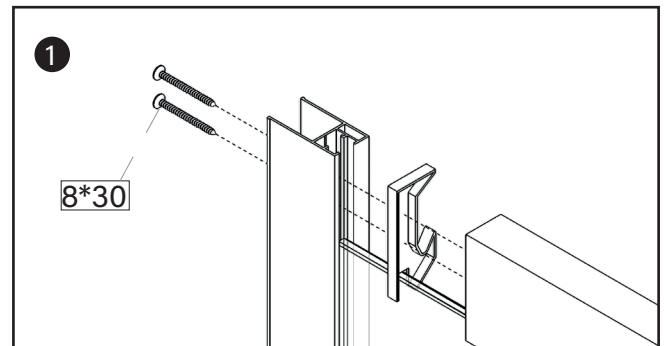




6° PASSAGE

1. Insert the previously assembled frame into the wall profile.
2. Insert the frame inside the corner profile of the fixed wall.

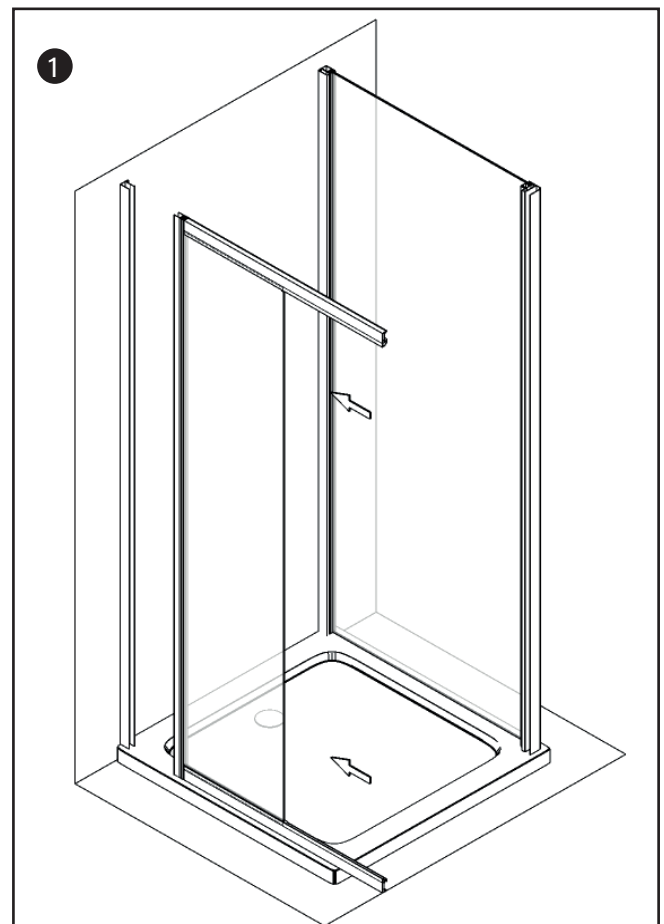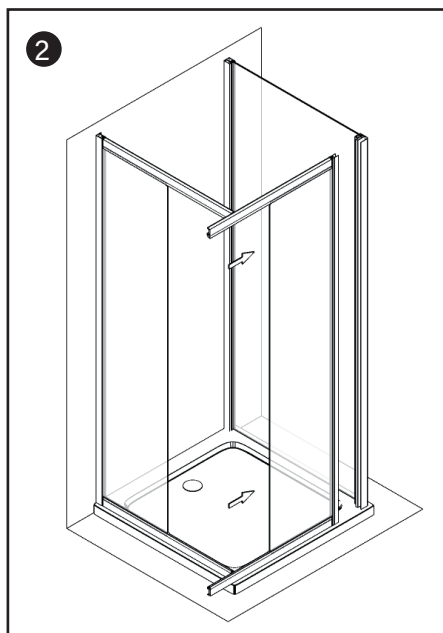

7° PASSAGE

1. Connect the two lower rails with the corner connection.
2. Repeat the operation with the upper tracks.
3. Secure with 6x10 screws and cover with screw caps.

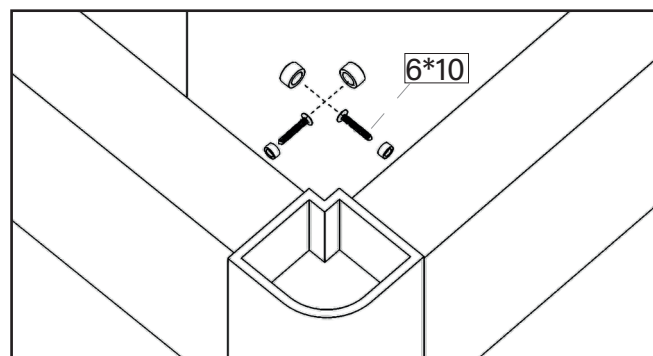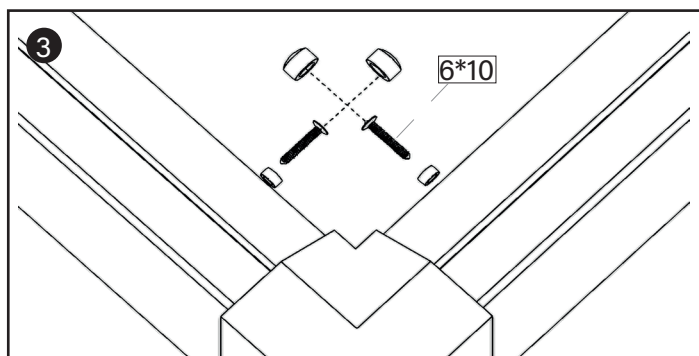
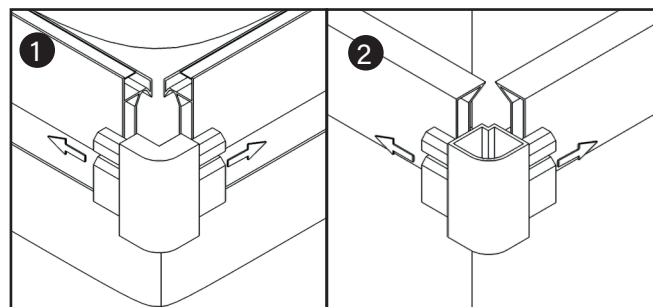


8° PASSAGE

1. Install the upper running wheels in the two panes.

Note: The upper castors are adjustable; if, after fitting the shower enclosure, the doors do not slide smoothly, they can be adjusted using the lower screw on the upper bearing.

2. Install the lower running wheels (with quick release button).

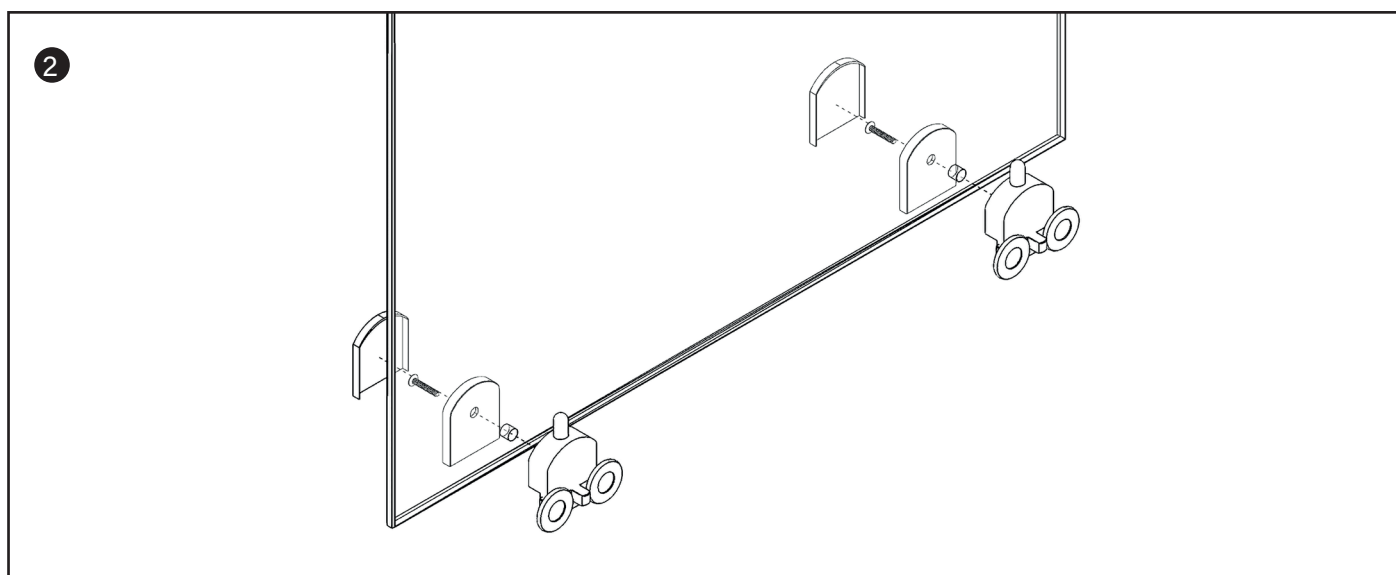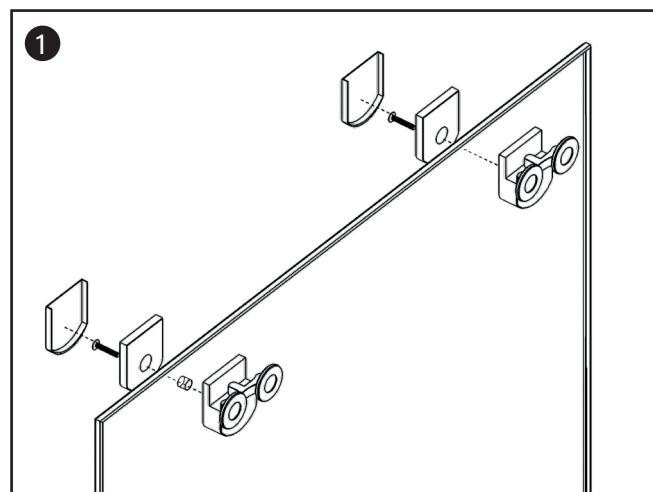




9° PASSAGE

1. Hook the sashes on the top sliding track.

Note: Make sure the door is on axis, see previous step for adjustment.



2. Hook the wheels onto the lower rail.

Note: the lower running wheels are detachable to facilitate routine cleaning and maintenance.

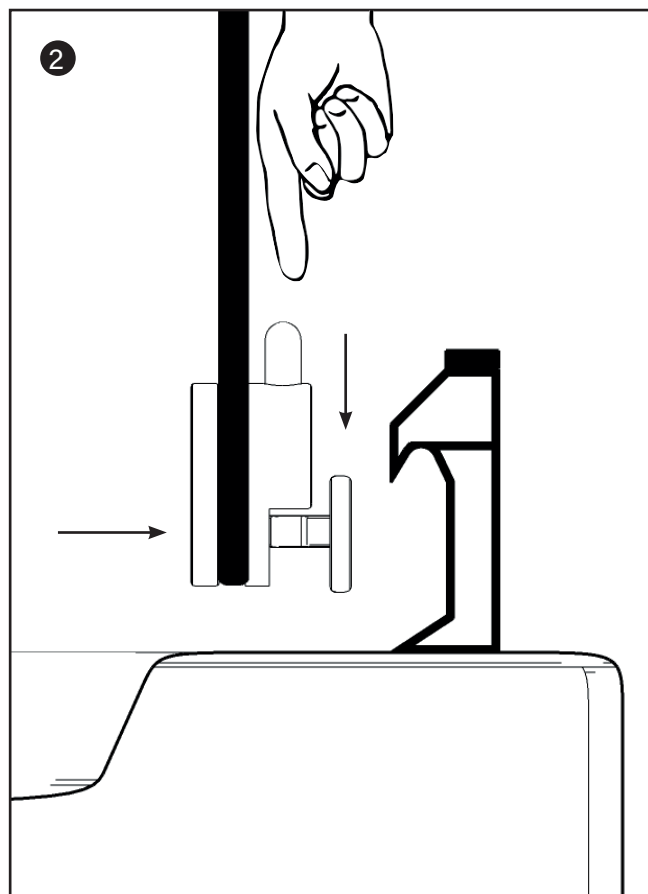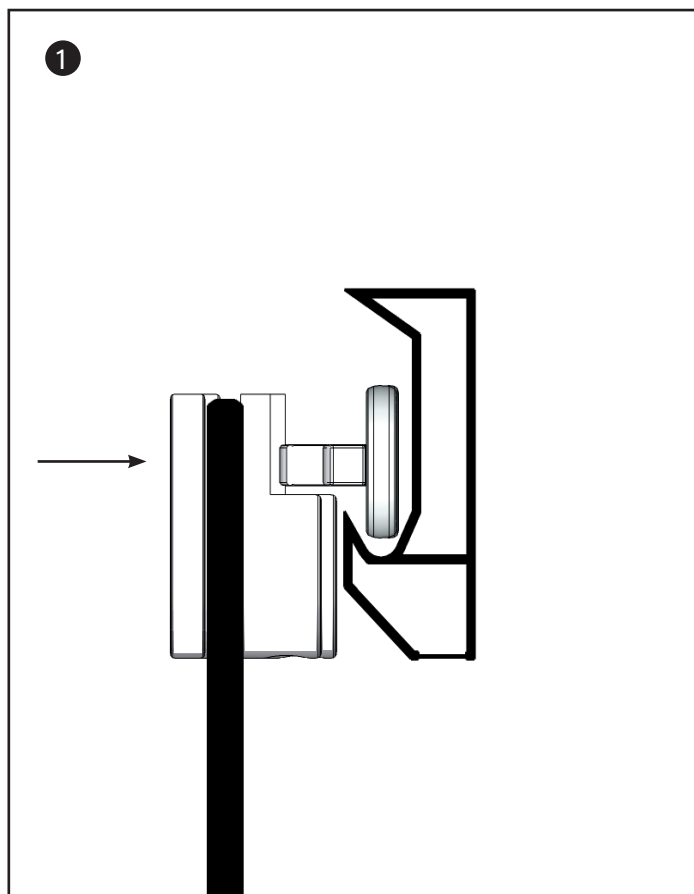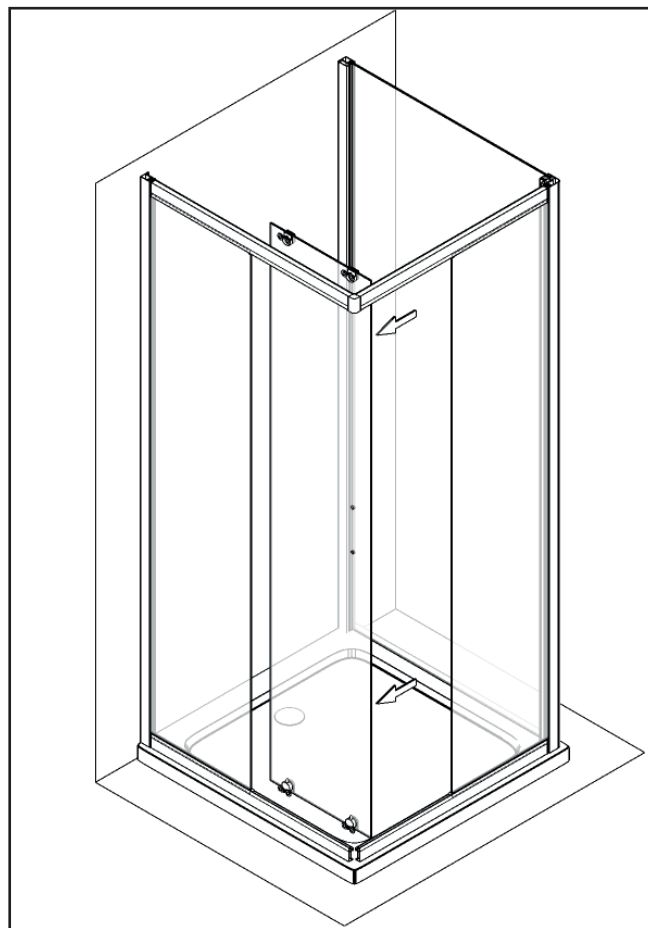

10° PASSAGE

1. Install the magnetic closing seals on the sliding glass panes.
2. Install the sealing gasket between fixed glass and sliding door.

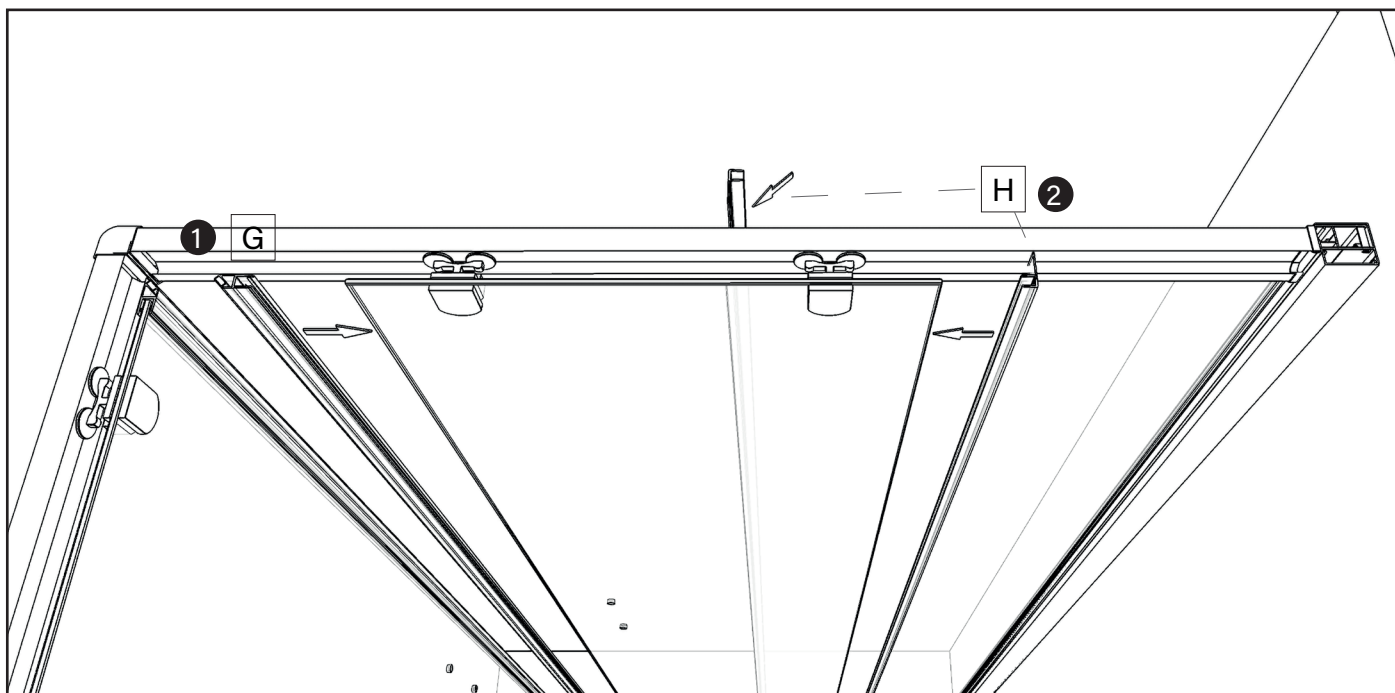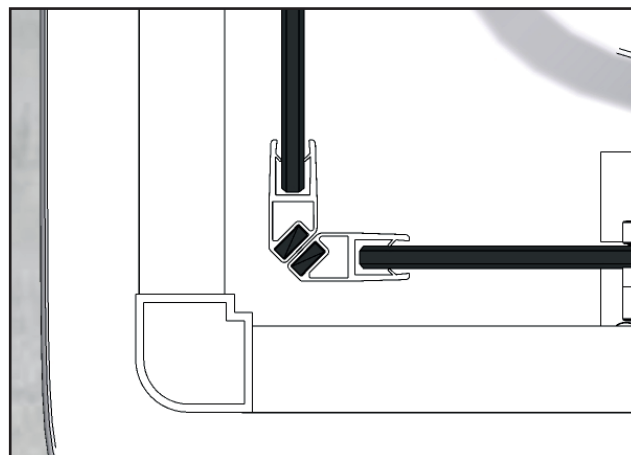


11° PASSAGE

1. Check plumbness, drill holes from the inside to secure the shower wall to the profiles, to the wall with 8x16 screws and to the corner profile with 6x20 screws.

IMPORTANT: maximum fixed glass adjustment 2.5 cm.

Note: A total of 6 holes must be drilled, 2 holes per profile, 1 at the top and 1 at the bottom. The screws will be covered with chrome-plated covers in the corner profile.

2. Cover the wall profile of the fixed wall with the aluminium cover to conceal the fixing screws and to protect them from water.


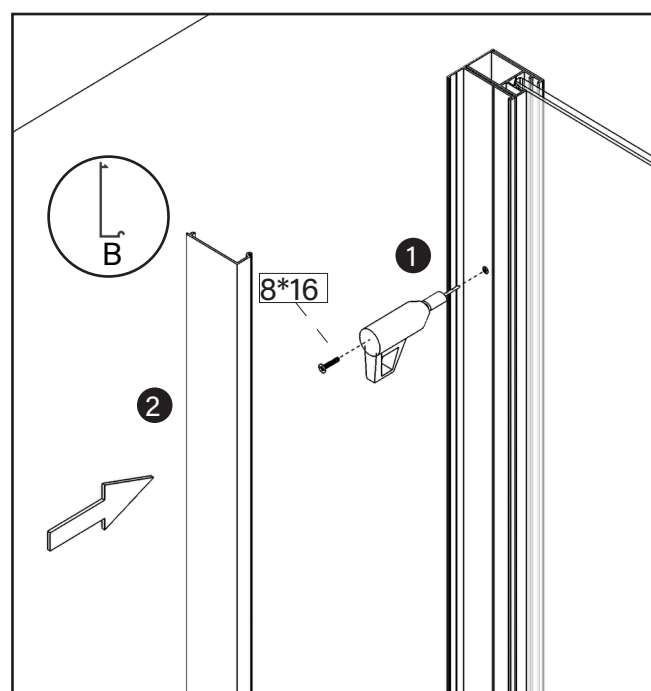


12°PASSAGE

1. Insert the flat gasket between the fixed glass and the aluminium profile (inner side).

You get it rolled up in a baggie!!!

2. Install the end stop on the top and bottom rails. Use the 8x12 screws supplied, otherwise you risk drilling holes in the visible side of the slide rail.

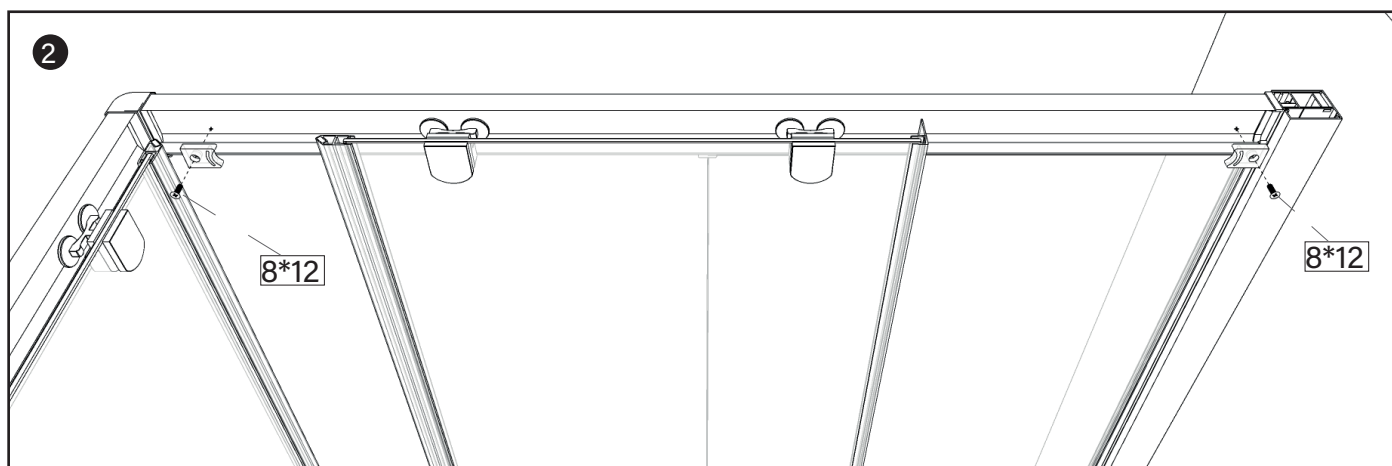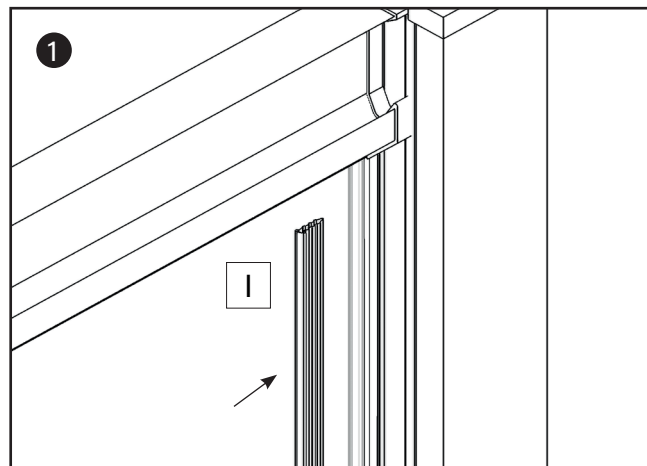

13° PASSAGE

1. Install the handle.(hole on inside)
2. Install the cover caps at the top of the aluminium profiles.
3. Siliconise the outside of the shower enclosure around the perimeter and wait 24 hours.

