

Boston

DESCRIPTION

Shower door with sliding door on track with visible wheels, made of 8mm glass. Reversible installation. Manual adjustment of 2.5 cm total. Chromed aluminium frame, glass with anti-limescale treatment indicated by special labels.







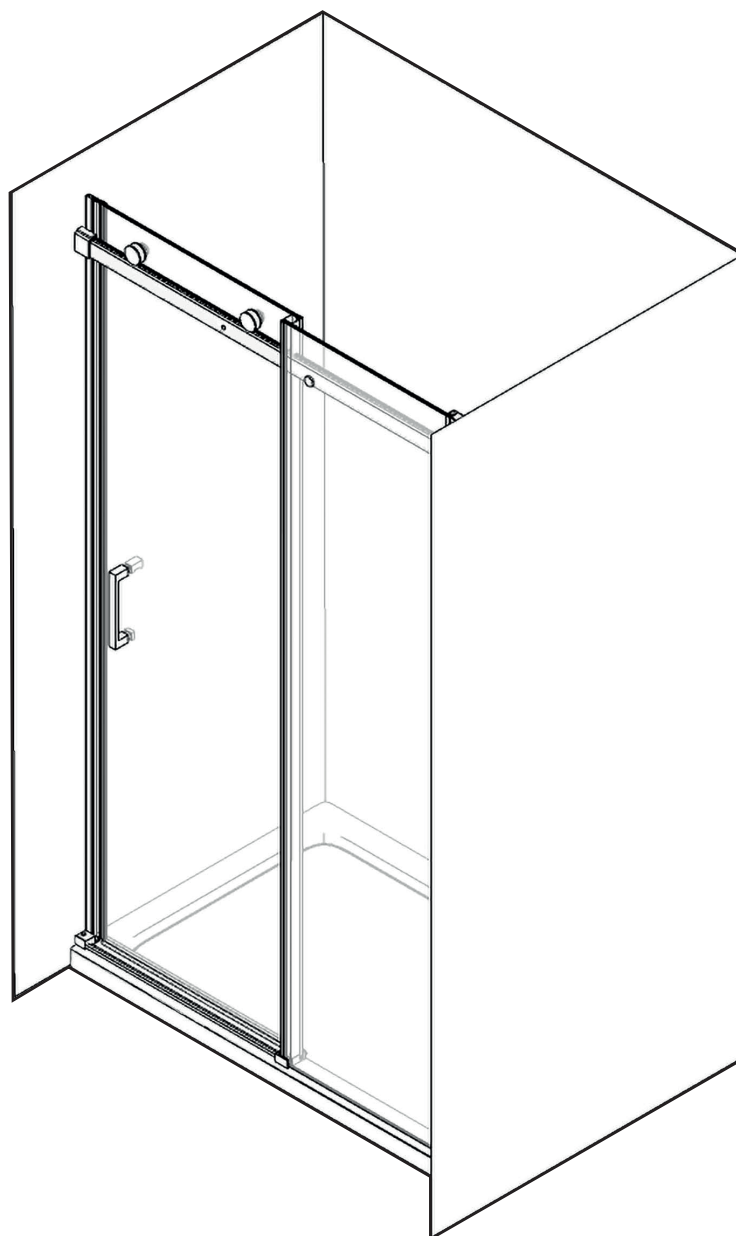



TABLE OF MEASURES

MODEL	MEASURES A
100	980 - 1005
110	1080 - 1105
120	1180 - 1205
130	1280 - 1305
140	1380 - 1405
150	1480 - 1505
160	1580 - 1605
170	1680 - 1705
180	1780 - 1805
190	1880 - 1905
200	1980 - 2005



REVERSIBLE

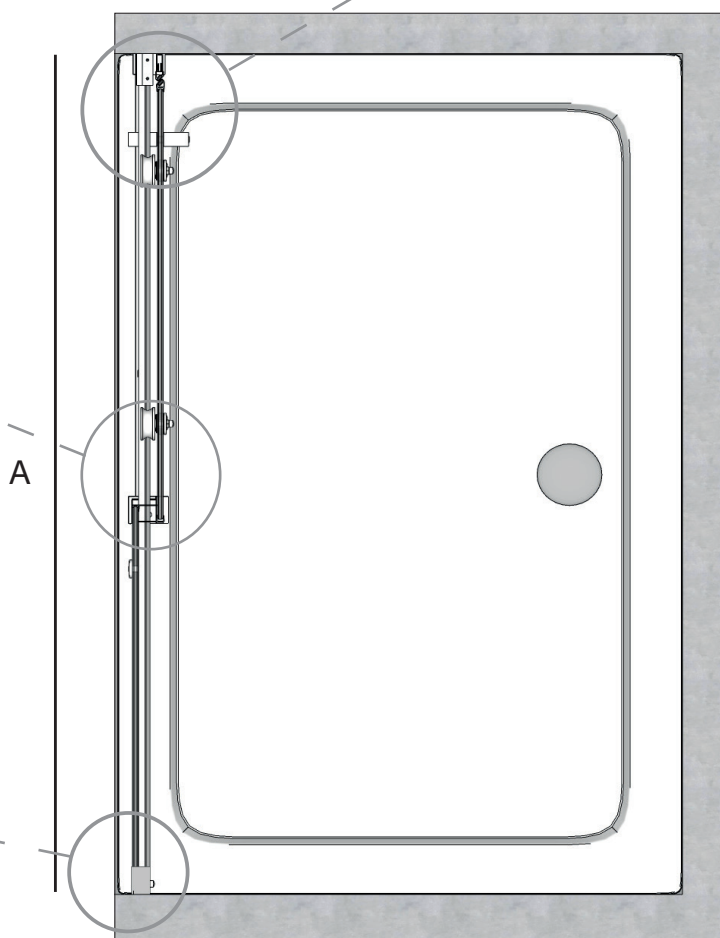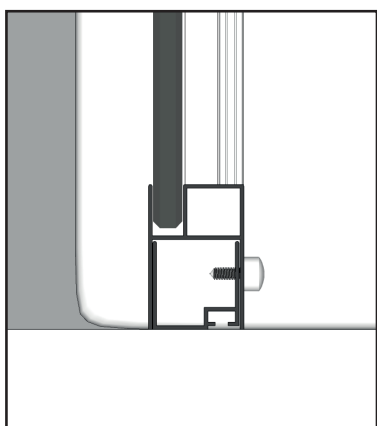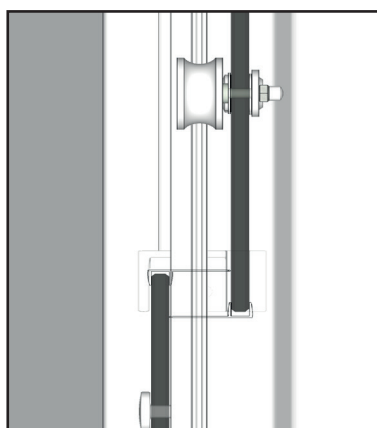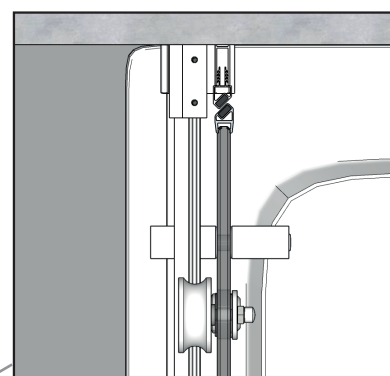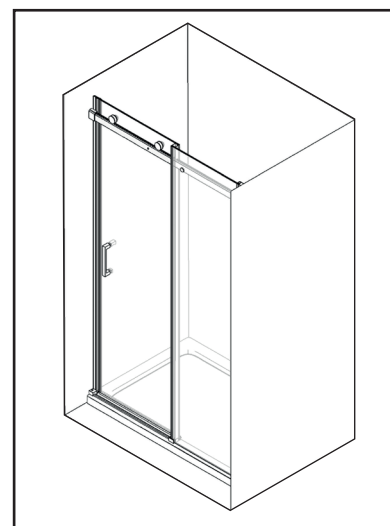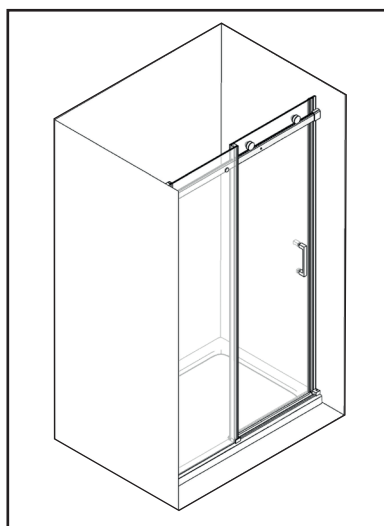

TOOLS REQUIRED

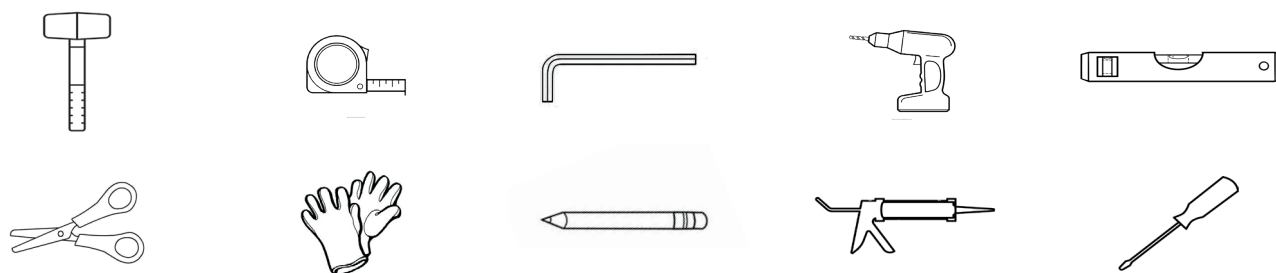

PACKAGE CONTENTS

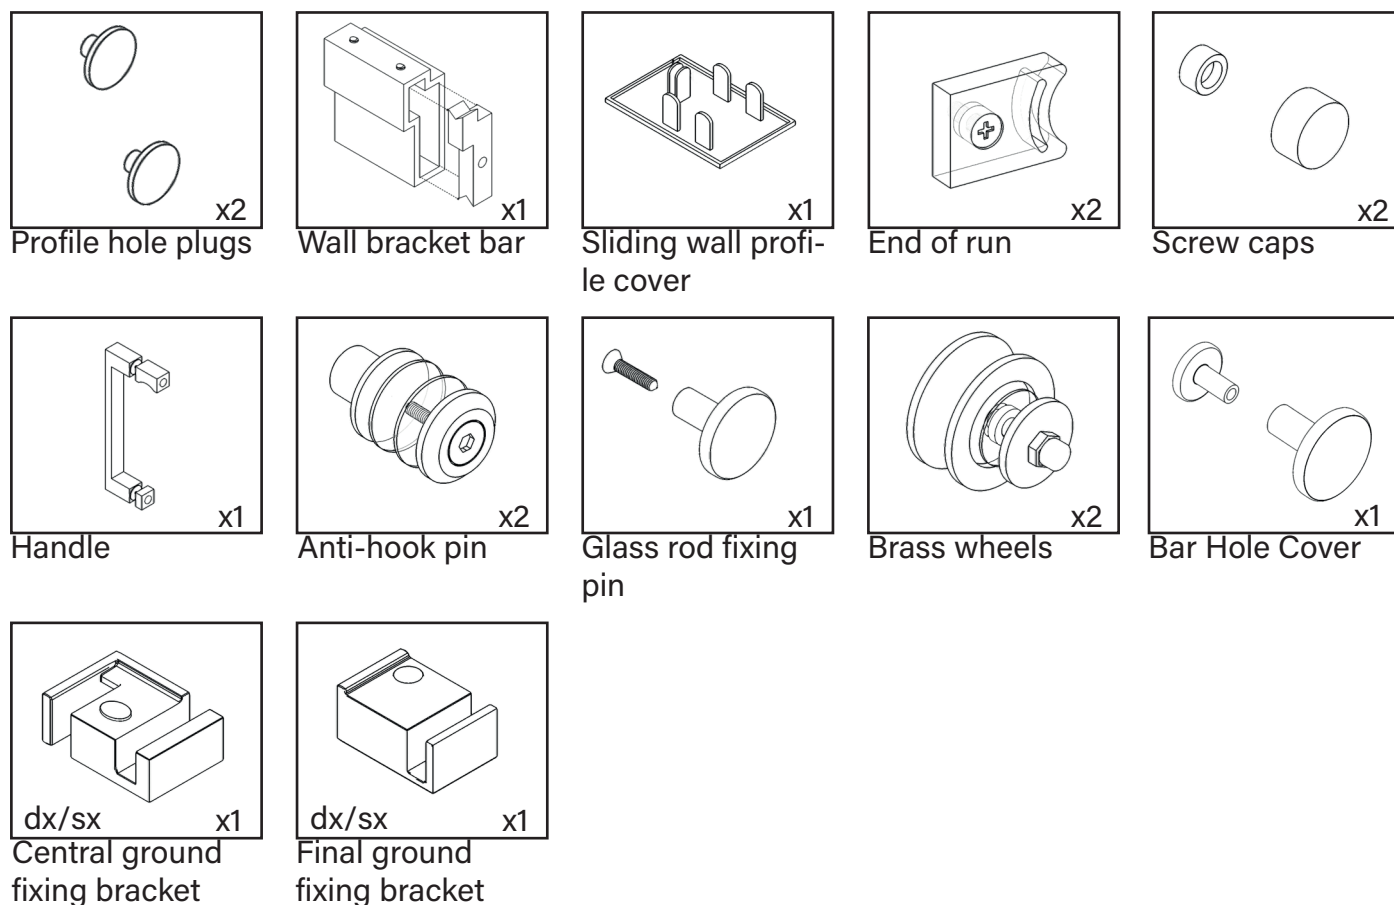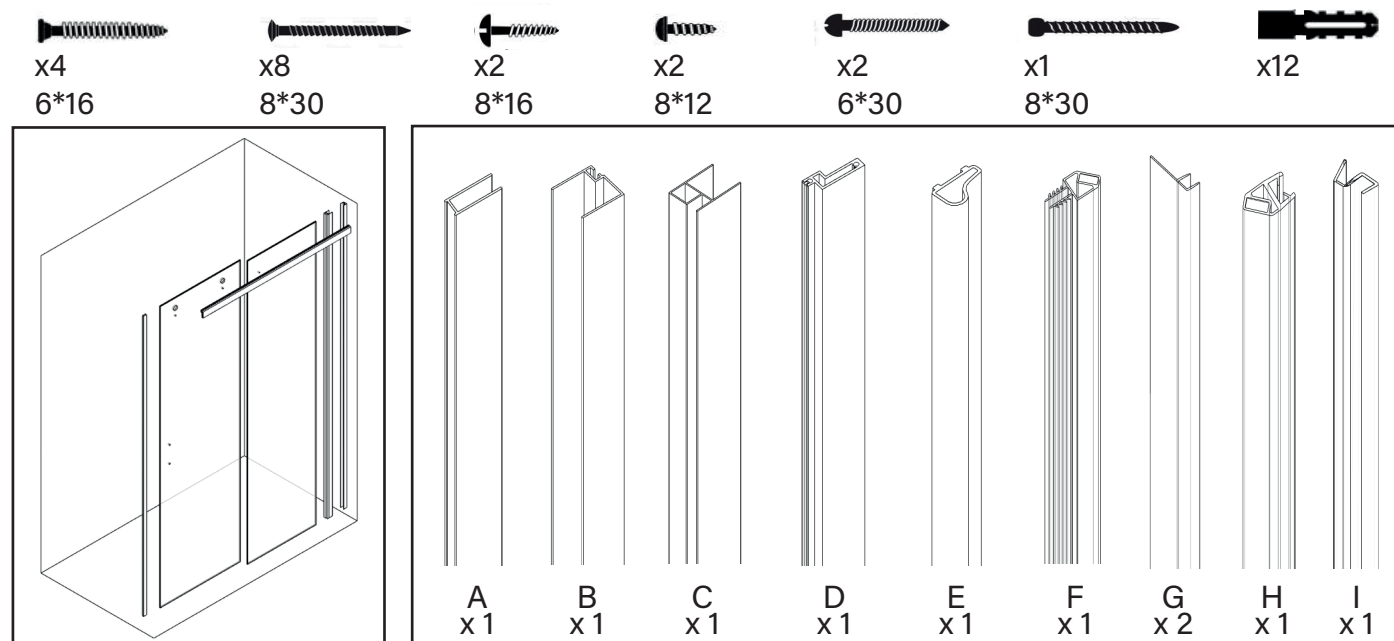





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profile on the wall and use the plumb level .
3. Mark the holes in the wall with a pencil .
4. Drill holes in the wall.
5. Insert the wall plug and screw in the screws to secure the profile.



IMPORTANTE

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1.5 cm for an optimal aesthetic result.

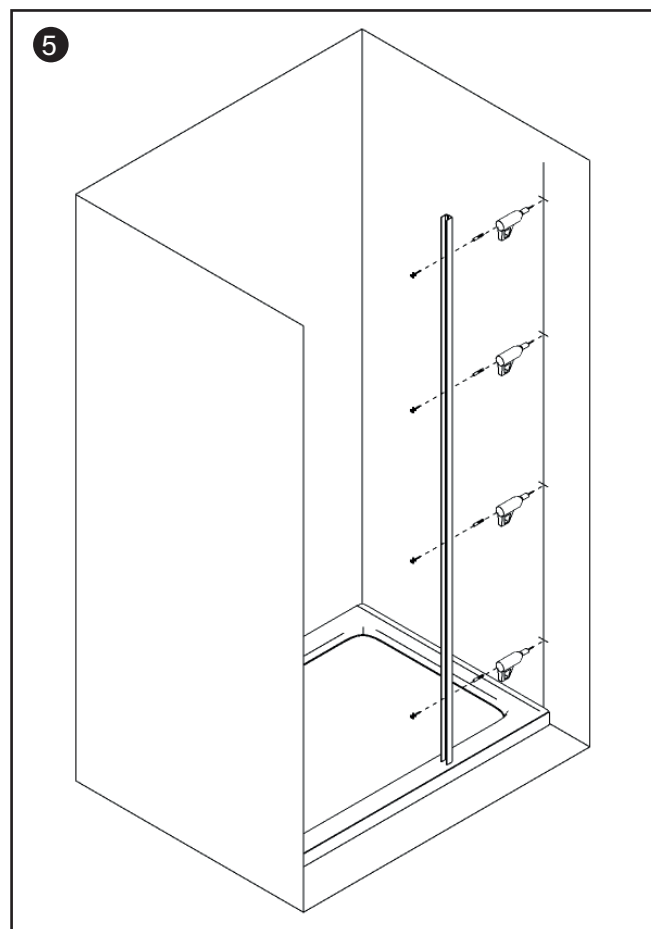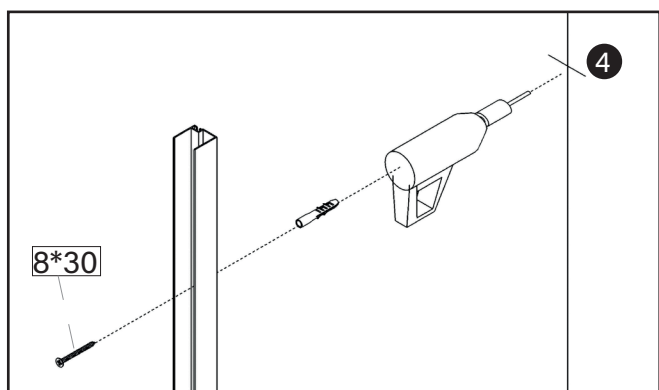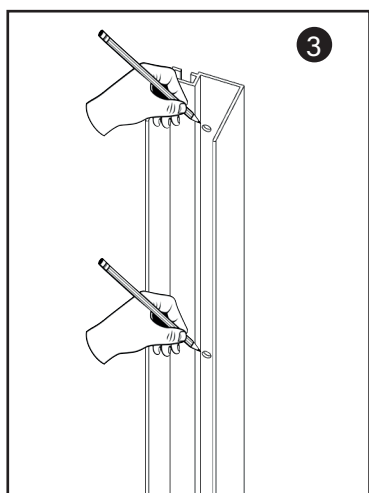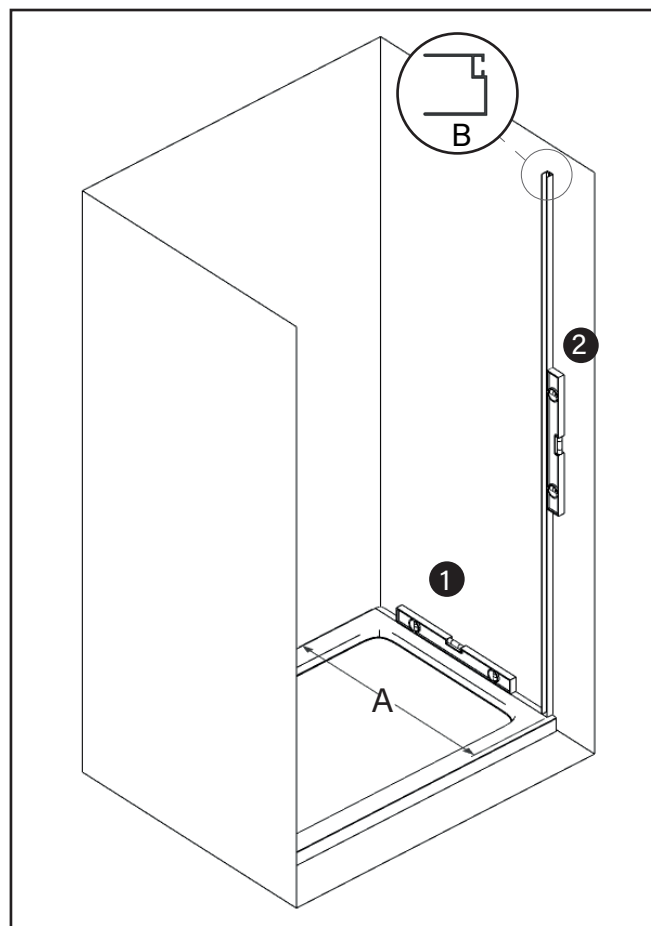

2° PASSAGE



1. Apply neutral silicone to the inside of the fixed glass stop profile as shown in figure 1.
2. Use the 6*30 screws to connect and secure the slide bar with the aluminium profile as shown in figure 2 .
3. Fasten the sliding bar to the fixed glass pane with the glass stop bolt (which we do not recommend doing with a screwdriver).

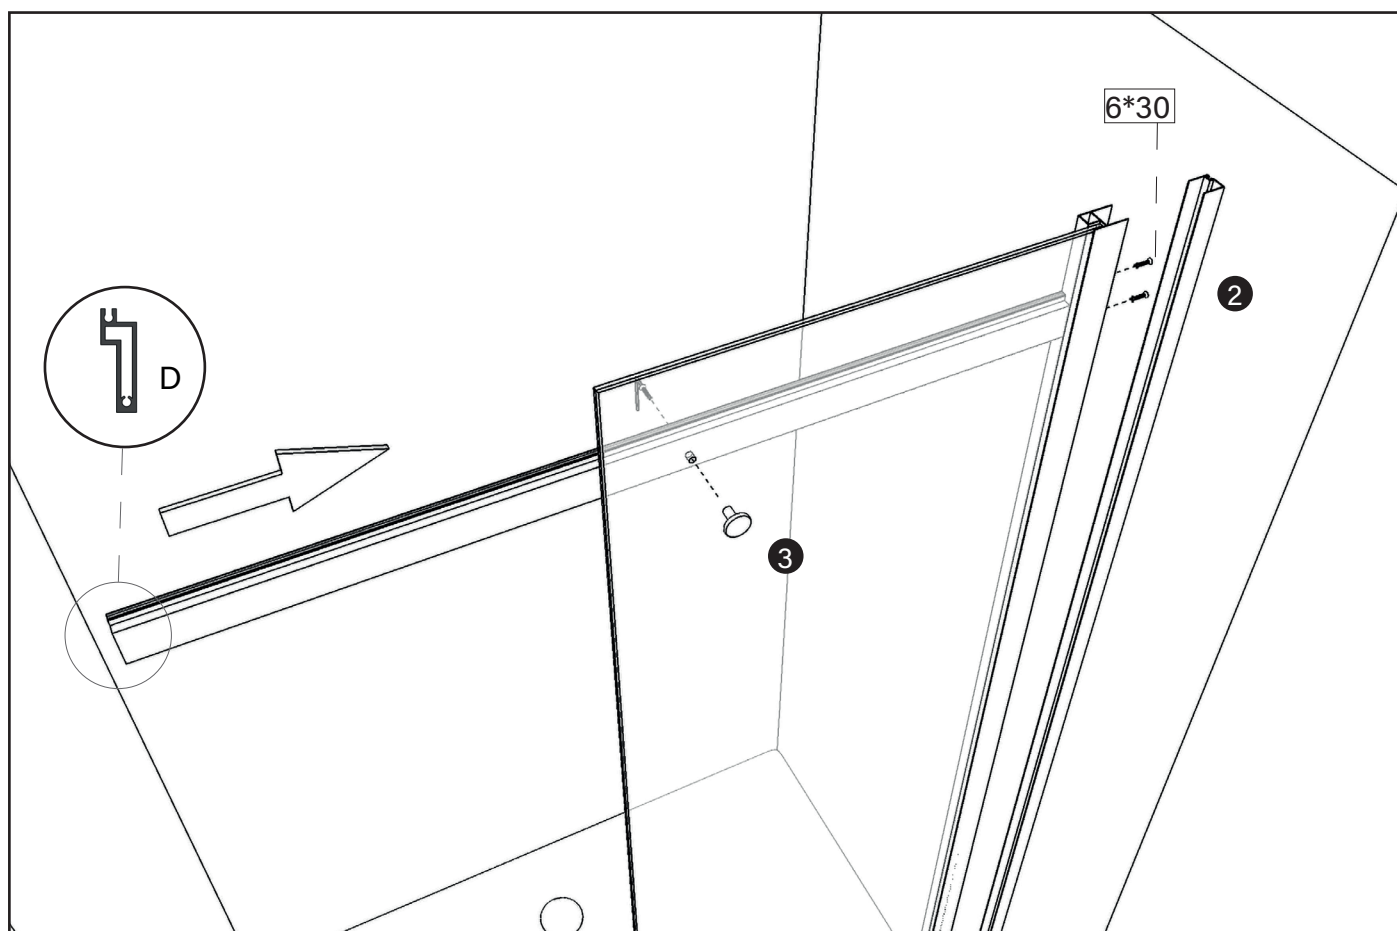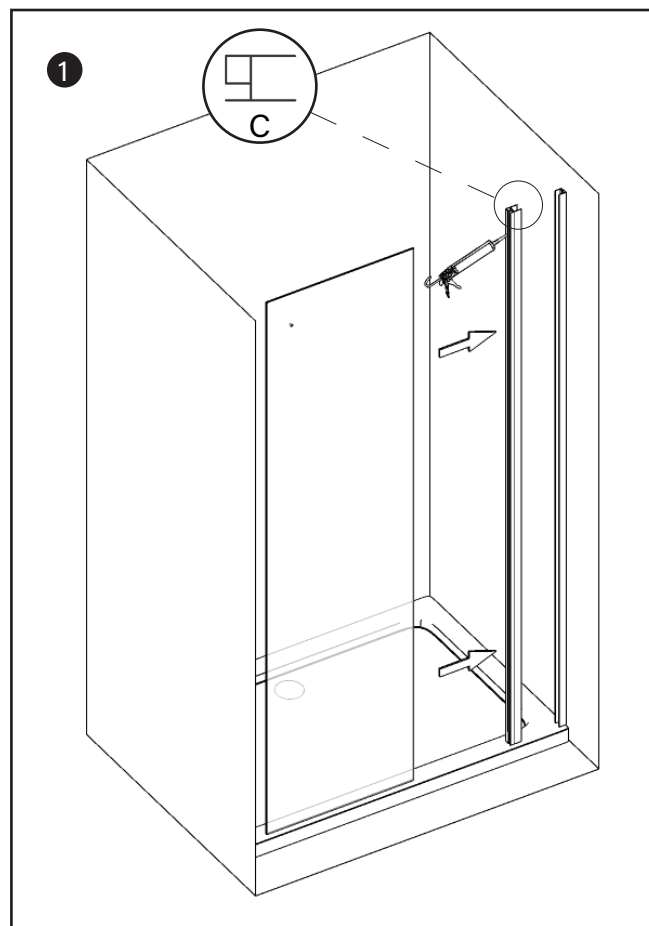

3° PASSAGE




1. Place the wall bracket on the slide bar, preparing it for later fastening.
2. Join the glass previously assembled with the frame to the wall profile .

Note : The wall profile remains inside the glass stop profile.

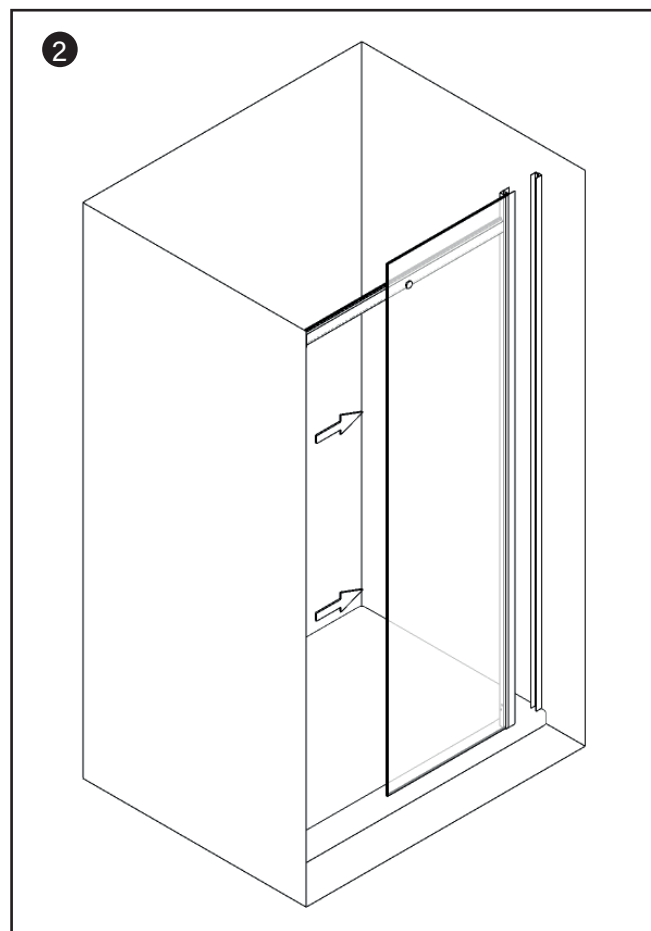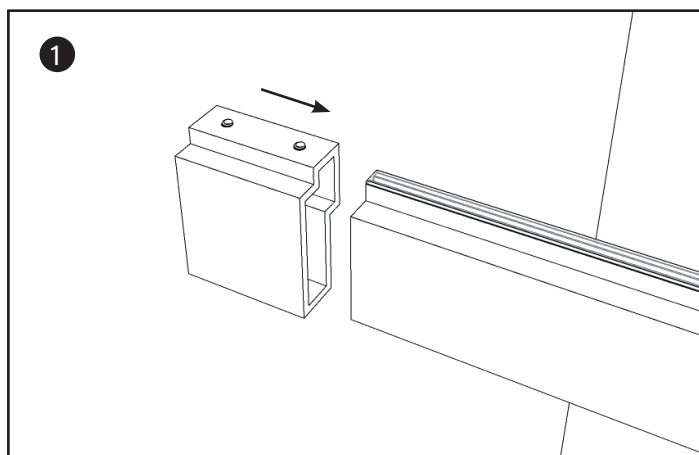

4° PASSAGE

1. Install the wall bracket on the wall by first checking the levelling of the slide bar and mark the holes in the wall with a pencil .
2. Drill the holes in the wall with the drill, insert the wall plug and screw in the screws to secure the bracket.
3. Proceed with the final fastening of the slide bar using the hexagonal Allen screws .

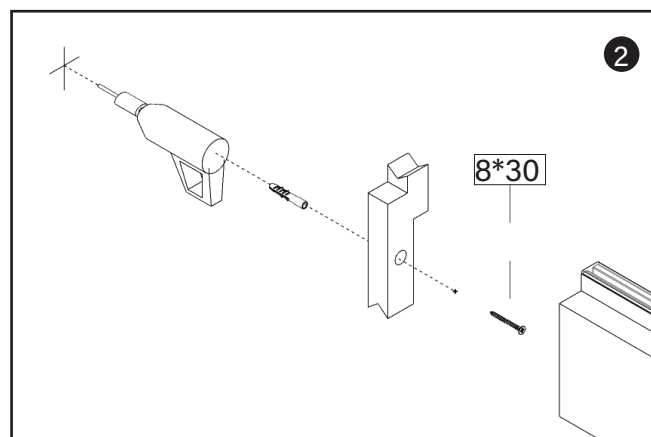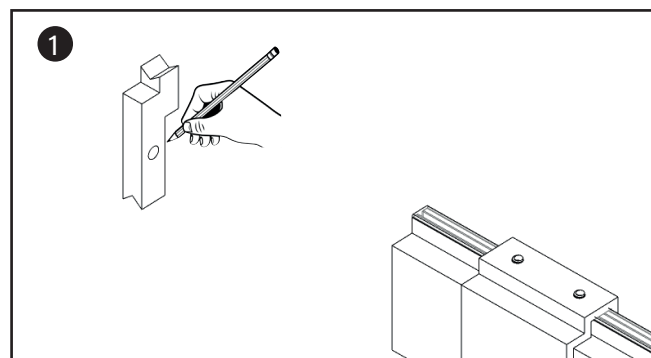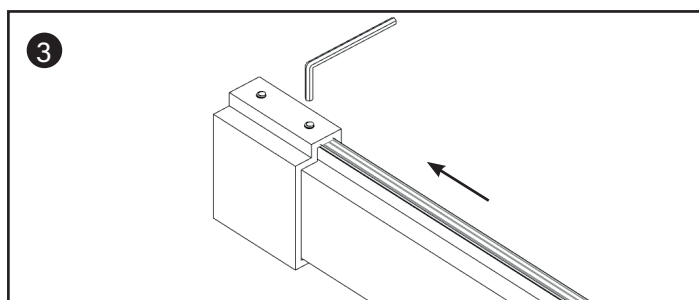

5° PASSAGE



1. Install the sealing gasket on the fixed glass.

Note: the seal must be cut at the slide bar to allow passage and shortened by 20 mm on the underside to allow the subsequent attachment of the lower sealing profile.

2. Install the non-drip sealing profile together with the ground fixing brackets with silicone, as shown.
3. Cover the holes with the appropriate plugs.

Note: The sealing profile can be installed by drilling through the tray with 8*16 screws if the installation is flush with the floor, however, we do not recommend drilling through any shower tray.

The lower sealing profile must in any case be siliconed underneath.



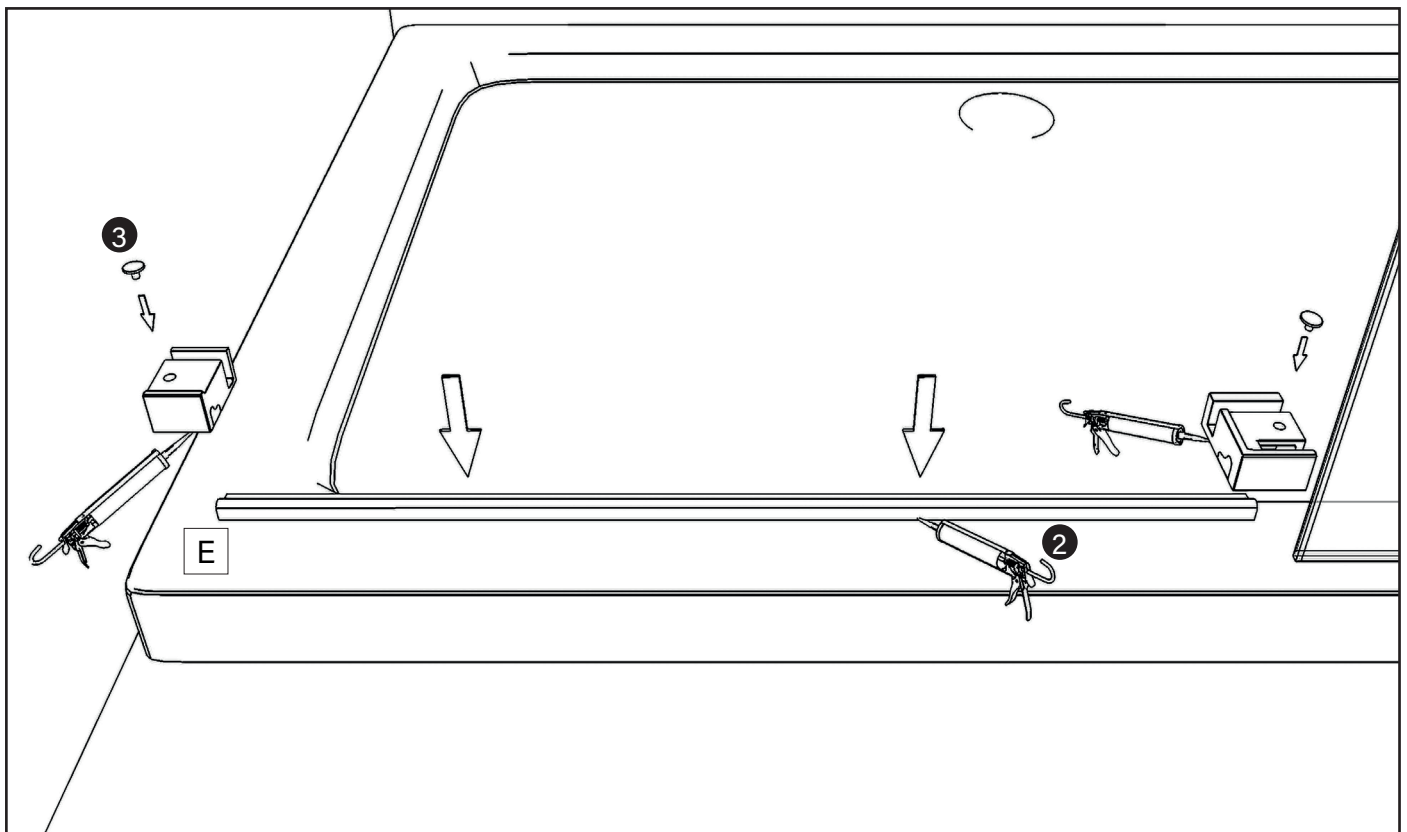
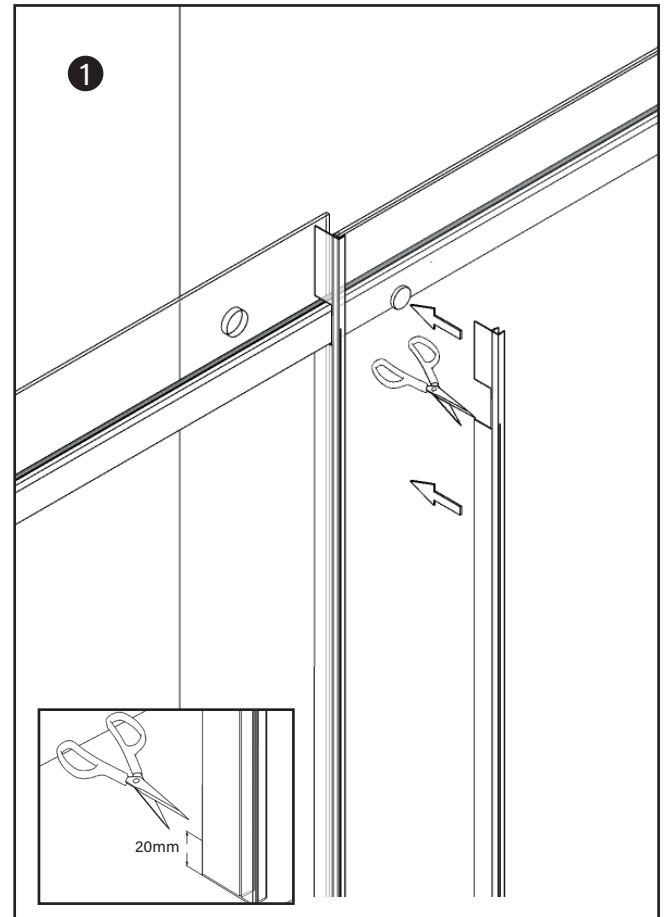


6° PASSAGE

1. Install the sliding carriages on top of the sliding glass.




Note: The upper wheels are adjustable; if the sash does not slide smoothly or if there is too much space left at the bottom, it is possible to adjust and/or lower the sash using the screw that moves the wheel eccentric.

2. Install the sealing gasket on the sliding glass.
3. Insert the lower sealing gasket on the sliding door.

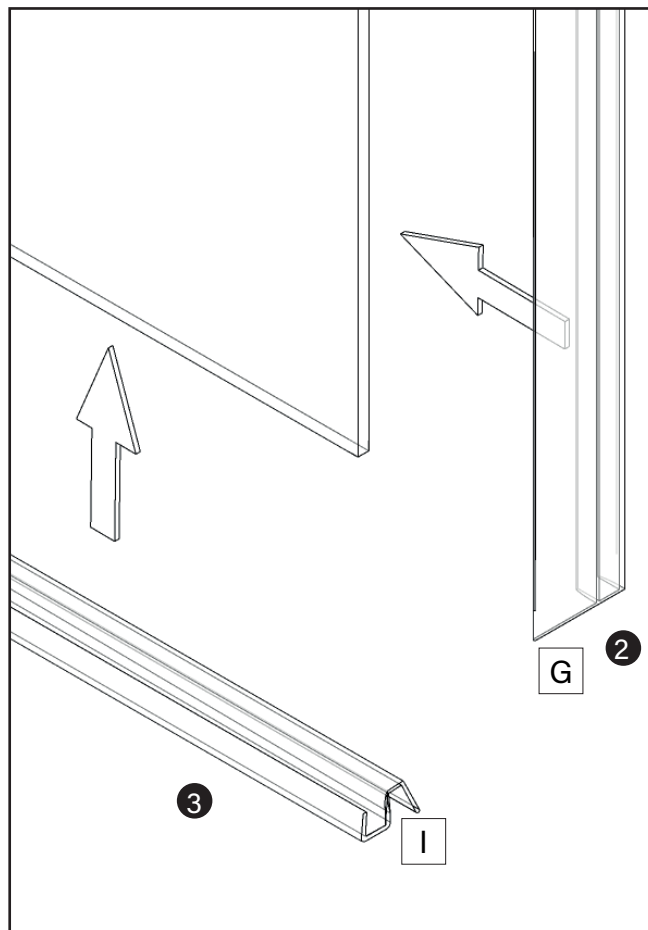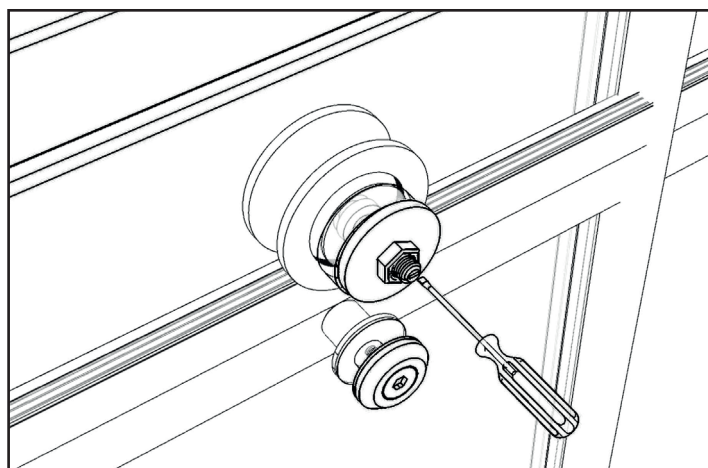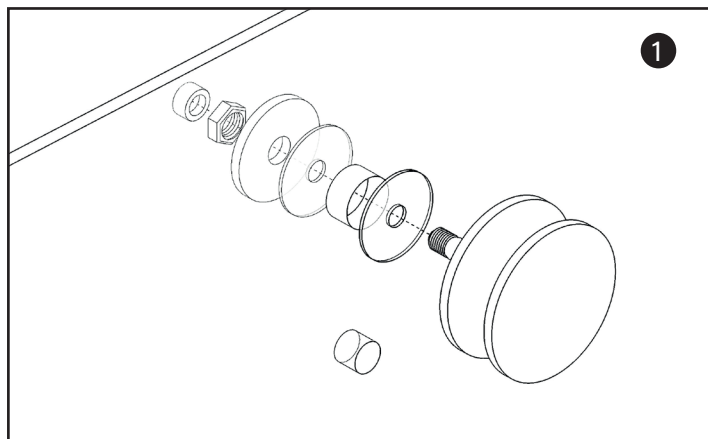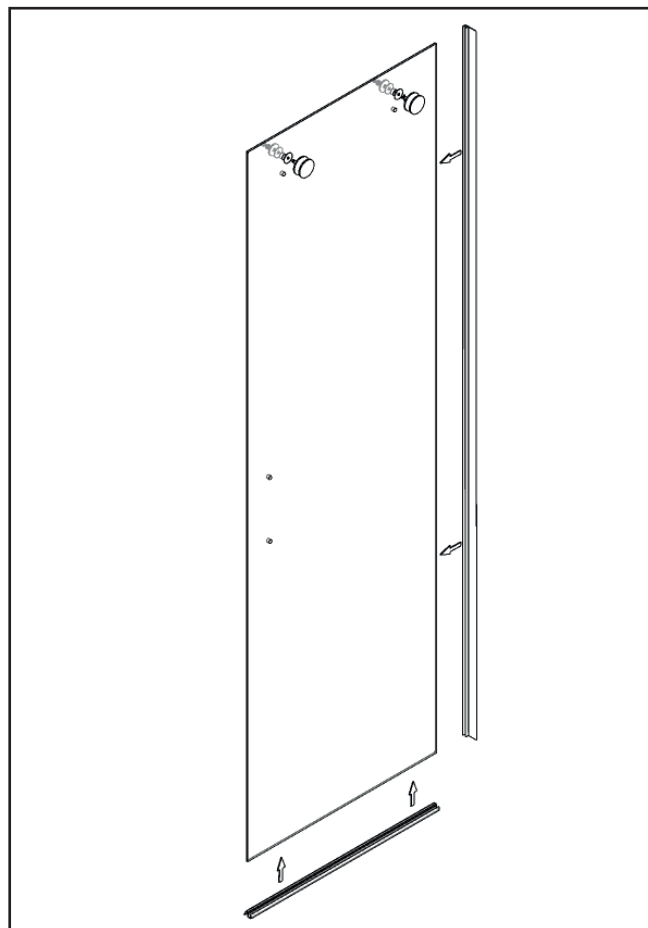

7° PASSAGE



1. Position the sliding door on the slide bar.
2. Install the anti-jamming parts as shown .
3. Install the end stop on the upper slide bar.
4. Install the magnet seal on the sliding door as shown.

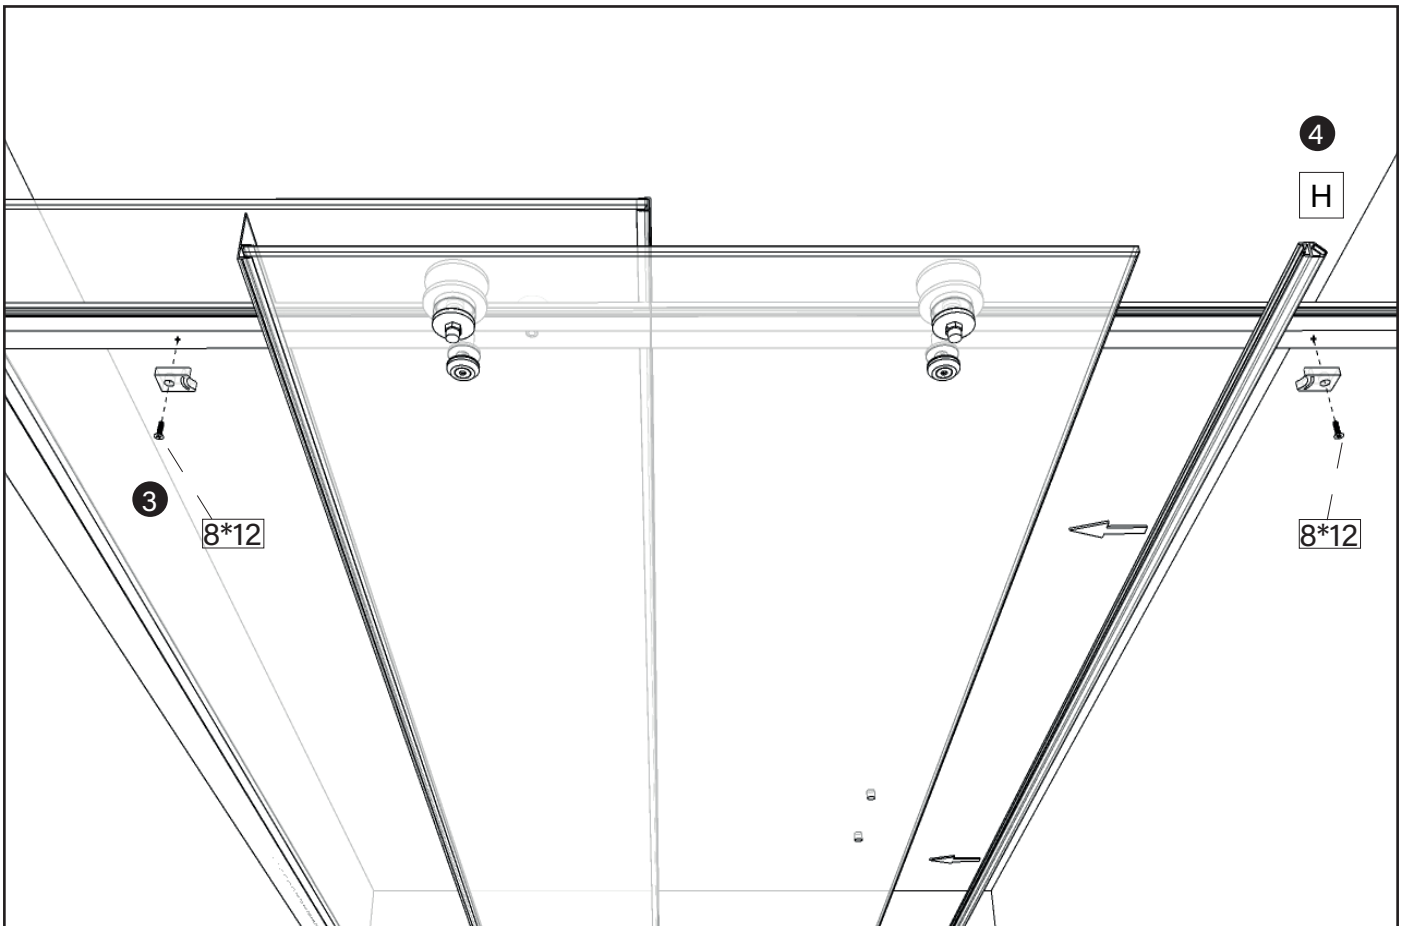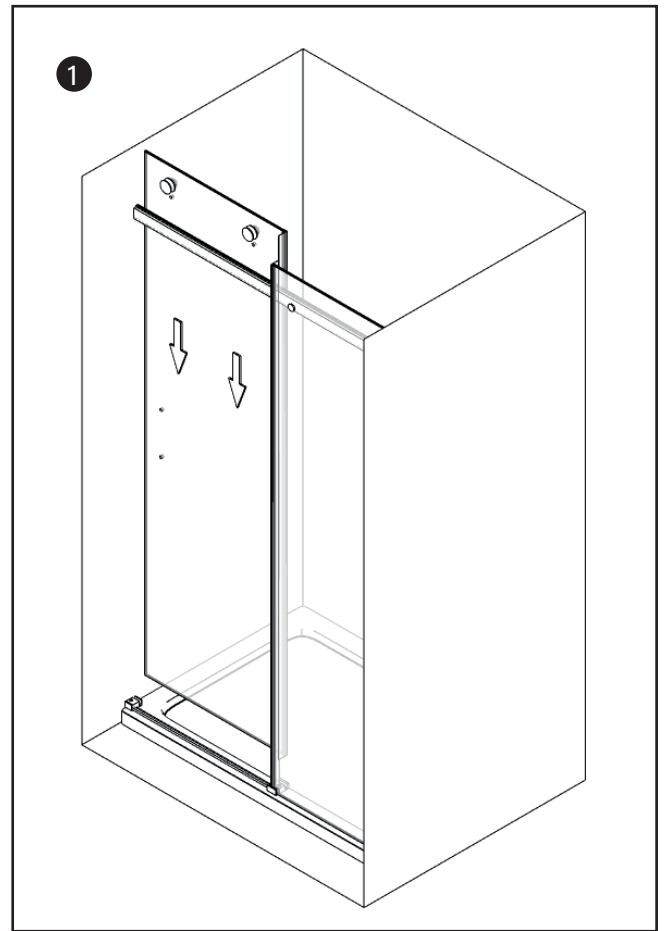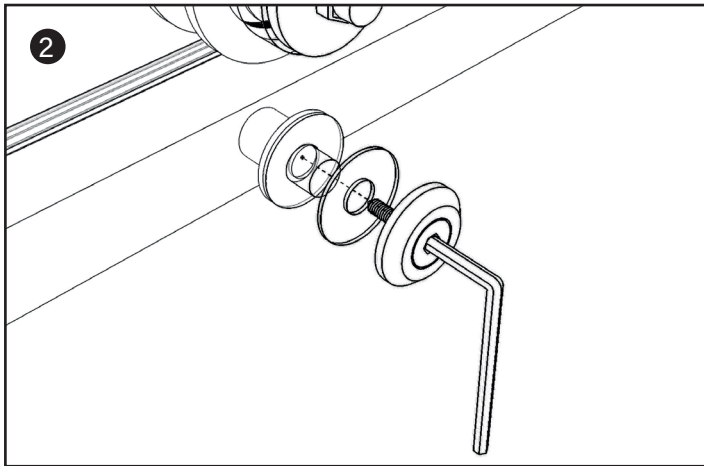

8° PASSAGE


1. As shown in the figure, position the aluminium profile on the wall, check that it is plumb, mark out the holes and proceed with its installation on the wall.

Note: the profile must be positioned above the floor support, not inside.

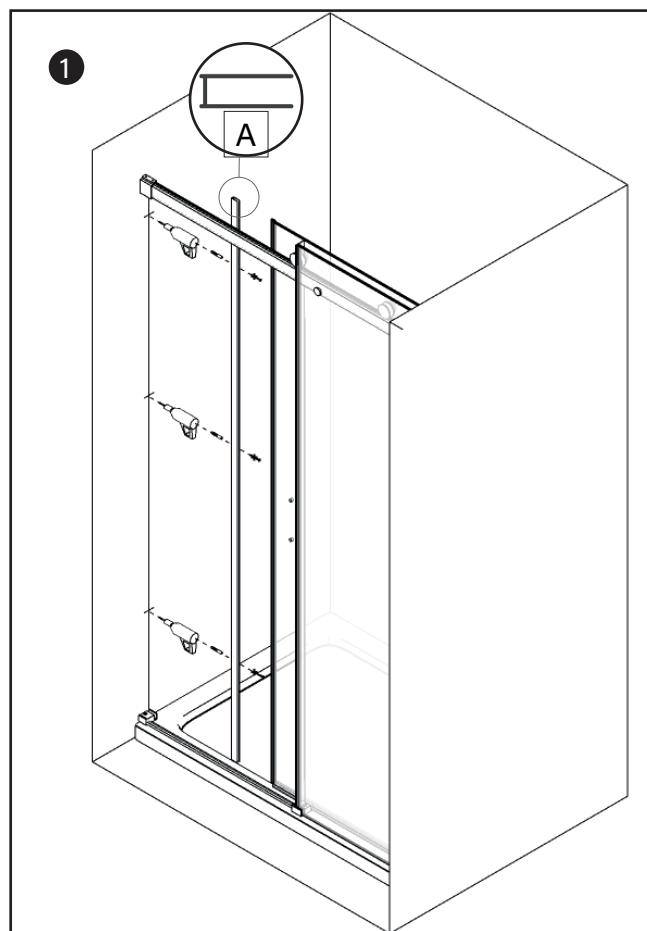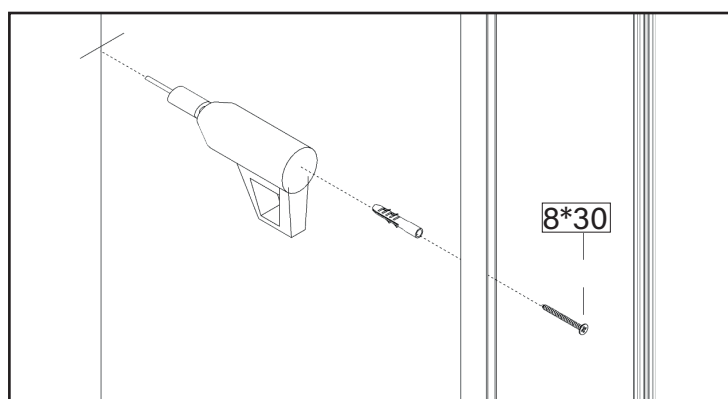

9° PASSAGE

1. Insert the magnetic seal inside the aluminium profile.


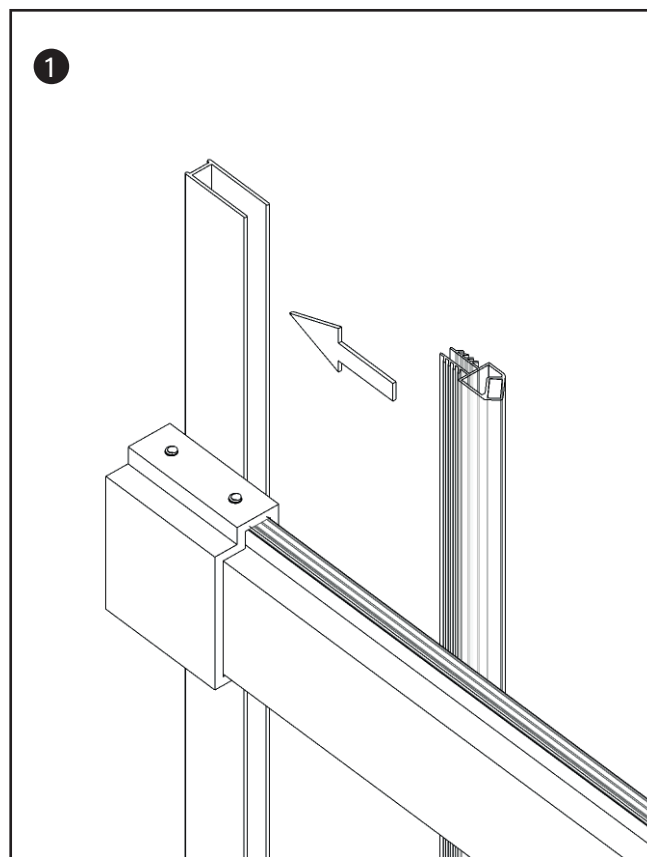


10° PASSAGE

1. Drill holes with the supplied drill and fasten the profile holding the fixed glass together with the wall profile to secure the shower door.


Please note: before drilling the holes, adjust the profile to the required dimensions, max. adjustment 2.5 cm.

2. Cover the screws with screw caps.

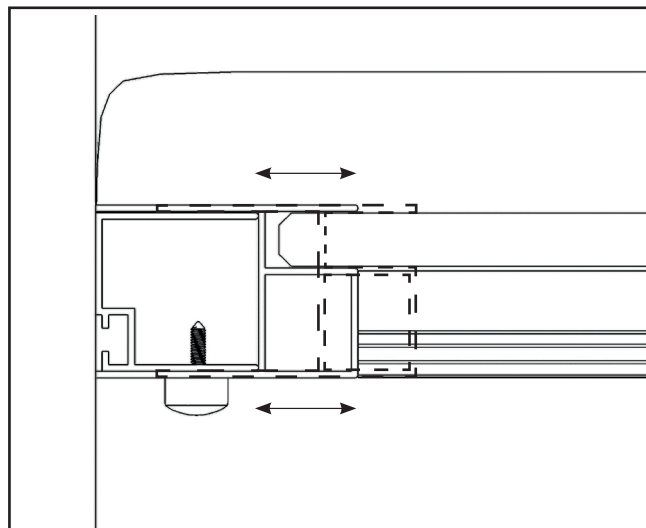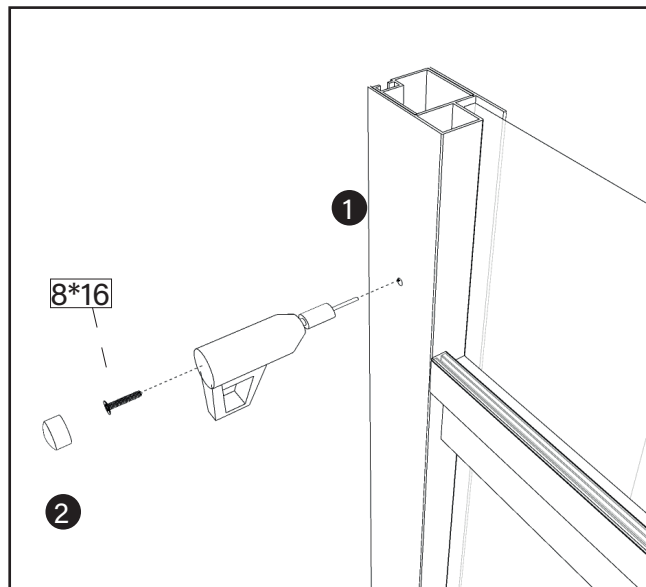

11° PASSAGE

1. Install the handle on the sliding door.

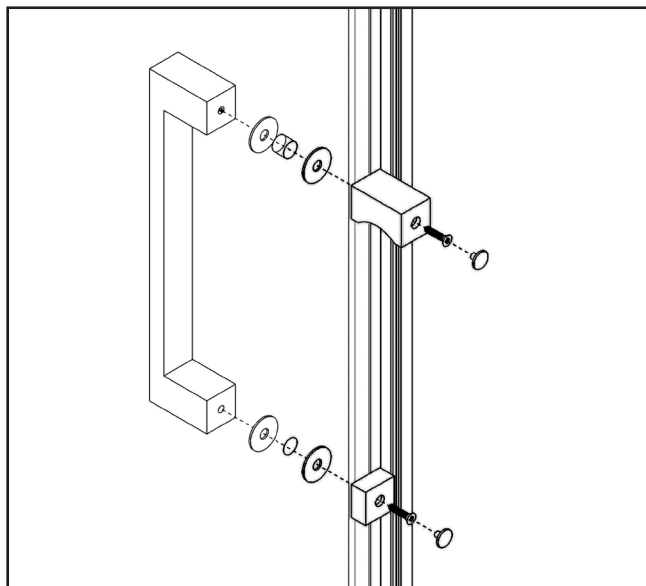

12° PASSAGE

1. Install the decorative cover on top of the wall profiles.
2. Use the appropriate plugs to close the unused hole on the slide bar.
3. Same procedure for the unused low holes of the vertical profile .

The holes are extra to ensure reversibility.

4. Seal with neutral silicone as shown in the picture, we recommend the use of transparent Saratoga Crystal Clear silicone to prevent mould growth.

