

Detroit 2.0

DESCRIPTION

Double-sided shower enclosure with outward-opening hinged door and in-line fixed glass. Made of 6mm glass. Reversible installation provided the door always closes against the fixed side glass. Manual adjustment of wall profiles 1.5 cm per side. Height 190 cm. Chromed aluminium frame, glass with anti-limescale treatment indicated by special labels.


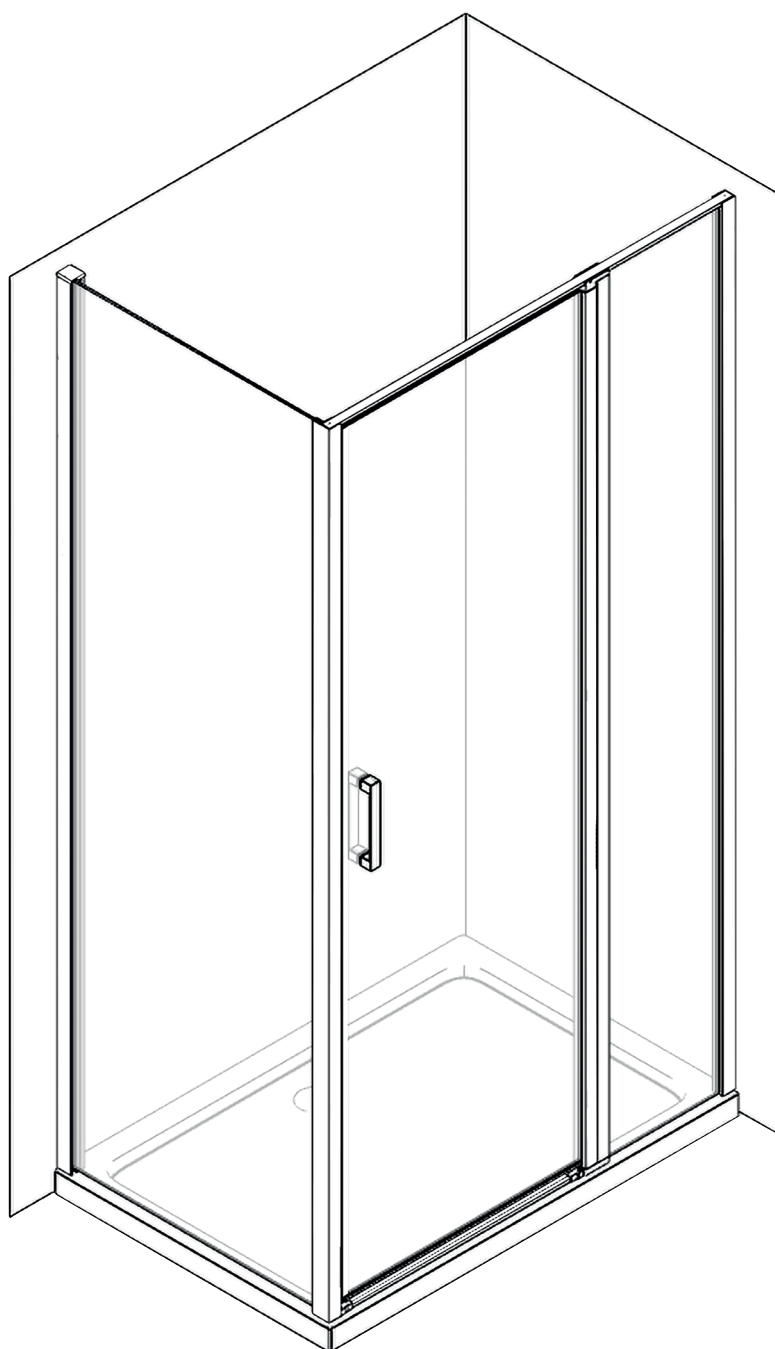


TABLE OF MEASURES

MODEL	MEASURES A
100	975 - 1005
120	1175 - 1205
140	1375 - 1405


FIXED WALL	MEASURES B
65	615 - 640
67,5	640 - 665
70	665 - 690
75	715 - 740
77,5	740 - 765
80	765 - 790
85	840 - 865
90	865 - 890
100	965 - 990

REVERSIBLE




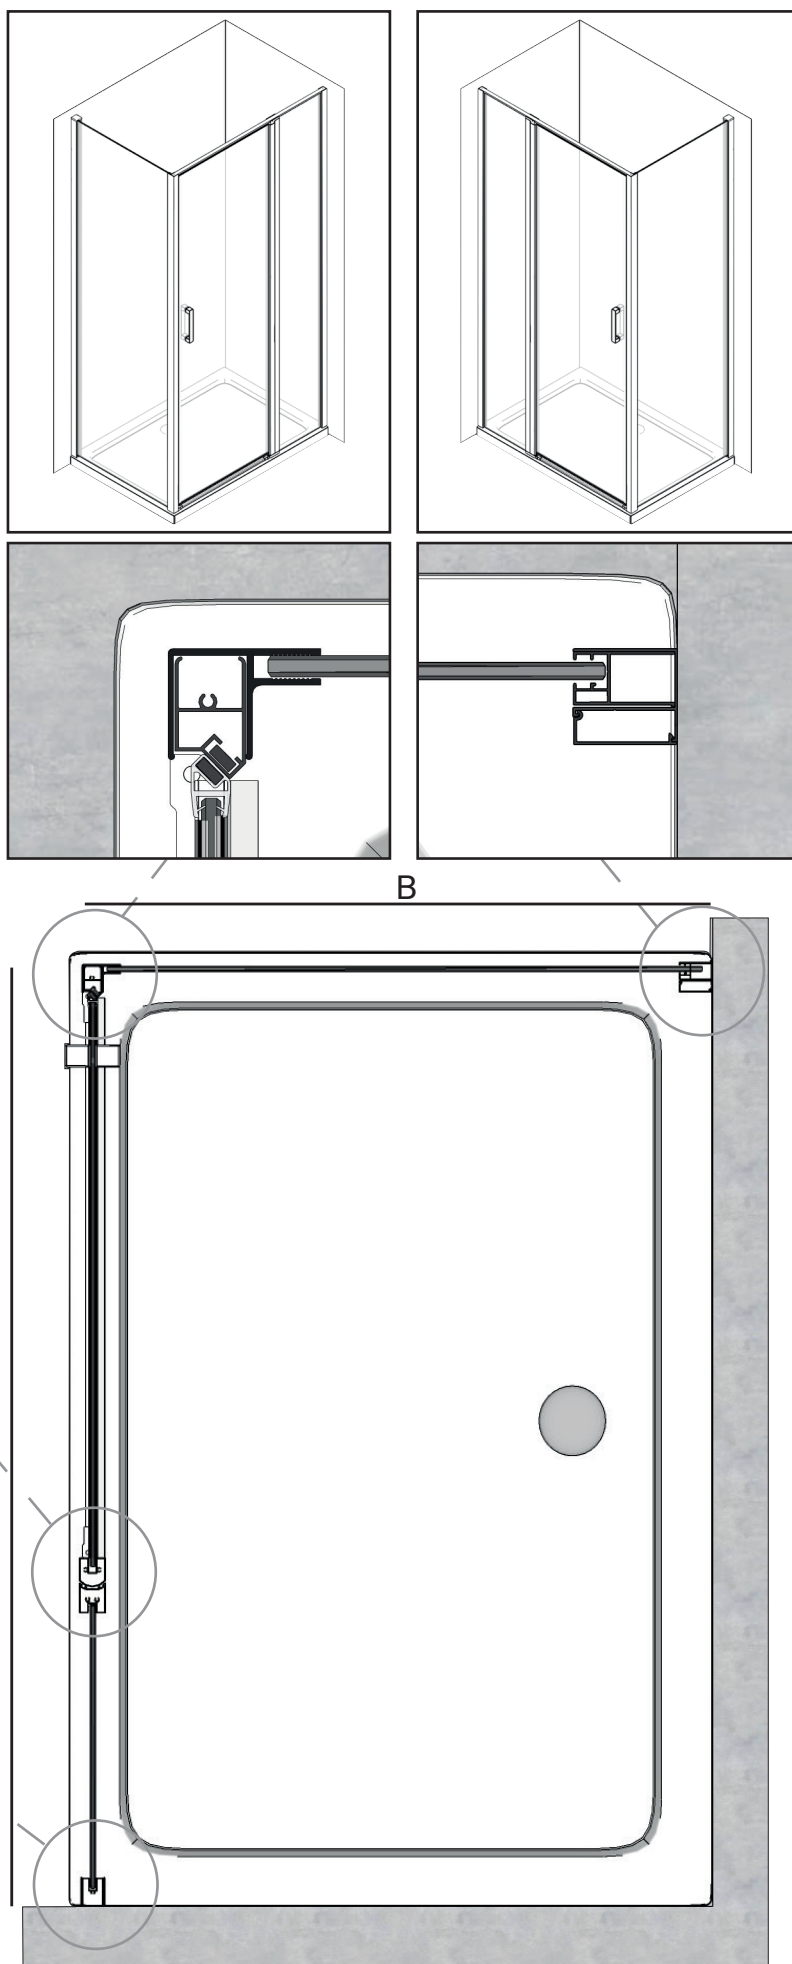


DETROIT 2.0


TOOLS REQUIRED

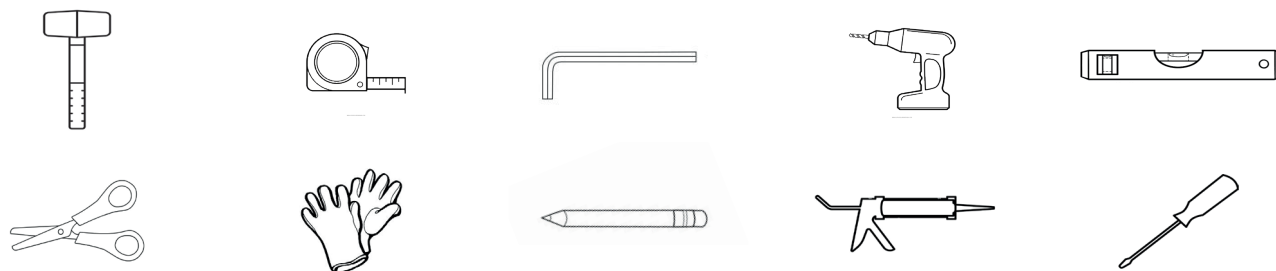


PACKAGE CONTENT (product shipped in two packages)

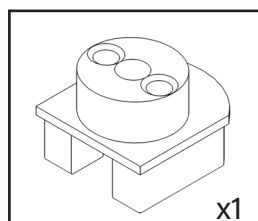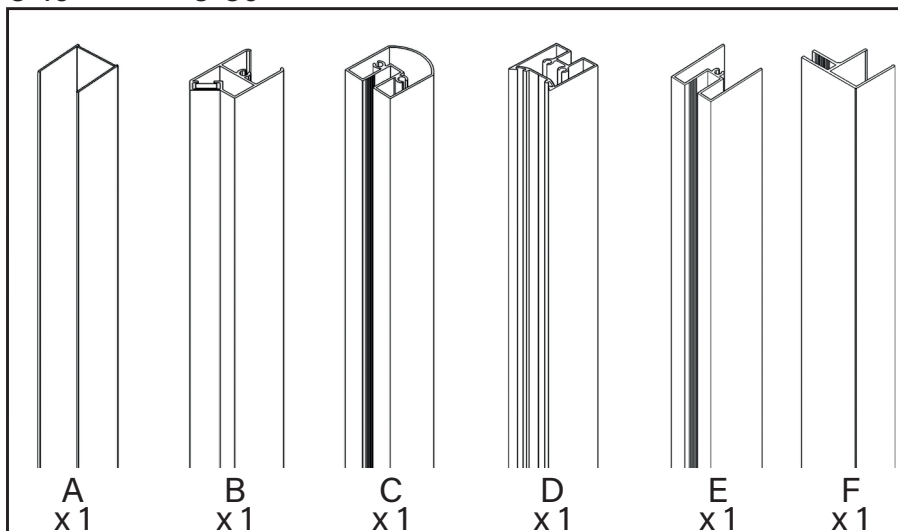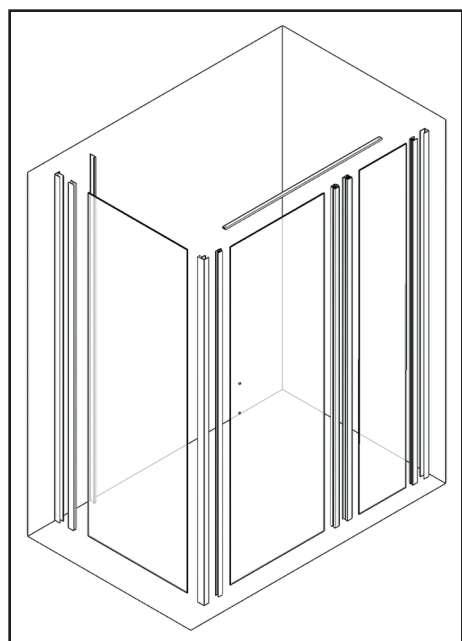


Upper rotating support x1

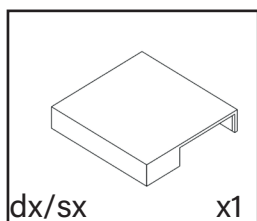



dx/sx Top cover wall profile x1

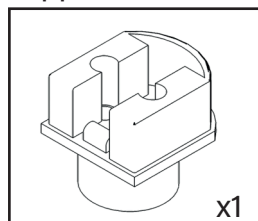


Lower rotating support x1

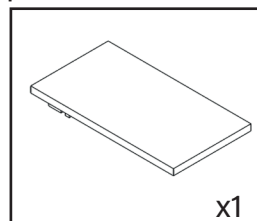


Upper fixed glass cover x1

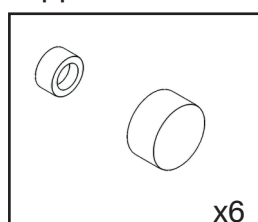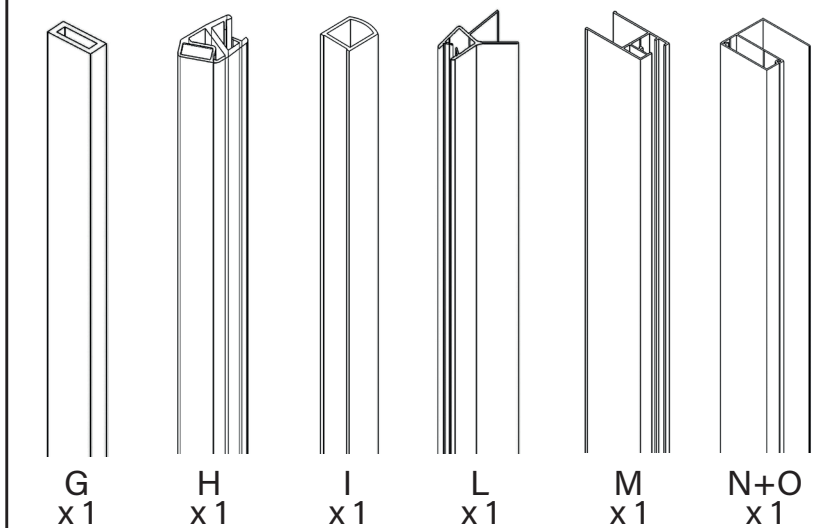


Screw caps x6

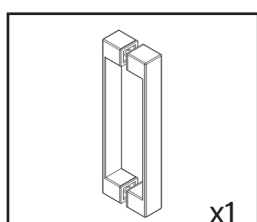


Handle x1

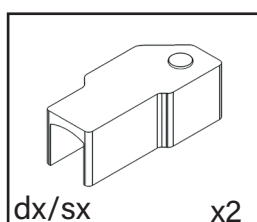

dx/sx Ground fixing bracket x2

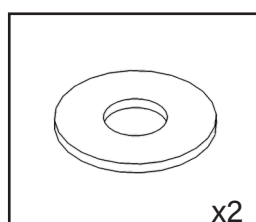

Washer x2

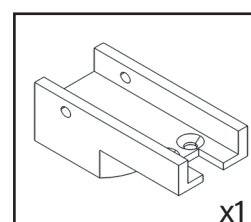

Profile connector x1





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profile on the wall and use the plumb level .
3. Mark the holes in the wall with a pencil .
4. Drill holes in the wall.
5. Insert the wall plug and screw in the screws to secure the profile.
6. Repeat the steps for the other profile.


IMPORTANT

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimum aesthetic and functional result.

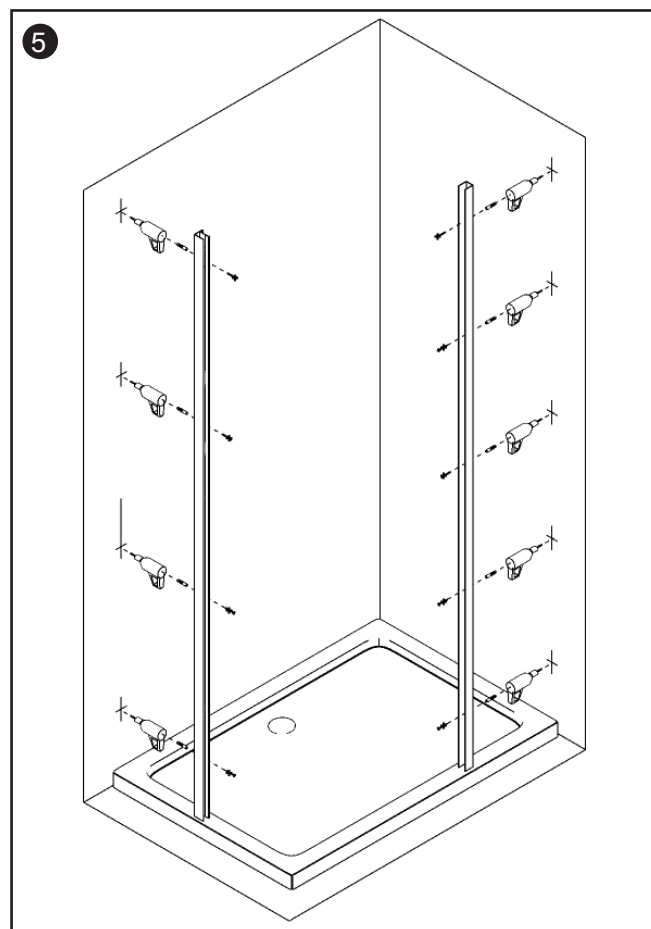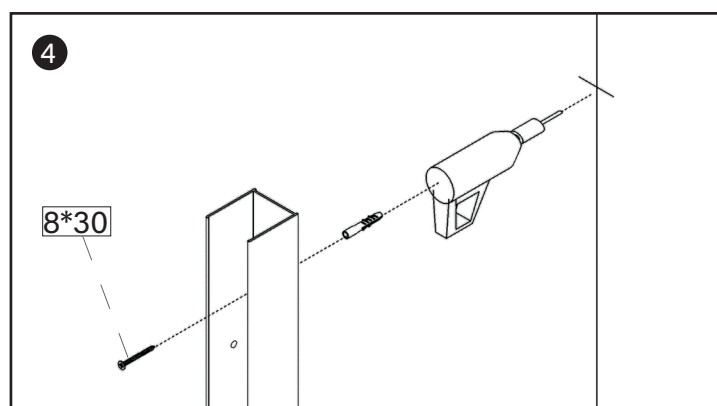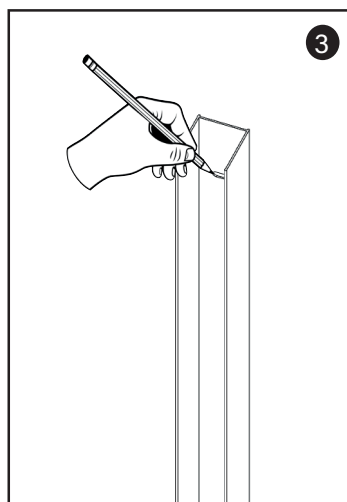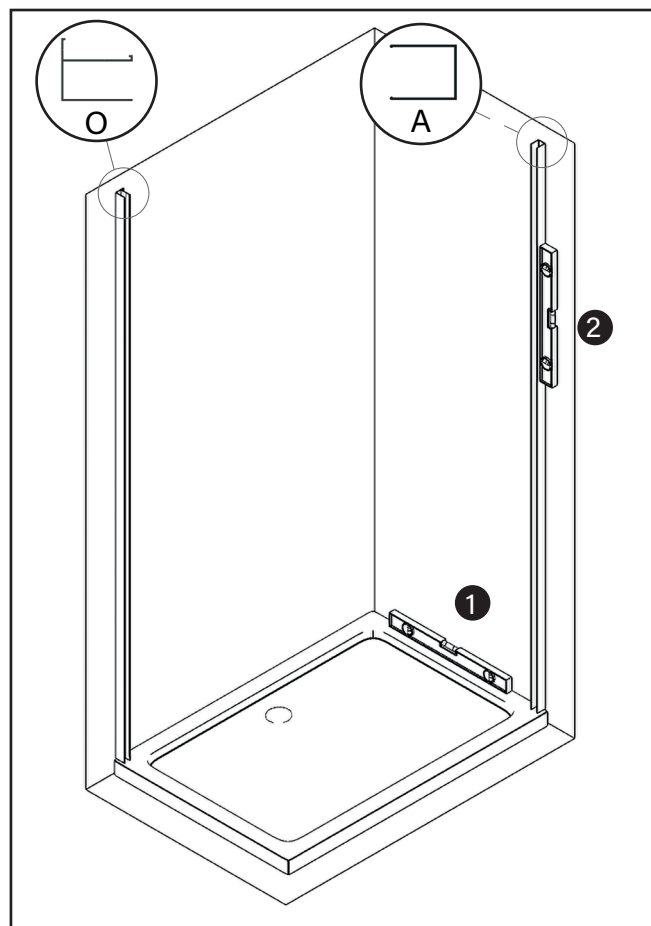


2° PASSAGE

1. Insert the fixed glass on the door side into the wall profile.

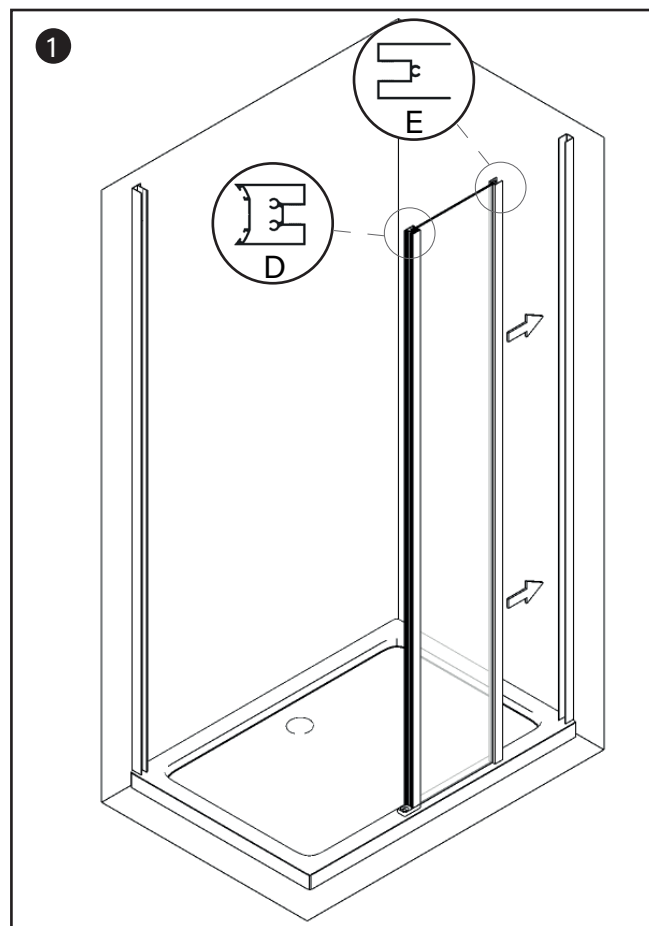**3° PASSAGE**

1. Apply silicone in the groove of the angle profile.
2. Insert the fixed glass inside the corner profile.

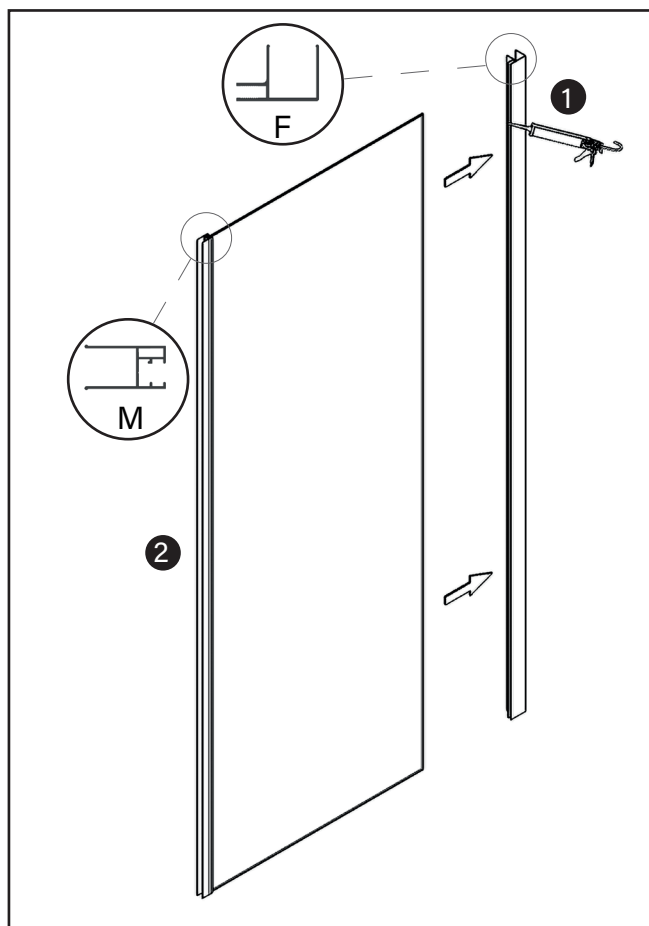


4° PASSAGE

1. Install the fixed wall.

IMPORTANT:


For correct installation, we recommend removing the wall profile from the wall, inserting it on the fixed glass wall and then placing it on the plate; you will fix the wall profile later.

NOTE: *nothing goes under the fixed slab, it must be placed and siliconed from the outside.*

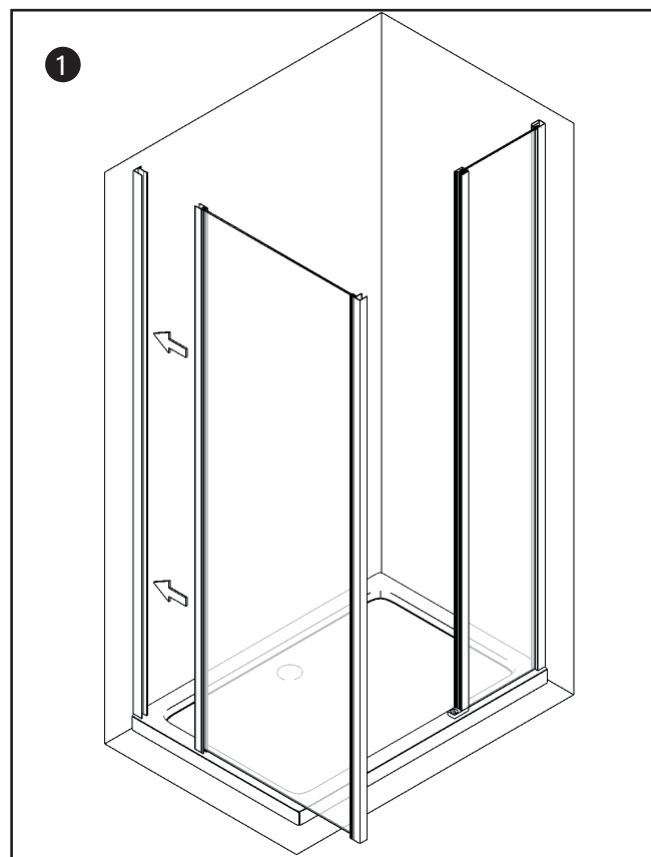


5° PASSAGE

1. Insert the magnet profile into the wall profile on the closing side of the door.

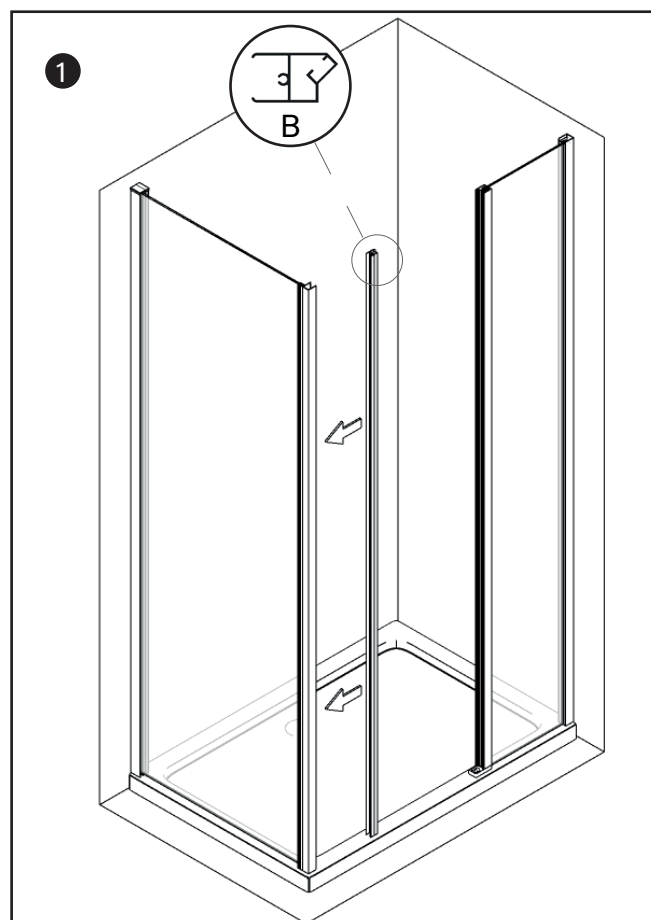



6° PASSAGE

1. Insert the lower rotating support as shown.

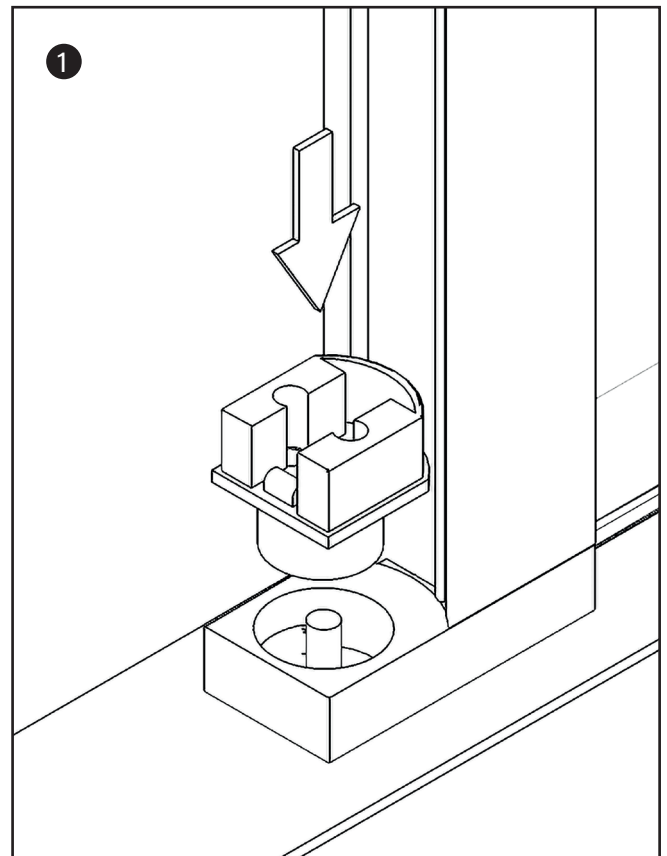

7° PASSAGE

1. Install the hinged door, paying attention to the arrows indicating the upper direction of the glass.

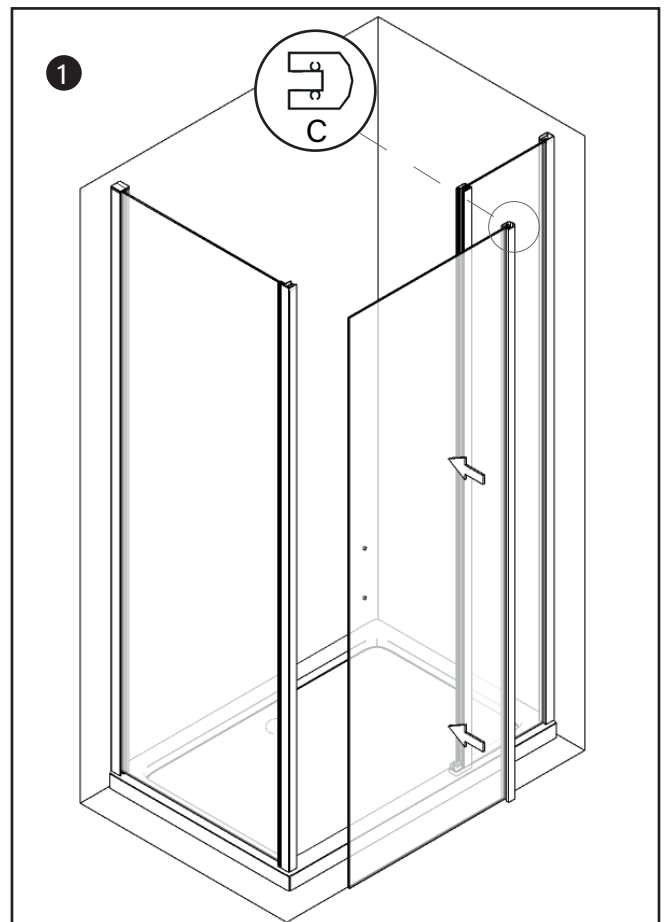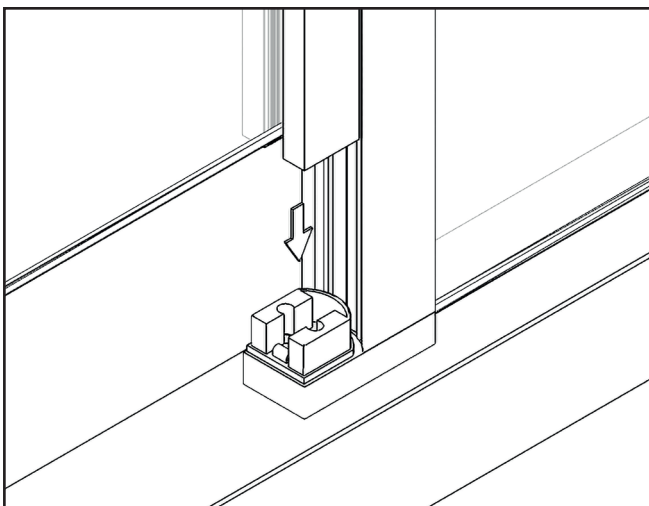


8° PASSAGE

1. Screw the fixed glass and the door together using the appropriate connector.

ATTENTION



the upper sealing bar does not act as an adjuster but has a precise seat and must be installed tip to tip between the two sashes. Adjustment is done via the wall profiles.

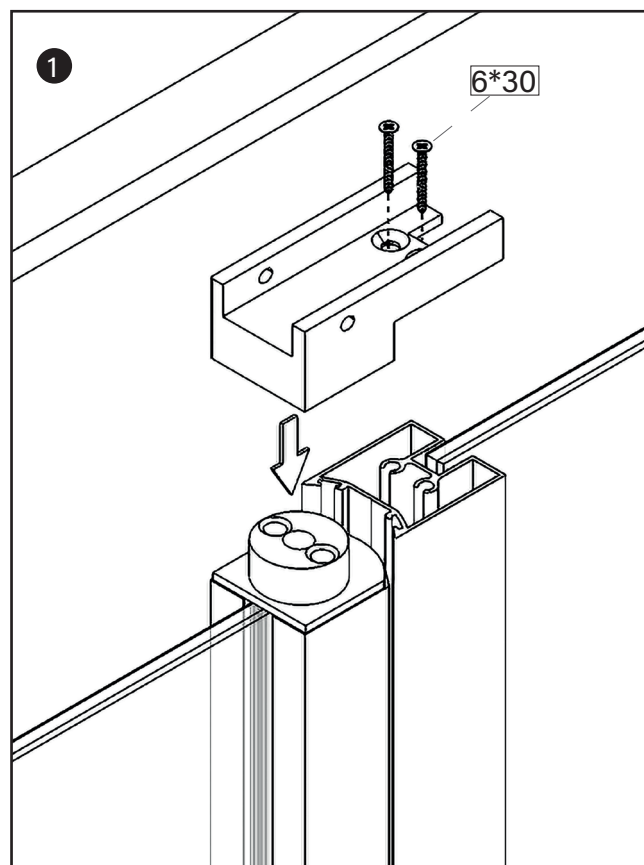**9° PASSAGE**

1. Install the support bar with screws and washer.




ATTENTION

the upper sealing bar does not act as an adjuster but has a precise seat and must be installed tip to tip between the two sashes. Adjustment is done via the wall profiles.

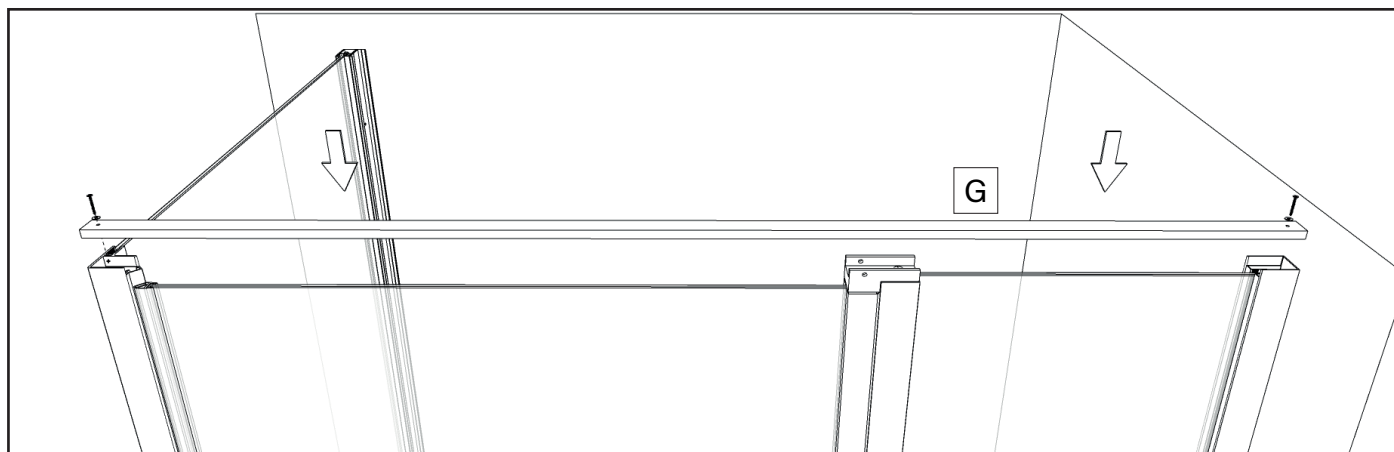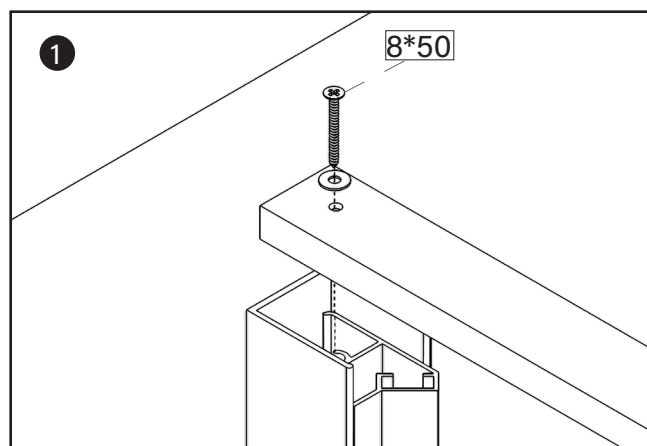

10° PASSAGE


1. Proceed with fastening the upper support bar as shown.
2. Install the magnetic closure gasket in the glass without cutting it, using the full height, starting from the bottom; if too long, trim from the top.
3. Install the lower sealing gasket in the glass, shaping it so that it does not interfere with the magnet seal, safeguarding the fin so that it gives the correct water seal.

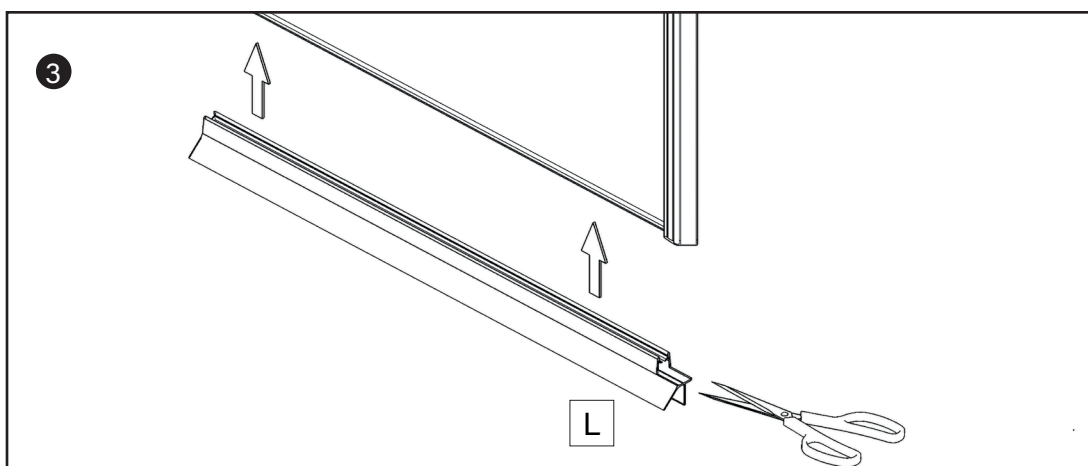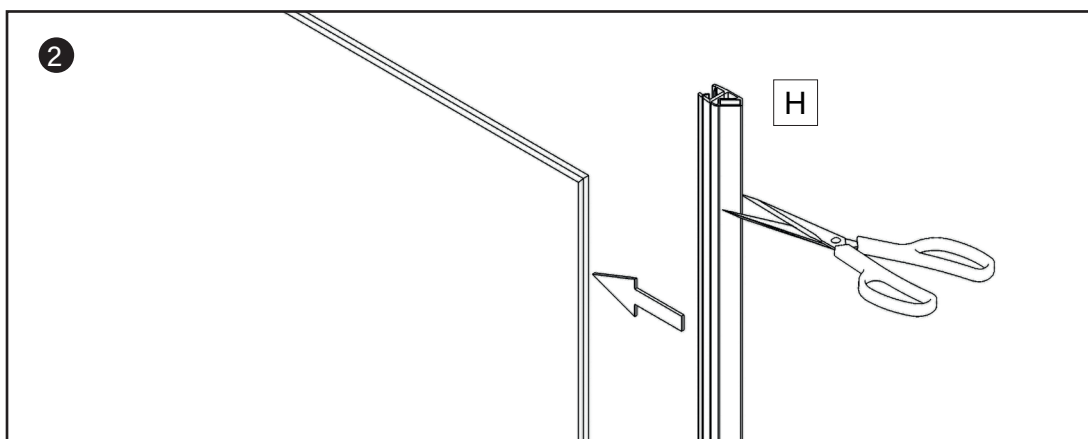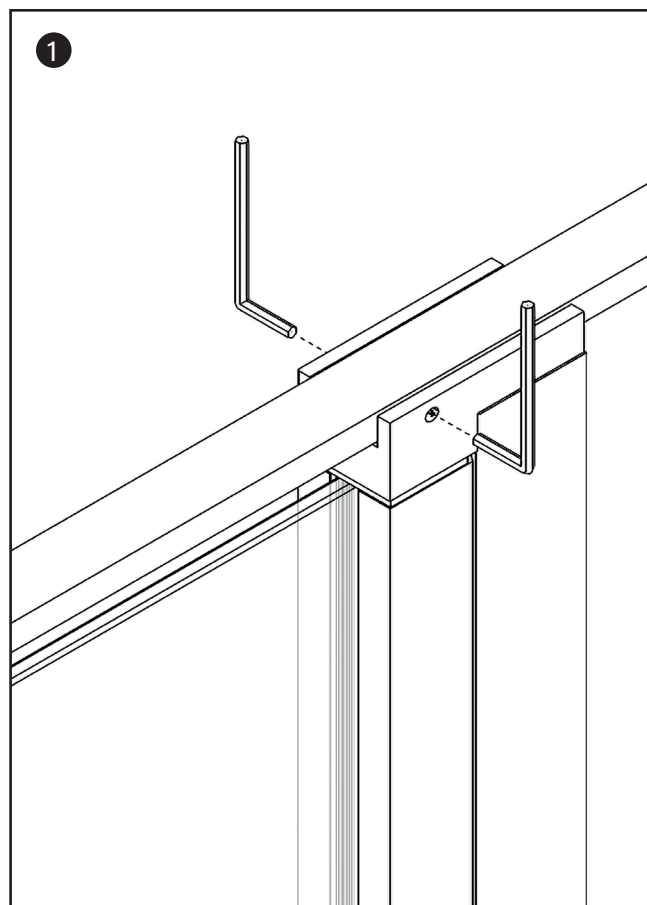

11° PASSAGE


1. Install the aluminium sealing profile together with the two right and left supports on the plate, fixing it with silicone, no need to drill holes.

Note: The supplied screws are used for flush mounting.

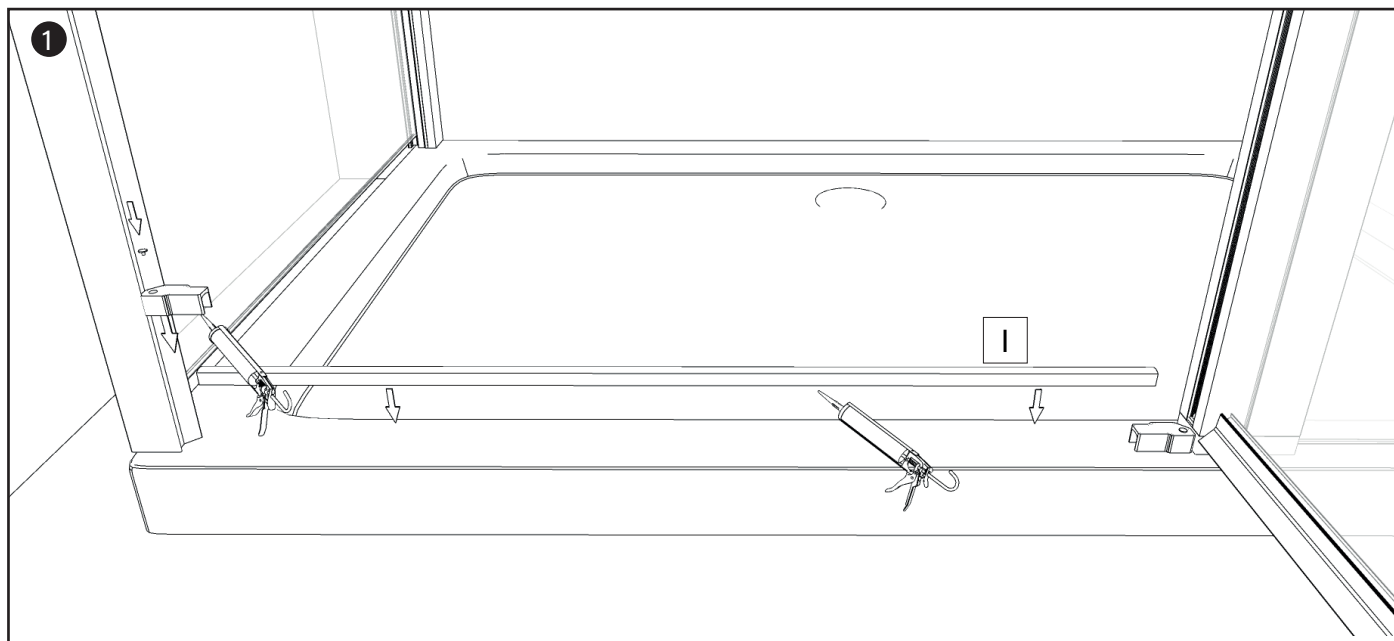

12° PASSAGE

1. Install the handle as shown in the figure. (hole on inside)


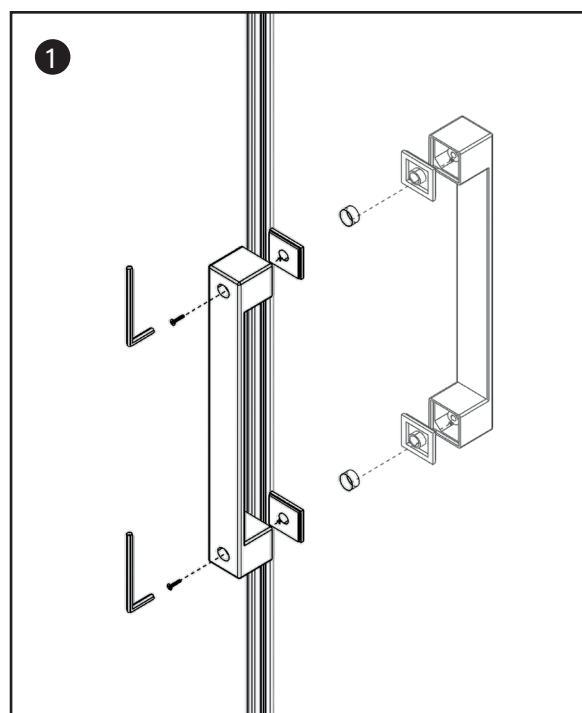


13° PASSAGE

1. Drill holes and attach the screw from the inside to secure the shower wall to both the wall profile and the corner profile using the 8x16 screws and cover with the appropriate plugs.

Note: A total of 6 holes must be drilled, 2 holes per profile, 1 at the top and 1 at the bottom. The screws will be covered with chrome-plated covers in the door profiles.

2. Cover the wall profile of the fixed wall with the aluminium cover to conceal the fixing screws and to protect them from water.

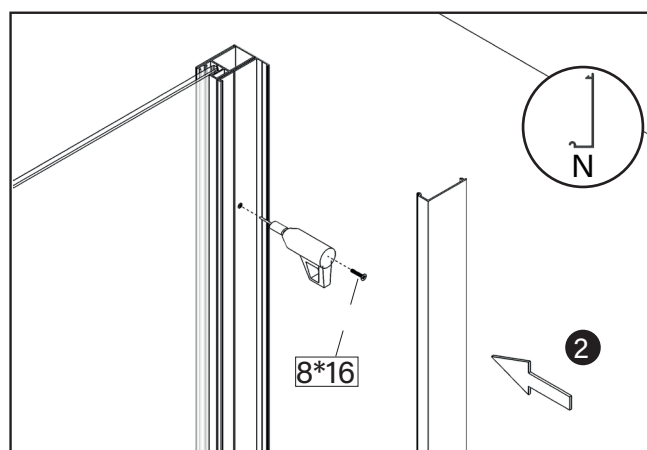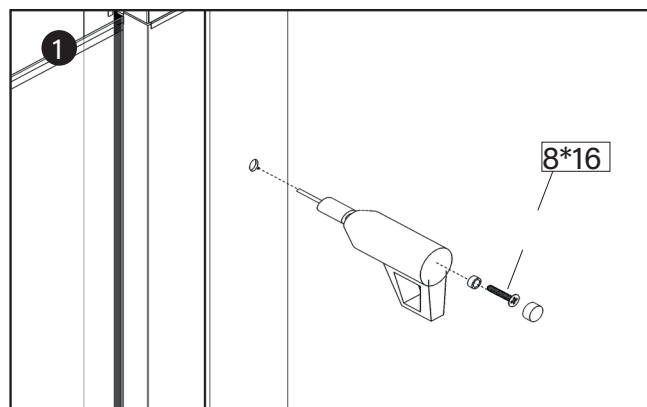

14° PASSAGE

1. Install the deco cover on top of the wall profile
2. Apply silicone as shown and wait 24 hours.

