

Atlanta

DESCRIPTION

Corner sliding shower enclosure, square or rectangular, made of 6 mm glass. Manual adjustment of wall profiles 2.5 cm per side. Chromed aluminium frame, glass with anti-limescale treatment indicated by special labels.







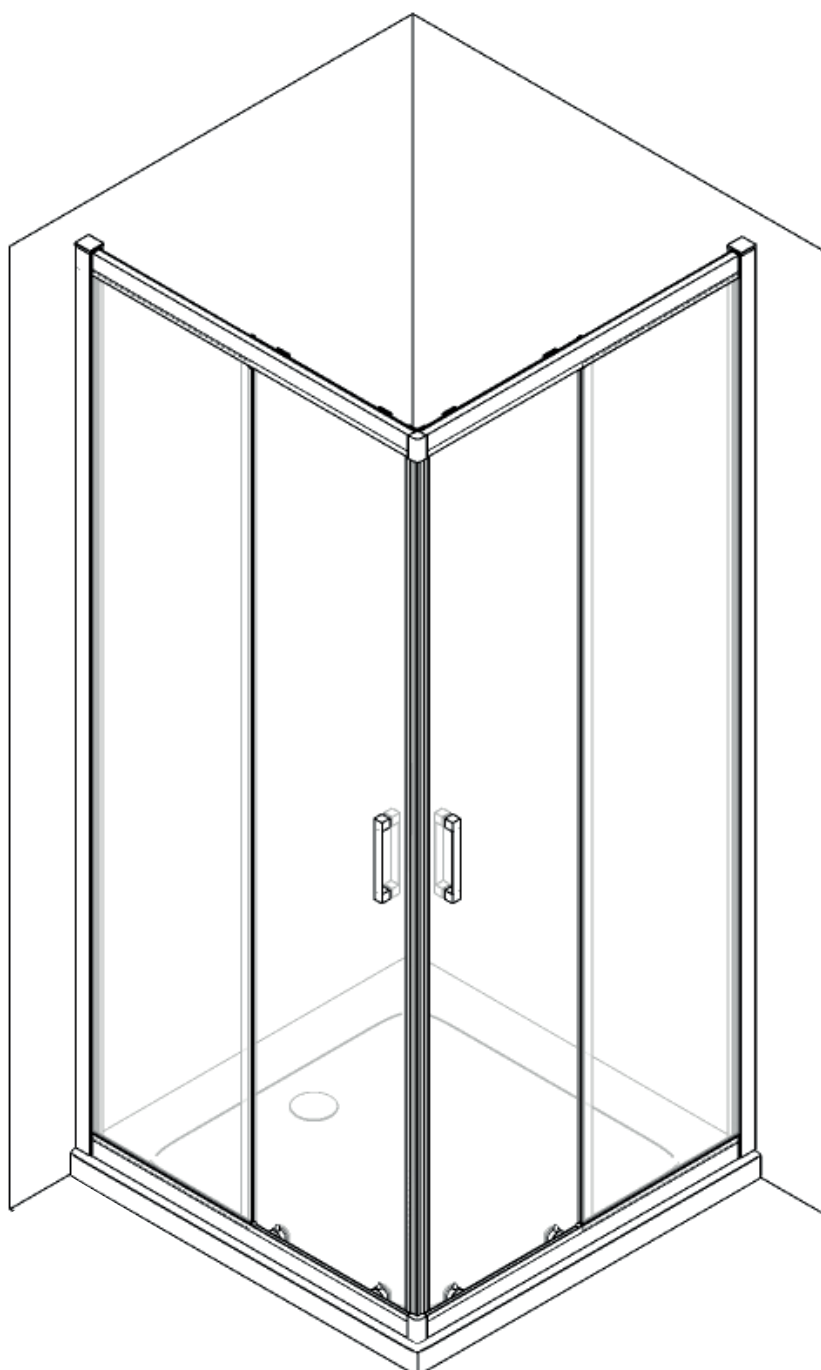


TABLE OF MEASURES





DOORS	MEASURES A-B
70	675 - 700
75	725 - 750
80	775 - 800
90	875 - 900
100	975 - 1000
110	1075 - 1100
120	1175 - 1200
130	1275 - 1300
140	1375 - 1400

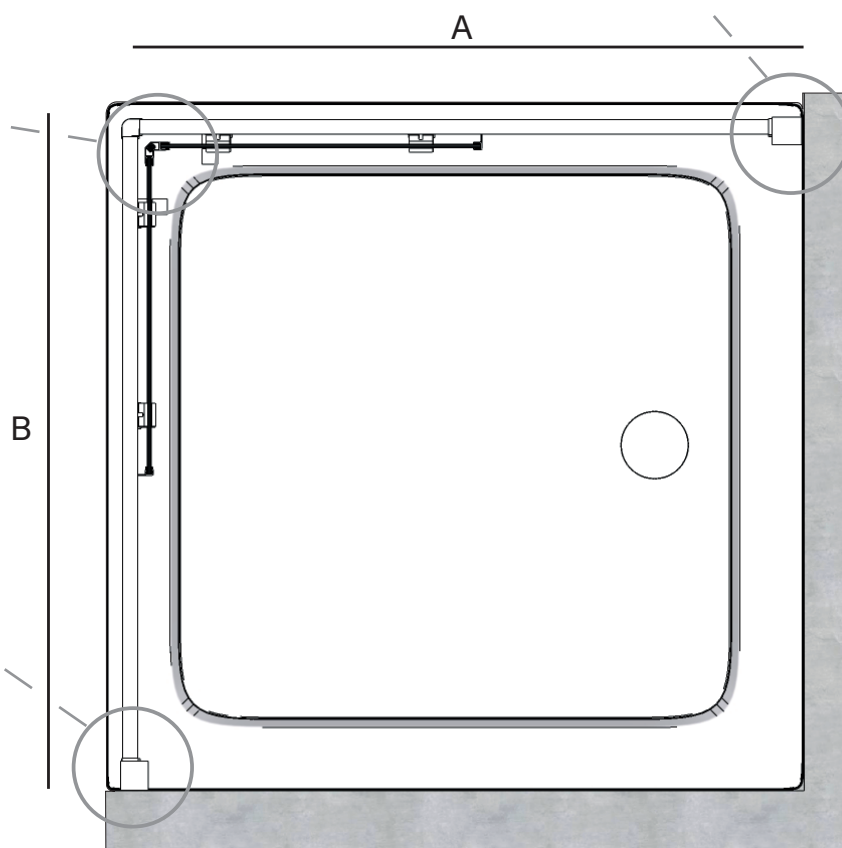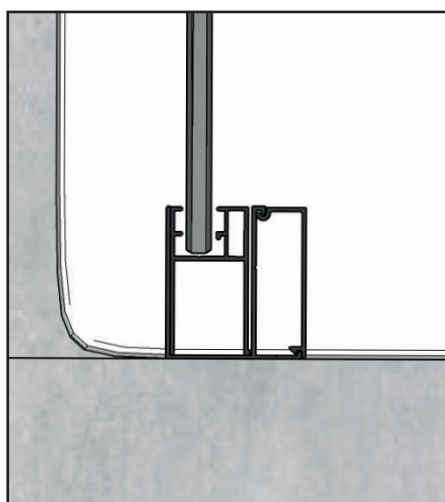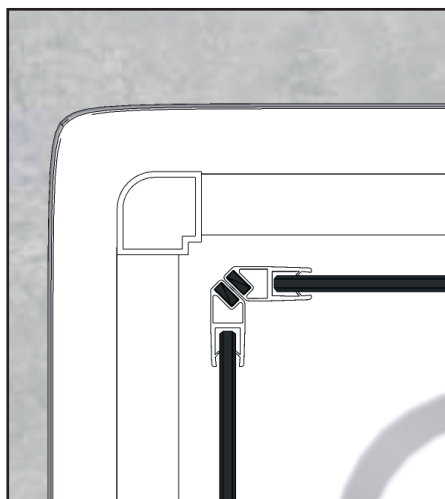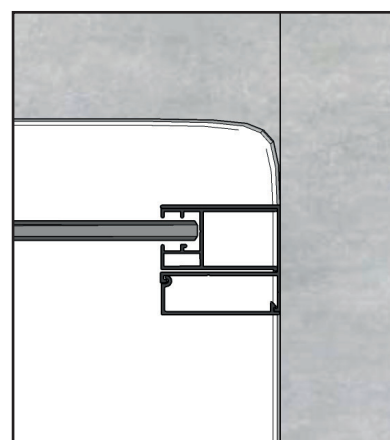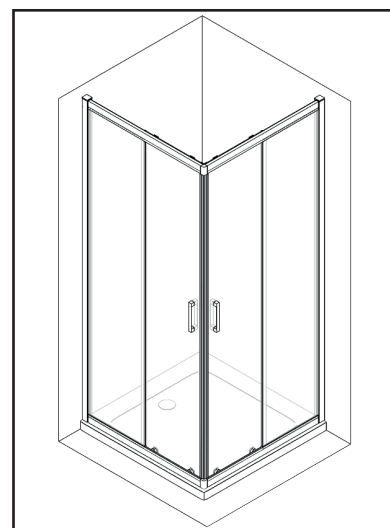


TOOLS REQUIRED

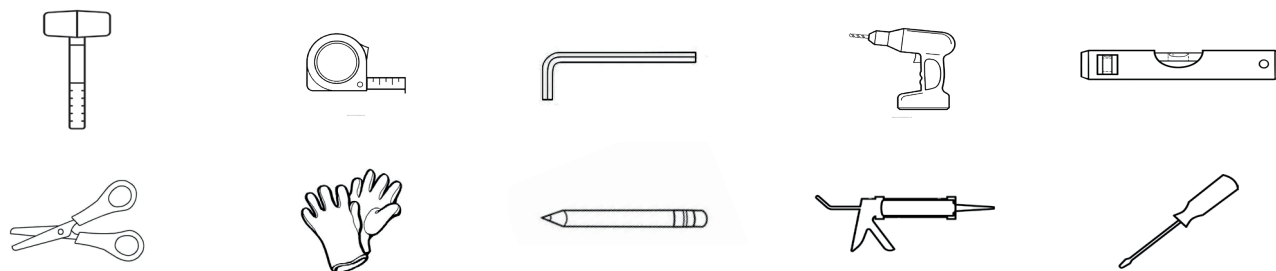


PACKAGE CONTENT (product shipped in two packages)

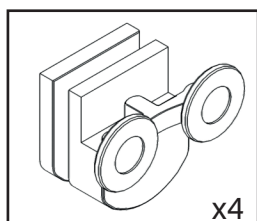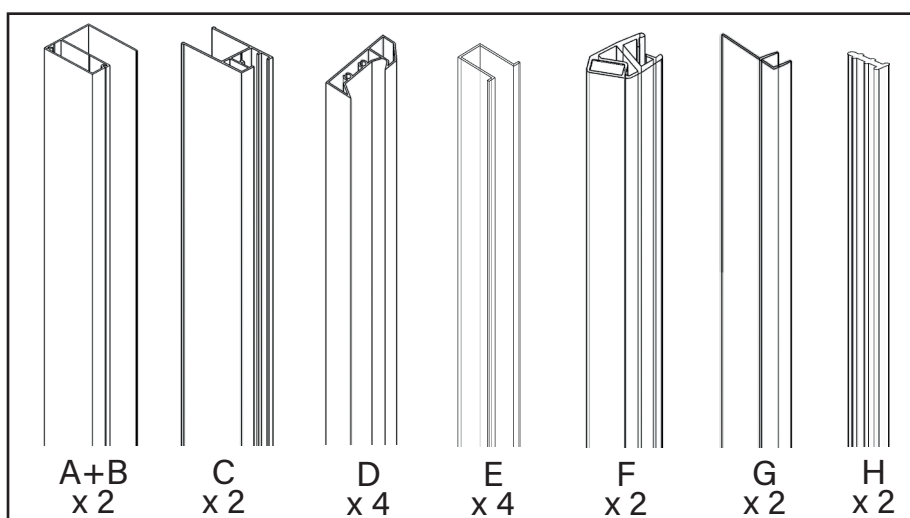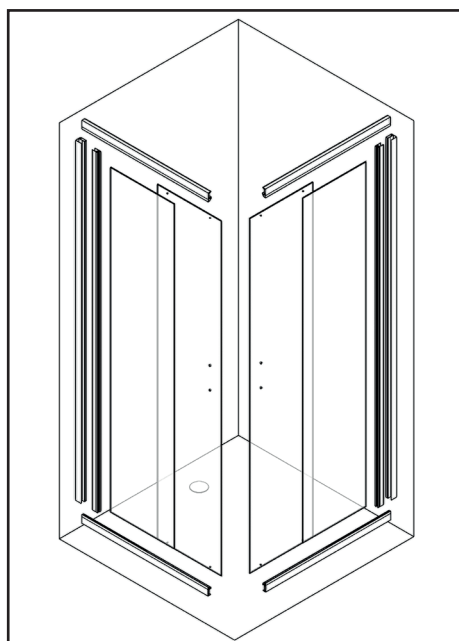


Upper wheels

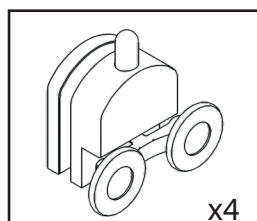


Removable lower wheels

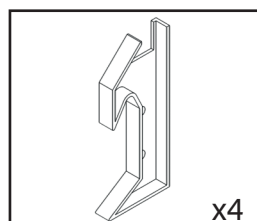


Fixed-side connector with slot

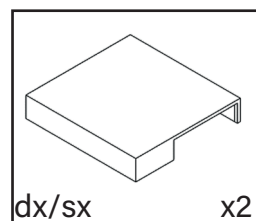


Top cover wall profile

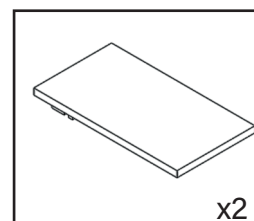


Upper fixed glass cover

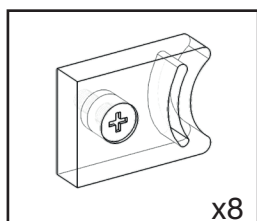


End of run

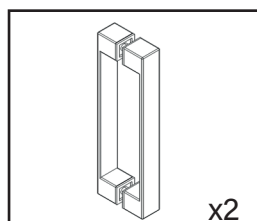


Handle

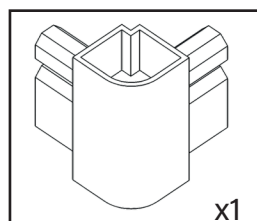

Upper corner connection

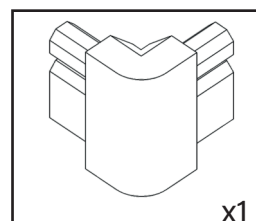

Bottom corner connection




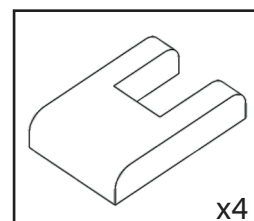


Glass retainer cover

MOUNTING





1° PASSAGE

1. Check that the shower tray is level.
2. Place the profile on the wall and use the plumb level .
3. Mark the holes in the wall with a pencil .
4. Drill the holes in the wall.
5. Insert the wall plug and screw in the 8x30 screws to secure the profile. Repeat steps for the other profile.

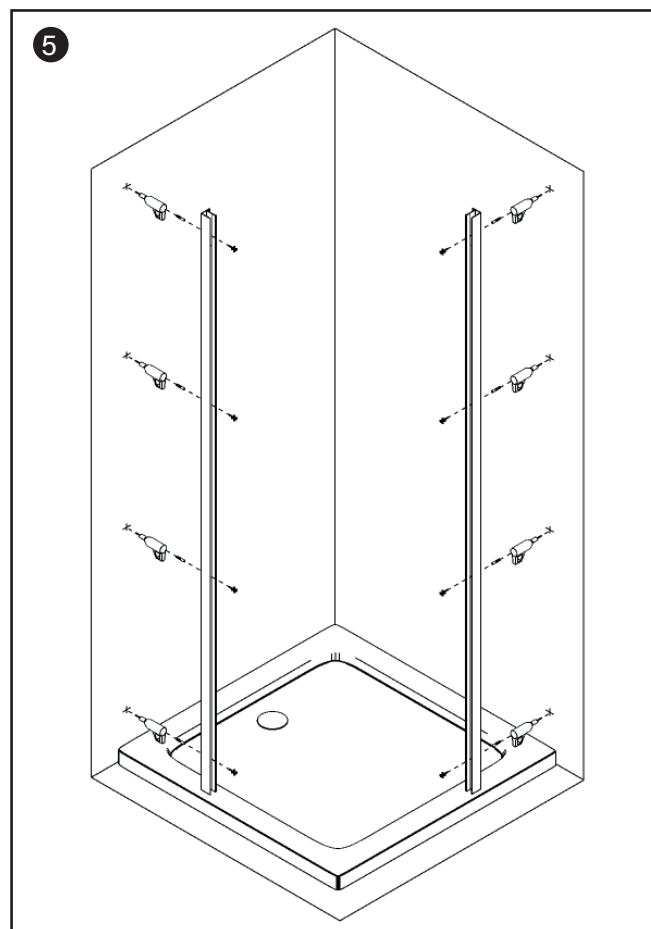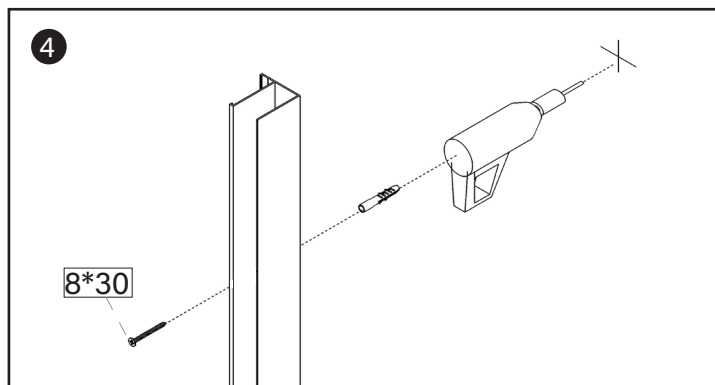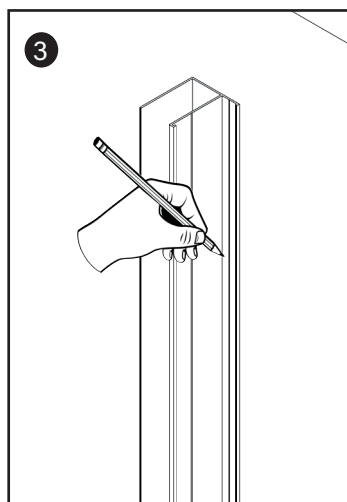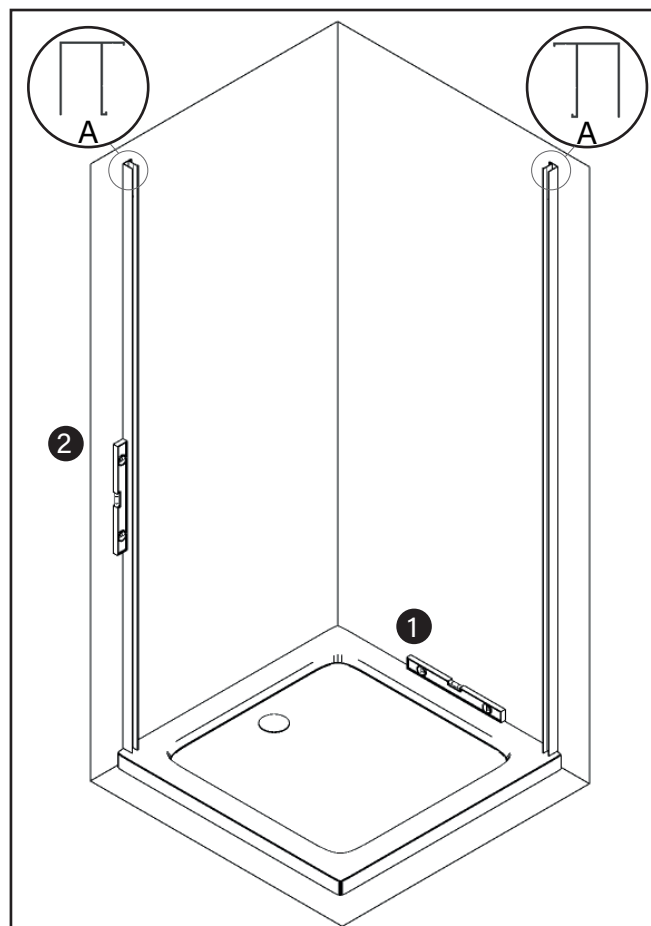



2° PASSAGE

1. Position the glass retainer cover.
2. Place the gasket in the lower profile (glass protection gasket).
3. Use the 8x30 screw to connect the lower aluminium rail with the vertical profile; the connector must be inserted between the rail and the profile. In this way we construct the door frame (skeleton).
4. Insert the fixed glass as shown.

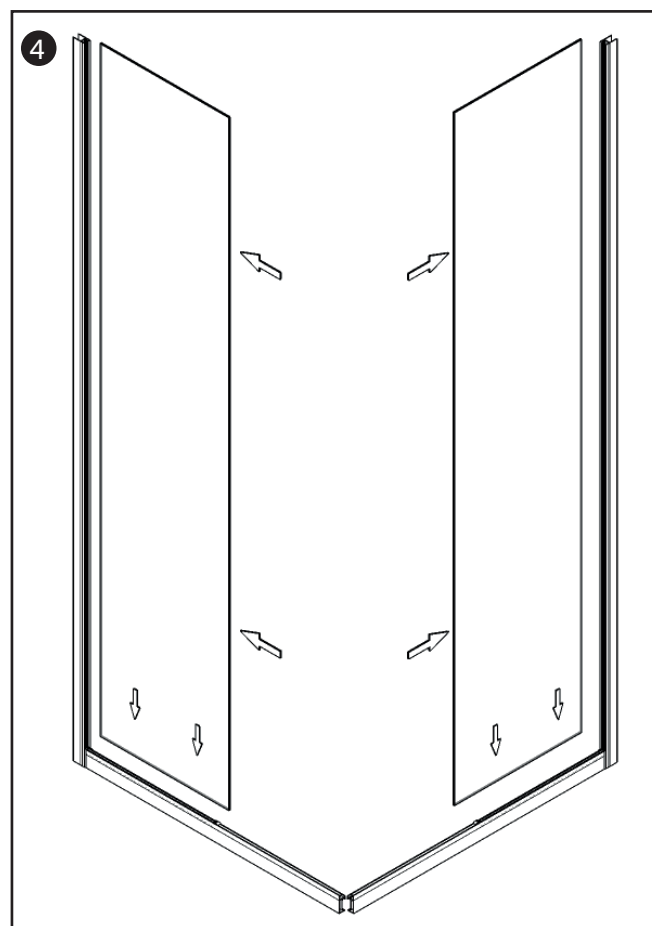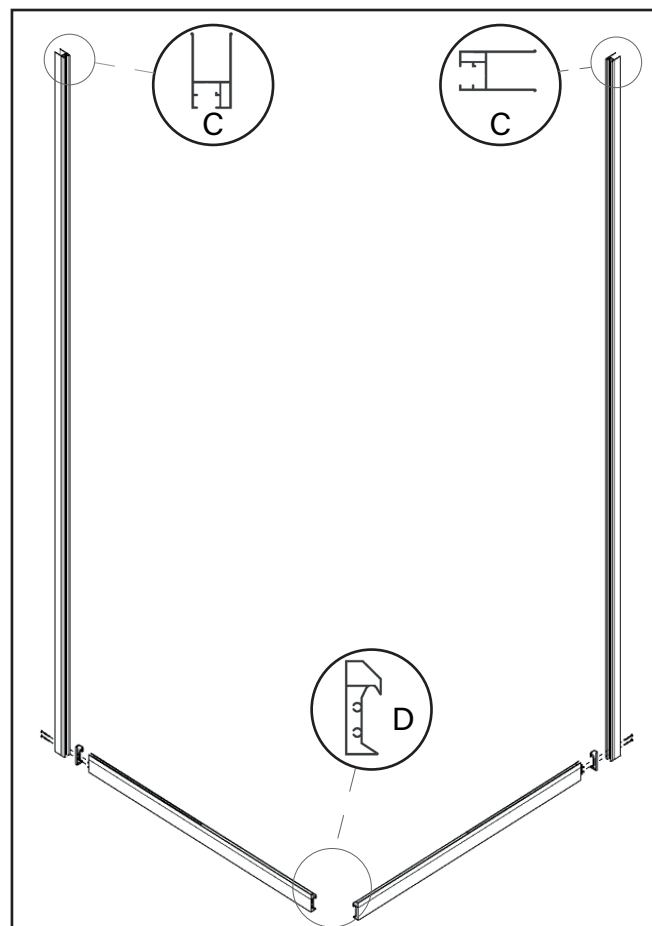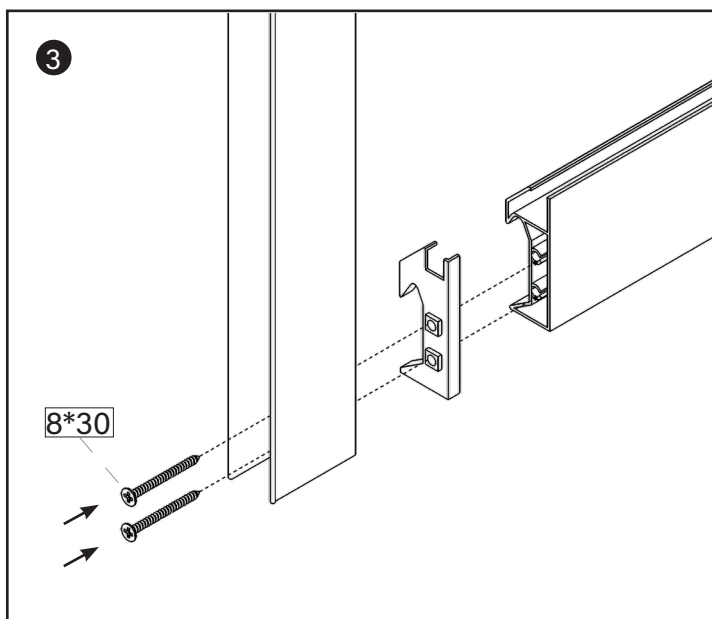
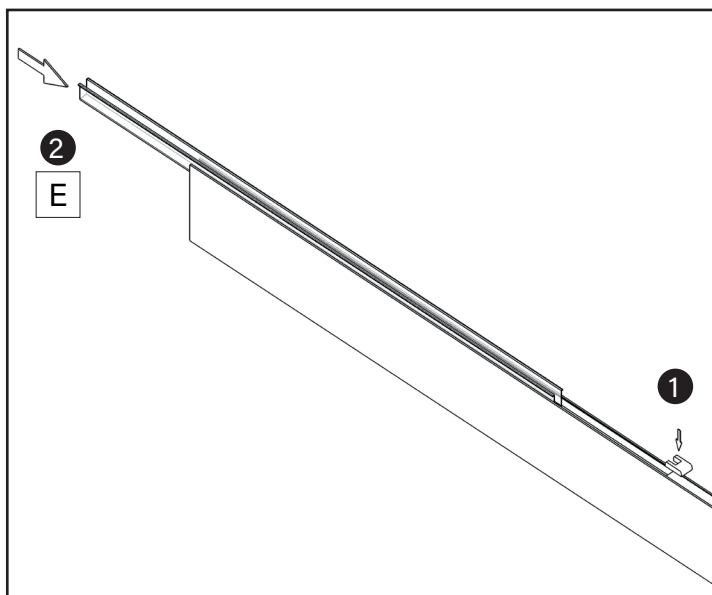


3° PASSAGE

1. Repeat the previous step (2) for the upper part of the frame.


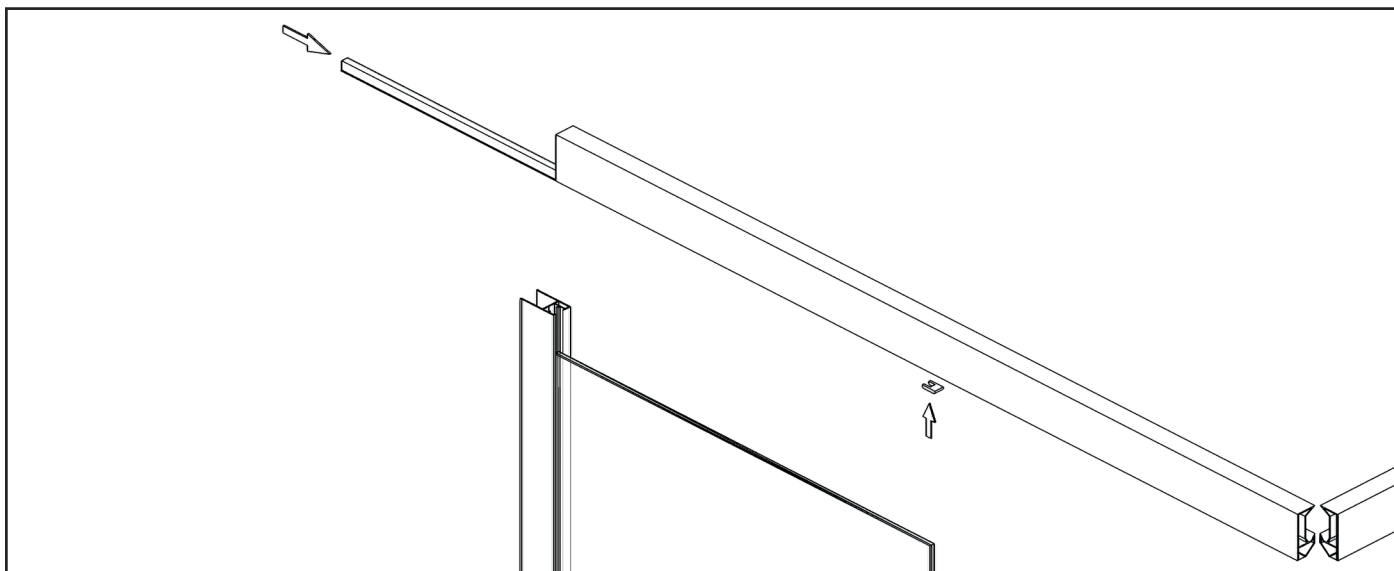
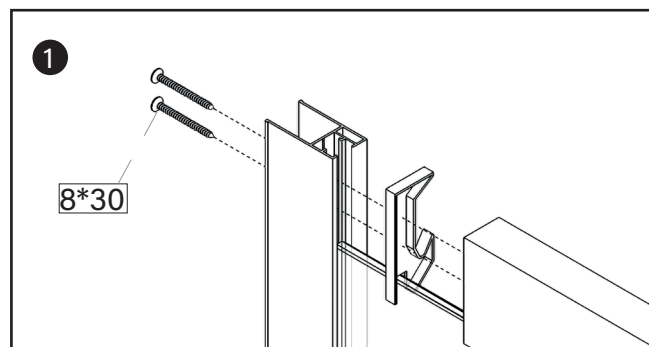
**4° PASSAGE**

1. Insert the previously assembled frame into the wall profile.
2. Repeat the operation for the other side.

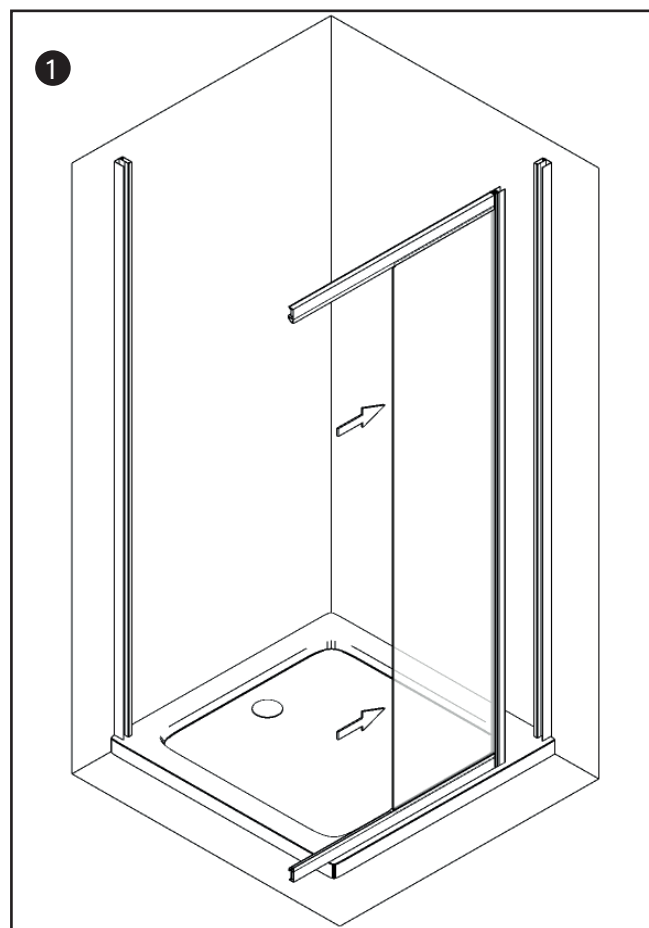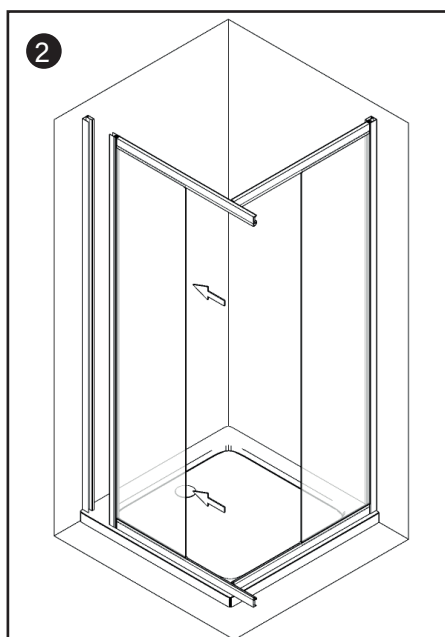

5° PASSAGE

1. Connect the two lower rails with the corner connection.
2. Repeat the operation with the upper tracks.
3. Secure with 6x10 screws and cover with screw caps.

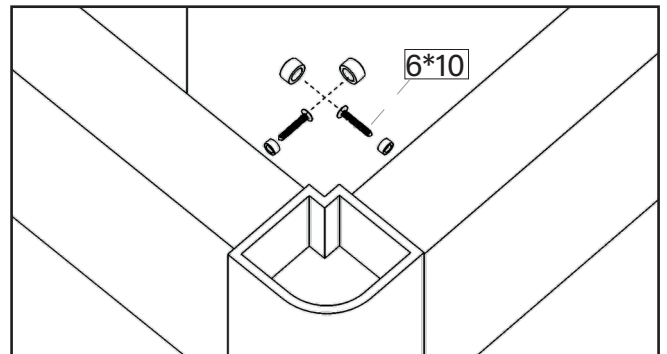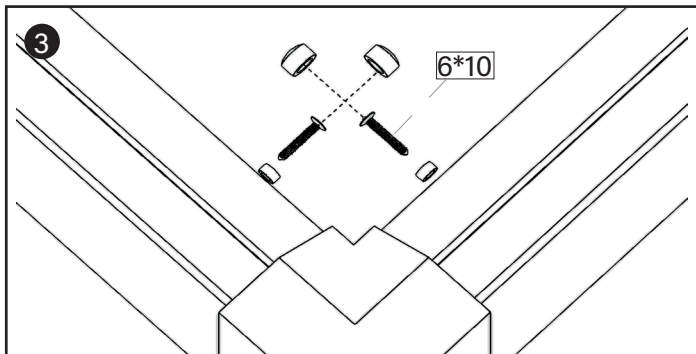
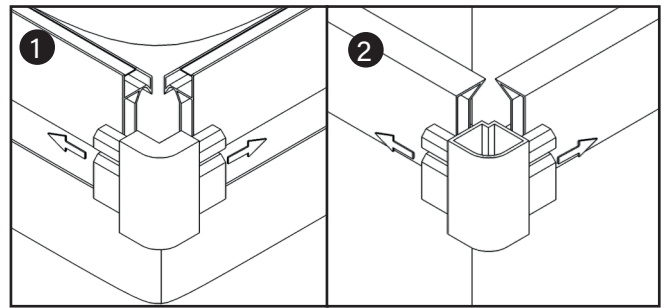


6° PASSAGE

1. Install the upper running wheels in the two panes.

Note: The upper castors are adjustable; if, after fitting the shower enclosure, the doors do not slide smoothly, they can be adjusted using the lower screw on the upper bearing.

2. Install the lower running wheels (with quick release button).

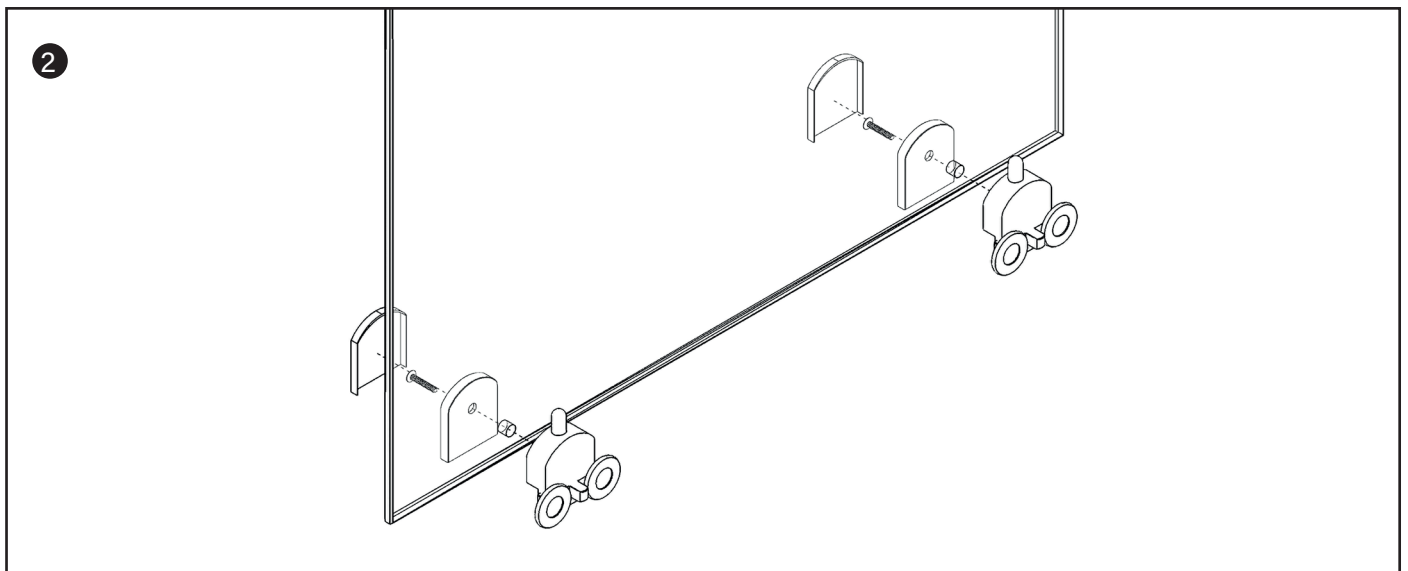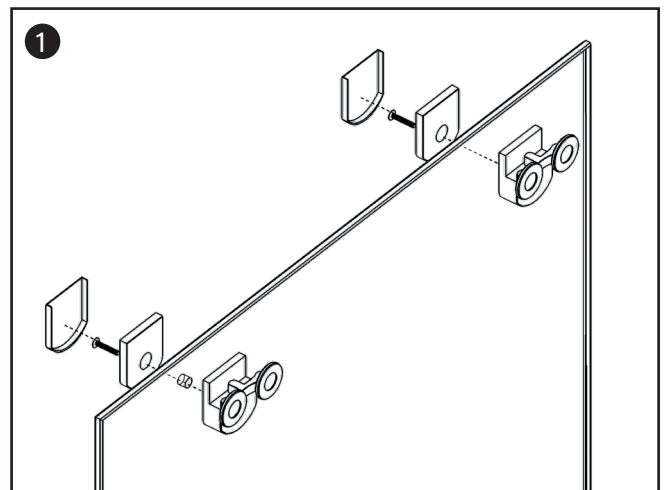




7° PASSAGE

1. Hook the sashes on the top sliding track.

Note: Make sure the door is on axis, see previous step to adjust.

2. Hook the wheels onto the lower rail.



Note: the lower running wheels are detachable to facilitate routine cleaning and maintenance.

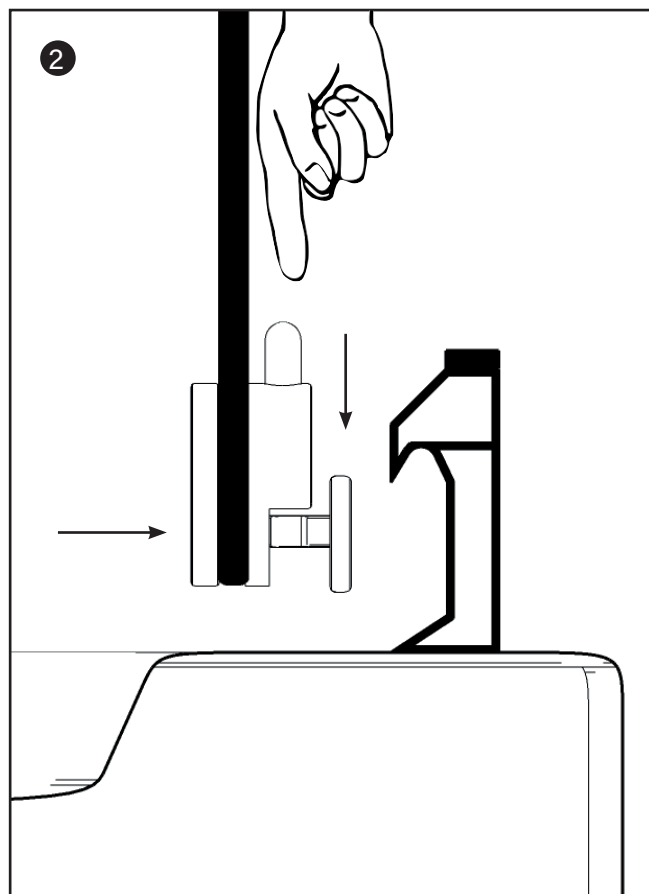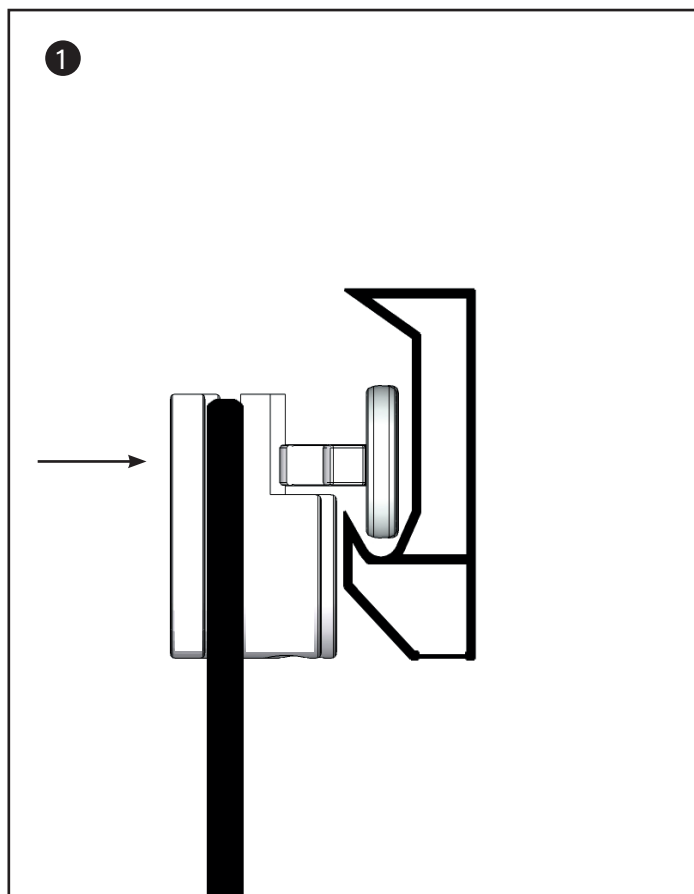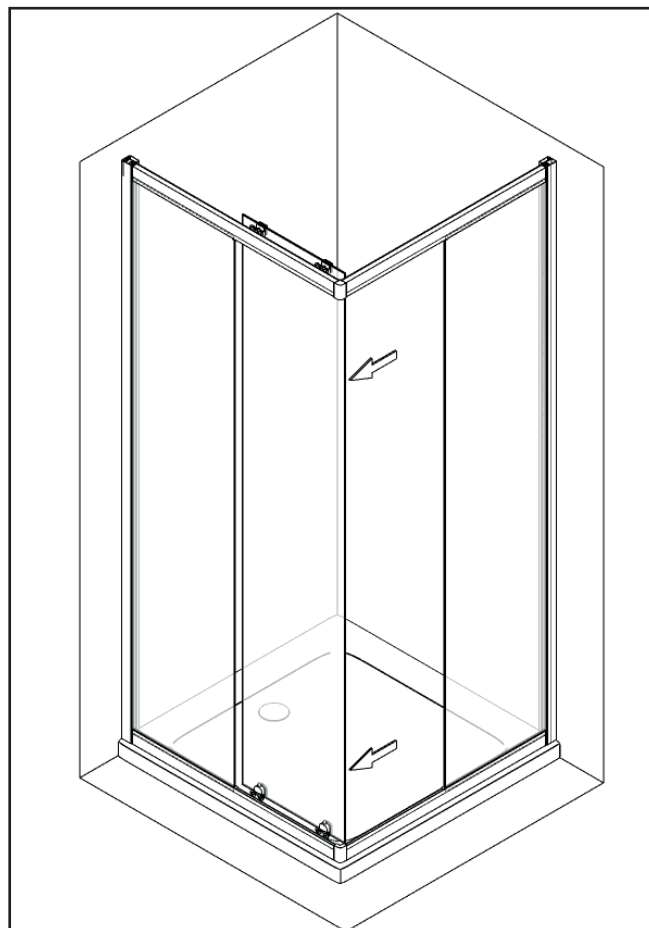

8°PASSAGE

1. Install the magnetic closing seals on the sliding glass panes.
2. Install the sealing gasket between fixed glass and sliding door.

Note: there is a higher and a lower gasket supplied, the lower one goes in the fixed glass, the higher one in the sliding glass.

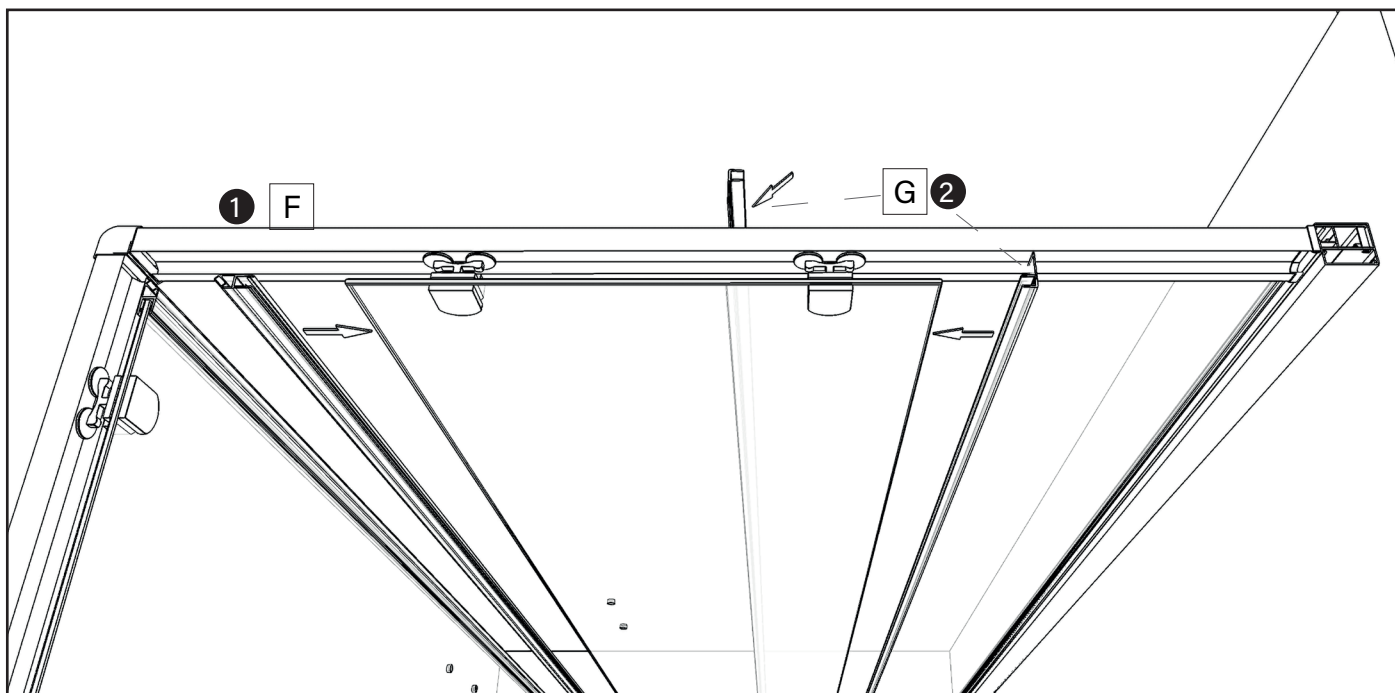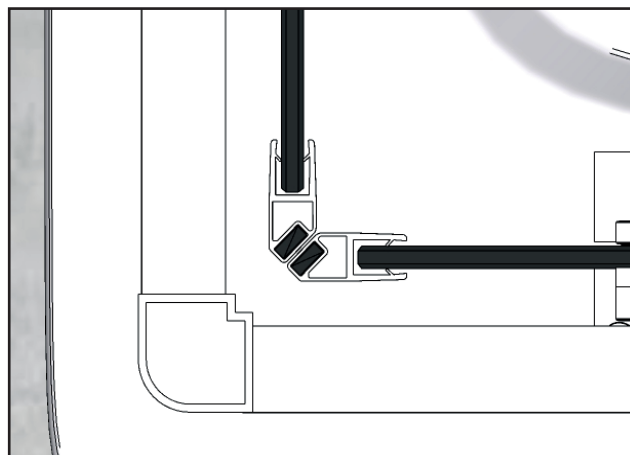


9° PASSAGE

1. Check plumbness, drill holes from the inside to secure the shower wall to the wall profiles using the 8x16 screws.

IMPORTANT: maximum fixed glass adjustment 2.5 cm.

Note: A total of 4 holes must be drilled, 2 holes per profile, 1 at the top and 1 at the bottom.

2. Cover the wall profile of the fixed wall with the aluminium cover to conceal the fixing screws and to protect them from water.


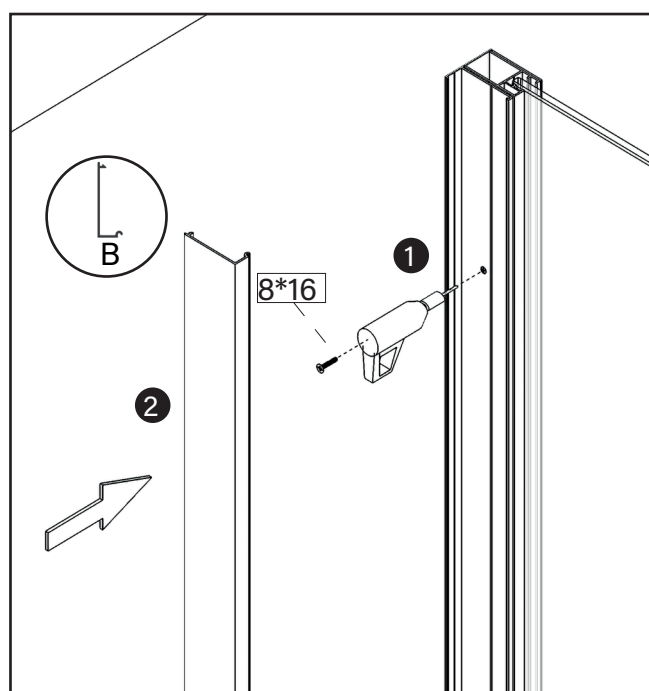


10° PASSAGE

1. Insert the flat gasket between the fixed glass and the aluminium profile (inner side).

You get it rolled up in a baggie!!!

2. Install the end stop on the top and bottom rails. Use the supplied 8x12 screws, otherwise you risk drilling holes in the visible side of the slide rail.

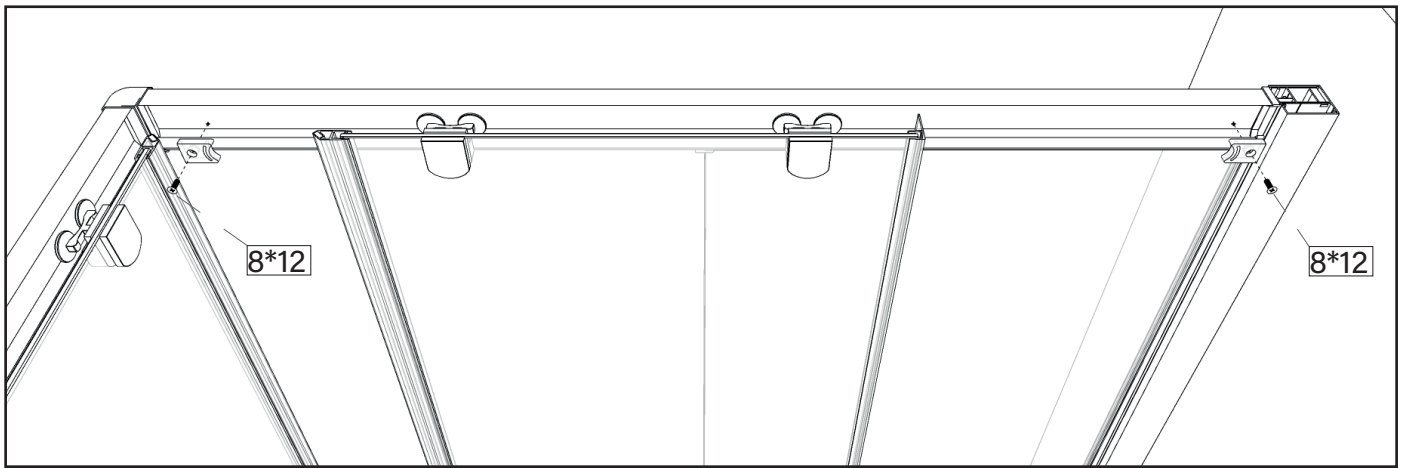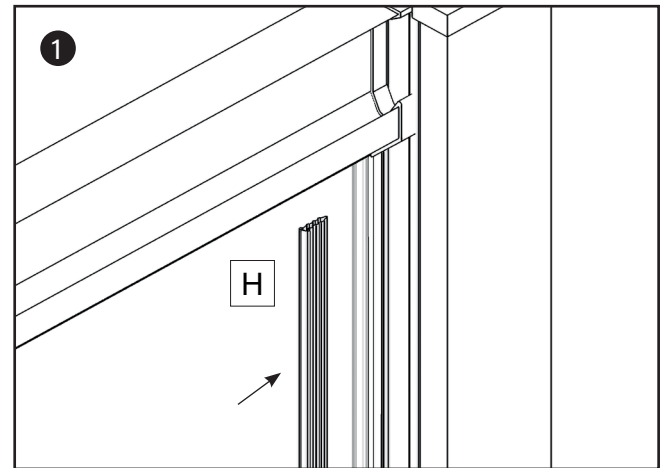

11° PASSAGE

1. Install the handle (screw hole on the inside).
2. Install the cover caps at the top of the aluminium profiles.
3. Siliconise the outside of the shower enclosure around the entire perimeter as shown in the picture and wait 24 hours.

