

Filadelfia WA

DESCRIPTION

Fixed walk-in corner shower wall, clear 8 mm tempered glass with Easy-Clean anti-limescale treatment and anti-bacterial chromed aluminium profiles, height 200 cm. Reversible installation. Wall-mounted holding arm included.





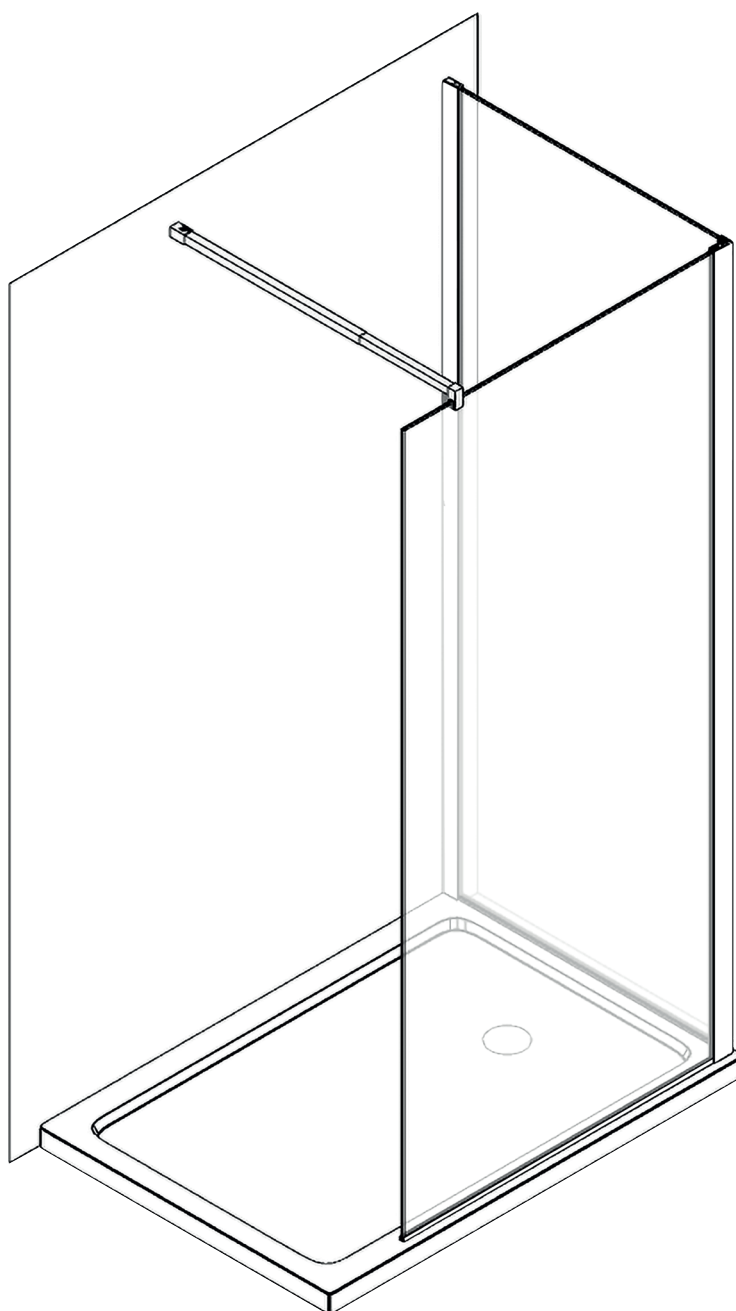



TABLE OF MEASURES

MODEL	MEASURES A-B
70	680 - 700
75	730 - 750
80	780 - 800
90	880 - 900
100	980 - 1000
110	1080 - 1100
120	1180 - 1200





REVERSIBLE

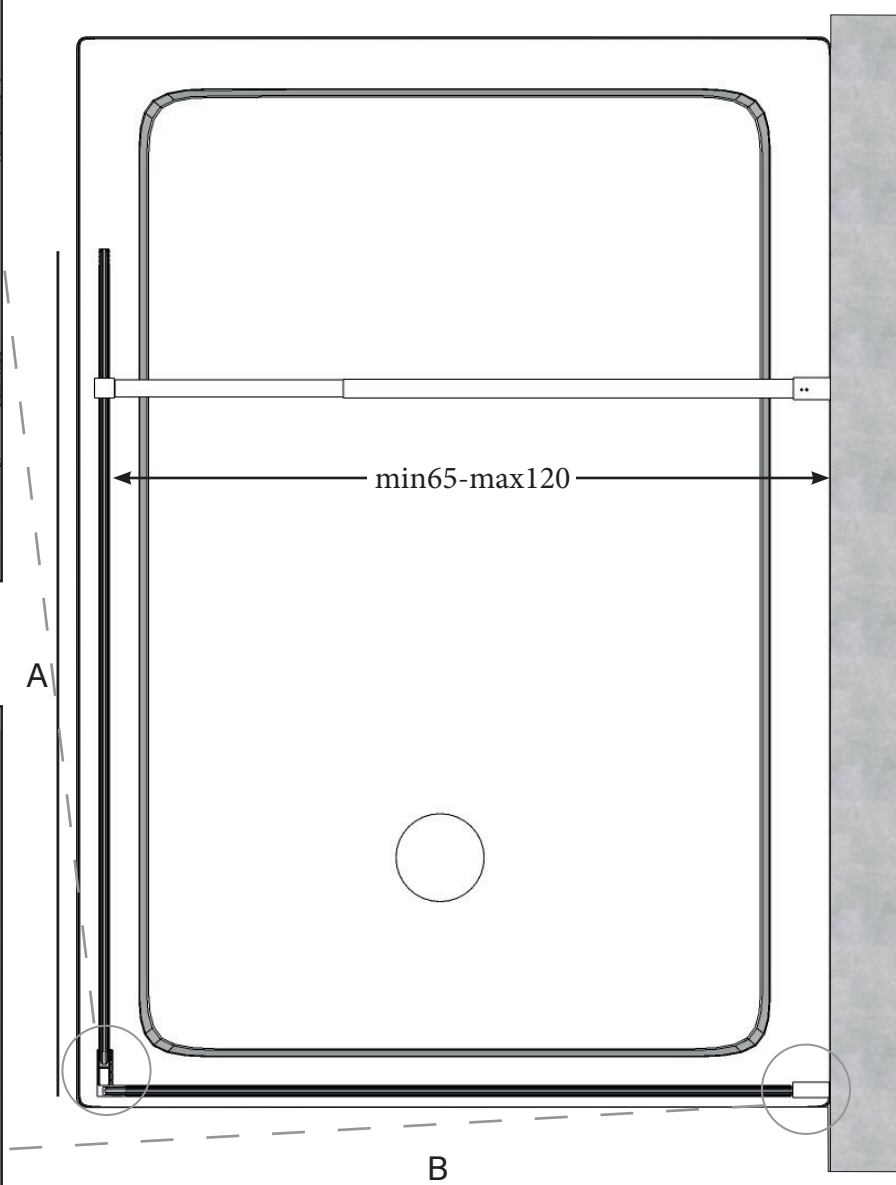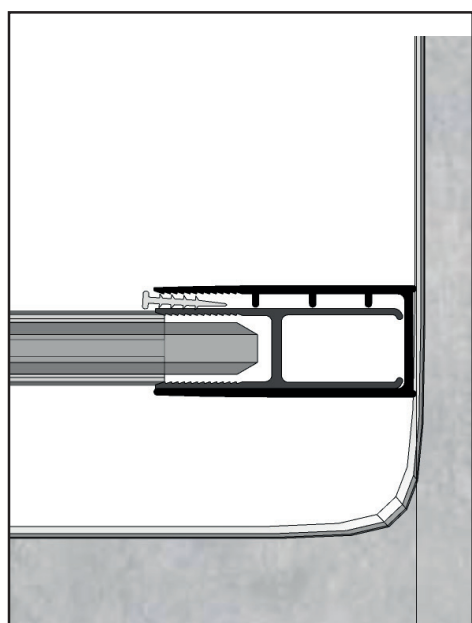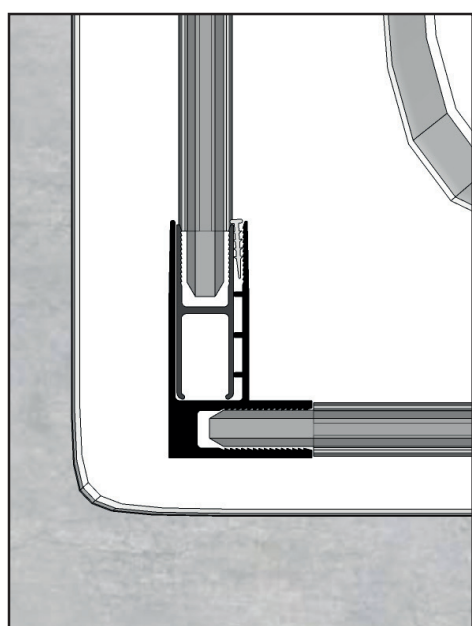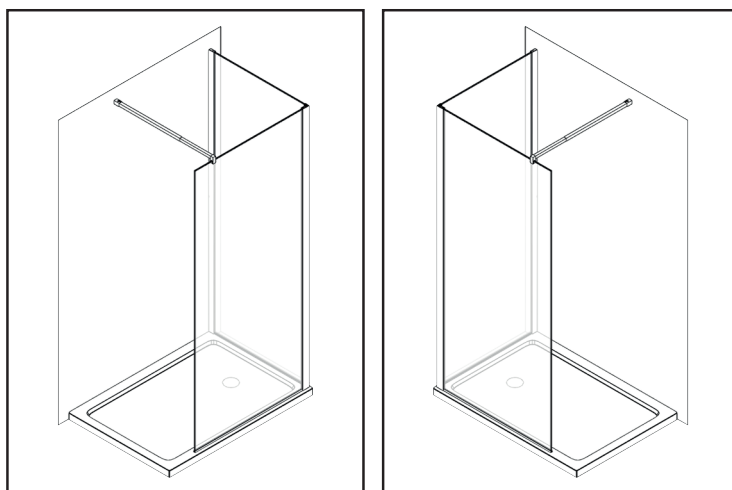

TOOLS REQUIRED

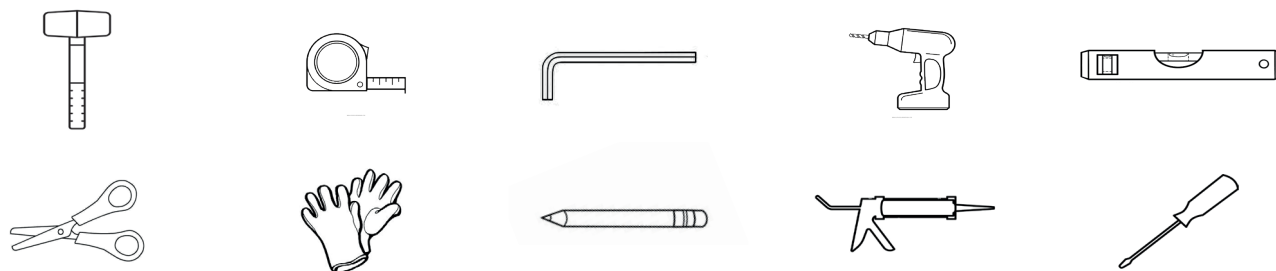

PACKAGE CONTENT (product shipped in two packages)

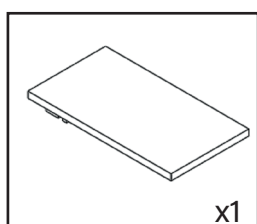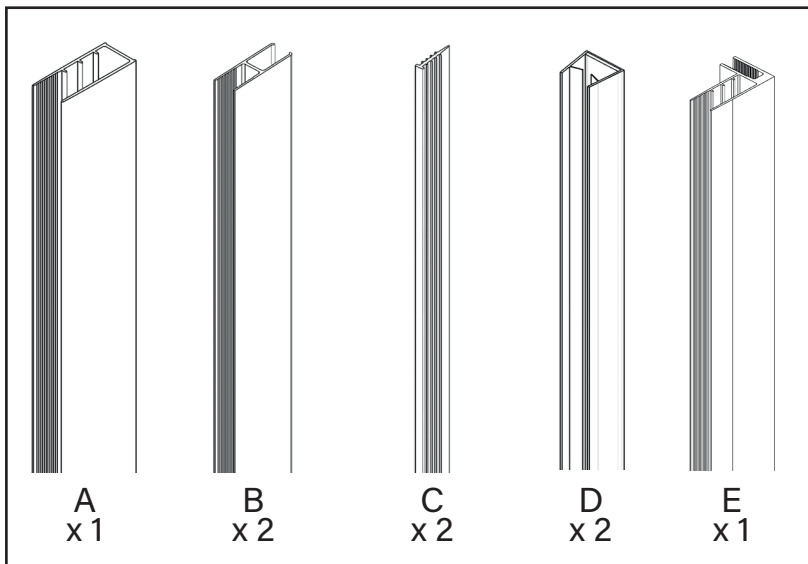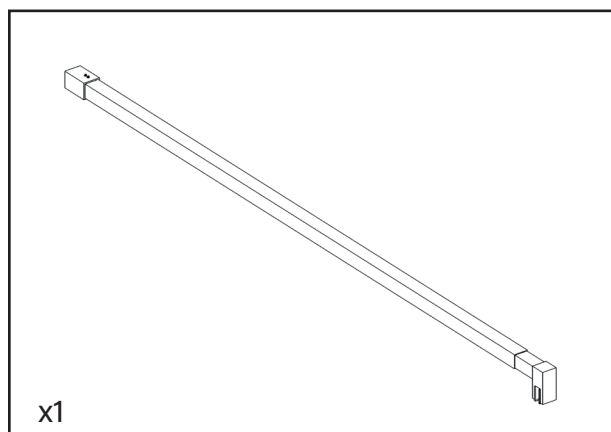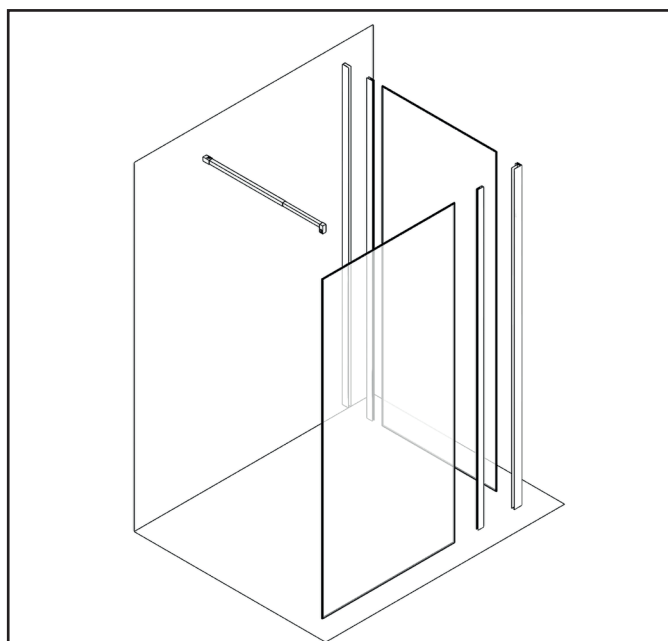

Cover





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profile on the wall and use the plumb level .
3. Mark the holes in the wall with a pencil .
4. Drill the holes in the wall.
5. Insert the wall plug and screw in the screws to secure the profiles.


IMPORTANT

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimum aesthetic and functional result.

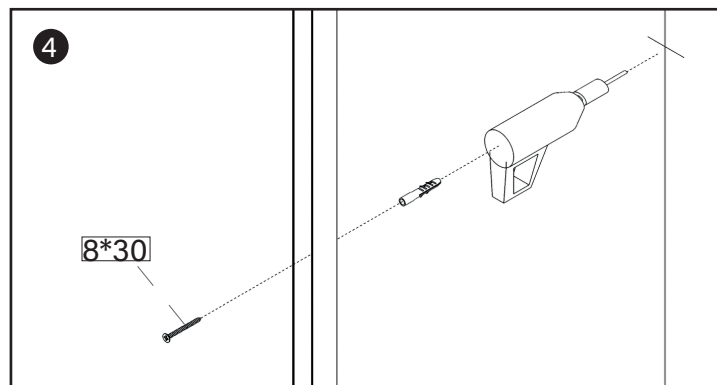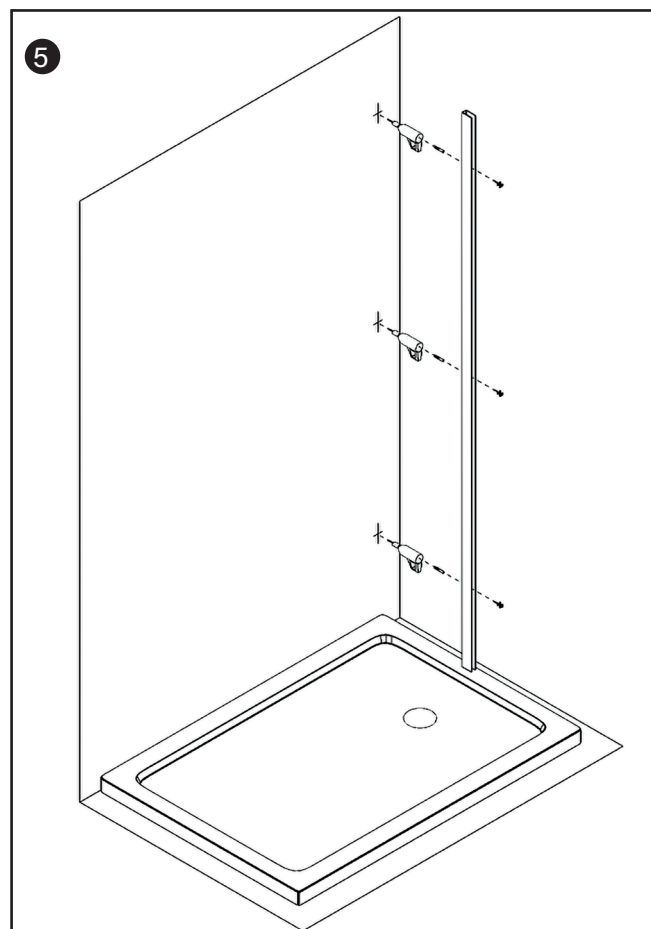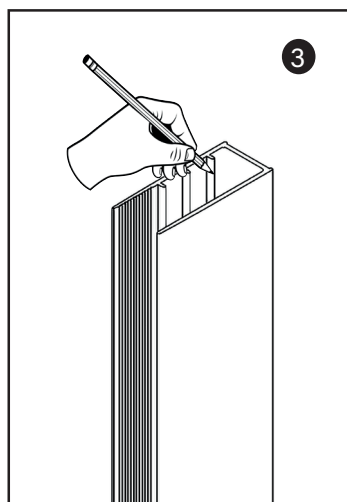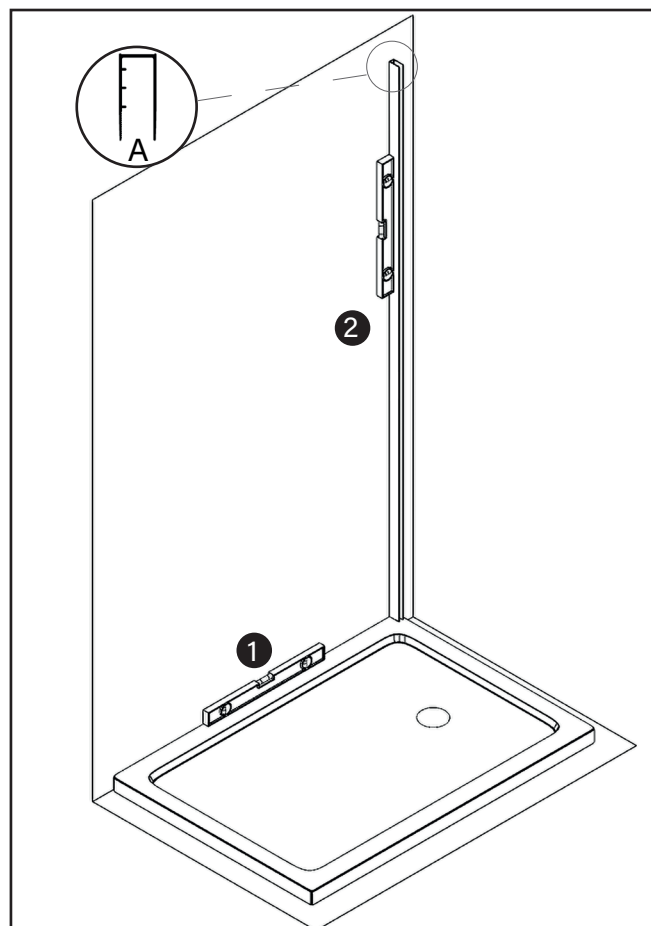

2° PASSAGE

1. Apply silicone in the groove of the angle profile.
2. Insert the fixed glass inside the corner profile.


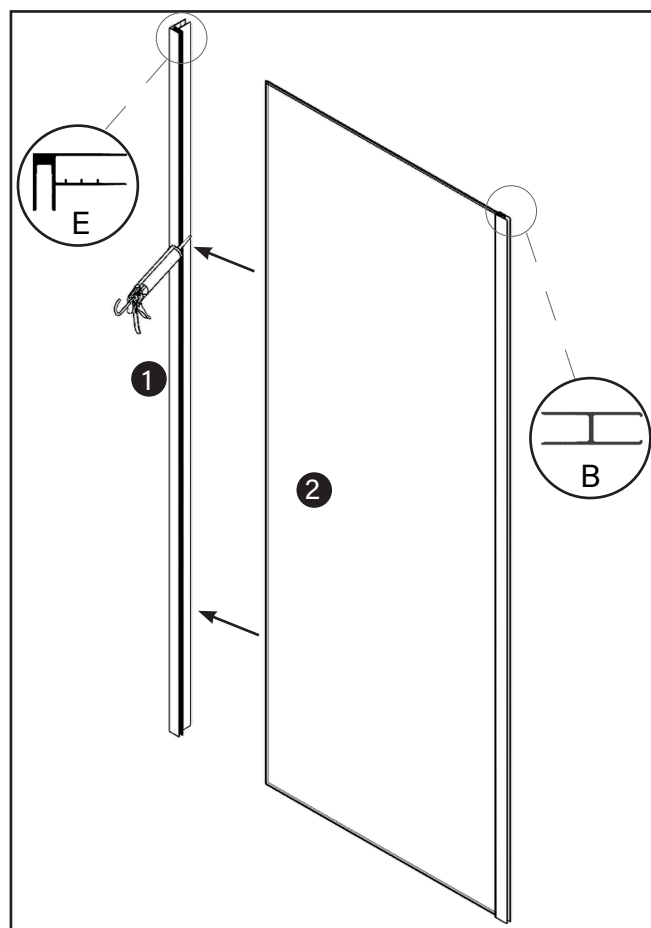


3° PASSAGE

1. Insert the gasket under the two glass plates.



ATTENTION

The frame protrudes on one side in relation to the glass, the protruding part serves as a seat for the under-glass gasket, it must therefore face downwards.

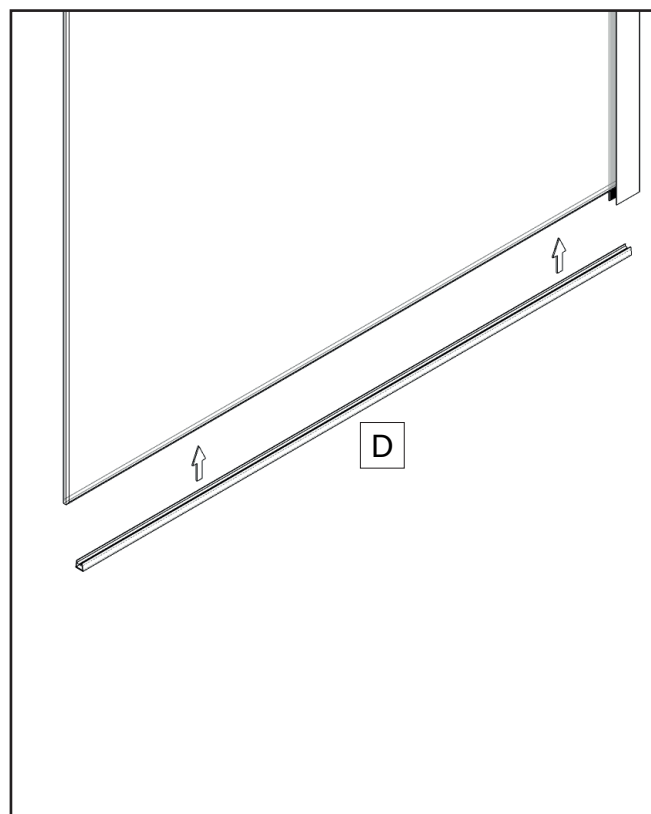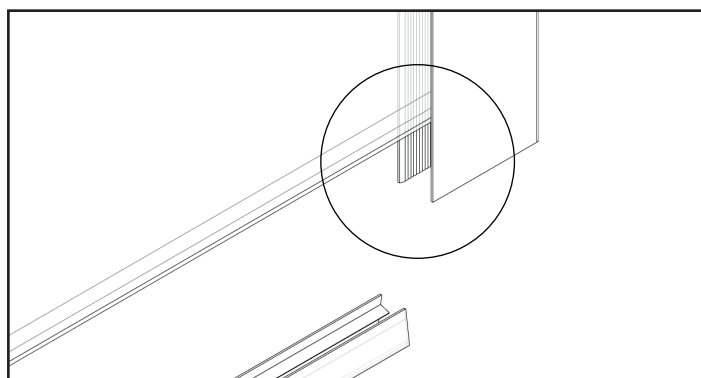



4° PASSAGE

1. Install the fixed wall within the wall profile.
2. Insert the roll gasket between the two aluminium profiles.

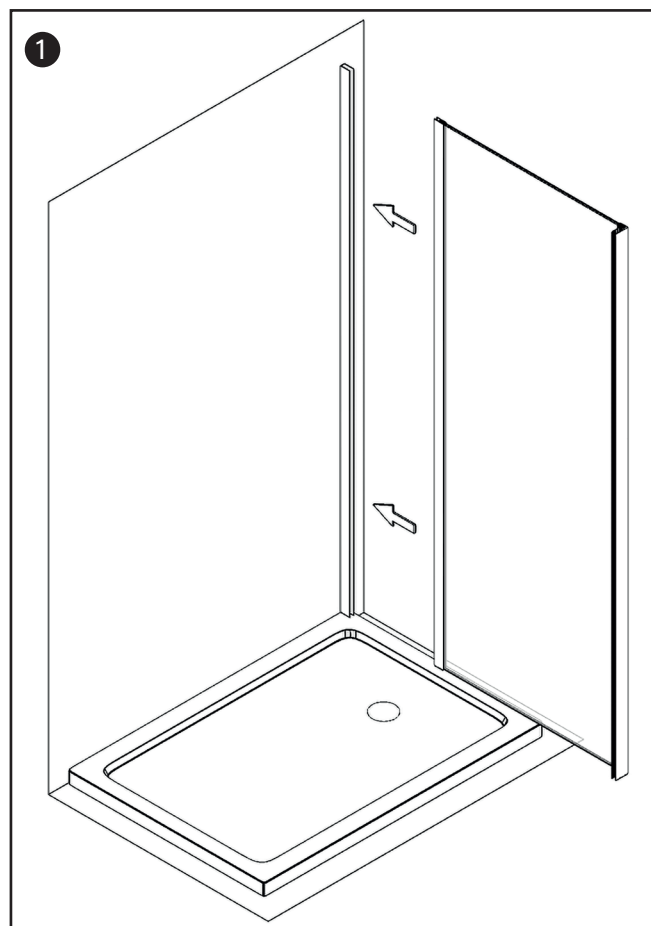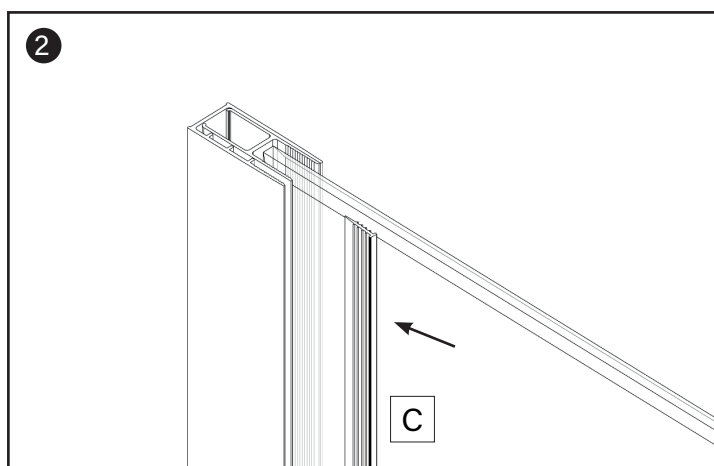

5° PASSAGE








1. Install the fixed wall inside the corner profile.
2. Insert the roll gasket between the two aluminium profiles.

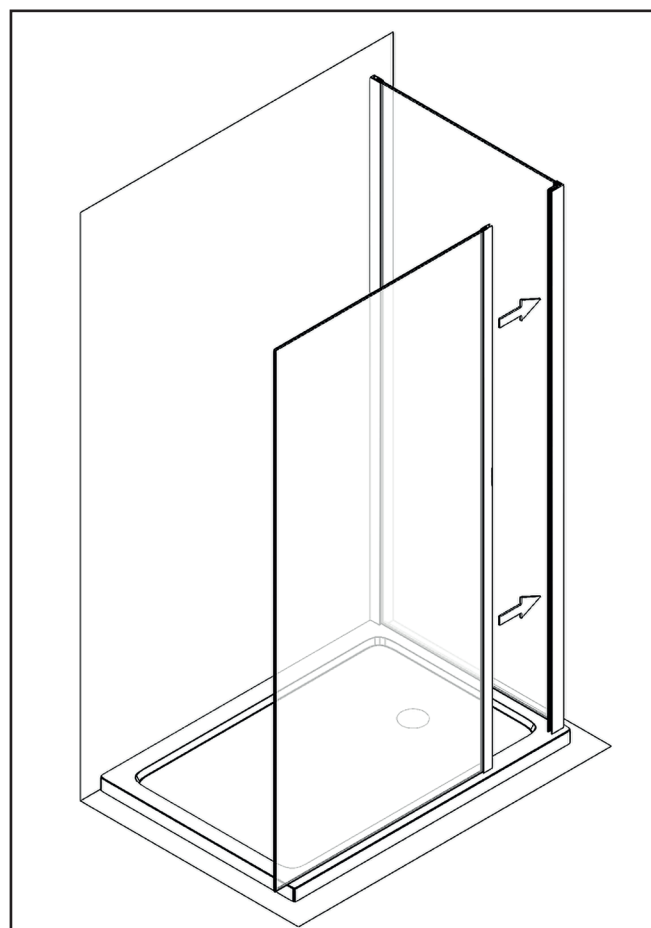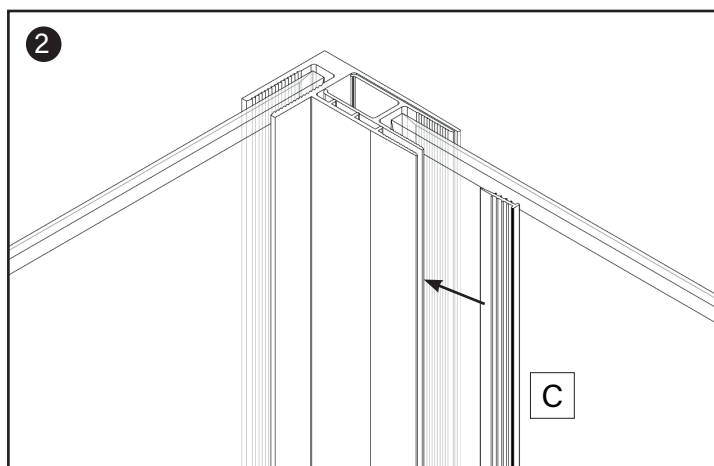

6° PASSAGE


1. Position the retaining bar holder on the wall and mark the hole with a pencil.
2. Drill the hole in the wall with the drill, insert the wall plug and screw in the screws to secure the bracket.
3. Insert the bar into the bracket and secure it with the hexagonal key.
4. Position the sealing bar on the fixed walls, adjusting the extension by acting on the telescope.
5. Tighten the screws for fixing to the glass.
6. Secure the bar with the hexagonal key.

Note: the sealing bar is essential for the correct sealing of the shower enclosure, it ensures resistance to stress on the fixed glass.

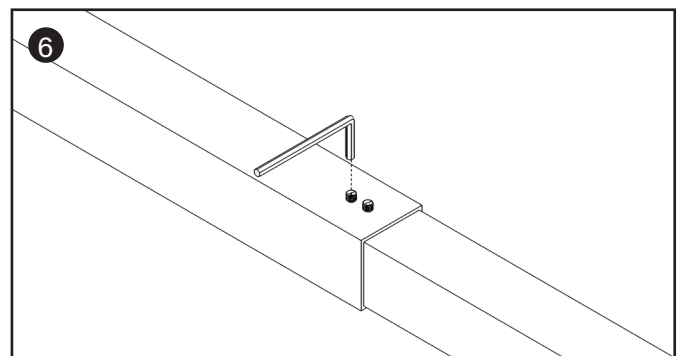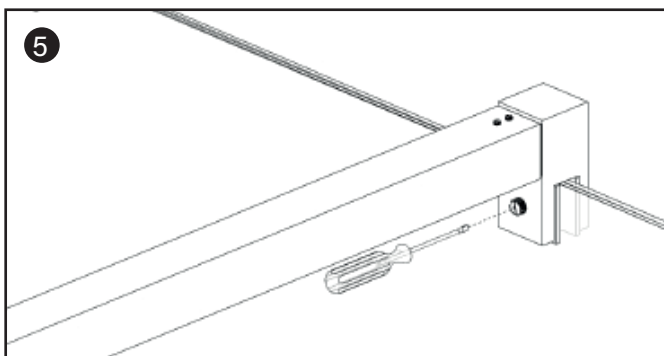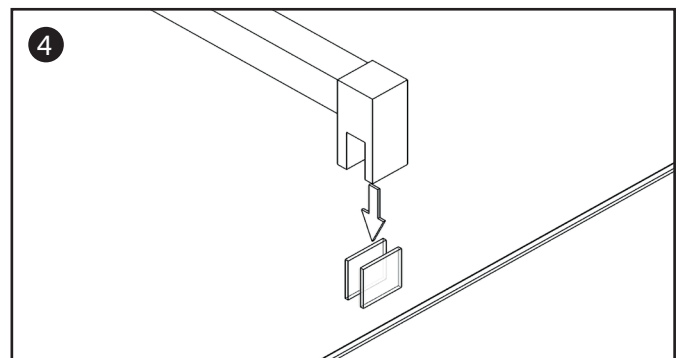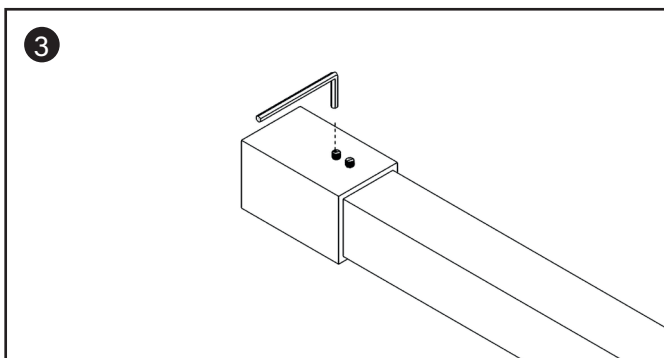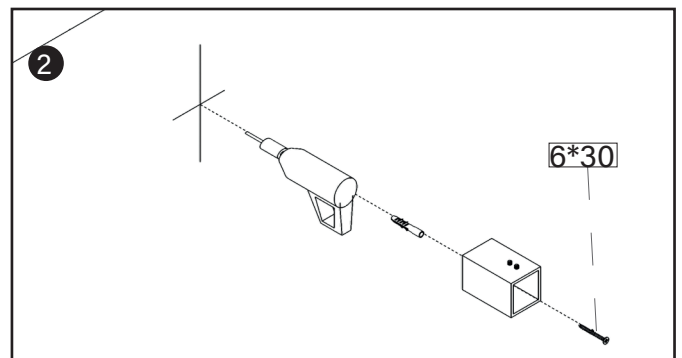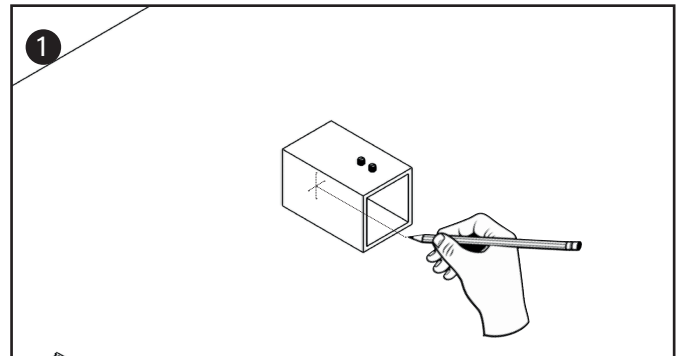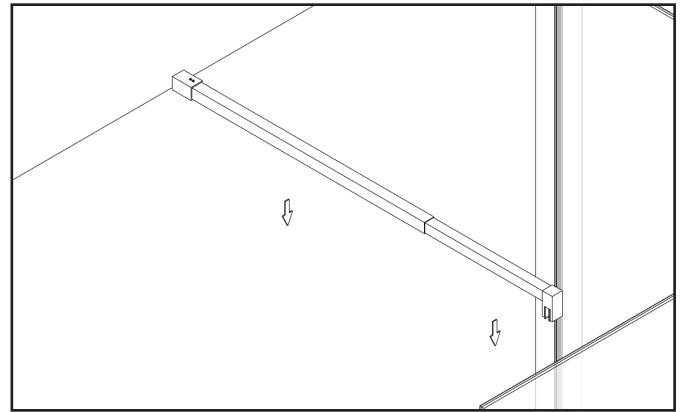

7° PASSAGE

1. Place the decorative profile on top of the wall profile.

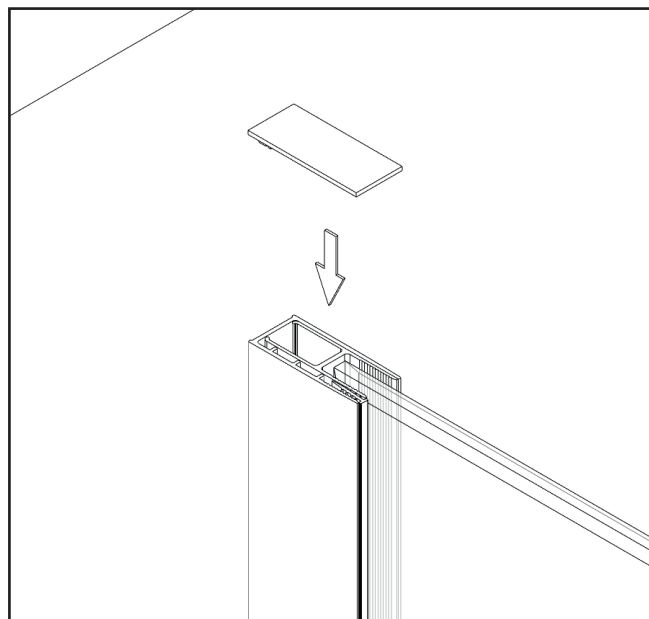

8° PASSAGE

1. Seal with silicone as shown and wait 24 hours.

