

Houston 2L

DESCRIPTION

Shower enclosure with double swing doors, made of 8mm tempered transparent glass, with easy-clean treatment indicated by specific labels. Height 200 cm, chrome aluminum profiles.





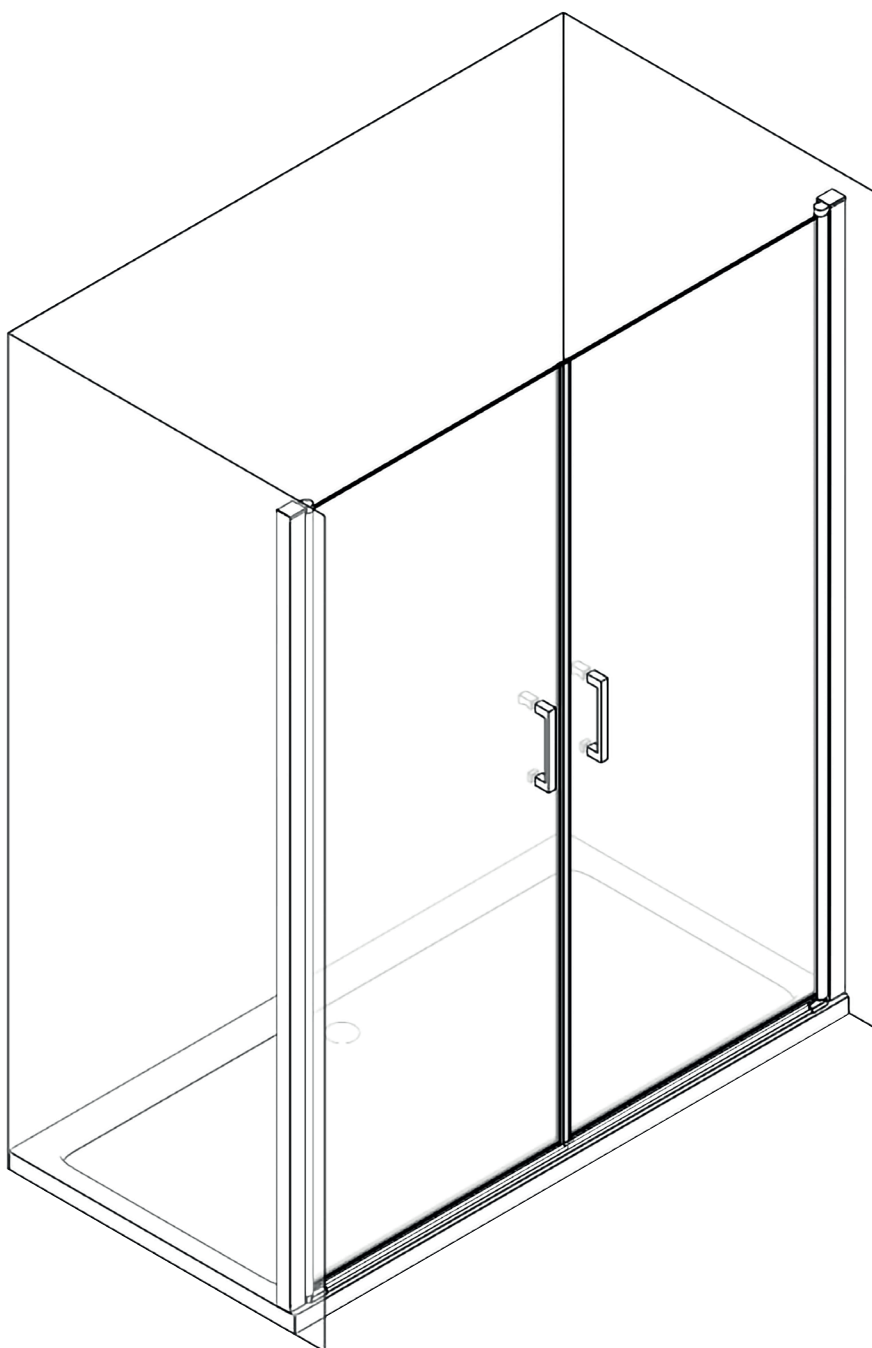



TABLE OF MEASURES

MODEL	MEASURES A
120	1185 - 1225
130	1285 - 1325
140	1385 - 1425
150	1485 - 1525
160	1585 - 1625
170	1685 - 1725

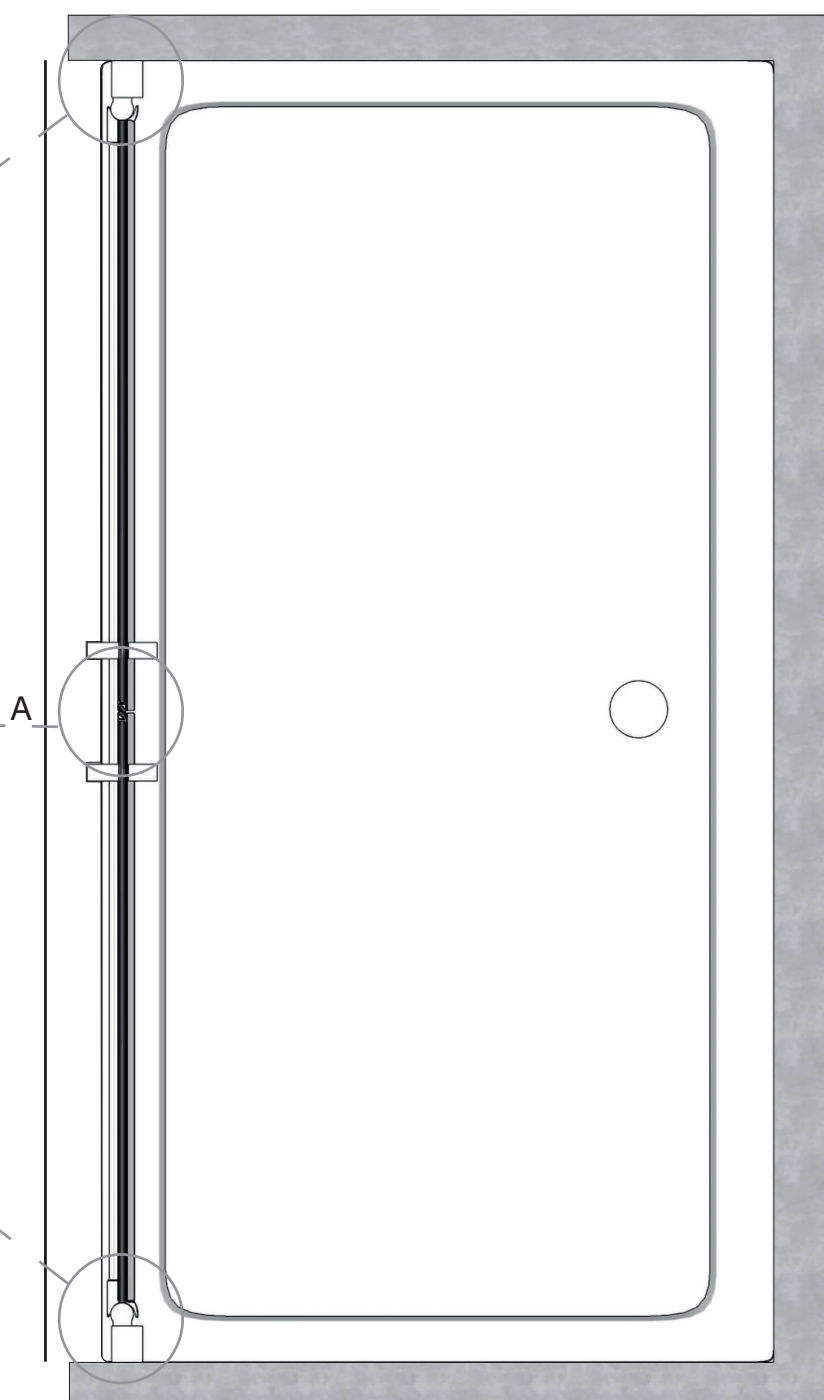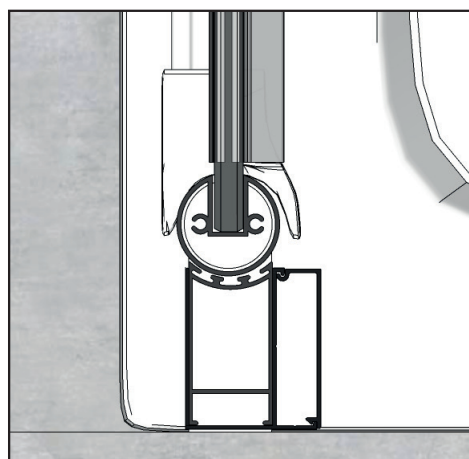
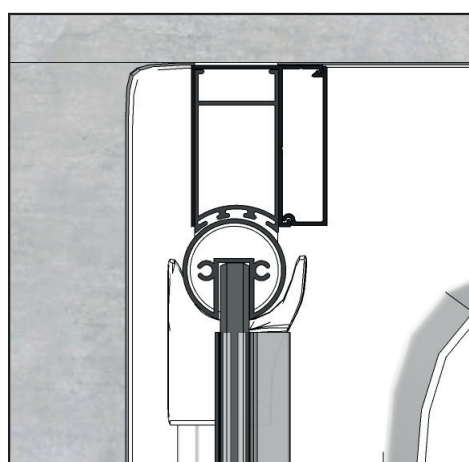
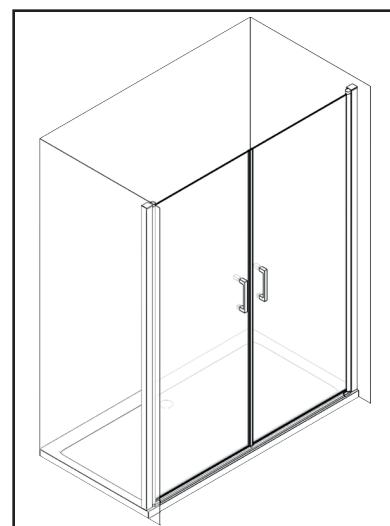


HOUSTON 2L


TOOLS REQUIRED

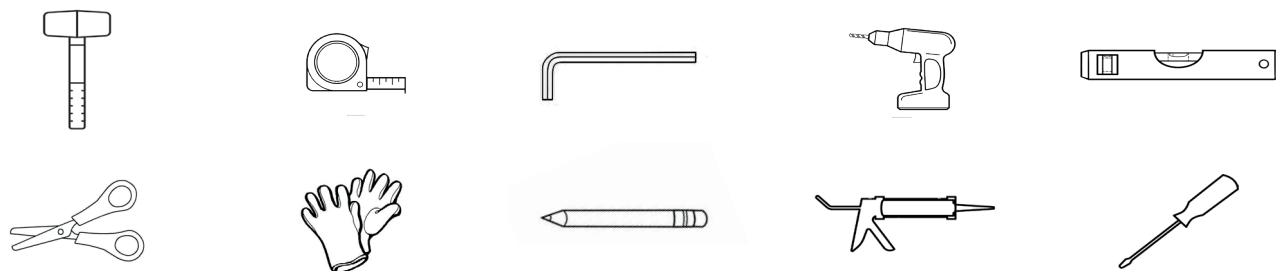


PACKAGE CONTENT (product shipped in two packages)

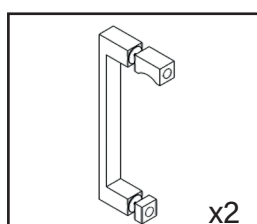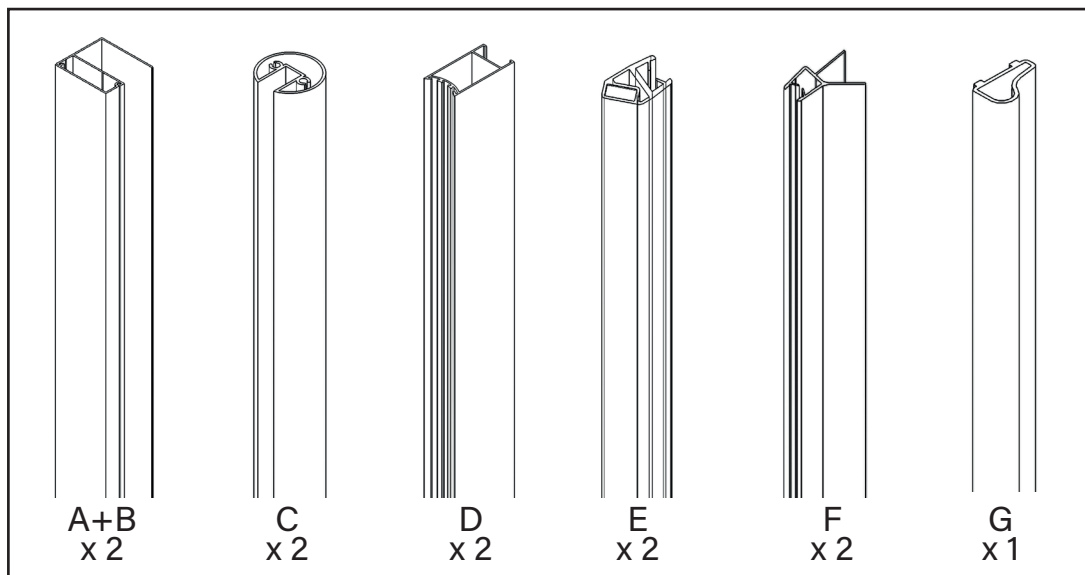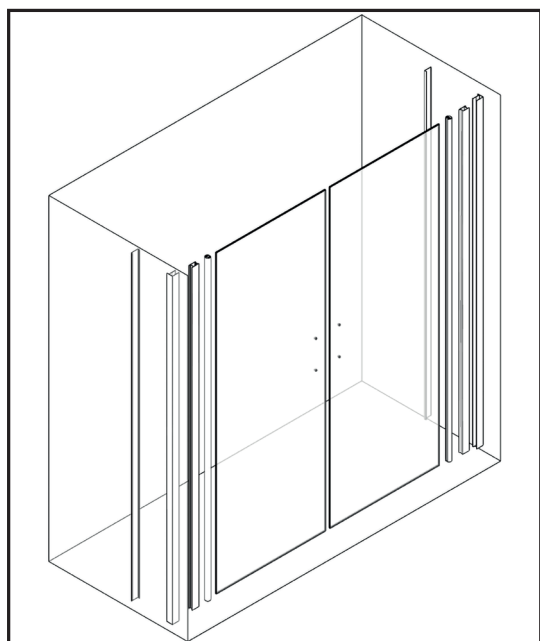

Handle

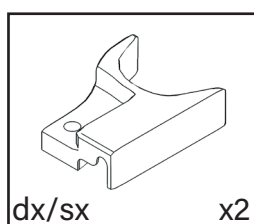

Ground fixing
bracket

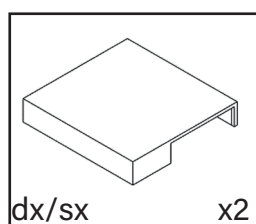

Top cover wall
profile





MOUNTING

1° PASSAGE

1. Check the level placement of the shower tray with a level.
2. Rest the wall profiles and use the level for plumb alignment.
3. Mark the wall holes with a pencil.
4. Drill the wall holes with a drill.
5. Insert the wall plug and screw the screws to secure the profiles.



IMPORTANT

It is good practice not to mount the profiles flush with the outer edge of the shower tray, always leave about 1 cm for optimal aesthetic and functional results.

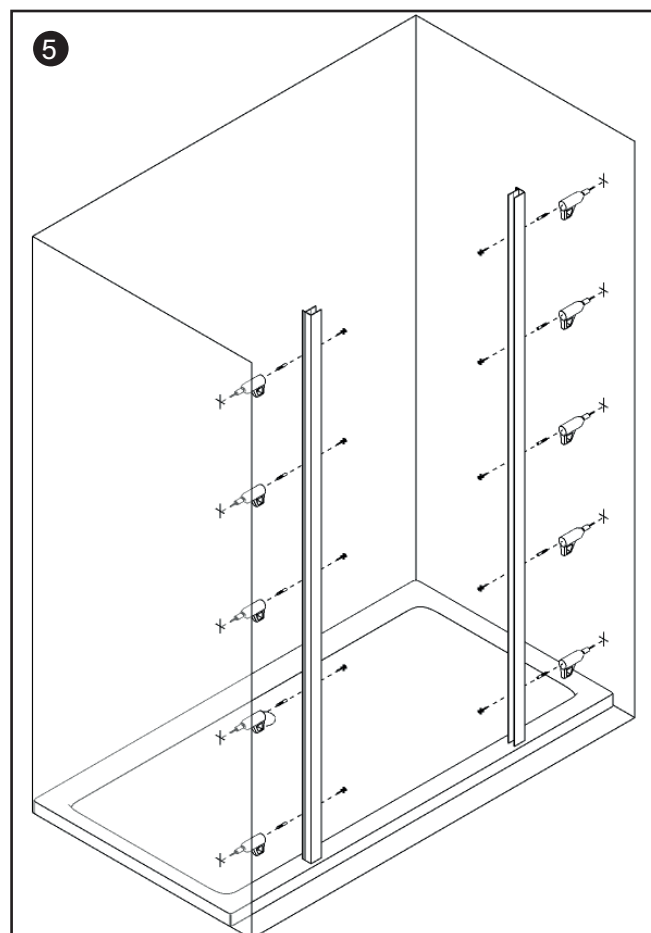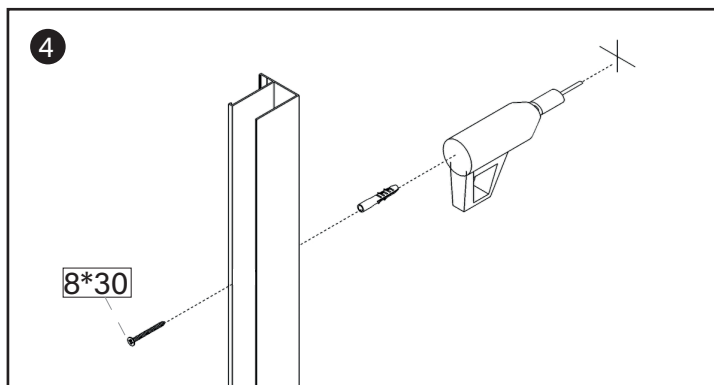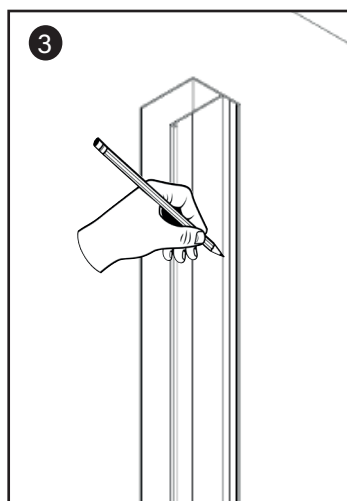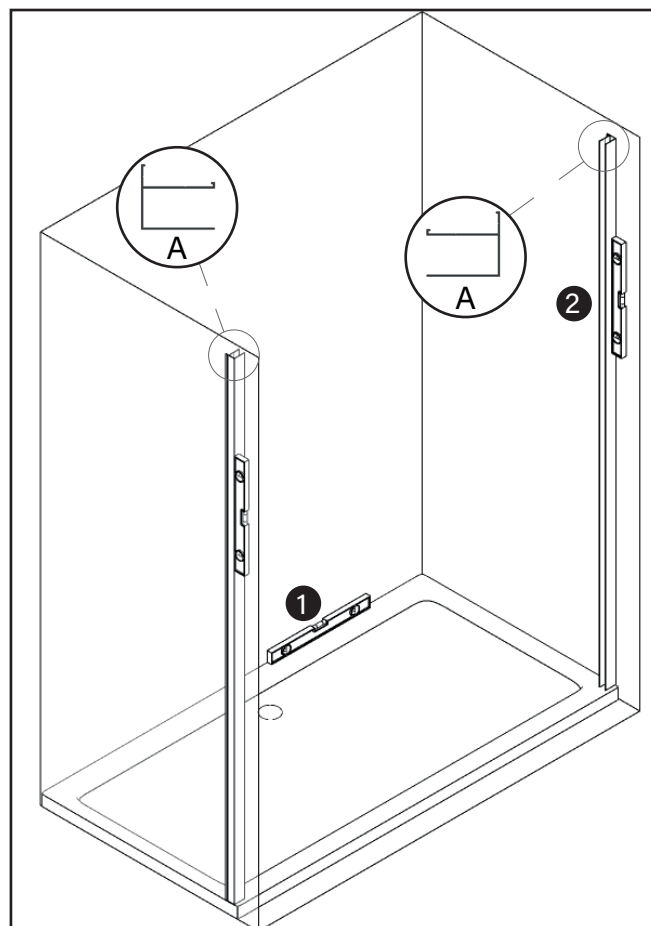




2° PASSAGGIO

1. Proceed with the installation of one door in the wall profile.
2. Install the other door in the wall profile.

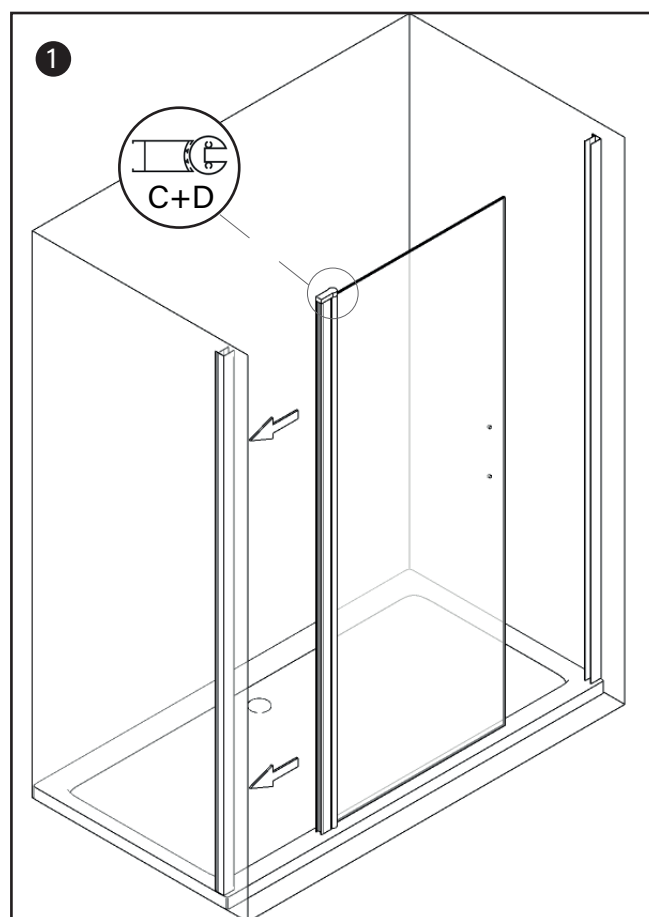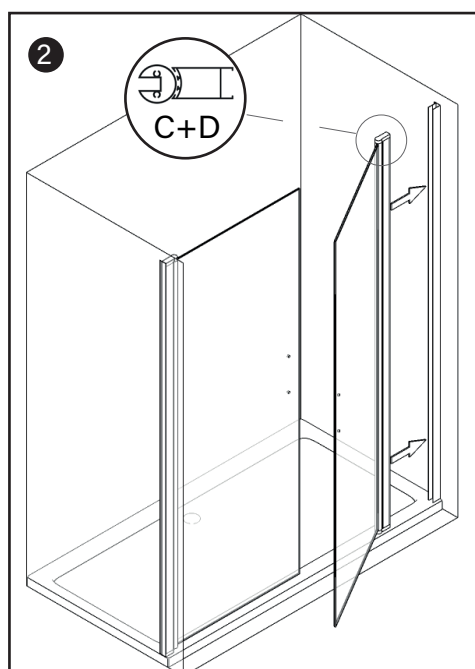

3° PASSAGGIO



1. Install the magnetic closure gaskets in the glass, starting from the bottom, if they are too long, trim them from the top.
2. Install the lower sealing gaskets in the glass, shaping them as needed to avoid interfering with the magnet gasket, safeguarding the fin so that it provides the correct water seal.

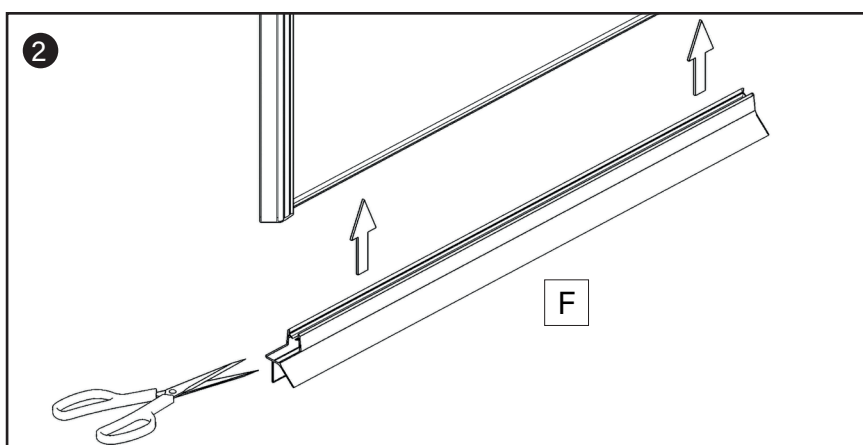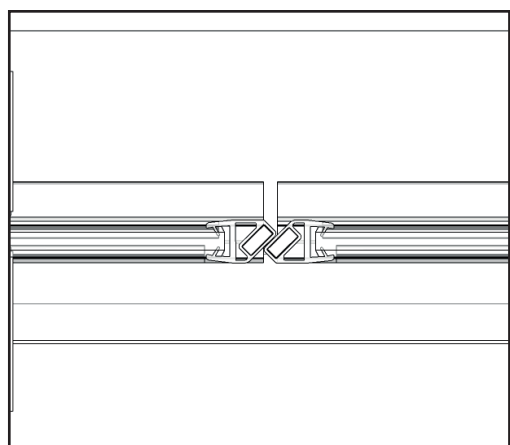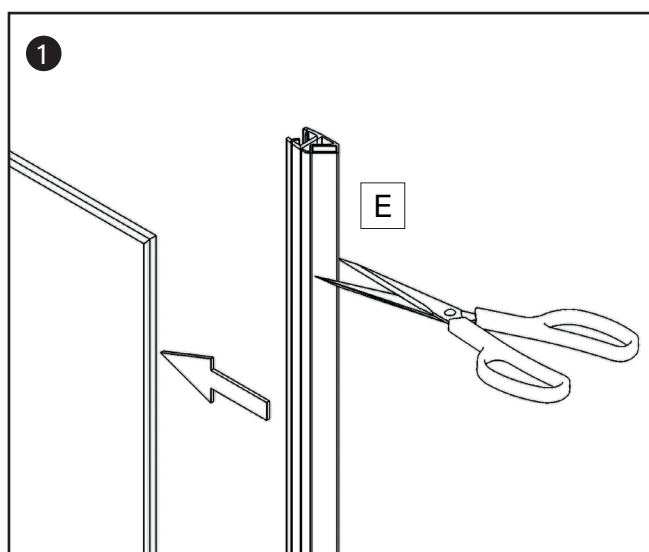

4° PASSAGGIO

1. Install the aluminum sealing profile on the tray along with the right and left supports, fixing them with silicone, no need to drill holes.

Note: The screws provided are used in case of floor-to-ceiling installation.

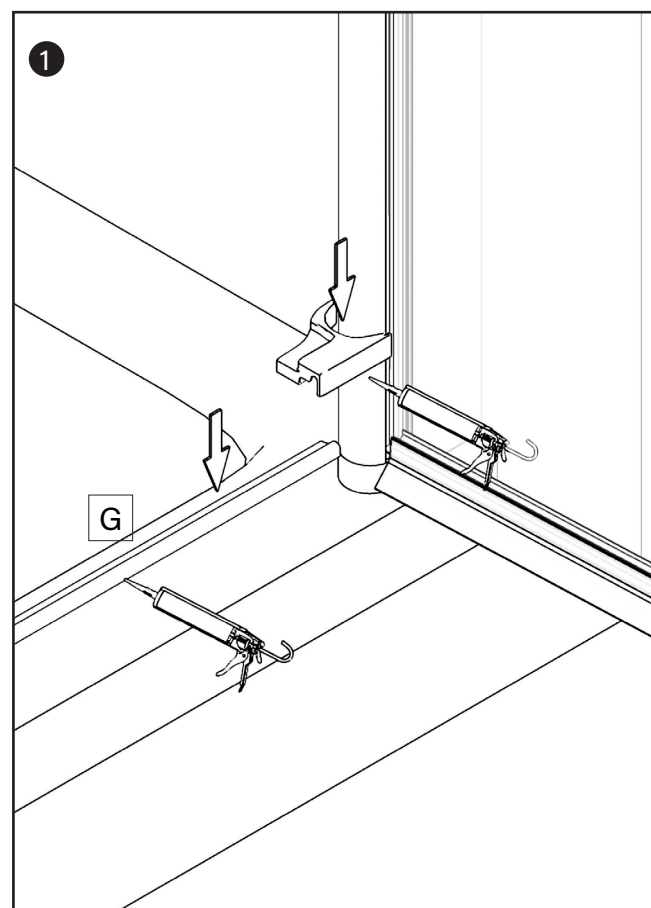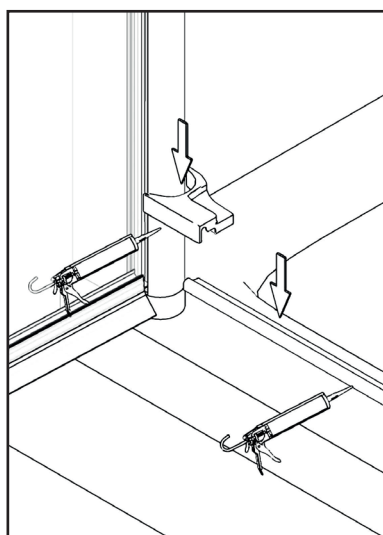


5° PASSAGGIO

1. Drill holes from the inside to secure the shower wall and wall profiles with 8x16 screws.
2. Cover with the aluminum cover.


IMPORTANT: maximum adjustment of 2 cm per side.

Note: A total of 4 holes should be drilled, 2 holes per profile, 1 at the top and 1 at the bottom.

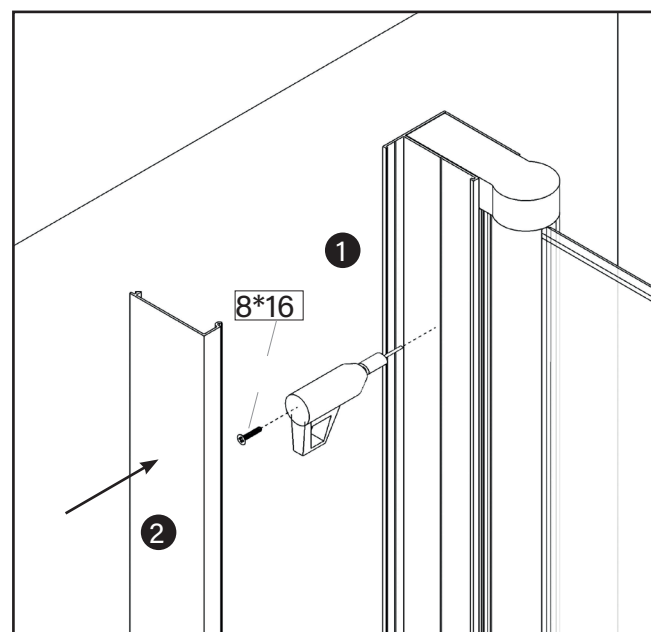

6° PASSAGGIO

1. Insert the decorative cover on the top of the wall profiles.

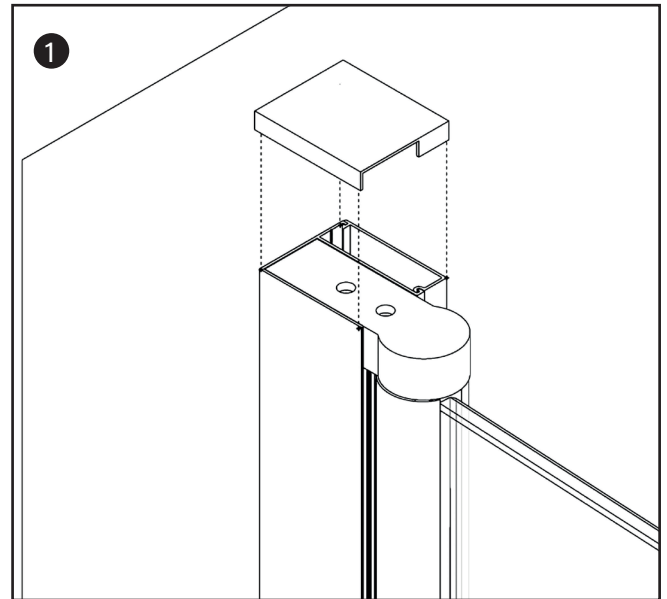

7° PASSAGGIO

1. Install the two handles on the glass (hole on the inside).
2. Seal with silicone as shown in the figure and wait for 24 hours.

