

Los Angeles

DESCRIPTION

Shower door with swing door on asymmetric rotating pivots, opening inwards/outwards. Made of transparent 8mm tempered glass, with easy-clean anti-limescale treatment indicated by appropriate labels. Reversible installation, height 200 cm, black frame.





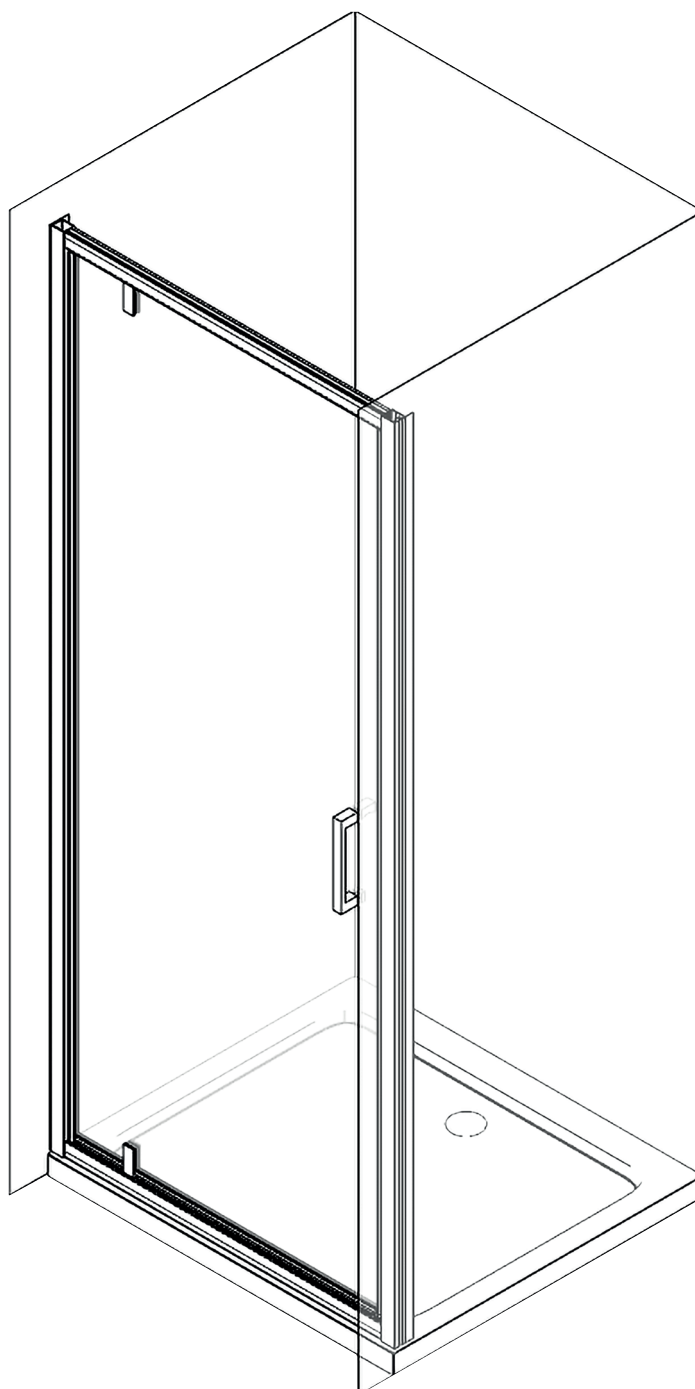


TABLE OF MEASURES


MODEL	MEASURES A
65	610 - 640
70	660 - 690
75	710 - 740
80	760 - 790
85	810 - 840
90	860 - 890
100	960 - 990
110	1060 - 1090
120	1160 - 1190

REVERSIBLE


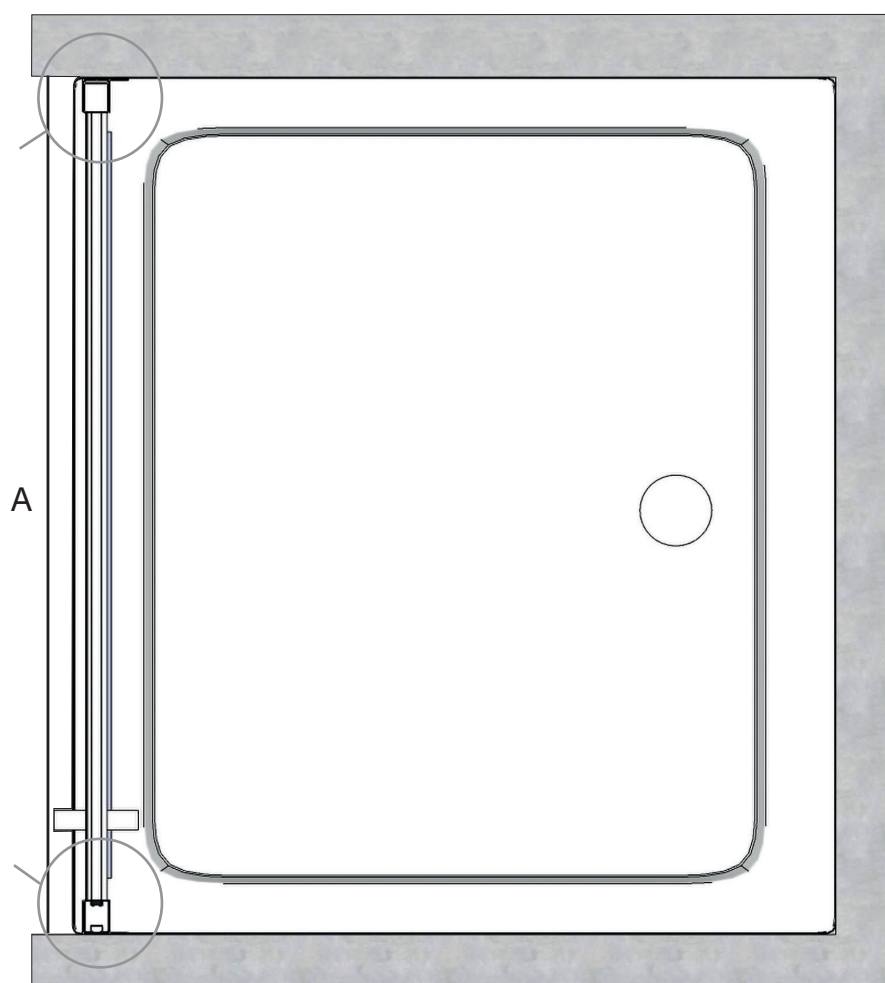
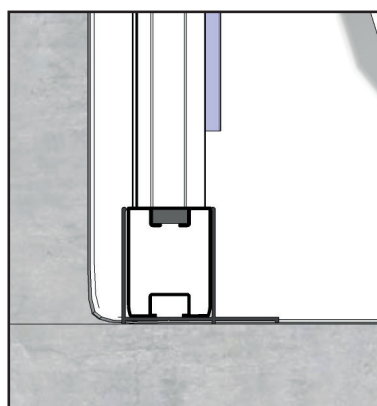
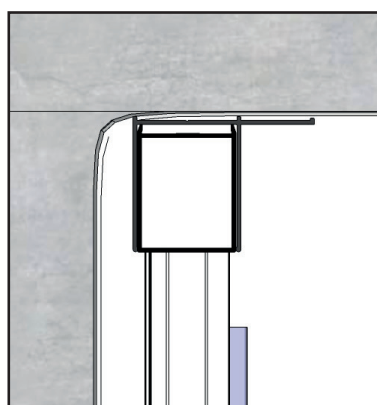
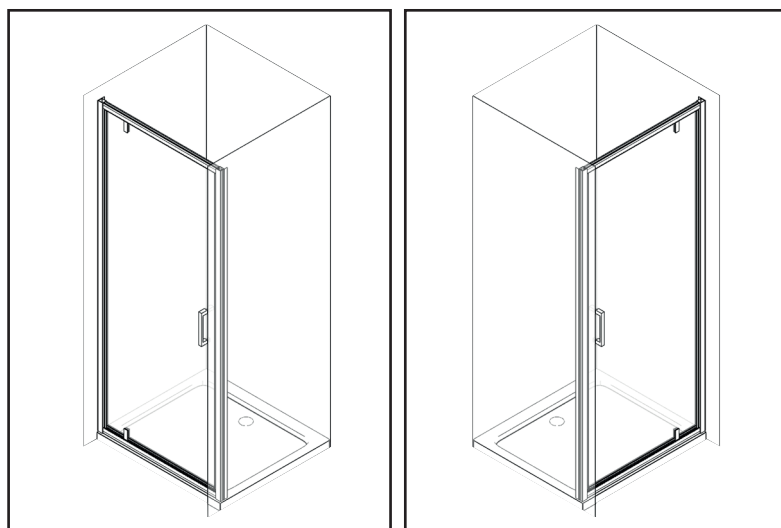


LOS ANGELES


TOOLS REQUIRED

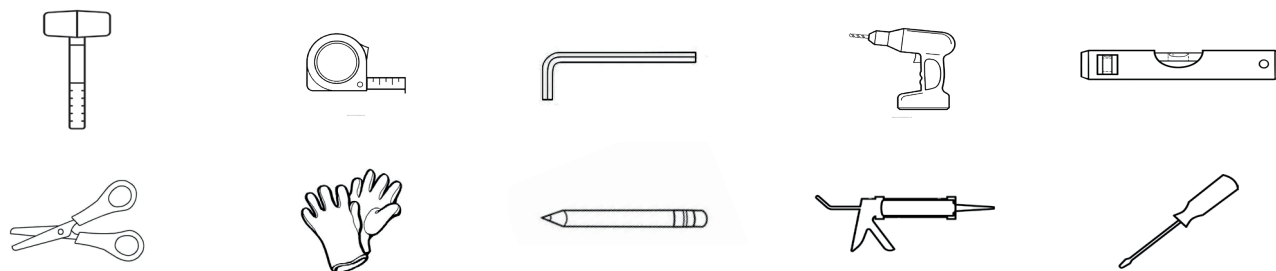


PACKAGE CONTENTS

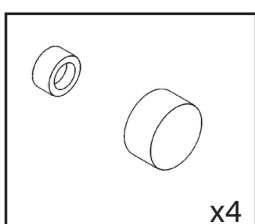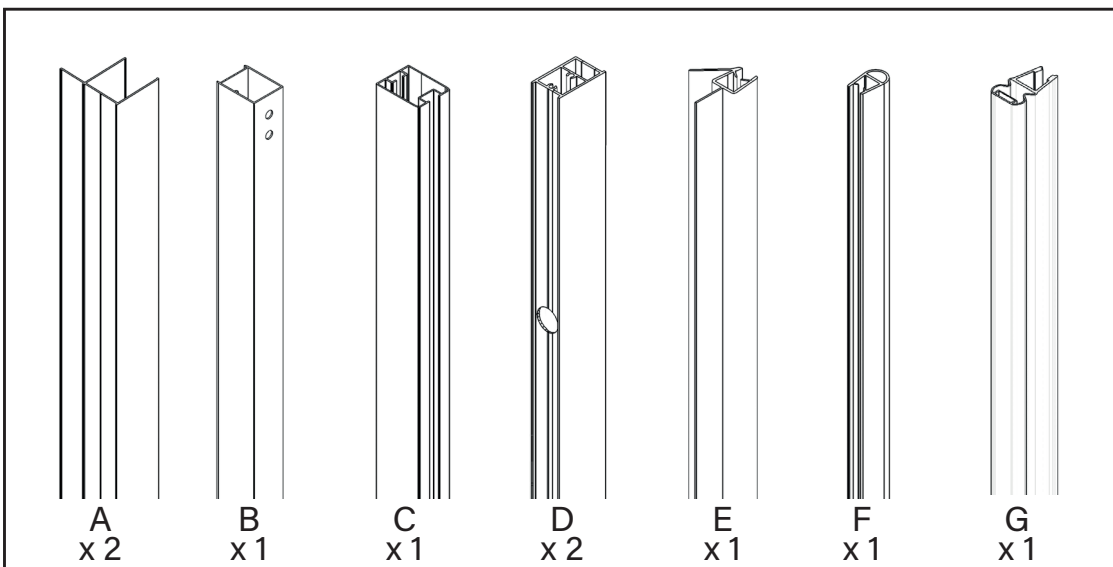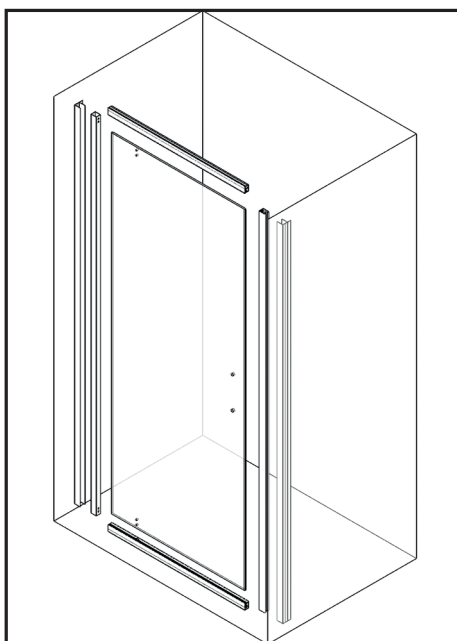

Screw caps

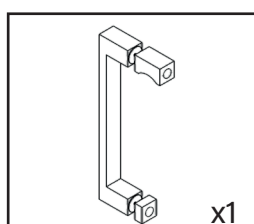

Handle

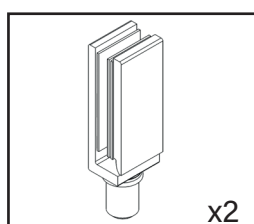



Rotating hinge

MOUNTING

1st STEP



1. Build the door frame by connecting the upper and lower profile to the side profile with hinges using 6x30 screws.

Note: Pay attention to the position of the holes for the hinge in the upper and lower profile.

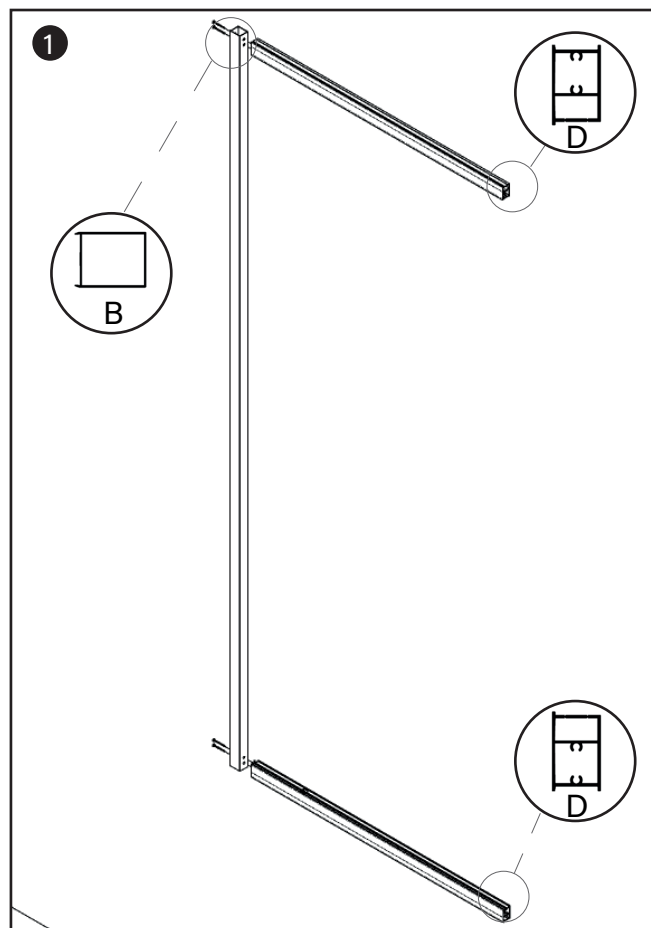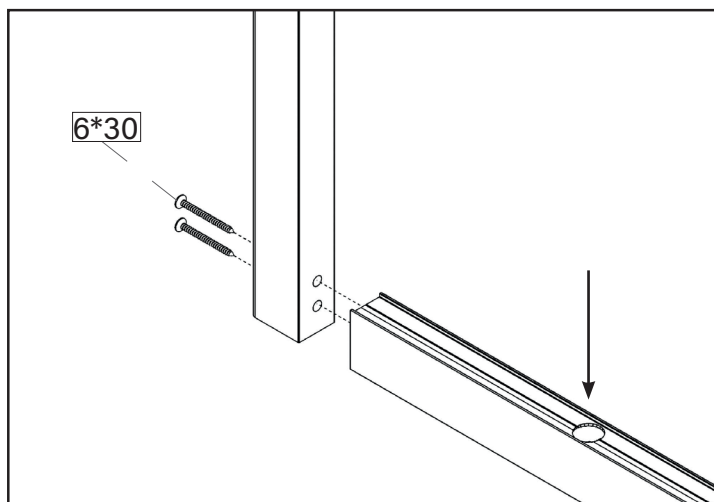



2nd STEP

1. Insert the magnet into the closing profile.
2. Connect the door closing profile to the upper and lower profile using 6x30 screws.

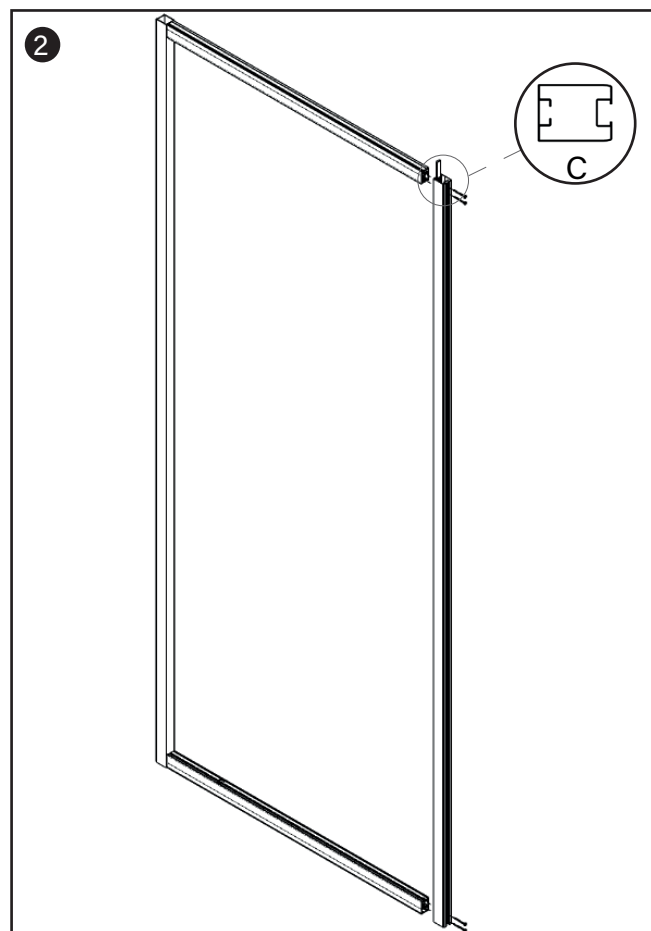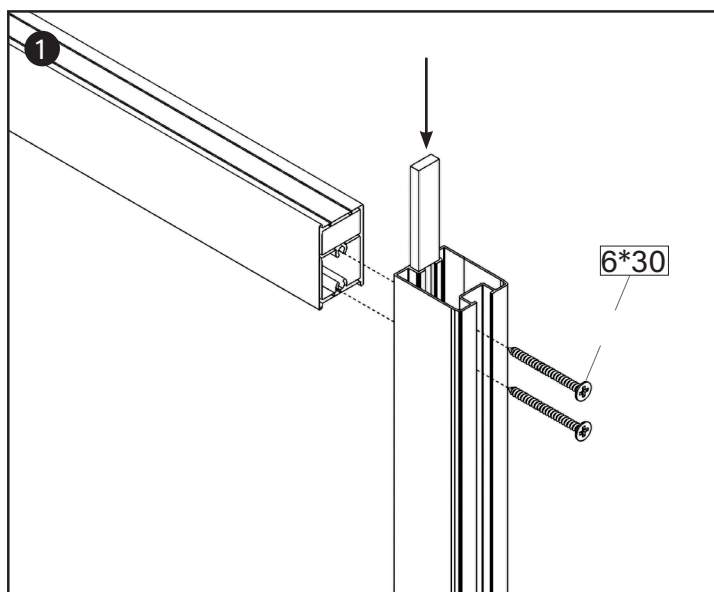

3rd STEP


1. Install the hinges in the upper and lower profile using 8x18 screws.

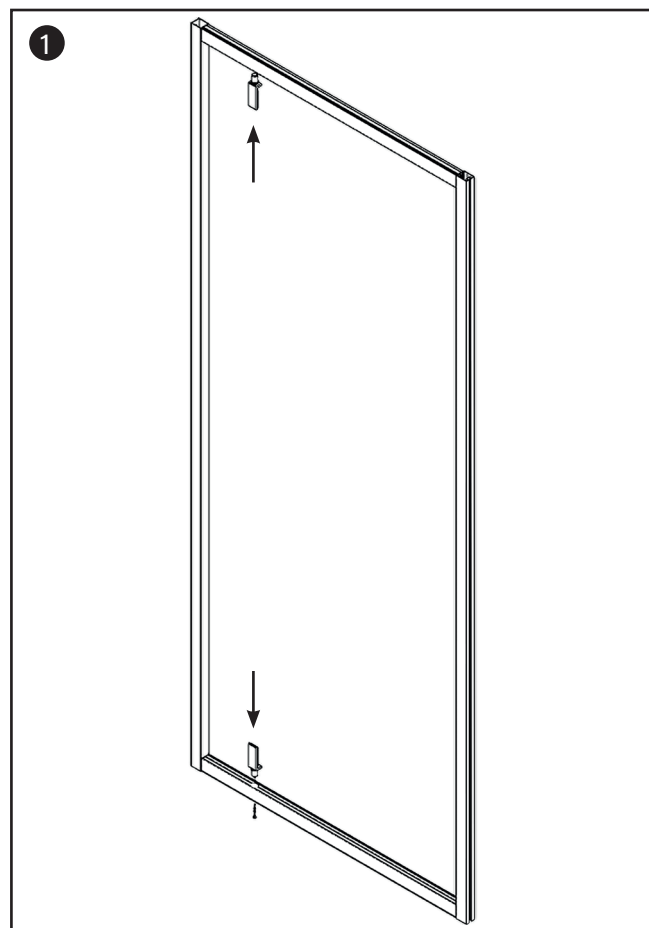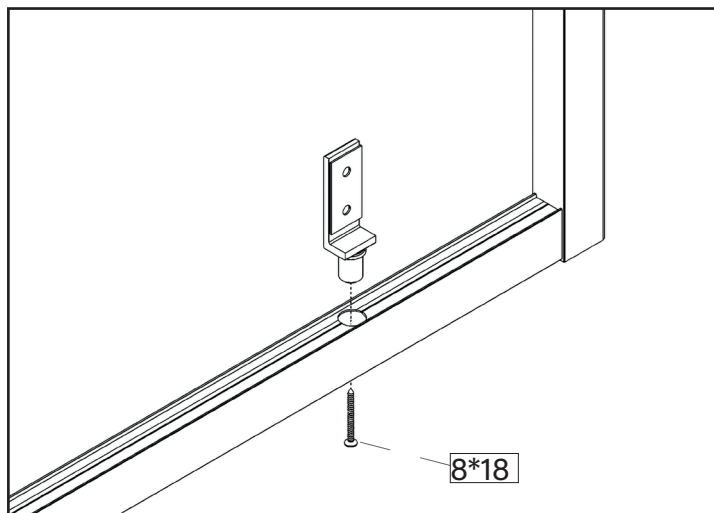

4th STEP

1. Insert the wall profiles into the side profiles of the frame.


Note: The side profiles should go inside the wall profiles.

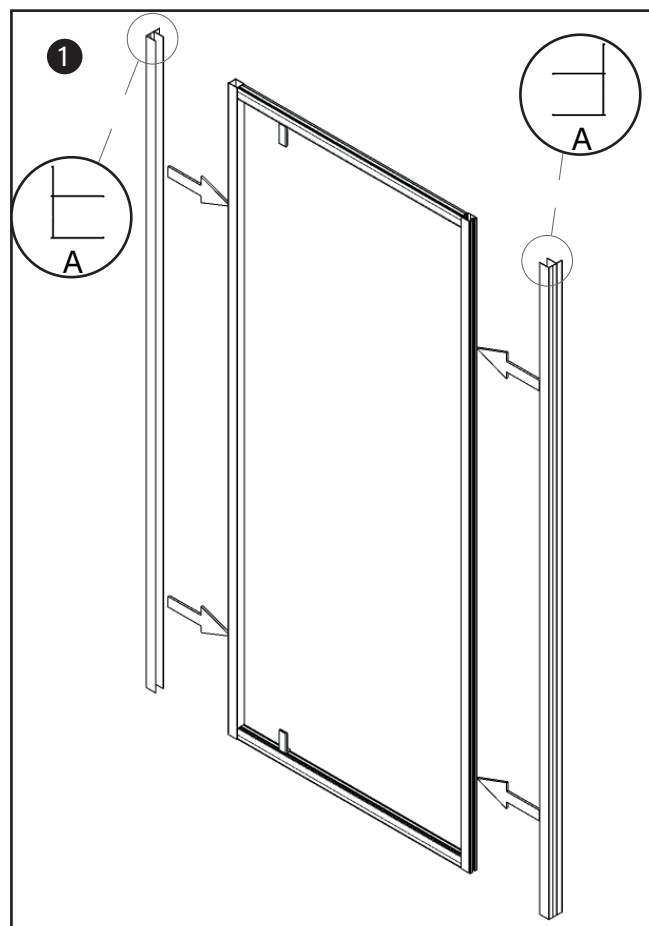

5th STEP


1. Position the previously assembled frame.

Note: Before securing it, adjust the frame extension by working on the telescopic (one profile fits inside the other).

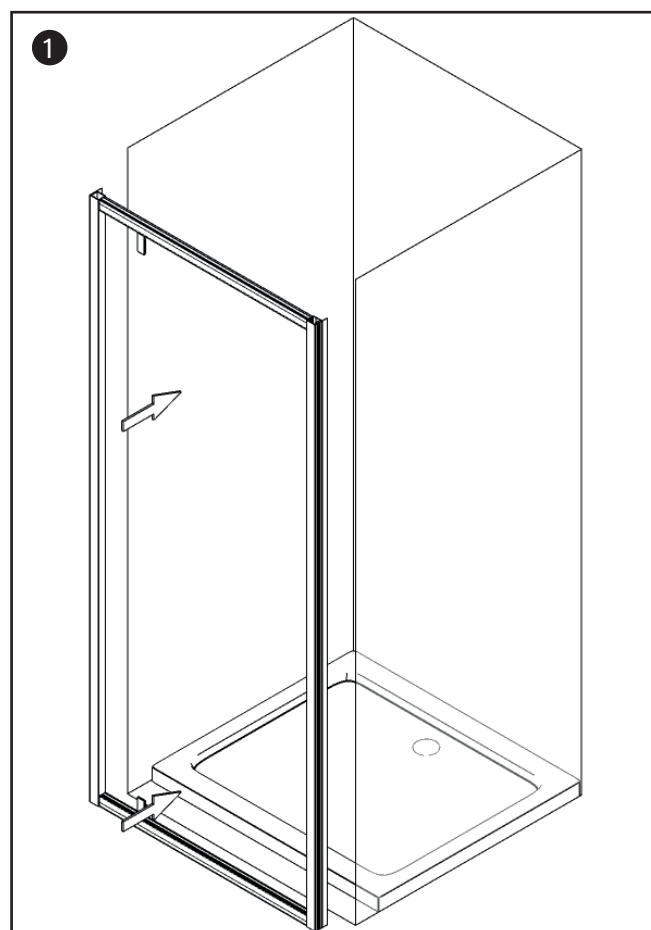





6th STEP

1. Check the level of the shower tray with the level.
2. Place the wall profiles and use the level for vertical alignment.

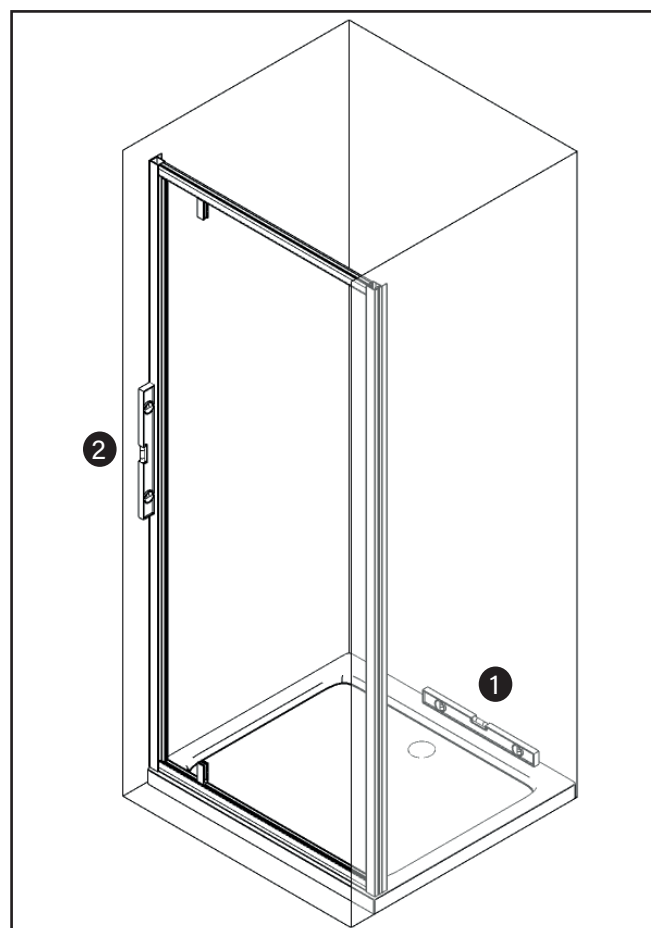




7th STEP

1. Proceed with fixing the shower door.
2. Mark the wall holes with a pencil.
3. Drill the wall holes, insert the wall plugs, and screw the screws to secure the profile.
4. Repeat the operation for the other profile.

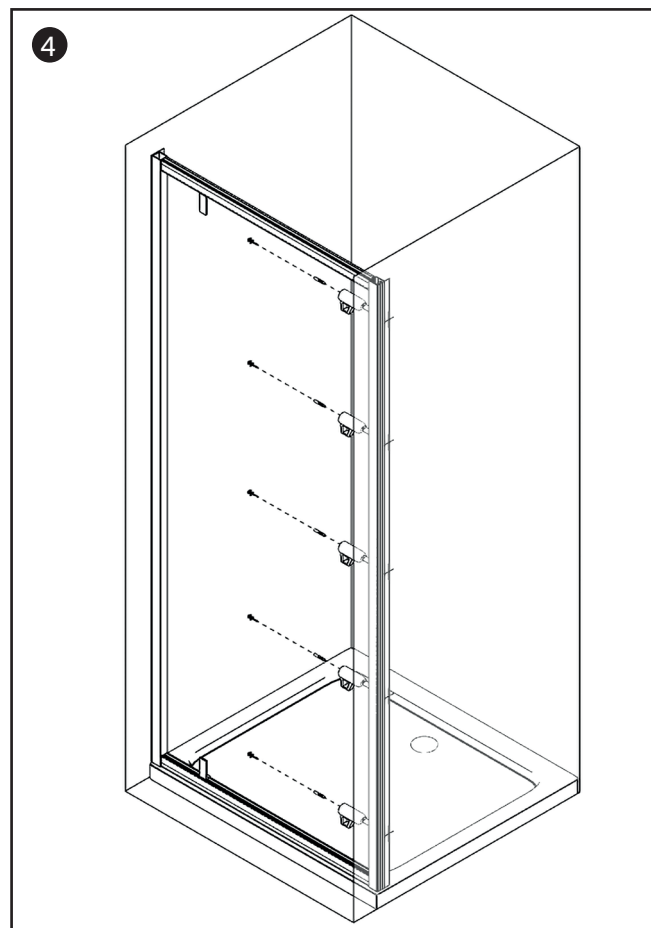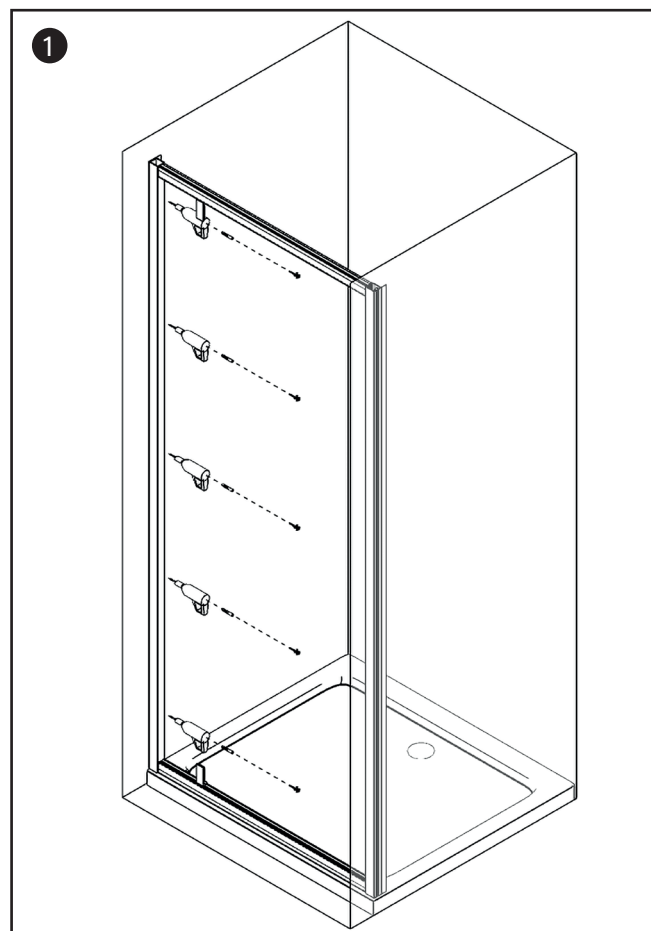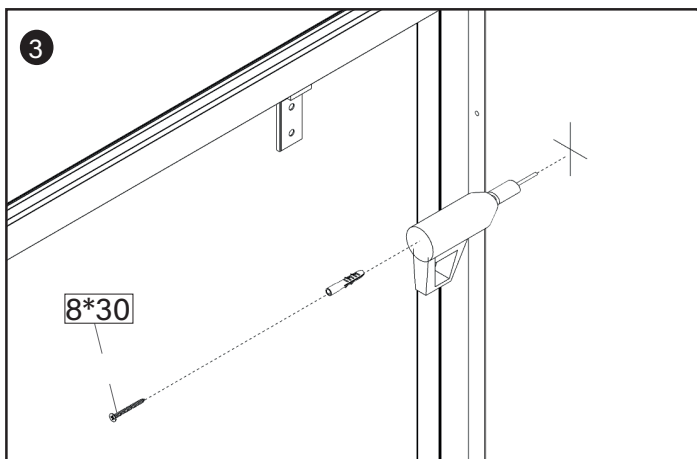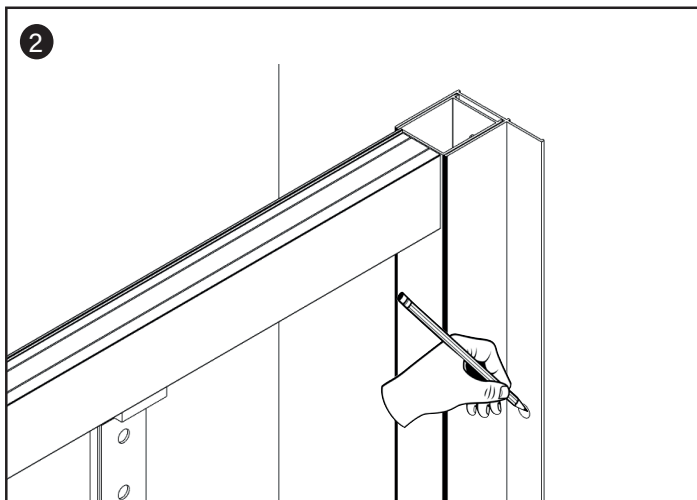



8th STEP

1. Insert the magnetic sealing strip into the glass, using the entire height, starting from the bottom. If too long, trim it from the top.
2. Insert the lower sealing strip.
3. Insert the side sealing strip.
4. For proper hinge installation, shape the sealing strip to avoid any interference.

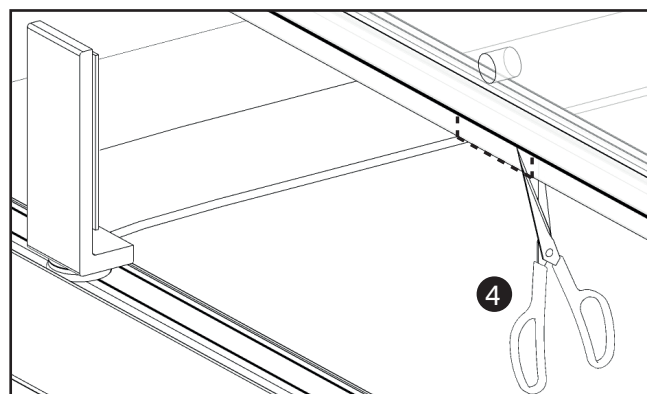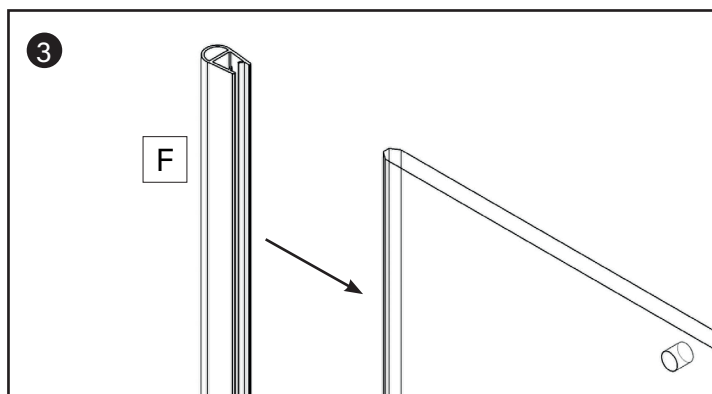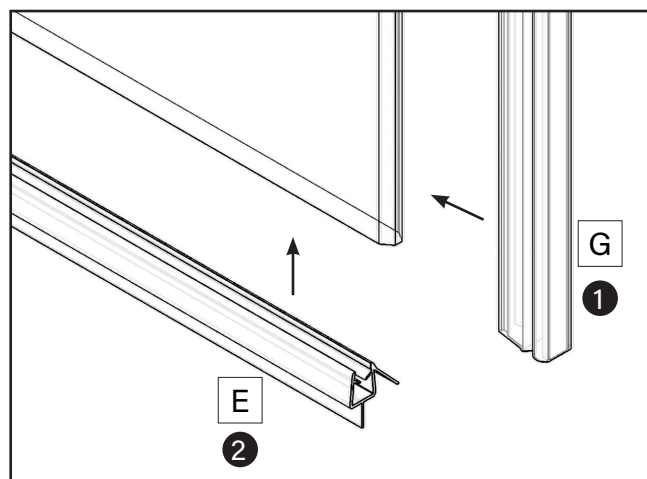

9th STEP


1. Insert the glass into the frame.
2. Secure the hinges with the appropriate seals and screws.

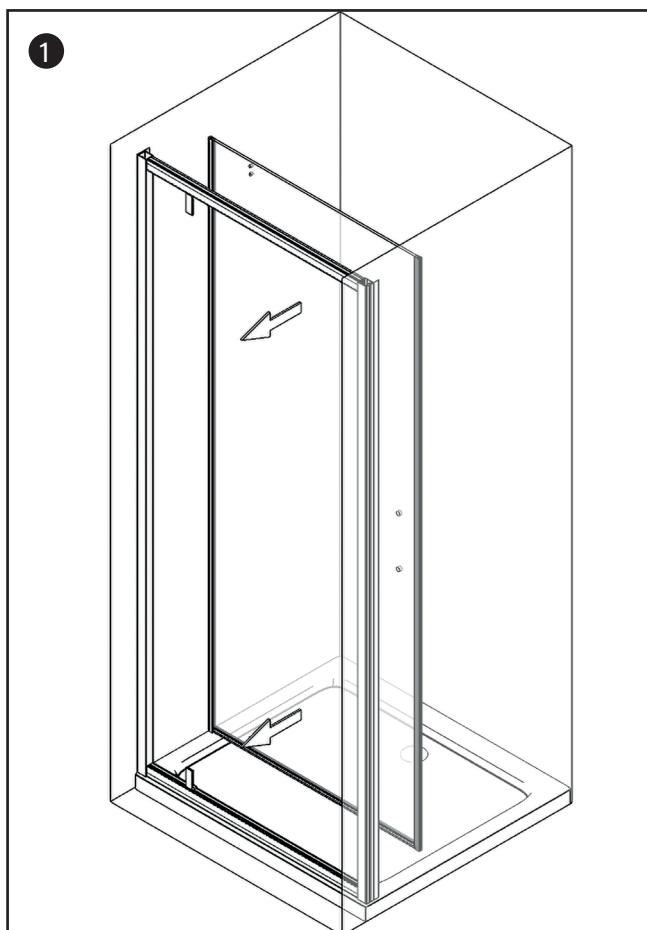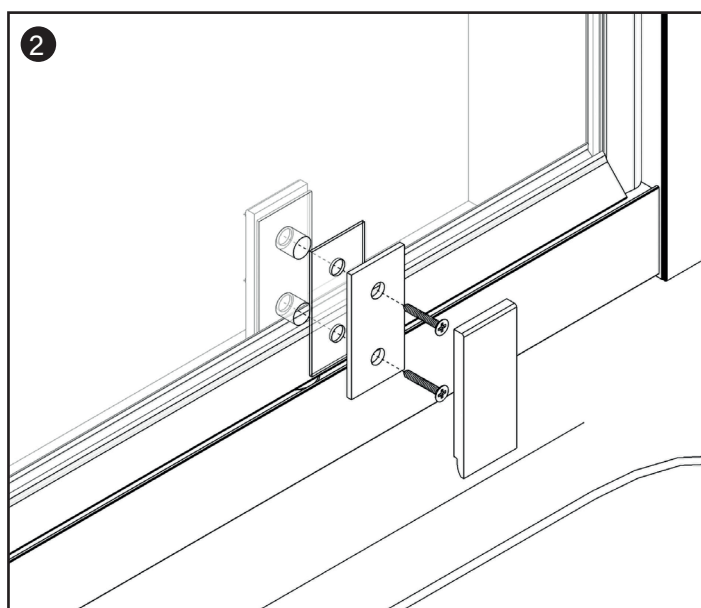

10th STEP

1. Drill holes and apply the screws from the inside to lock the frame to the wall profiles using 8x16 screws.

Note: A total of 4 holes must be drilled, two on the right and two on the left, 1 top and 1 bottom. The screws will be covered with appropriate chrome caps.

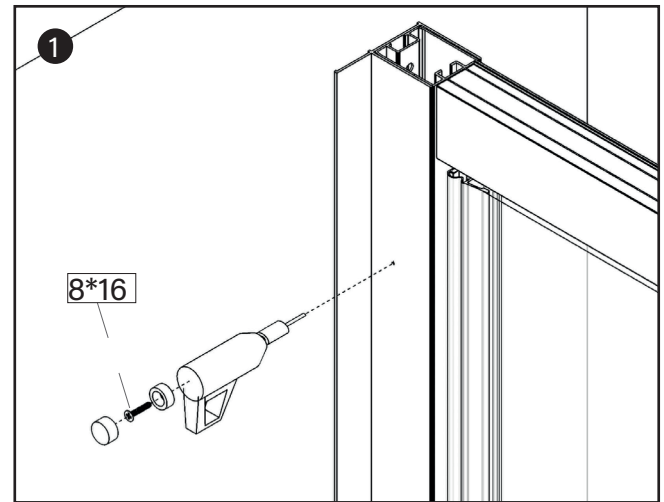

11th STEP

1. Install the handle on the glass (hole on the inside).
2. Seal with silicone as shown in the figure and wait for 24 hours.

