

Caracas

DESCRIPTION

Shower door with folding opening, made of 6 mm toughened glass, with easy-clean anti-limescale treatment indicated by special labels. Reversible installation, height 190 cm, clear glass and chrome-plated brass hinges.





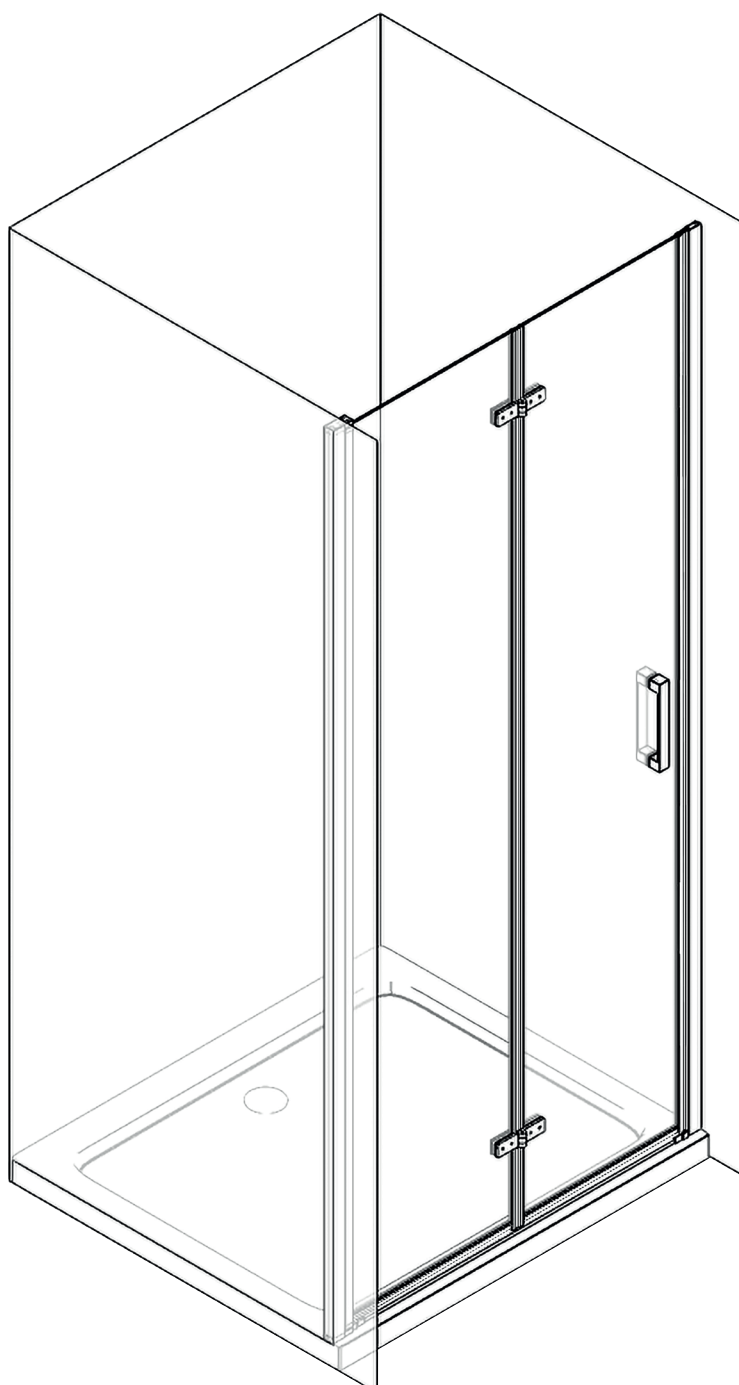



TABLE OF MEASURES

MODEL	MEASURES A
60	580 - 615
65	630 - 665
70	680 - 715
75	730 - 765
80	780 - 815
85	830 - 865
90	880 - 915
95	930 - 965
100	980 - 1015

REVERSIBLE

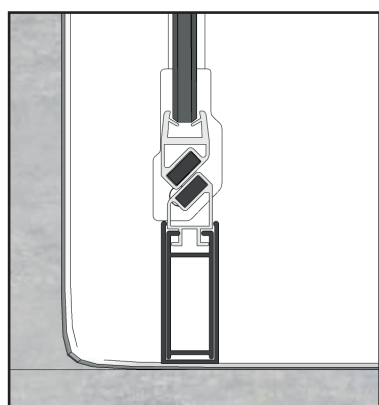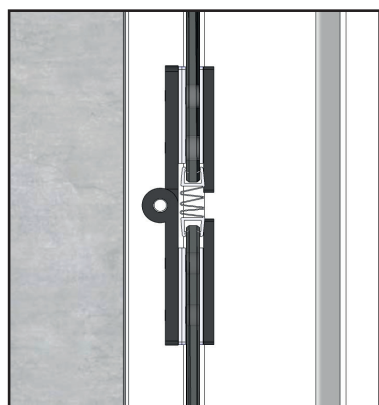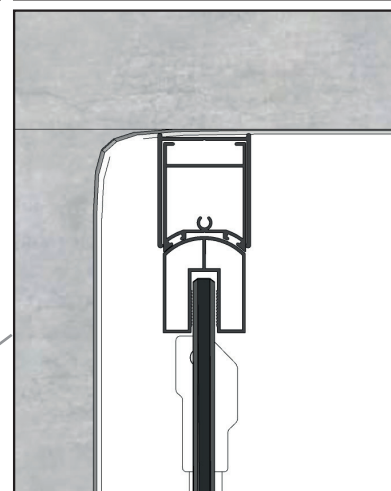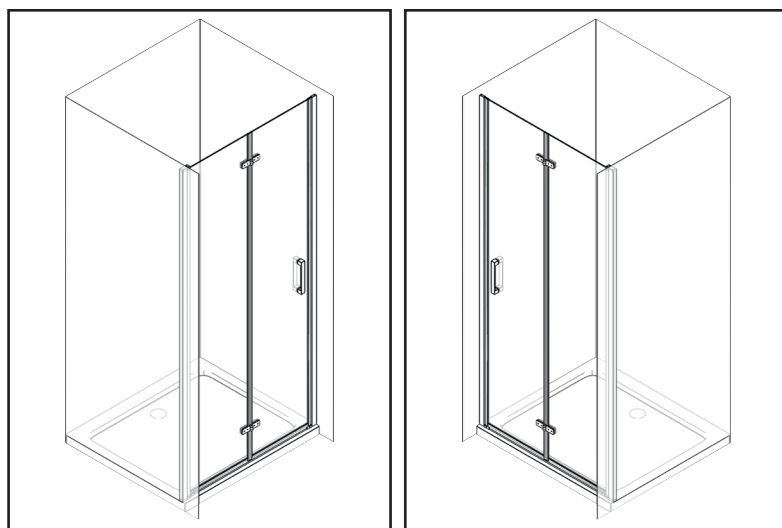


A

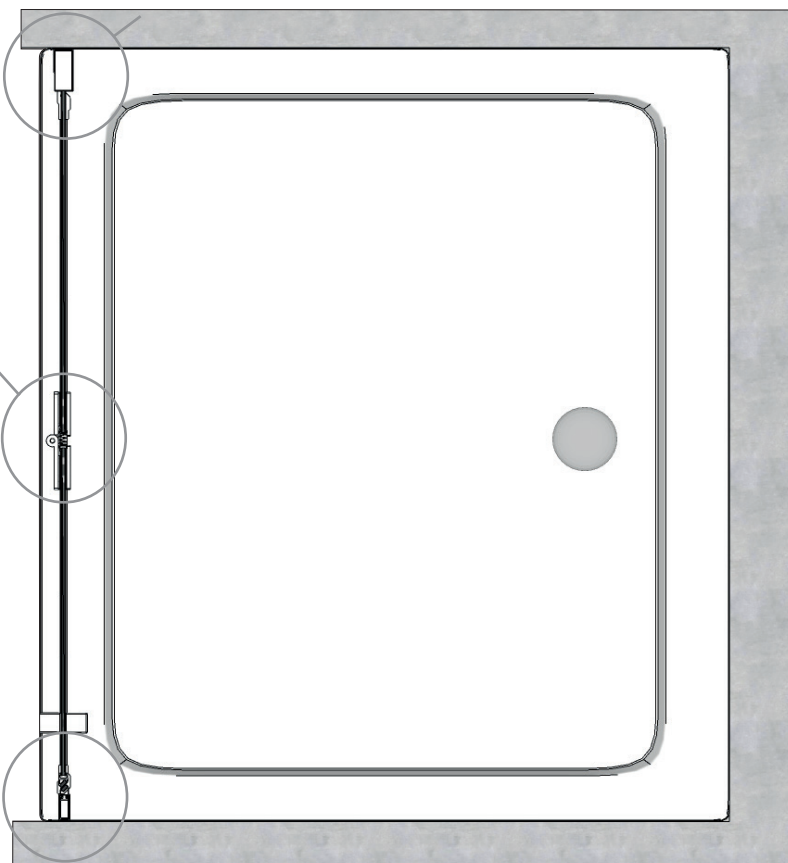


CARACAS

TOOLS REQUIRED

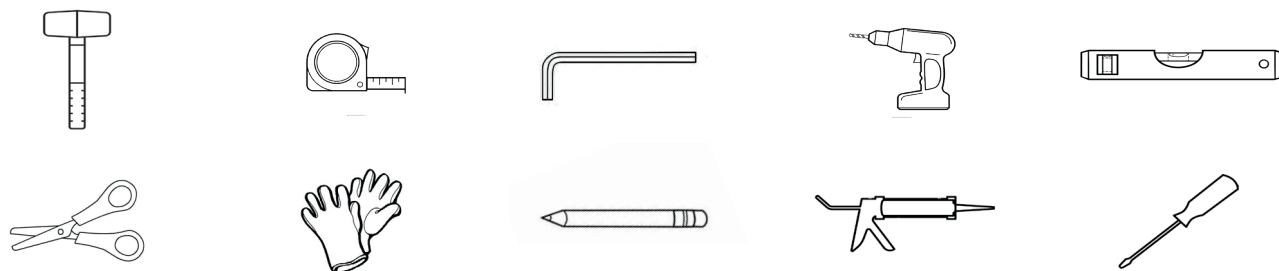

PACKAGE CONTENTS

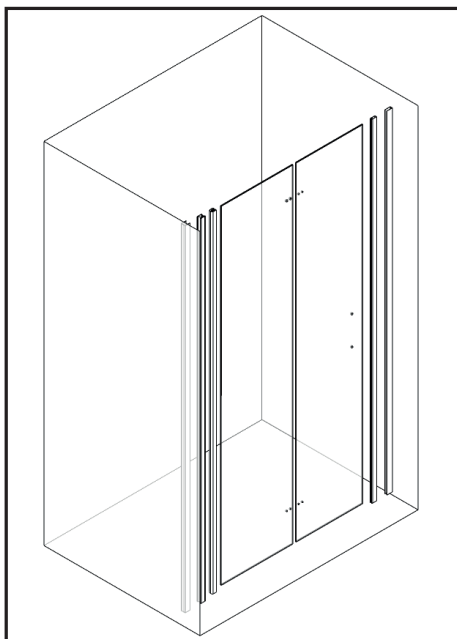







x5
8*30


x4
6*30


x4
6*16


x2
6*10


x11

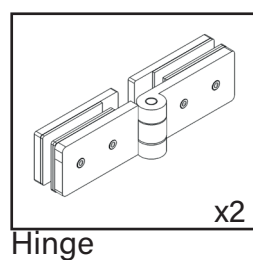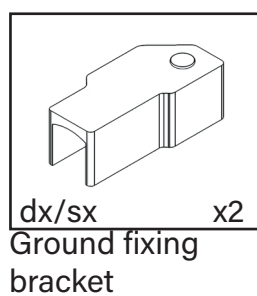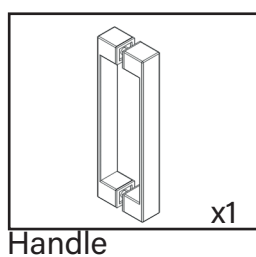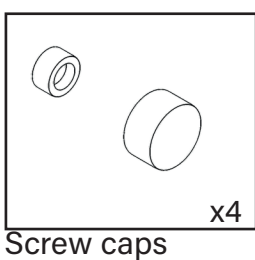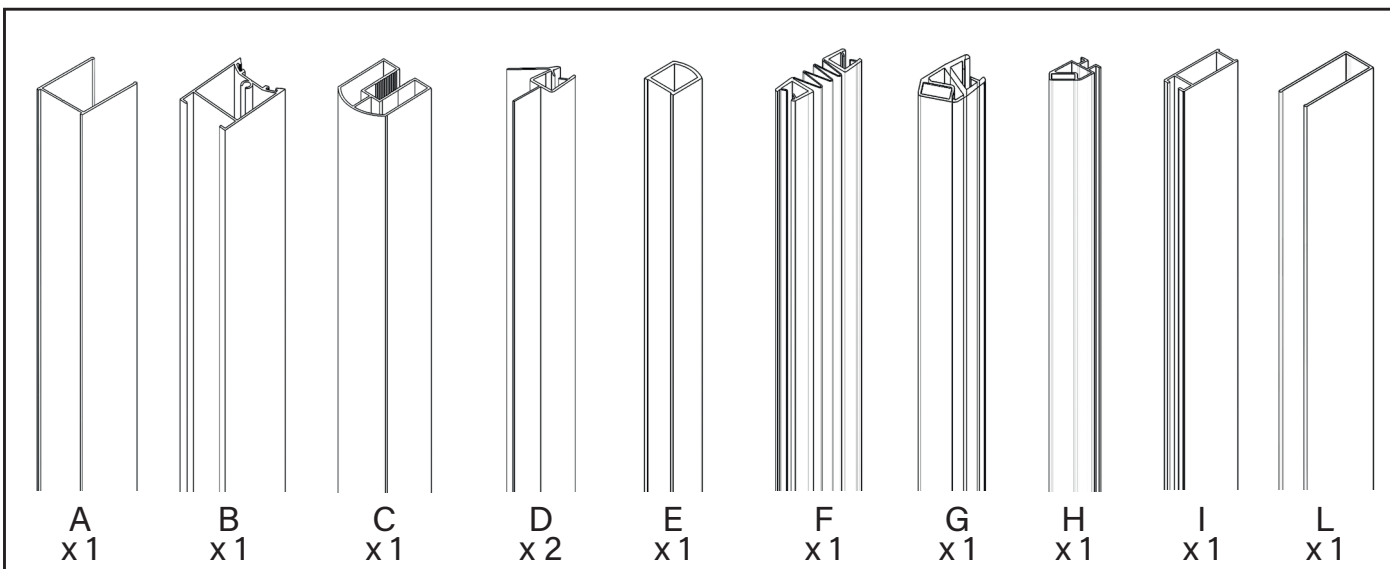





MOUNTING

1° PASSAGE

1. Check the levelling of the shower tray with the level.
2. Place the profile on the wall and use the level to plumb it.
3. Drill the holes in the wall with a pencil.
4. Drill the holes in the wall with the drill.
5. Insert the wall plug and screw in the screws to secure the profile.


IMPORTANT

it is good practice not to install the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimal aesthetic and functional result.

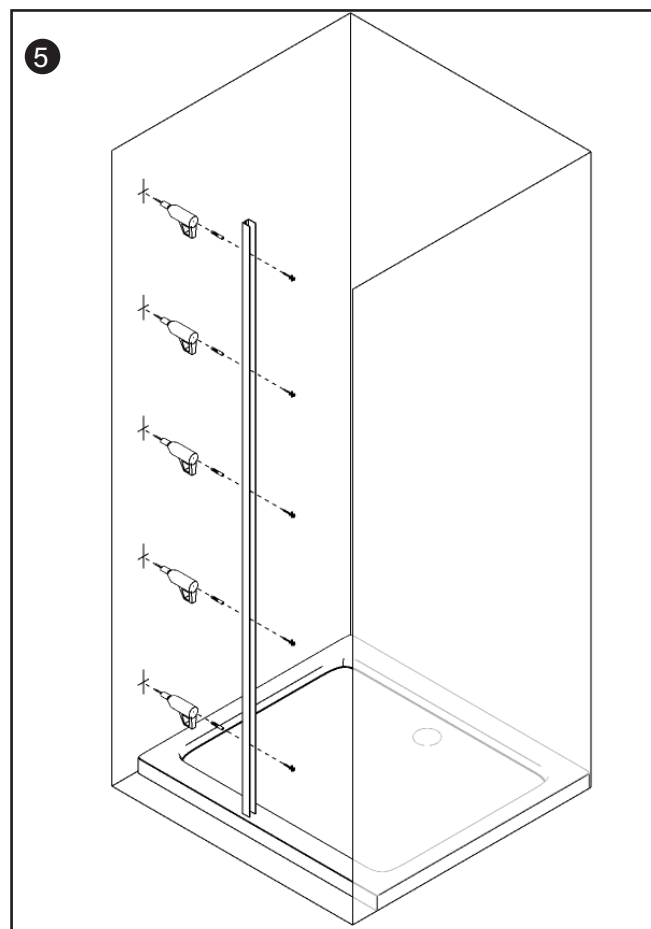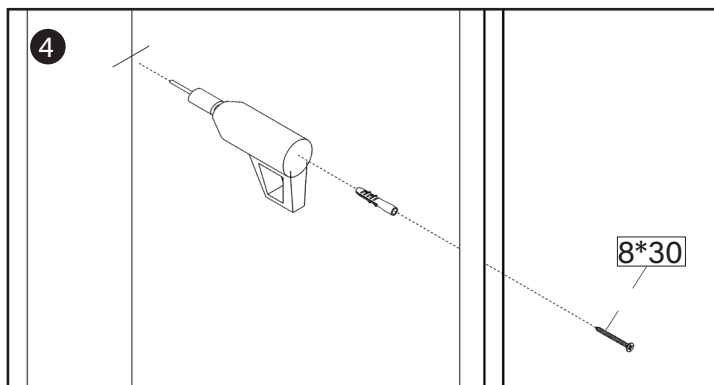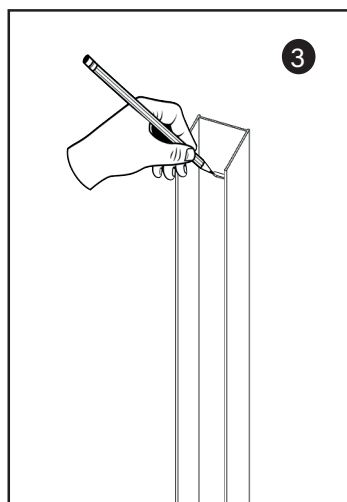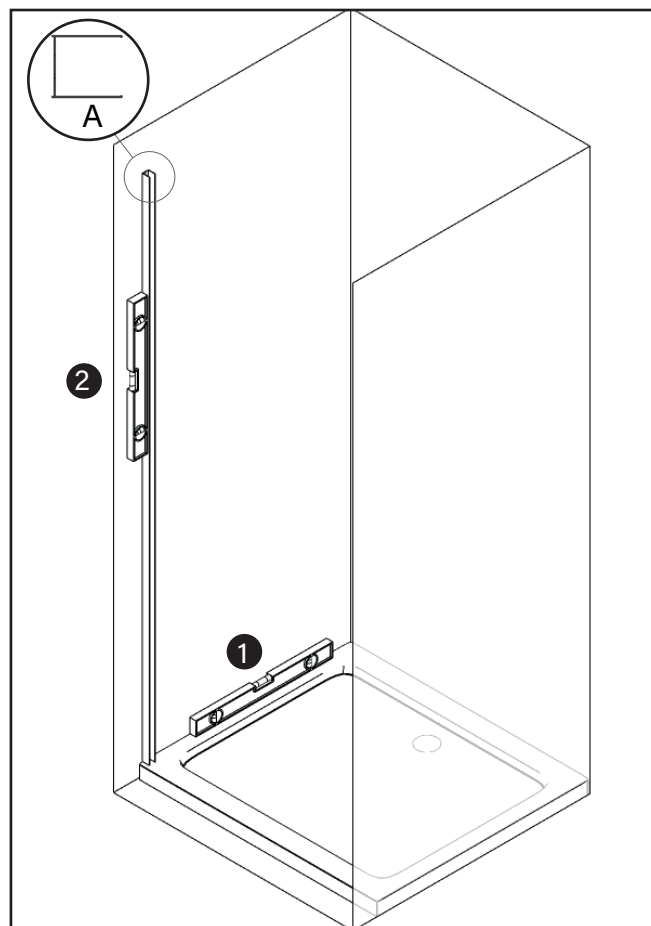



2° PASSAGE

1. Place the 6 mm glass on the door side inside the previously mounted wall profile.

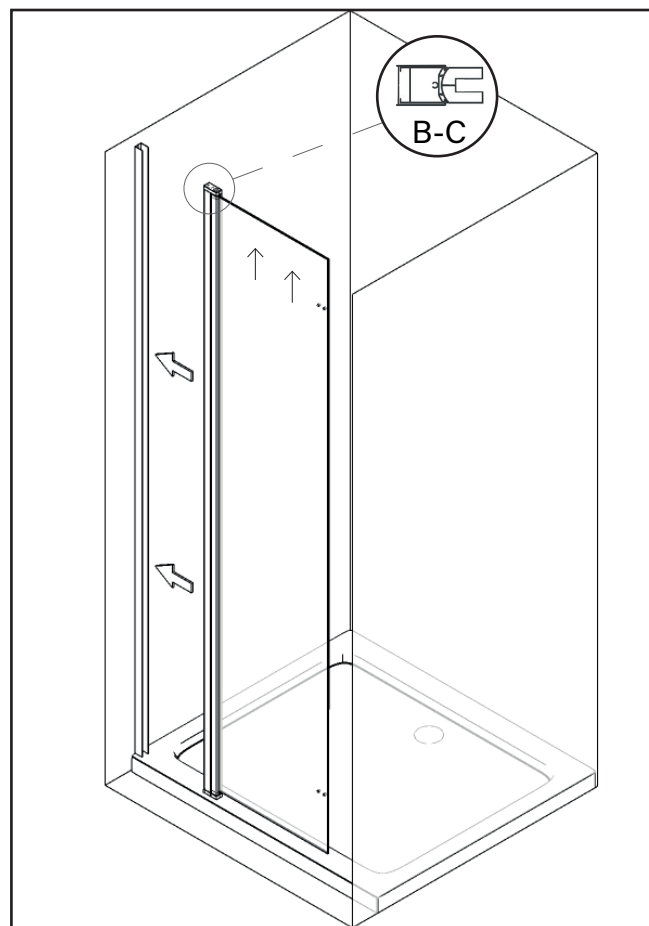



3° PASSAGE

1. Position the hinges on the 6 mm glass on the door side and fasten them to the glass as shown.
2. Insert the drip seal under the glass.

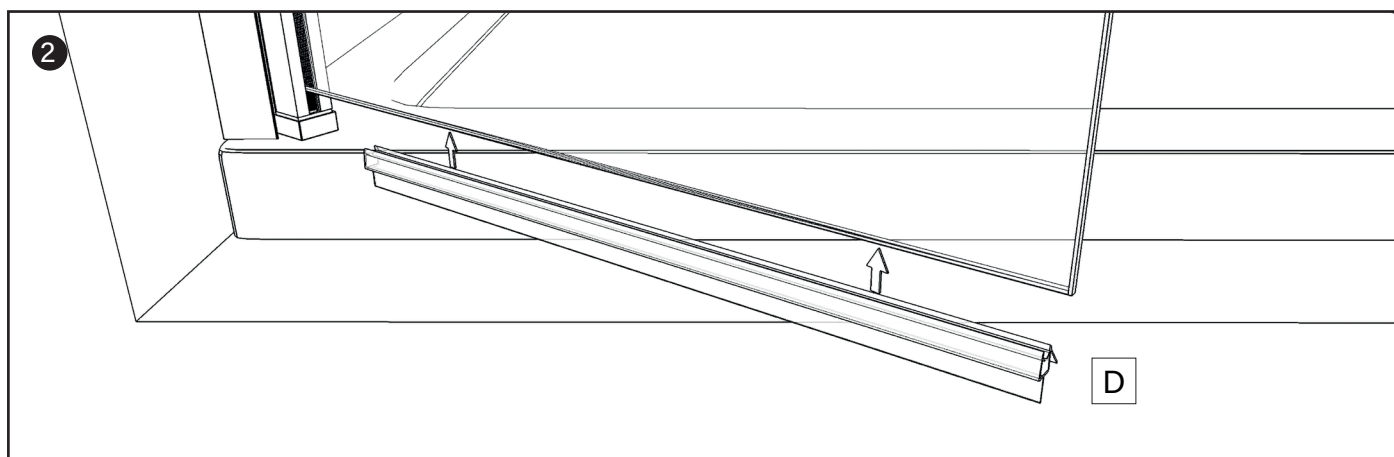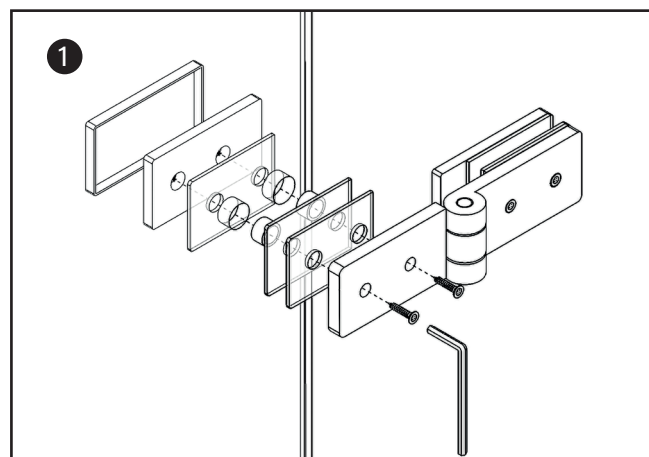




4° PASSAGE

1. Position the 6 mm glass on the door closing side.
2. Complete the fastening of the hinges to the glass as shown.

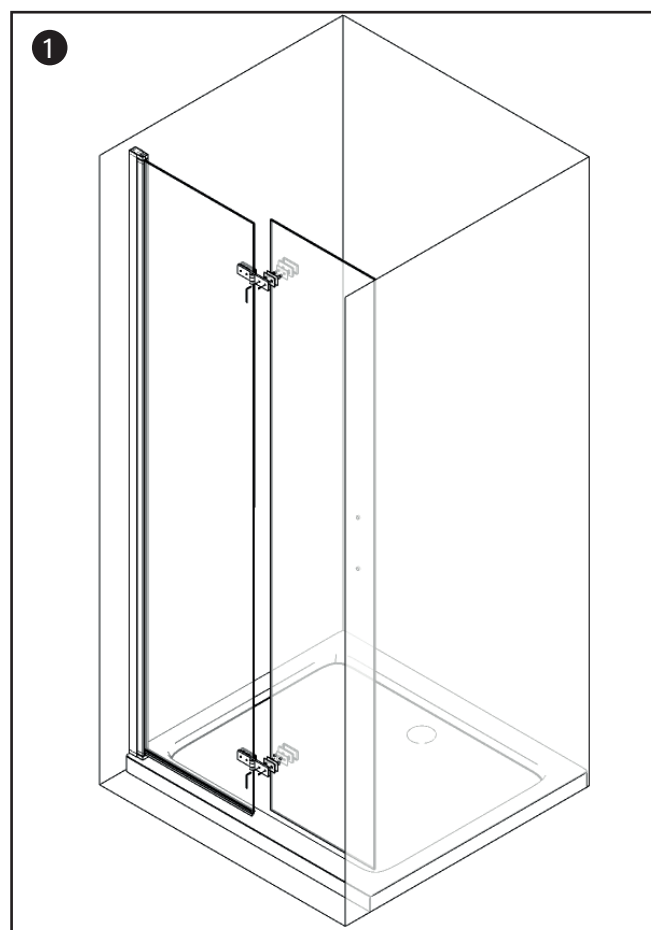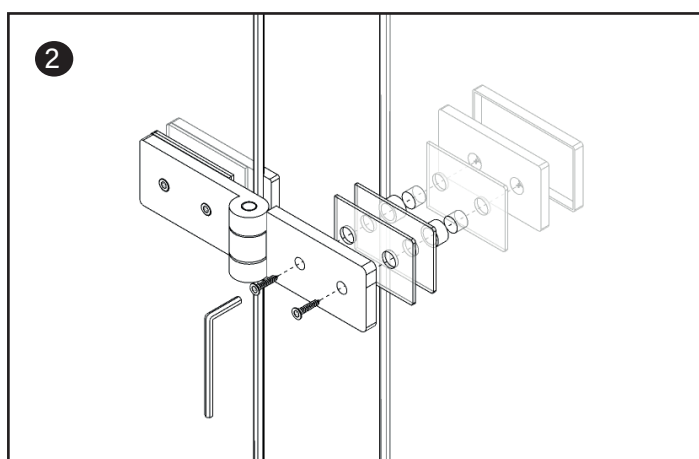





5° PASSAGE

1. Position the magnet in the "magnet striker profile", inserting it from top to bottom.
2. Position the sealing gasket by shaping it, as shown in the figure, to ensure that the door closes properly and is watertight.
3. Install the magnetic closing gaskets on the glass panes.

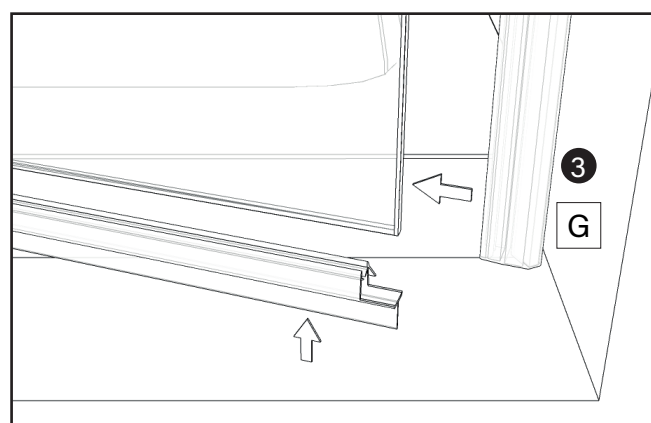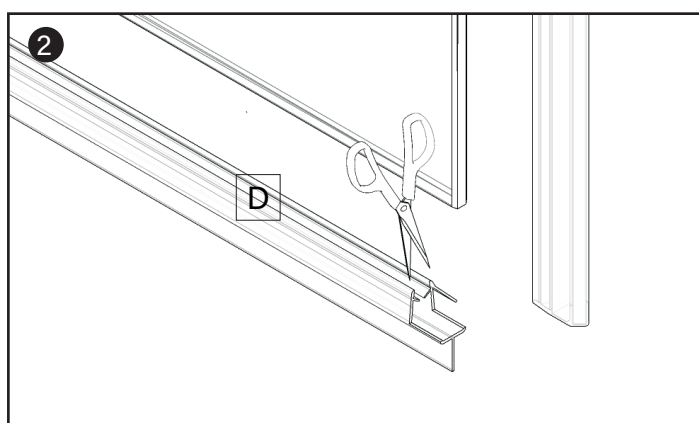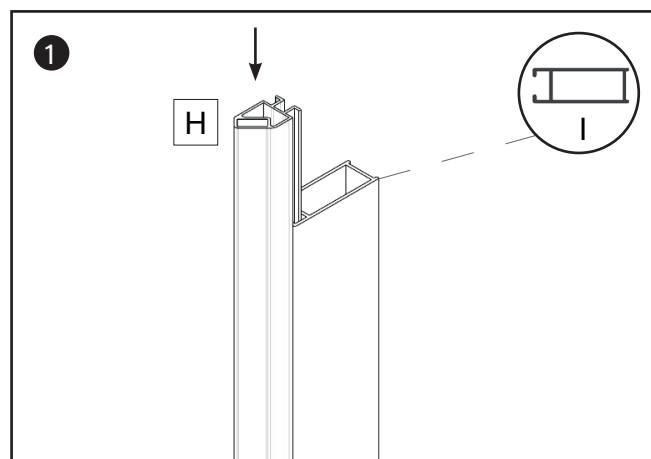


6° PASSAGE

1. Lay the wall profile on the door-closing side and use the plumb level.
2. Trace the holes in the wall with a pencil.
3. Drill the holes in the wall with the drill.
4. Insert the wall plug and screw in the screws to secure the profile.

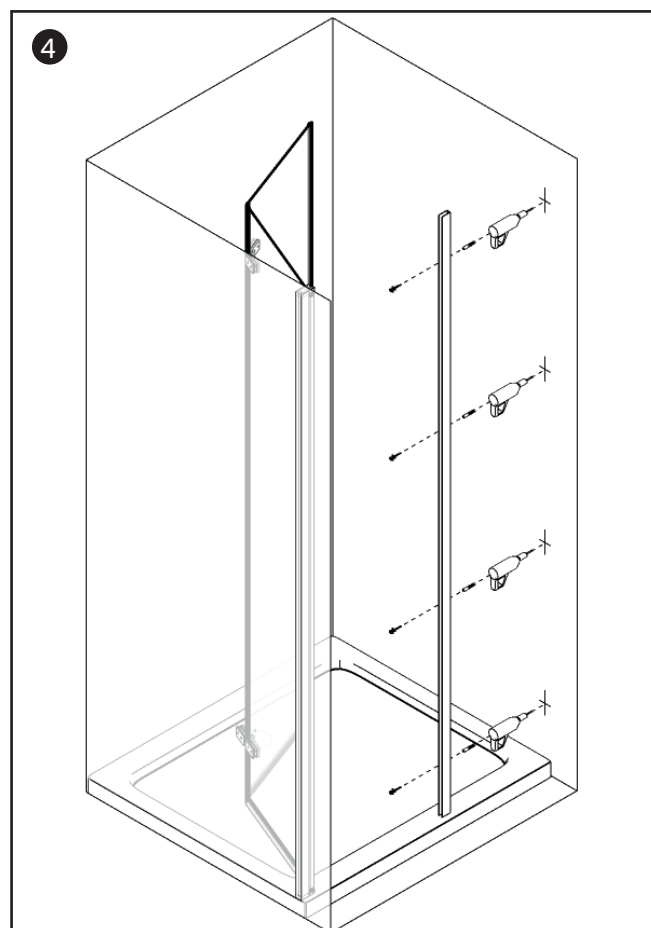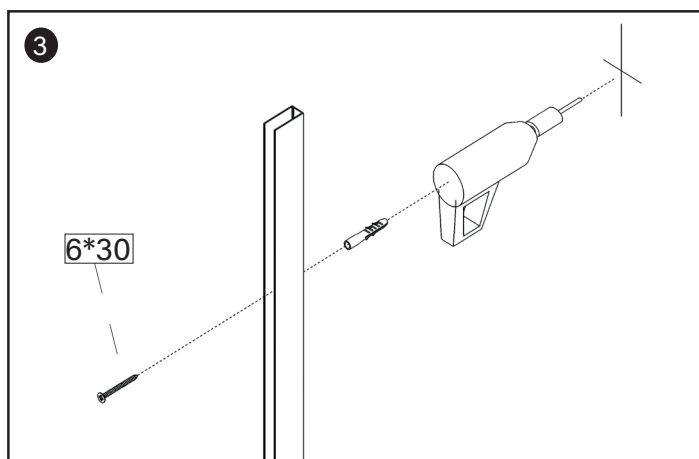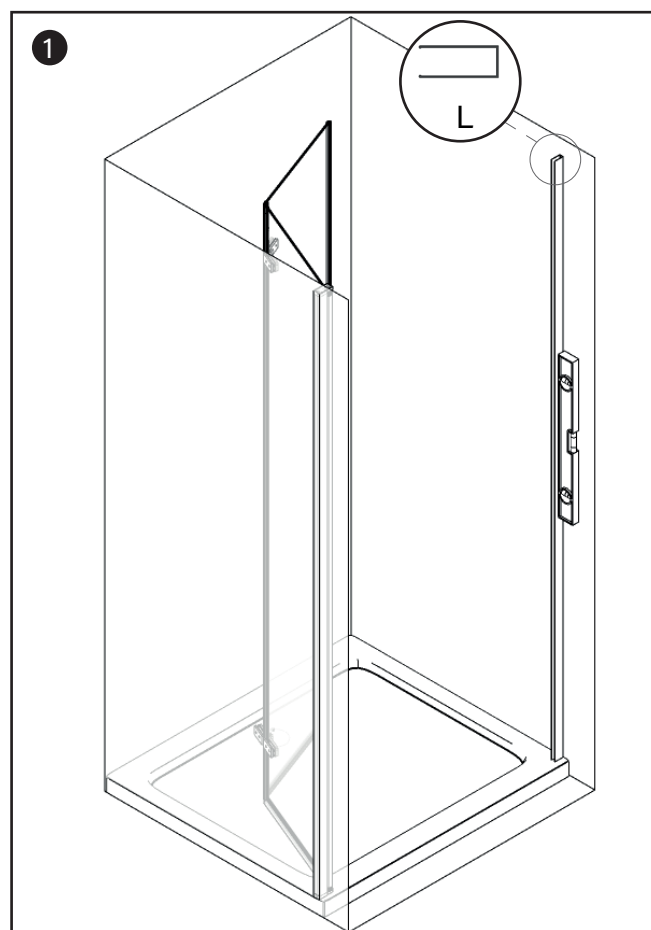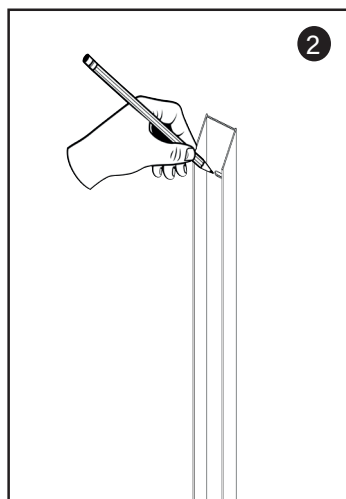

7° PASSAGE



1. Insert the magnet striker profile inside the previously fixed wall profile.

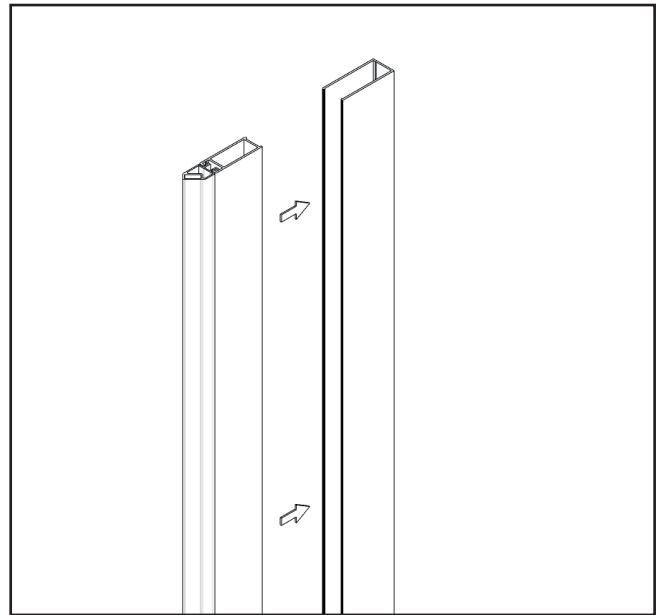

8° PASSAGE

1. Check the plumbness of the door, then drill holes and apply the 6x16 screws for locking with the wall profile.
2. Drill holes and apply the 6x10 screws from the inside of the wall profile, door-closing side, to secure it to the magnet striker profile and cover the screws with the appropriate plugs.

Note: A total of 4 holes must be drilled, two on each side, 1 at the top and 1 at the bottom. The screws will be covered with the appropriate chrome-plated caps.

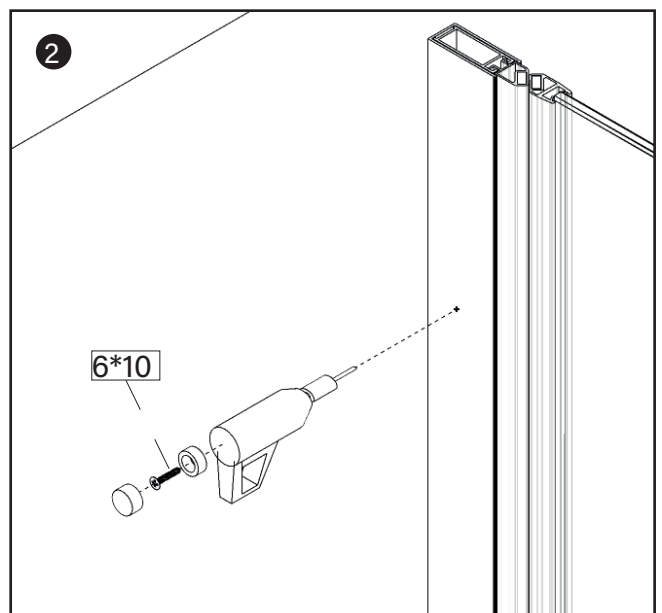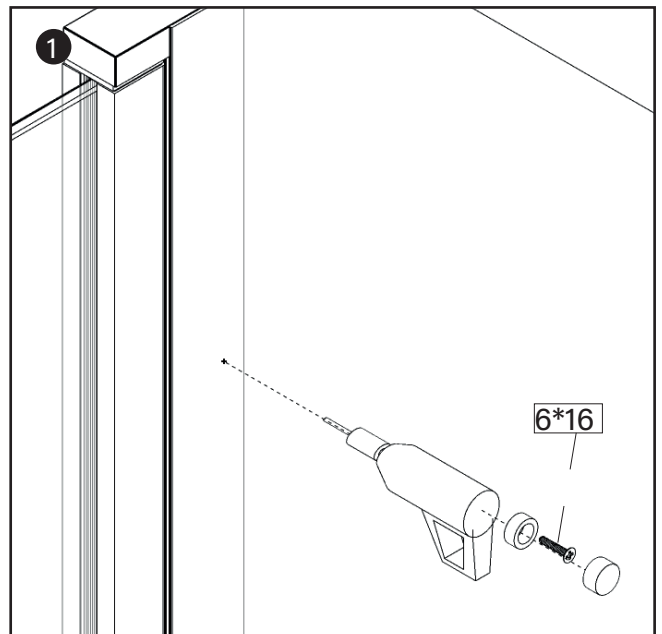


9° PASSAGE

1. Apply the extendable gasket between the two panes.
2. Siliconise and position the lower sealing bar.
3. Siliconise and position the left and right fixing brackets.

Note: The sealing bar can be installed with 6*16 screws if it is flush with the floor.


ATTENTION

The correct positioning of the lower sealing bar and the left and right fixing brackets is as shown in figure 4.

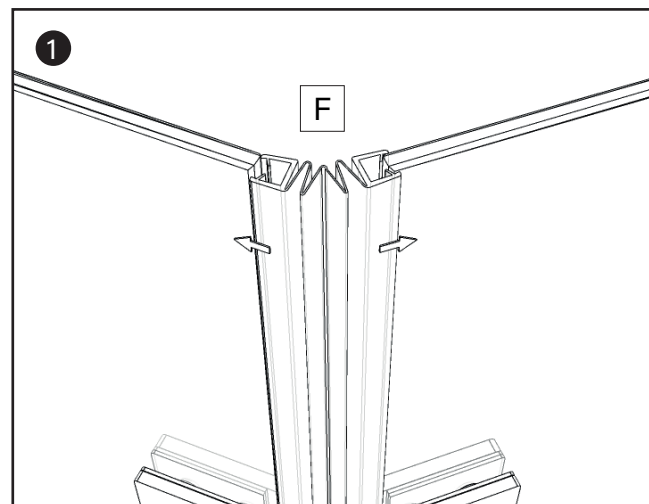

10° PASSAGE

1. Install the handle on the door (inside hole).

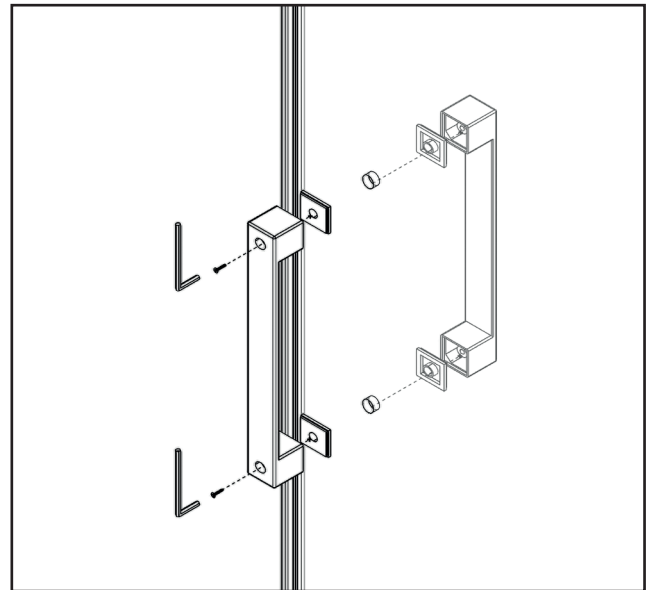

11° PASSAGE

1. Siliconise the outside of the shower enclosure around the entire perimeter as shown in the picture and wait 24 hours.

