


Edge


Stone Fibreglass Shower Tray (**SMC**)

DESCRIPTION

SMC (sheet moulding compound), also commonly called fibreglass, is a thermosetting sheet material composed of glass fibres, mineral fillers, pigments and unsaturated polyester resins. A moulded (thermoformed) press product with excellent mechanical and chemical/physical performance. The material lends itself to possible modification by cutting with a flex disk. Laying technique: glue to the substrate with C2-certified tile adhesive (such as Kera-koll® H40 flex).

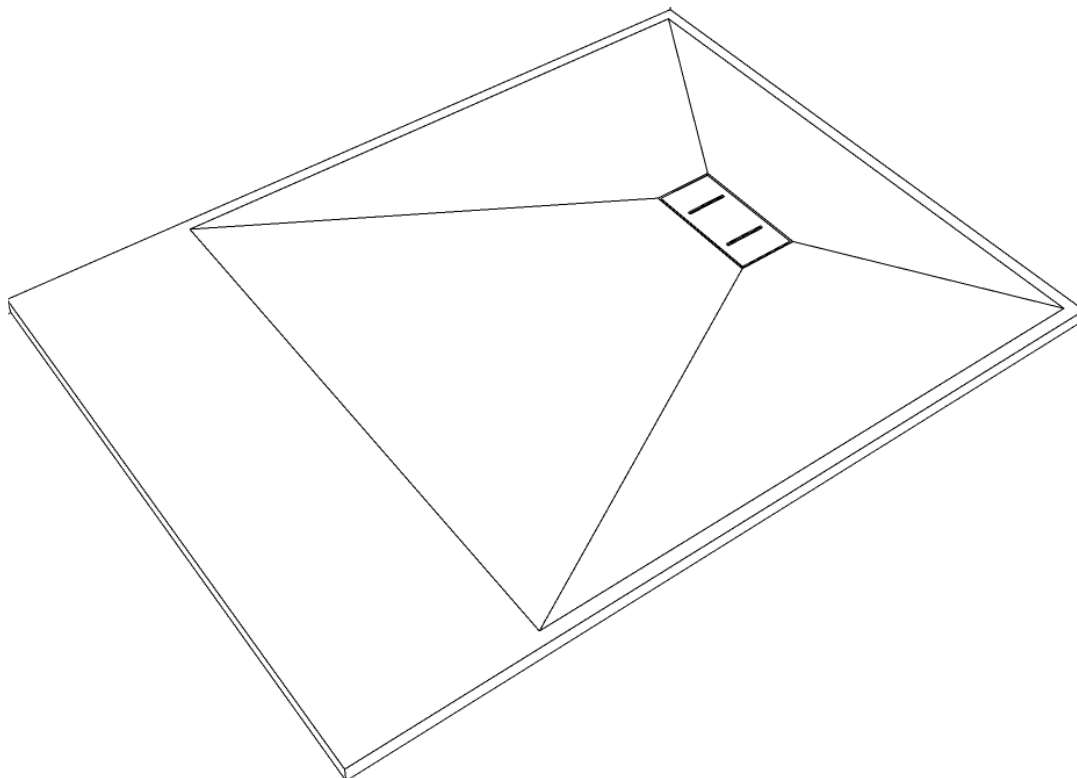

Front mm

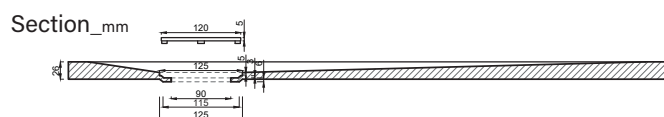

Back mm



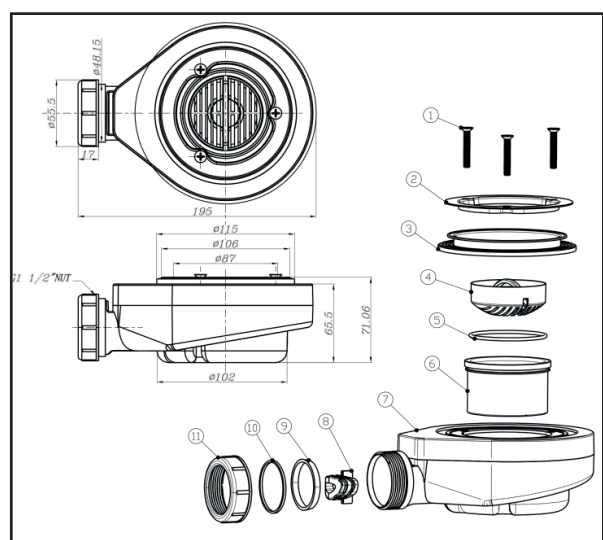


TABLE OF MEASURES




MODEL	FLAT MEASURES		DRAIN DISTANCES	
	A	B	C	Ls
70x90 <i>cm</i>	70 <i>cm</i>	90 <i>cm</i>	35 <i>cm</i>	20 <i>cm</i>
70x100 <i>cm</i>	70 <i>cm</i>	100 <i>cm</i>	35 <i>cm</i>	20 <i>cm</i>
70x110 <i>cm</i>	70 <i>cm</i>	110 <i>cm</i>	35 <i>cm</i>	20 <i>cm</i>
70x120 <i>cm</i>	70 <i>cm</i>	120 <i>cm</i>	35 <i>cm</i>	20 <i>cm</i>
70x140 <i>cm</i>	70 <i>cm</i>	140 <i>cm</i>	35 <i>cm</i>	35 <i>cm</i>
70x150 <i>cm</i>	70 <i>cm</i>	150 <i>cm</i>	35 <i>cm</i>	35 <i>cm</i>
70x160 <i>cm</i>	70 <i>cm</i>	160 <i>cm</i>	35 <i>cm</i>	35 <i>cm</i>
70x170 <i>cm</i>	70 <i>cm</i>	170 <i>cm</i>	35 <i>cm</i>	35 <i>cm</i>
70x180 <i>cm</i>	70 <i>cm</i>	180 <i>cm</i>	35 <i>cm</i>	35 <i>cm</i>
80x80 <i>cm</i>	80 <i>cm</i>	80 <i>cm</i>	40 <i>cm</i>	20 <i>cm</i>
80x100 <i>cm</i>	80 <i>cm</i>	100 <i>cm</i>	40 <i>cm</i>	20 <i>cm</i>
80x120 <i>cm</i>	80 <i>cm</i>	120 <i>cm</i>	40 <i>cm</i>	20 <i>cm</i>
80x140 <i>cm</i>	80 <i>cm</i>	140 <i>cm</i>	40 <i>cm</i>	20 <i>cm</i>
80x150 <i>cm</i>	80 <i>cm</i>	150 <i>cm</i>	40 <i>cm</i>	20 <i>cm</i>
80x160 <i>cm</i>	80 <i>cm</i>	160 <i>cm</i>	40 <i>cm</i>	20 <i>cm</i>
80x170 <i>cm</i>	80 <i>cm</i>	170 <i>cm</i>	40 <i>cm</i>	35 <i>cm</i>
80x180 <i>cm</i>	80 <i>cm</i>	180 <i>cm</i>	40 <i>cm</i>	35 <i>cm</i>
90x90 <i>cm</i>	90 <i>cm</i>	90 <i>cm</i>	45 <i>cm</i>	20 <i>cm</i>
90x100 <i>cm</i>	90 <i>cm</i>	100 <i>cm</i>	45 <i>cm</i>	20 <i>cm</i>
90x120 <i>cm</i>	90 <i>cm</i>	120 <i>cm</i>	45 <i>cm</i>	20 <i>cm</i>
90x140 <i>cm</i>	90 <i>cm</i>	140 <i>cm</i>	45 <i>cm</i>	20 <i>cm</i>
90x160 <i>cm</i>	90 <i>cm</i>	160 <i>cm</i>	45 <i>cm</i>	20 <i>cm</i>
90x170 <i>cm</i>	90 <i>cm</i>	170 <i>cm</i>	45 <i>cm</i>	35 <i>cm</i>
90x180 <i>cm</i>	90 <i>cm</i>	180 <i>cm</i>	45 <i>cm</i>	35 <i>cm</i>
100x120 <i>cm</i>	100 <i>cm</i>	120 <i>cm</i>	50 <i>cm</i>	60 <i>cm</i>
100x140 <i>cm</i>	100 <i>cm</i>	140 <i>cm</i>	50 <i>cm</i>	70 <i>cm</i>
100x160 <i>cm</i>	100 <i>cm</i>	160 <i>cm</i>	50 <i>cm</i>	80 <i>cm</i>
100x200 <i>cm</i>	100 <i>cm</i>	200 <i>cm</i>	50 <i>cm</i>	100 <i>cm</i>

White Stone Brown Stone Grey Stone Black Stone

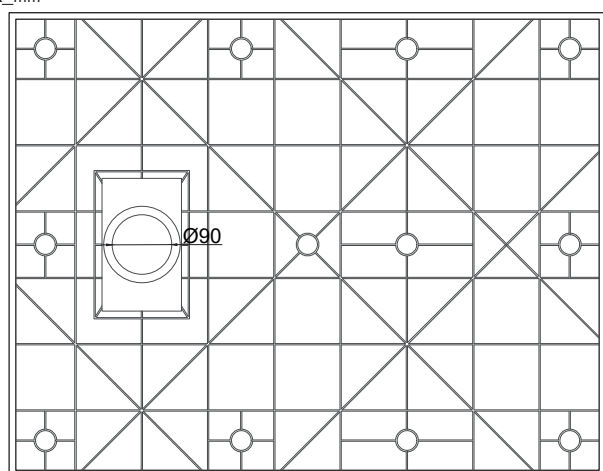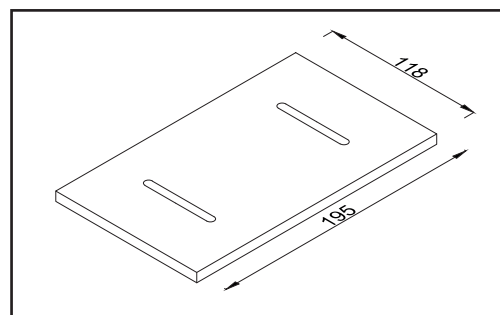


Contact details: Office +39 333 5221921, E-mail: info@sweemy.app

TOOLS REQUIRED

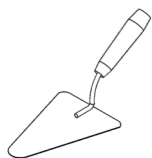


PACKAGE CONTENT (product shipped in two packages)

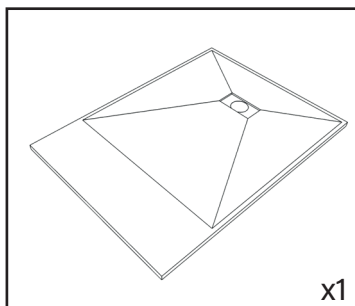


x1

Shower tray

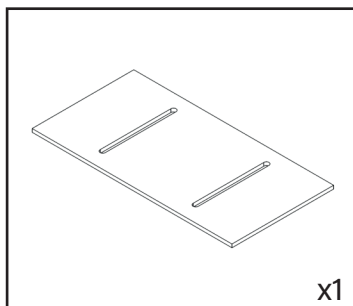

x1

Cover

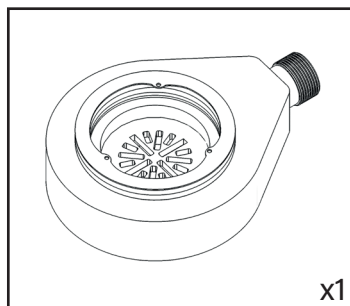





x1

Drain siphon

MOUNTING





1° PASSAGE

- Make the drainage area as shown in the table.
- Before installing the shower tray, check that the drainage system does not leak.
- Fix the drain, silicone and screw in with the screws provided.
- Connect the waste pipe to the siphon.

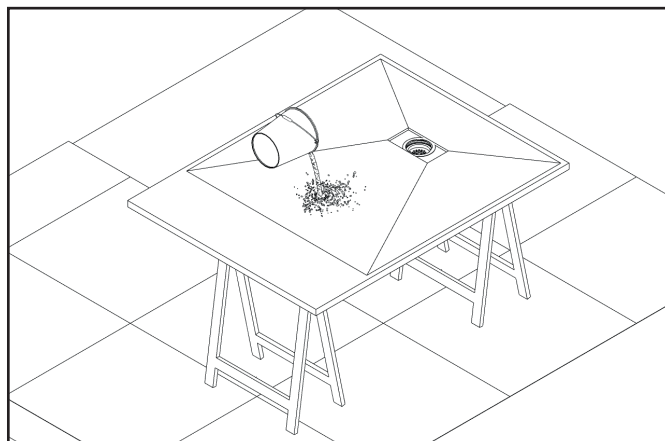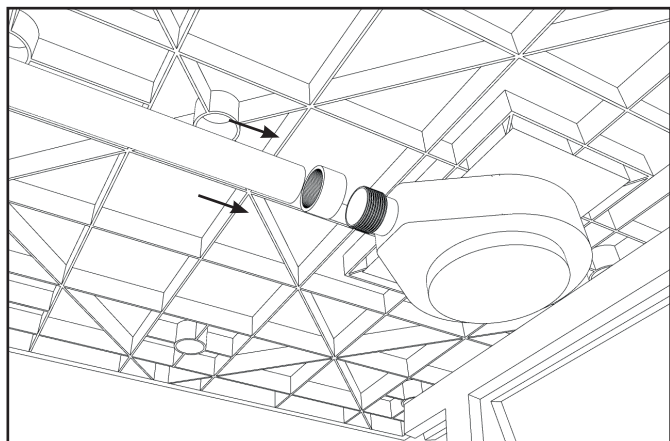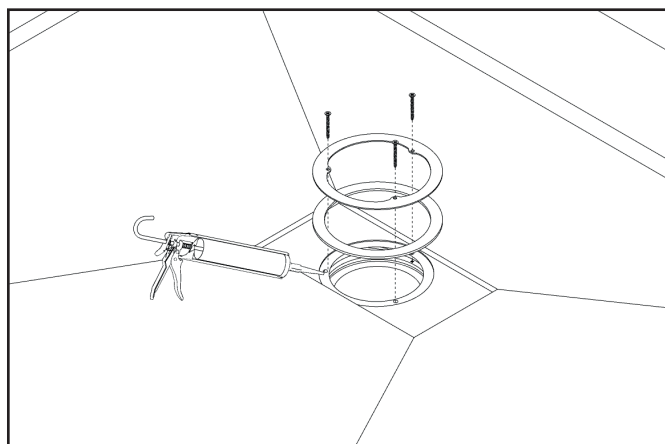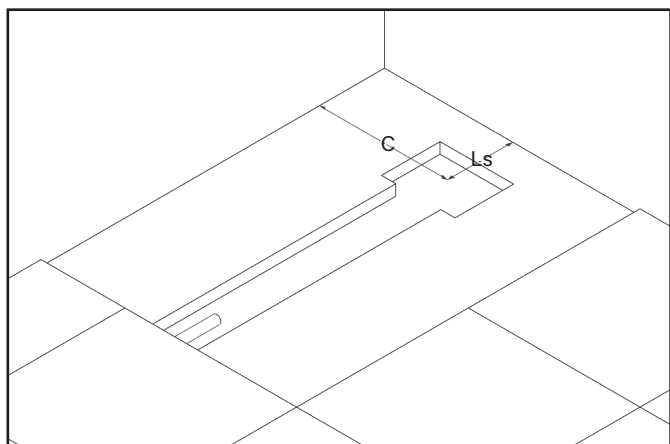

2° PASSAGE

- Clean the surface where the shower tray is to be installed thoroughly to remove any debris and apply adhesive (such as Kerakoll® H40 flex).
- Position the shower tray, checking that it is level.
- We suggest siliconizing the sides of the shower tray.

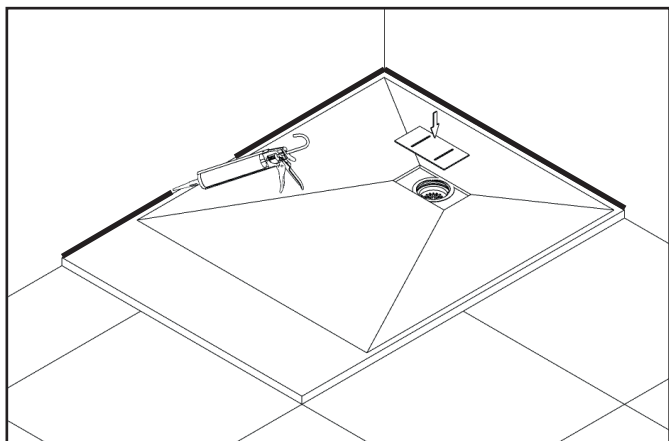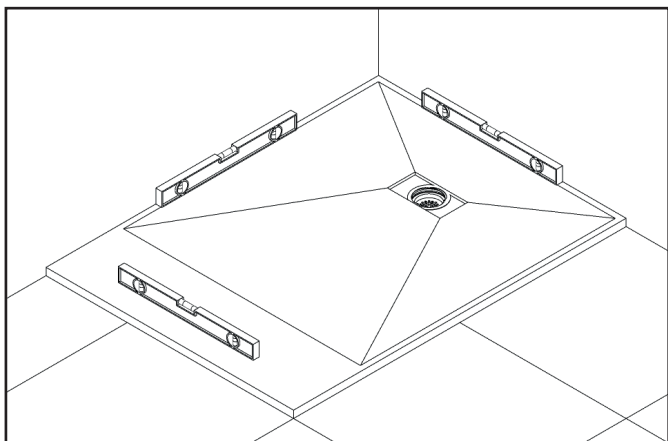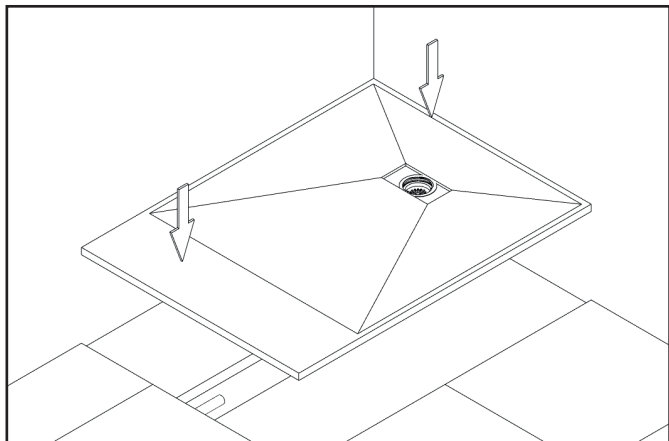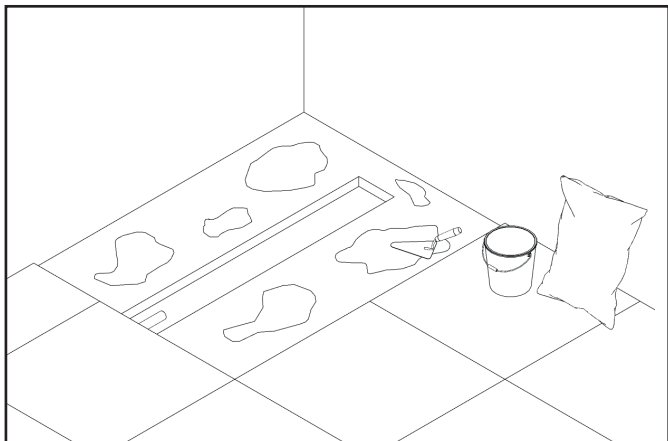

IMPORTANTE IMPORTANT

After installation, the shower tray must be adequately protected to prevent it from being damaged during masonry work.
The plate is not repairable if it splinters!