




Via Rosario Livatino n° 112
94100 Enna Italy
info@sweemy.app

Slim

Smooth White Shower Tray (**ABS**)


DESCRIPTION

ABS shower tray with a classic and functional design. Made on an acrylic mould and strengthened with wooden reinforcement strips embedded in resin and fibreglass. Significantly lighter weight than ceramic. Smooth surface, resistant to shocks and chemicals in cleaning and personal hygiene products. Does not require any sloping as the inner surface of the plate already has its own slope.

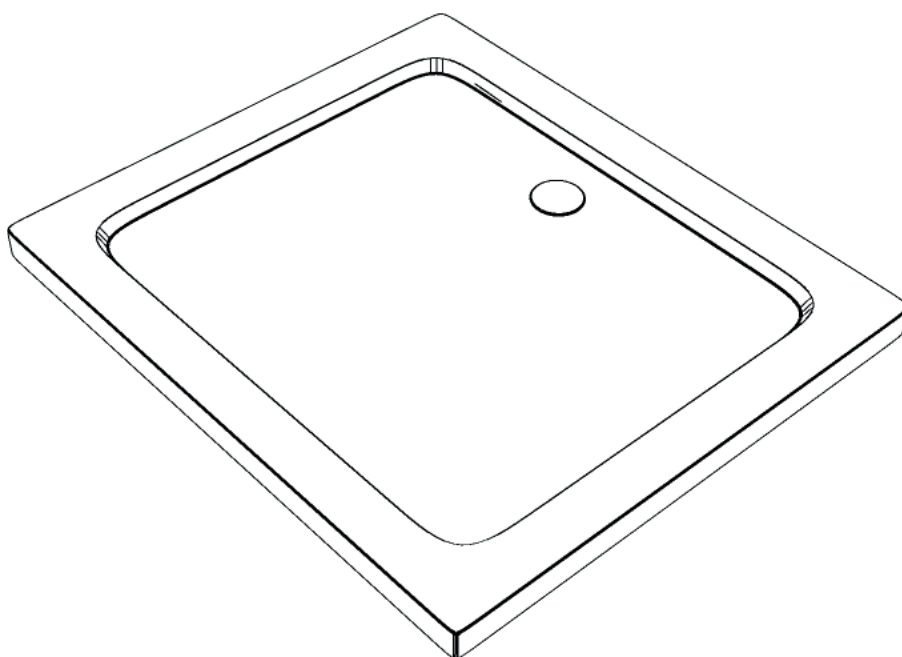


TECHNICAL DRAWINGS


Front_mm

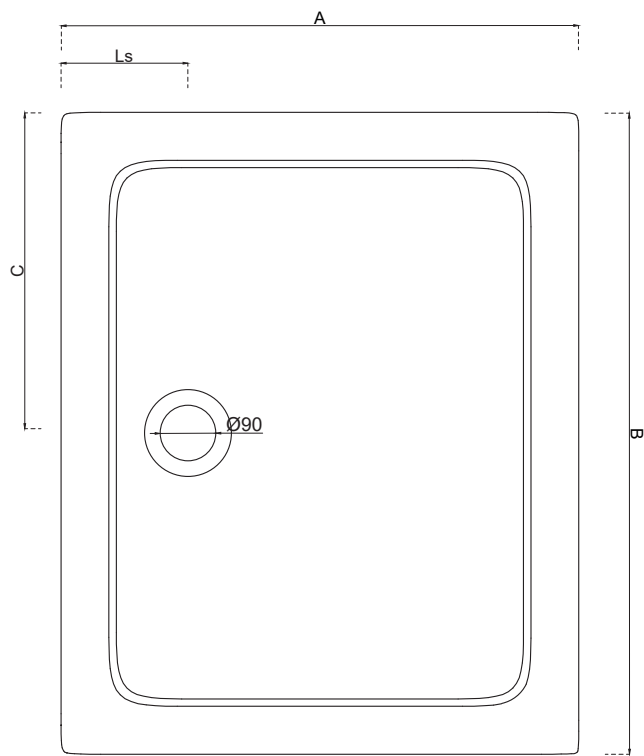

Section_mm




Back_mm

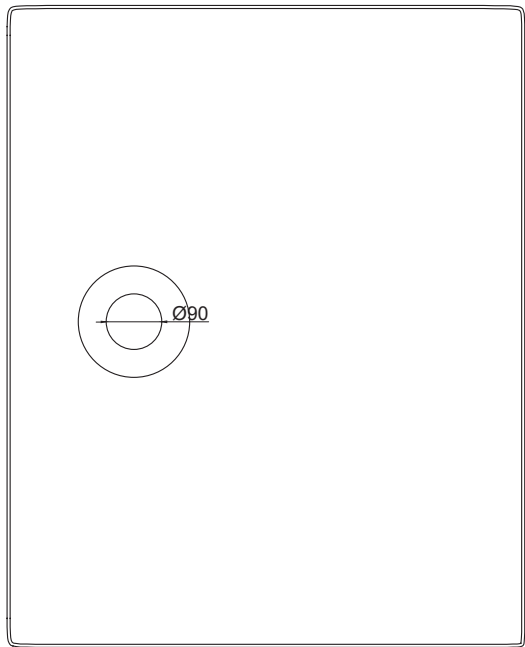

TECHNICAL MEASURES





MODEL	FLAT MEASURES		DRAIN DISTANCES	
	A	B	C	Ls
70x70 cm	70 cm	70 cm	22 cm	22 cm
80x80 cm	80 cm	80 cm	22 cm	22 cm
90x90 cm	90 cm	90 cm	22 cm	22 cm
80x80 r55* cm	80 cm	80 cm	22 cm	22 cm
90x90 r55* cm	90 cm	90 cm	22 cm	22 cm
80x120 r55 dx* cm	80 cm	120 cm	22 cm	22 cm
80x120 r55 sx* cm	80 cm	120 cm	22 cm	22 cm
70x90 cm	70 cm	90 cm	45 cm	22 cm
70x100 cm	70 cm	100 cm	50 cm	22 cm
70x120 cm	70 cm	120 cm	60 cm	22 cm
70x140 cm	70 cm	140 cm	70 cm	22 cm
70x160 cm	70 cm	160 cm	22 cm	35 cm
70x170 cm	70 cm	170 cm	22 cm	35 cm
80x100 cm	80 cm	100 cm	50 cm	22 cm
80x120 cm	80 cm	120 cm	60 cm	22 cm
80x140 cm	80 cm	140 cm	70 cm	22 cm
80x170 cm	80 cm	170 cm	22 cm	40 cm
80x180 cm	80 cm	180 cm	22 cm	40 cm

*rounded corner with radius 55

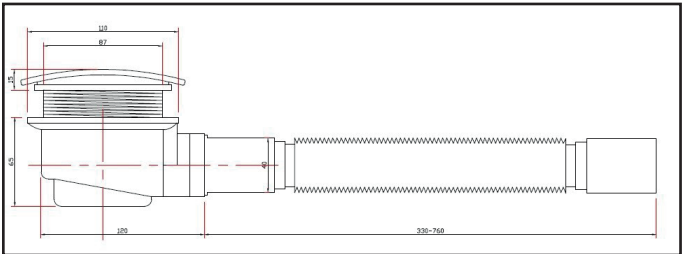


The shower tray is equipped with a siphon drain that can be inspected, diameter 90 mm, undercut dimensions 65 mm.

TOOLS REQUIRED

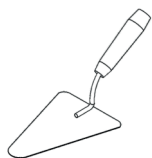


PACKAGE CONTENT (product shipped in two packages)

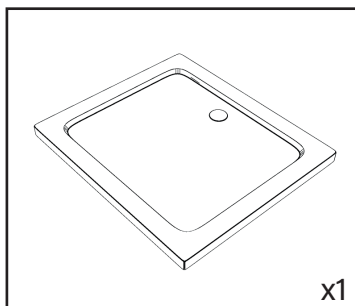

x1

Shower tray

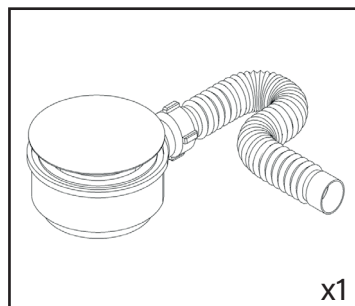





x1

Drain with cover

MOUNTING





1° PASSAGE

- Make the drainage area as shown in the table.
- Before installing the shower tray, check that the drainage system does not leak.
- Position the gasket and screw in the drain valve using the removable cup inside the drain valve.
- Connect the waste pipe to the siphon.

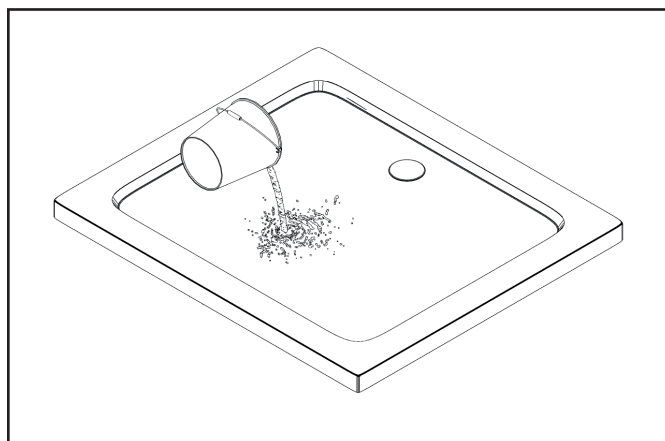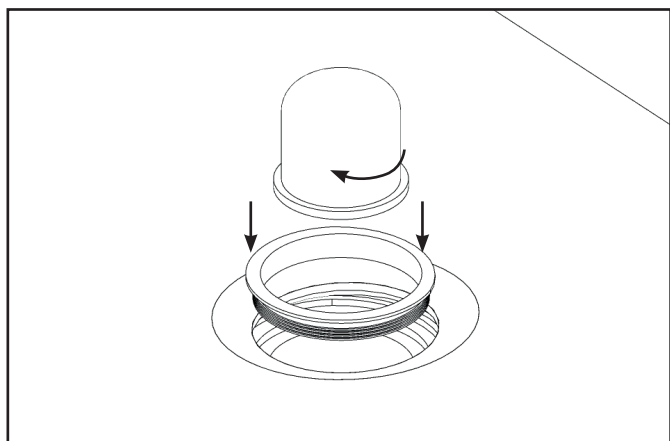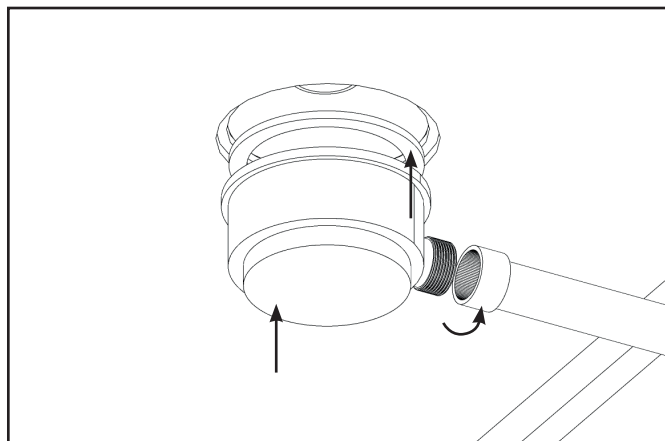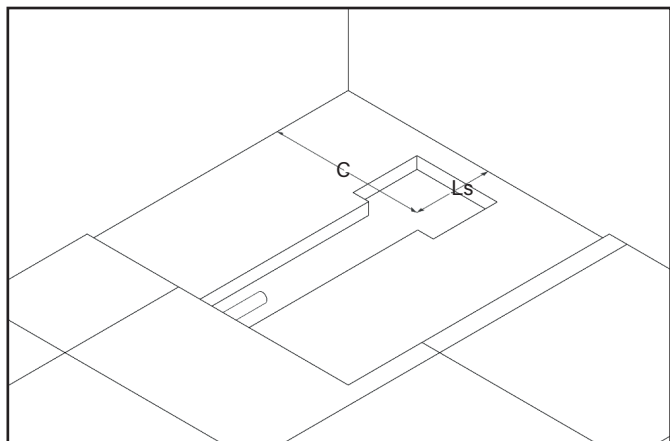

2° PASSAGE

- Clean the surface where the shower tray is to be installed thoroughly to remove any debris and apply adhesive (such as Kerakoll® H40 flex).
- Position the shower tray, checking that it is level.
- We suggest siliconizing the sides of the shower tray.

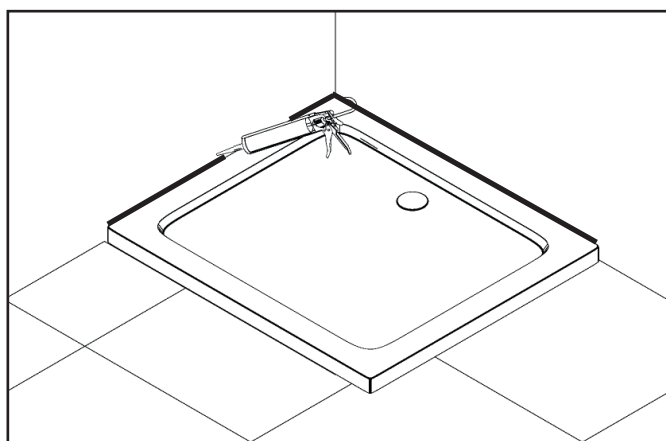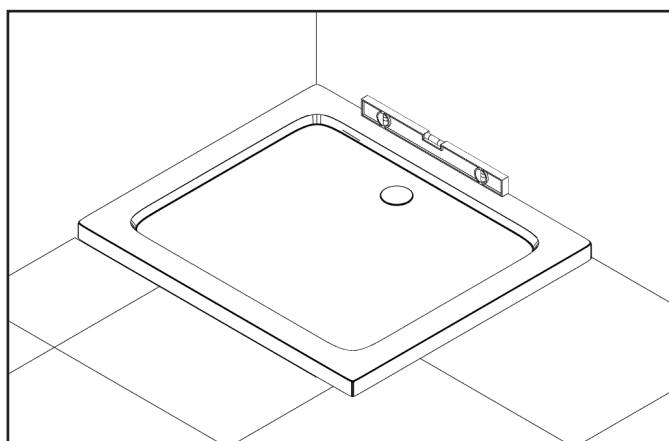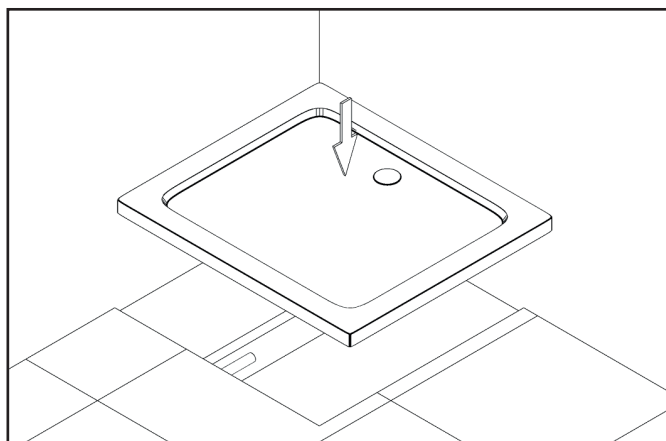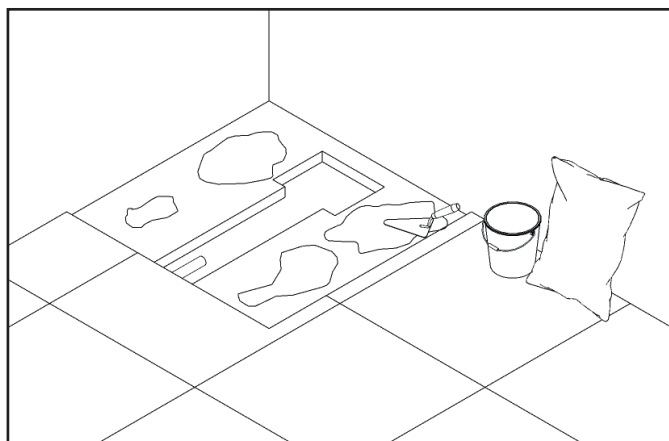

IMPORTANT

After installation, the shower tray must be adequately protected to prevent it from being damaged during masonry work.
The plate is not repairable if it splinters!