

Buenos Aires

DESCRIPTION

Double 4-leaf folding door with total free-entry opening. Total adjustment of 3.5 cm, 6 mm tempered glass with easy-clean anti-limescale treatment marked by special labels. Wall-to-wall installation. Height 190 cm.







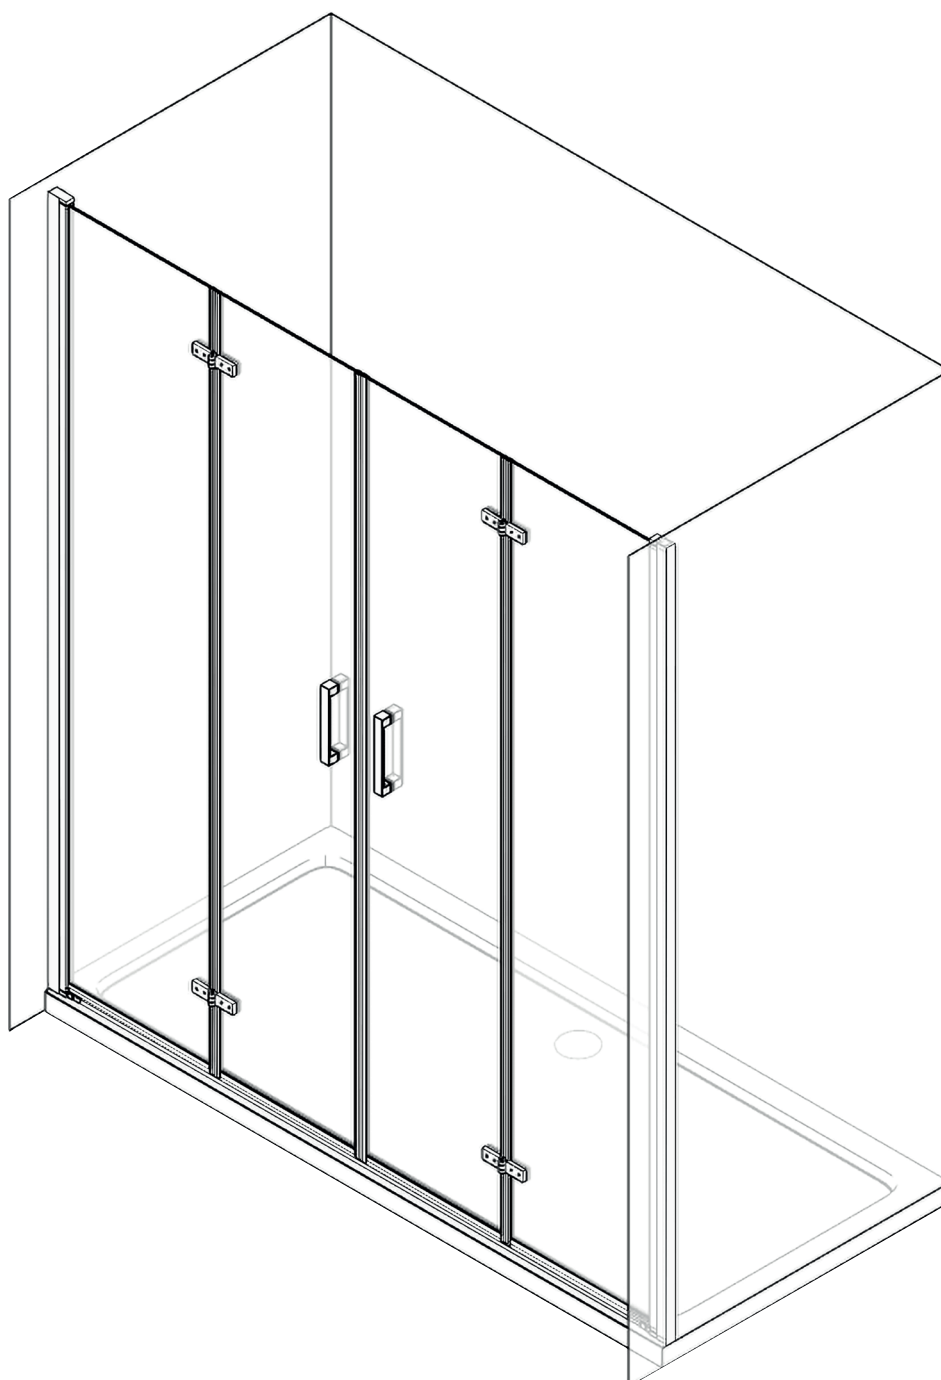


TABLE OF MEASURES






MODEL	MEASURES A
110	1080 - 1115
120	1180 - 1215
130	1280 - 1315
140	1380 - 1415
150	1480 - 1515
160	1580 - 1615
170	1680 - 1715
180	1780 - 1815
190	1880 - 1915

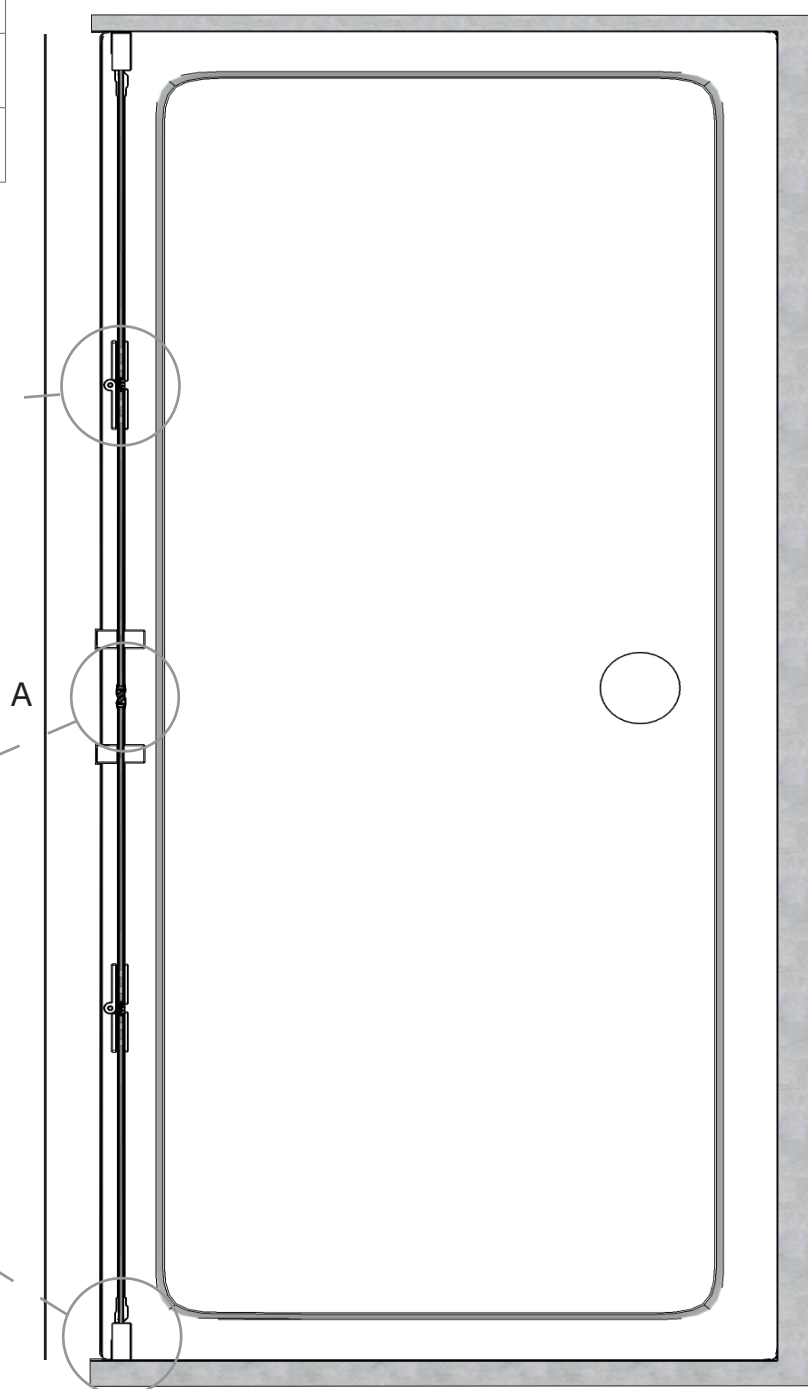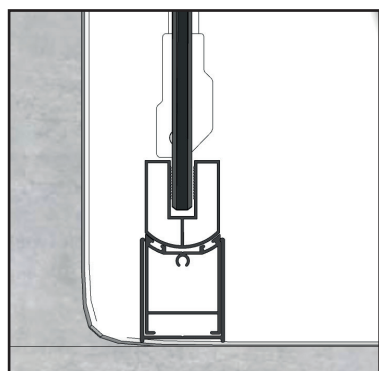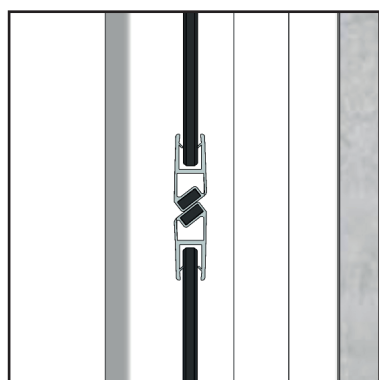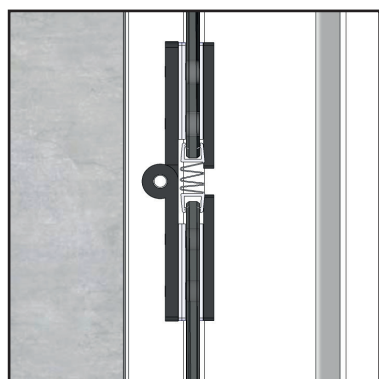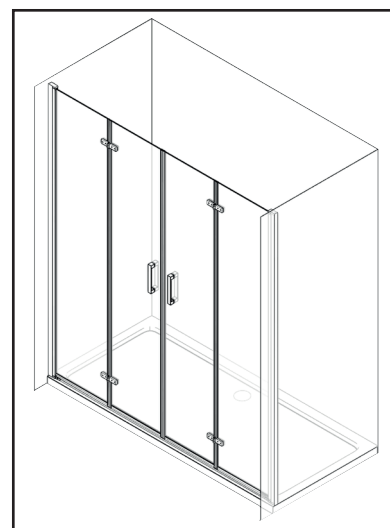


TOOLS REQUIRED

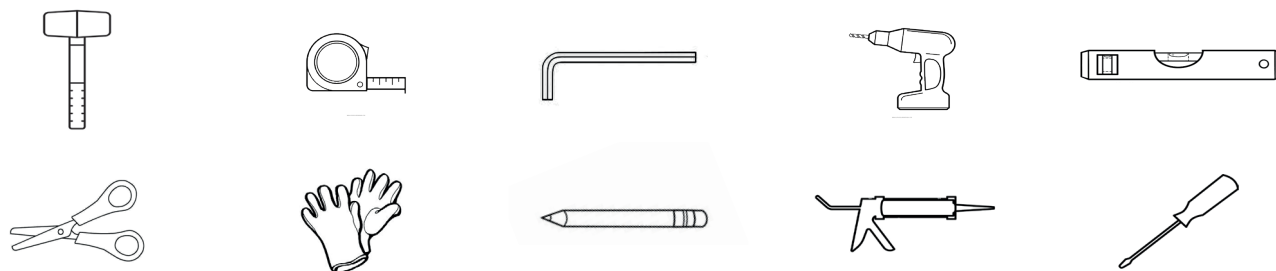


PACKAGE CONTENT (product shipped in two packages)

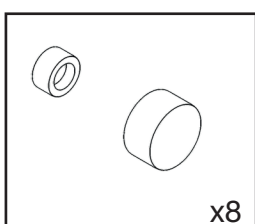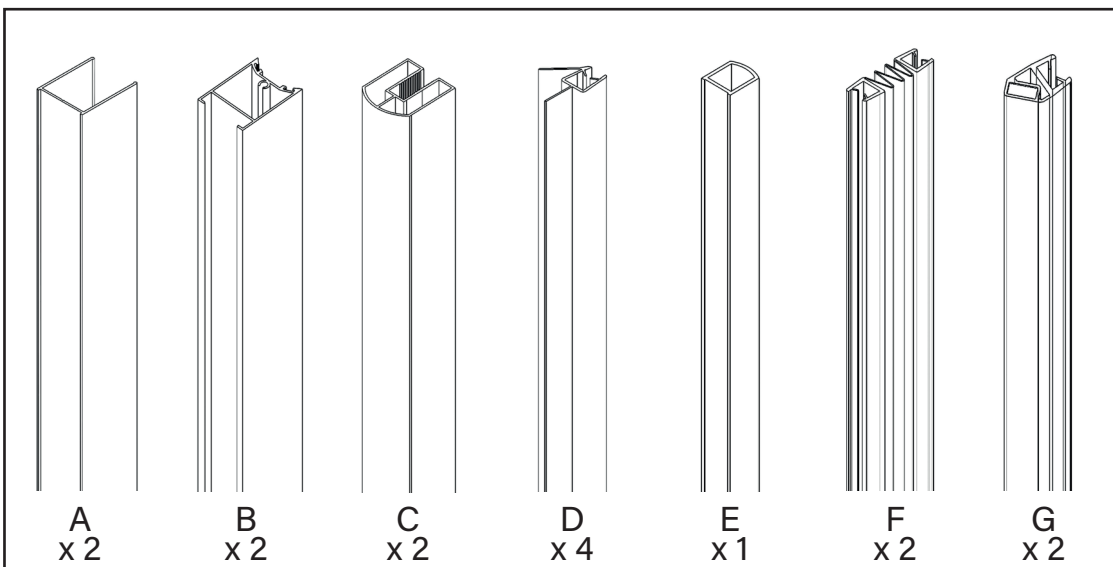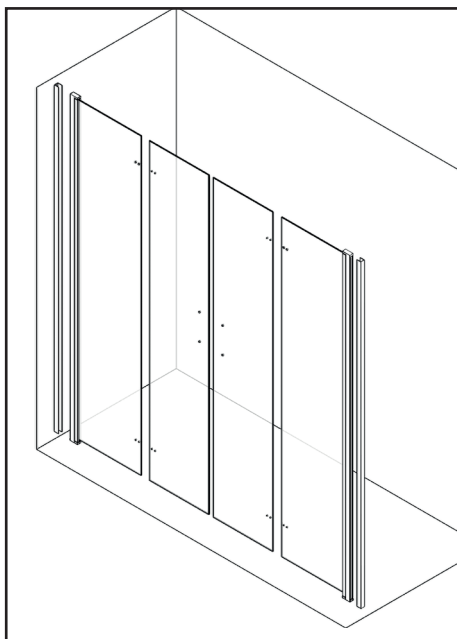


Screw caps

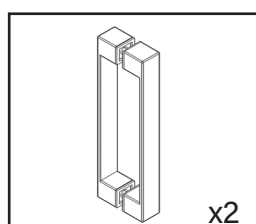

Handle

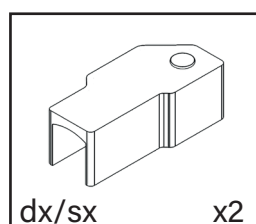

Ground fixing
bracket

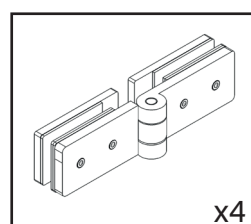

Hinge





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the two profiles on the wall and use the plumb level.
3. Mark the holes in the wall with a pencil.
4. Drill holes in the wall.
5. Insert the wall plug and screw in the screws to secure the profiles.


IMPORTANT

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimum aesthetic and functional result.

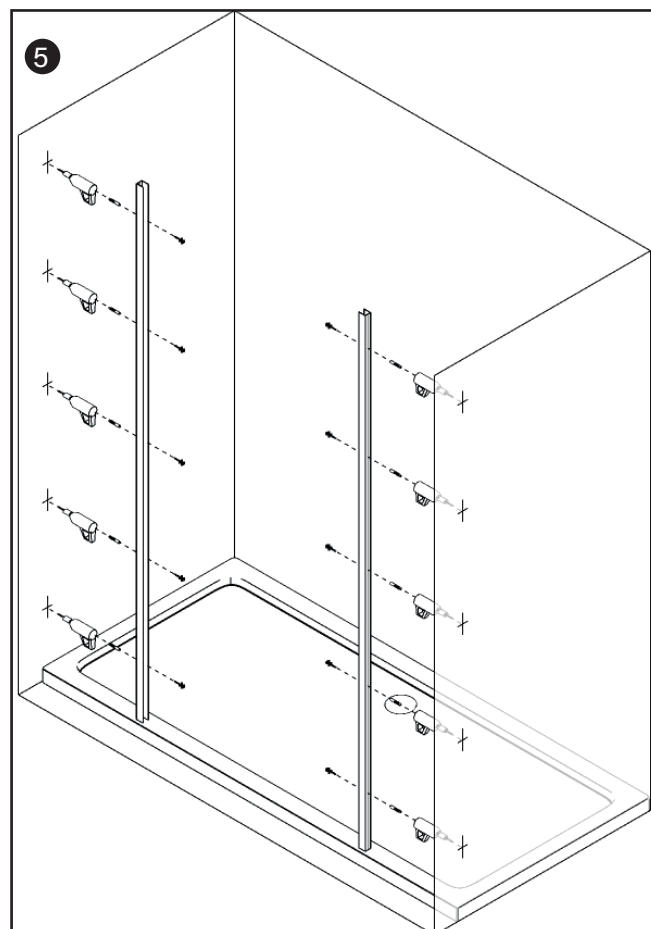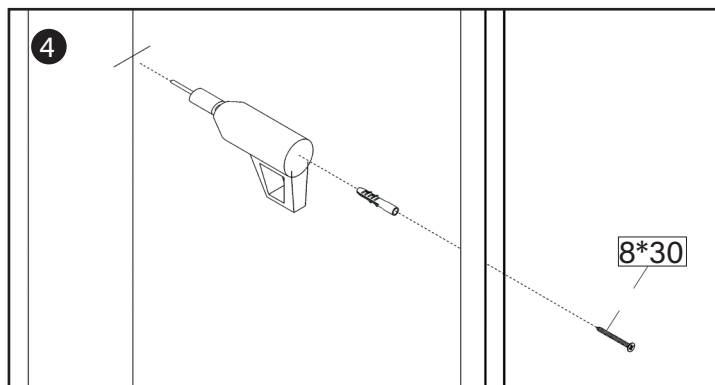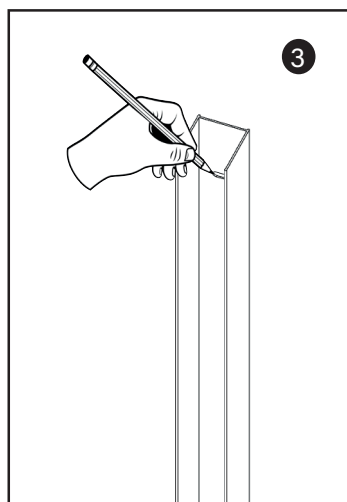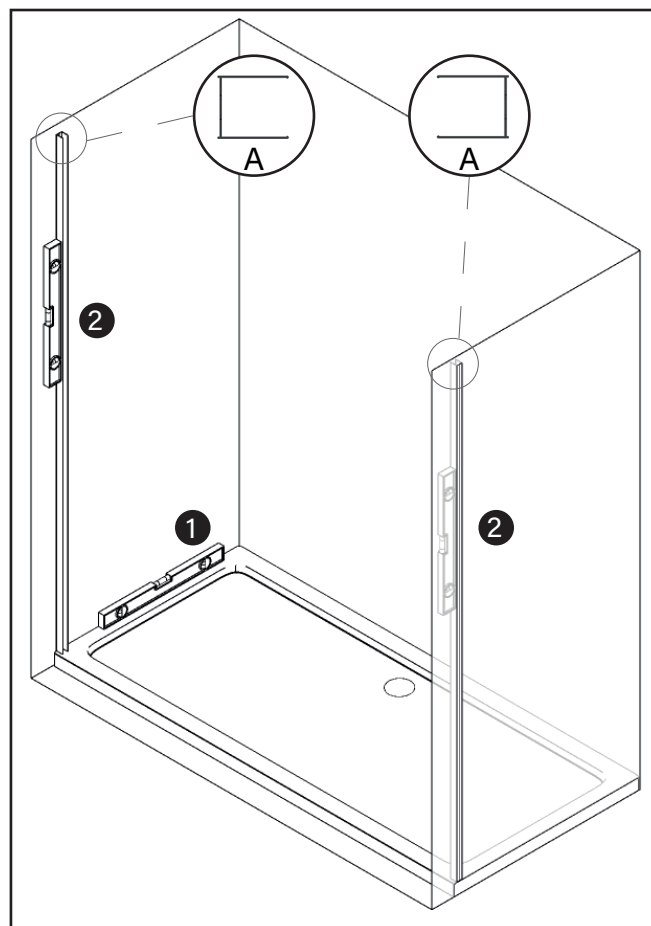



2° PASSAGE

1. Place the two panes of glass inside the previously mounted wall profiles.

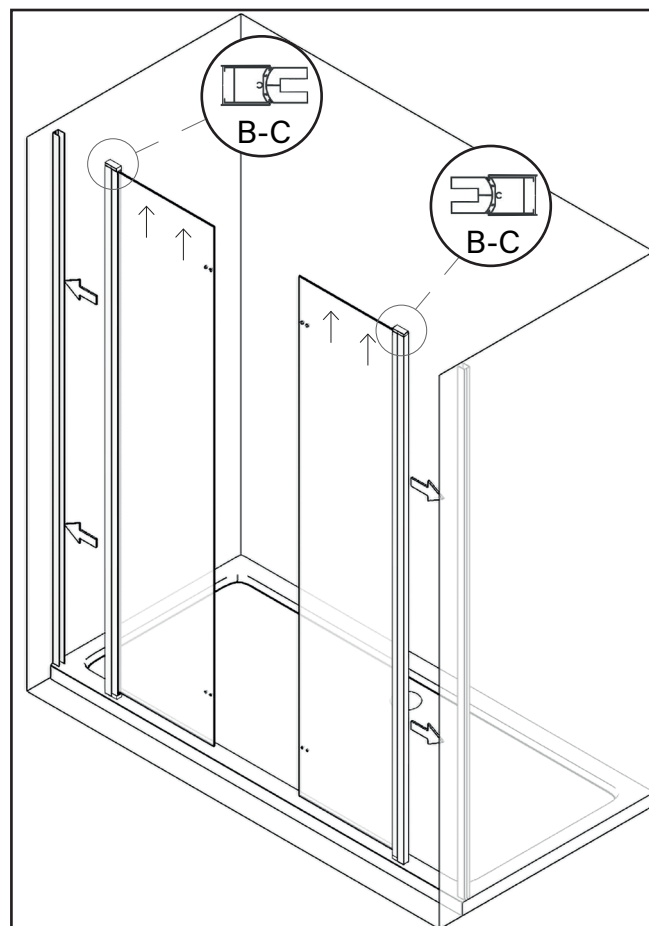



3° PASSAGE

1. Place the hinges on the two panes, one above and one below, and fasten them as shown.
2. Insert the drip seals under the glass panes.

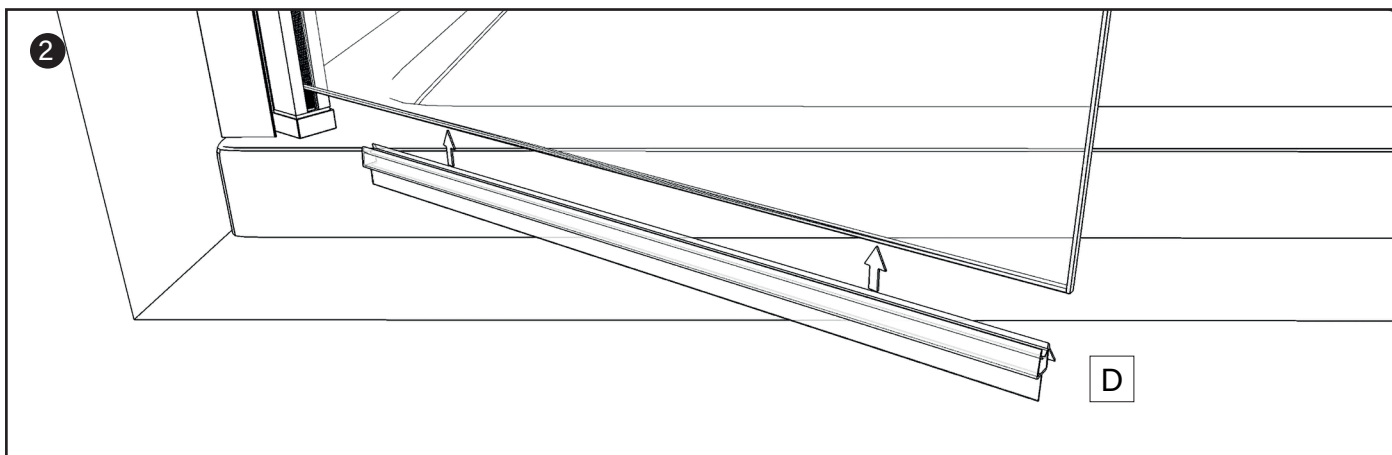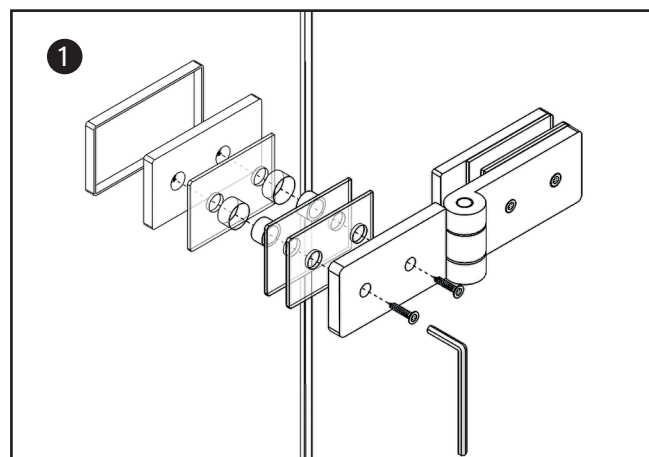



4° PASSAGE

1. Position the glass on the closing side of the door.
2. Complete the fastening of the hinges to the glass as shown.

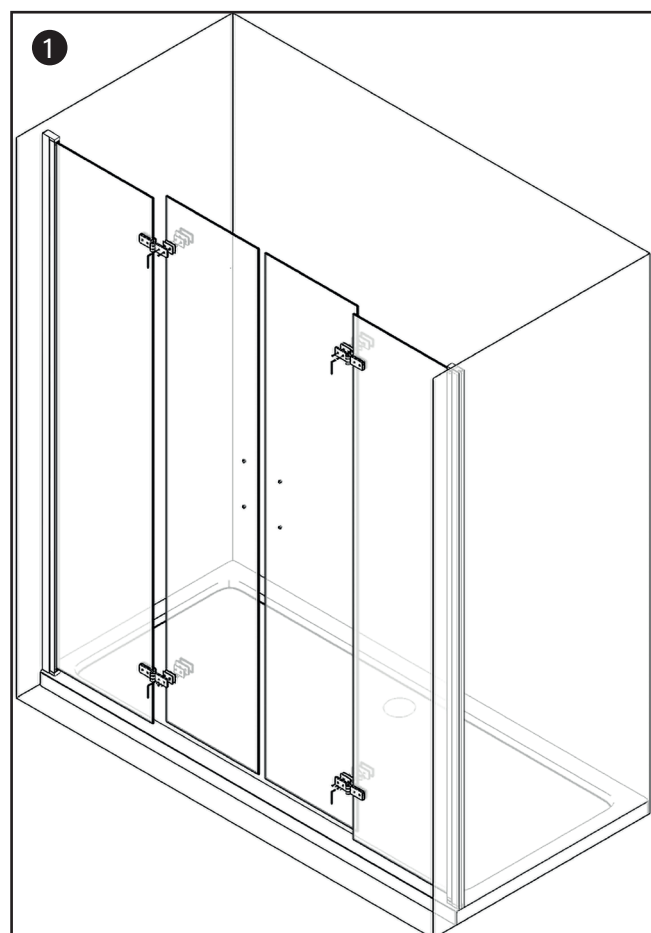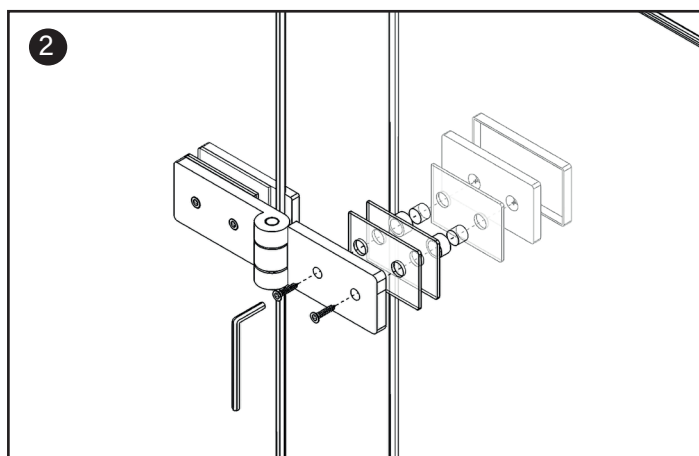

5° PASSAGE

1. Position the gaskets in the shape shown in the illustration to allow the doors to close properly and to seal against water.
2. Install the magnetic seals on the glass panes.

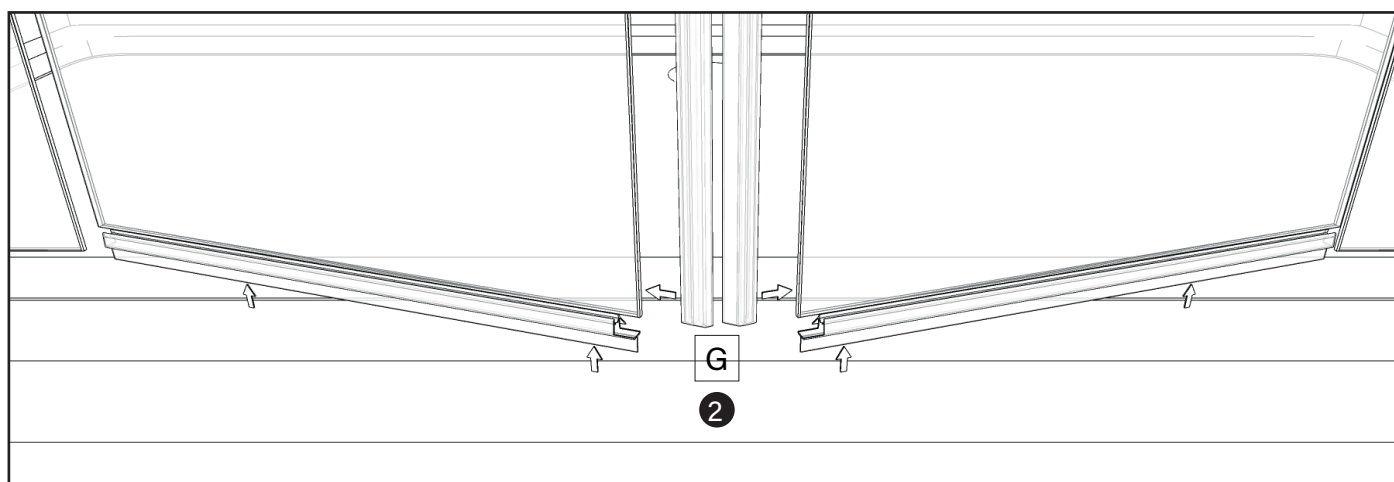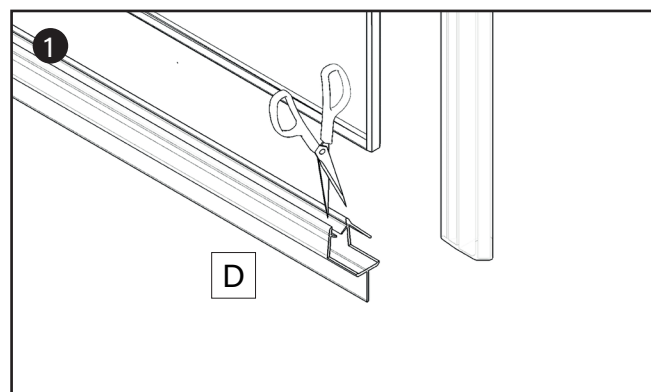



6° PASSAGE

1. Apply the extendable drip seal between the two panes with the hinge.
2. Siliconise and position the lower sealing bar.
3. Siliconise and position the left and right fixing brackets.

Note: The sealing profile can be installed with 6*16 screws if it is flush with the floor.

ATTENTION


The correct positioning of the lower retaining bar and the left and right fixing brackets is as shown in figure 4.

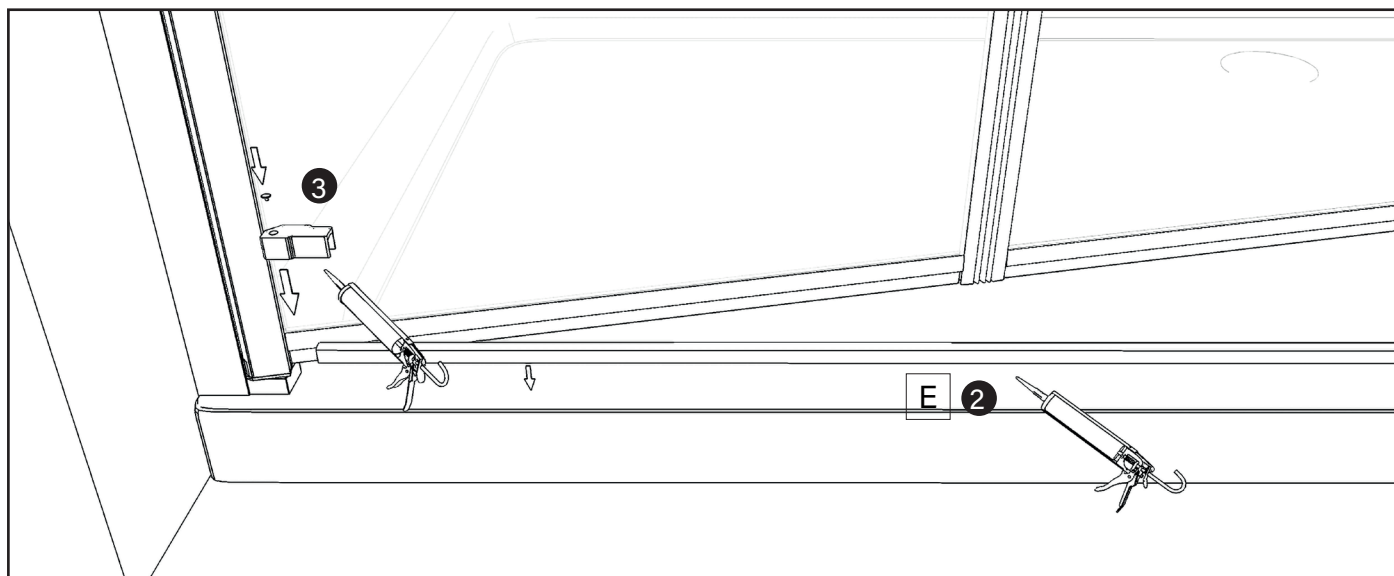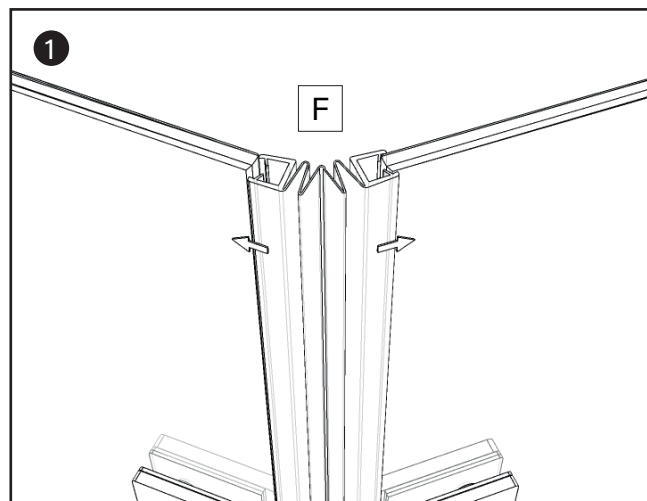

7° PASSAGE

1. Check the plumbness of the door, then drill holes, apply the 6x16 screws for locking with the wall profile and cover the screws with the appropriate plugs.

Note: A total of 4 holes must be drilled, two on each side, 1 at the top and 1 at the bottom.

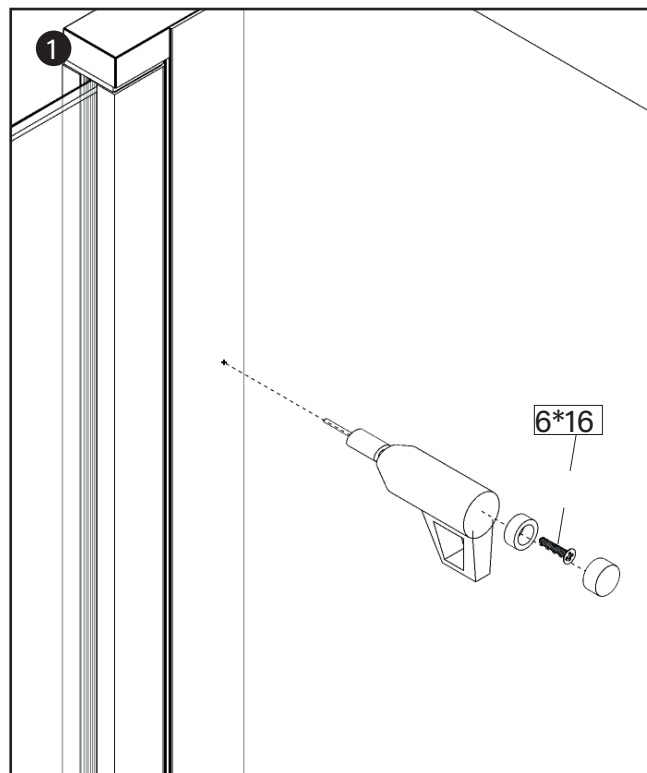

8° PASSAGE

1. Install the handle in the doors (hole on the inside).
2. Siliconise the outside of the shower enclosure around the entire perimeter as shown in the picture and wait 24 hours.

