

Buenos Aires A

DESCRIPTION

Corner shower door with folding opening, made of 6 mm toughened glass, with easy-clean anti-limescale treatment indicated by special labels. Height 190 cm, clear glass and chrome-plated brass hinges.






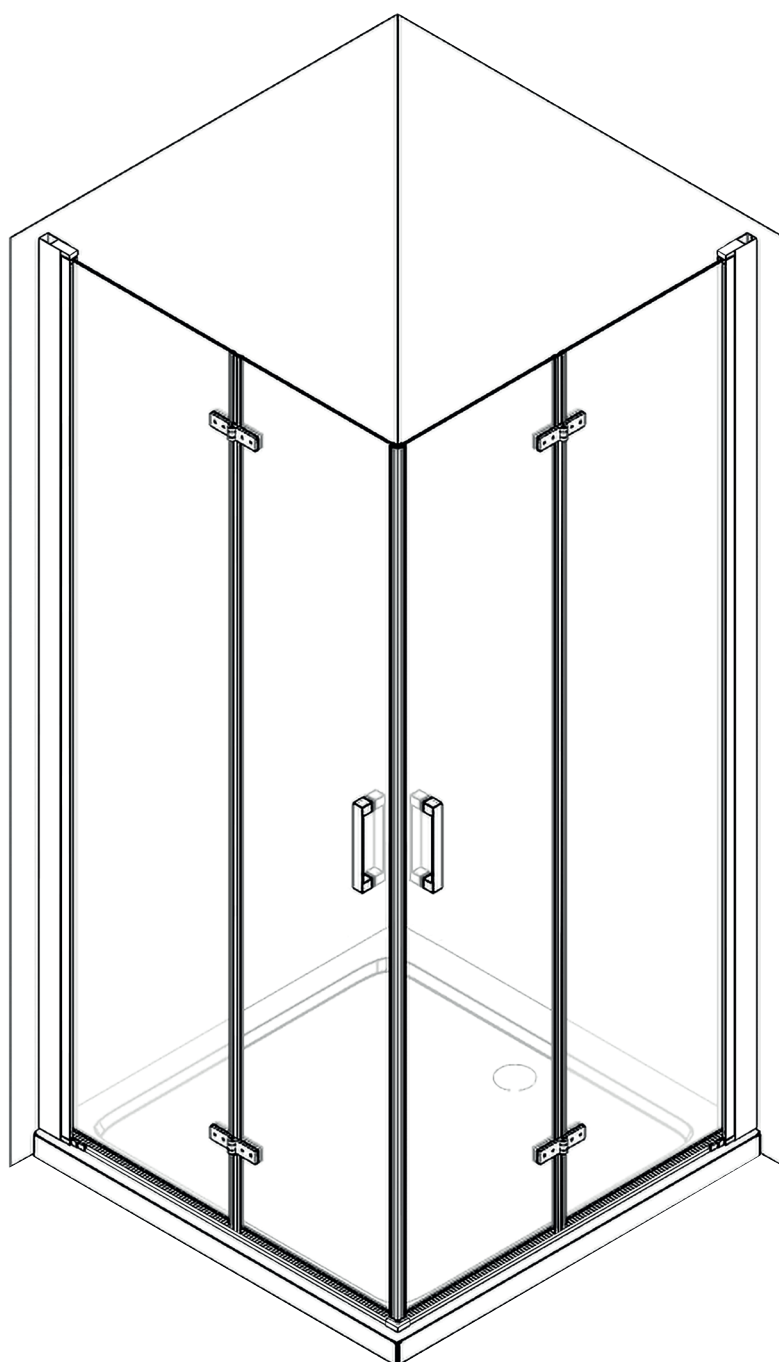


TABLE OF MEASURES


MODEL	MEASURES A-B
60	577 - 592
65	627 - 642
70	677 - 692
75	727 - 742
80	777 - 792
85	827 - 842
90	877 - 892
95	927 - 942
100	977 - 992

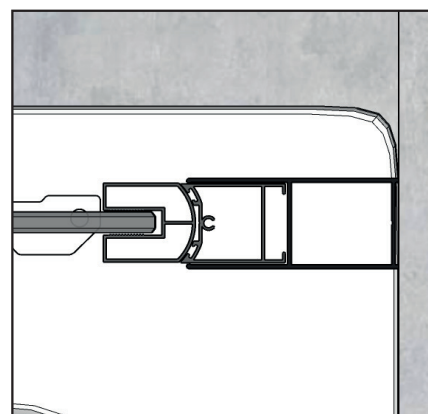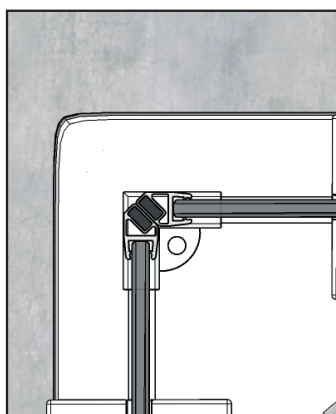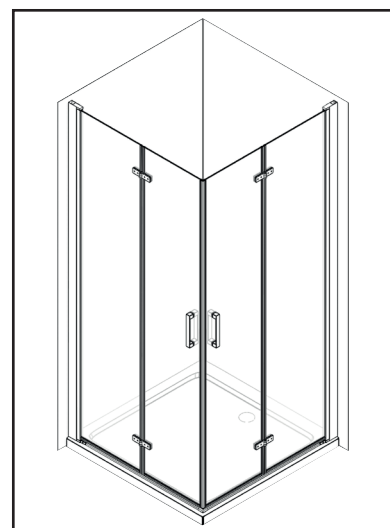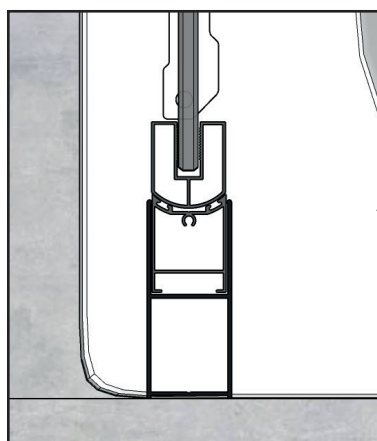

A

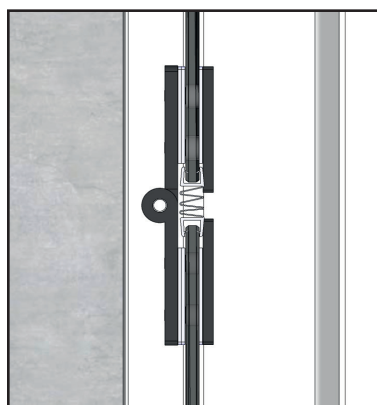


B

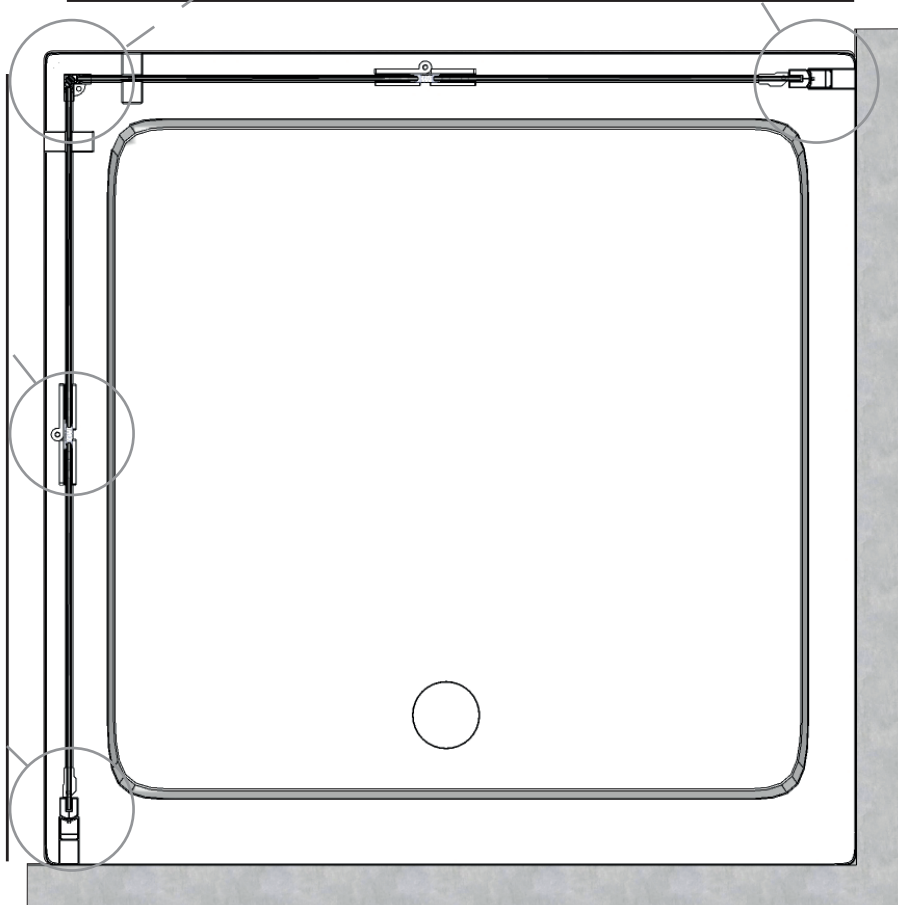


BUENOS AIRES A

TOOLS REQUIRED

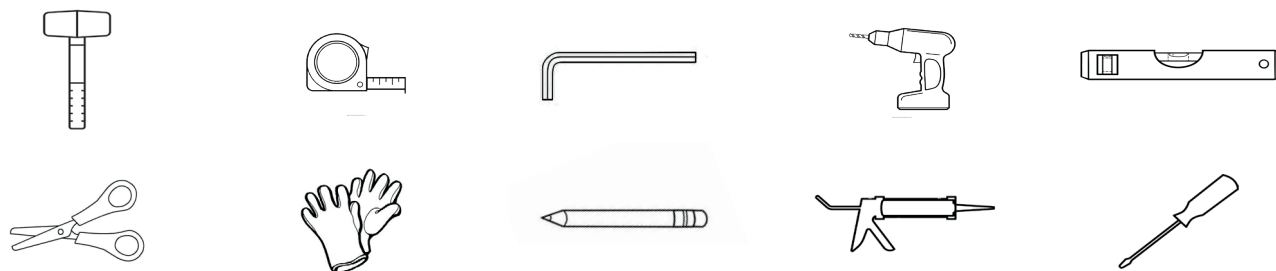

PACKAGE CONTENT (product shipped in two packages)

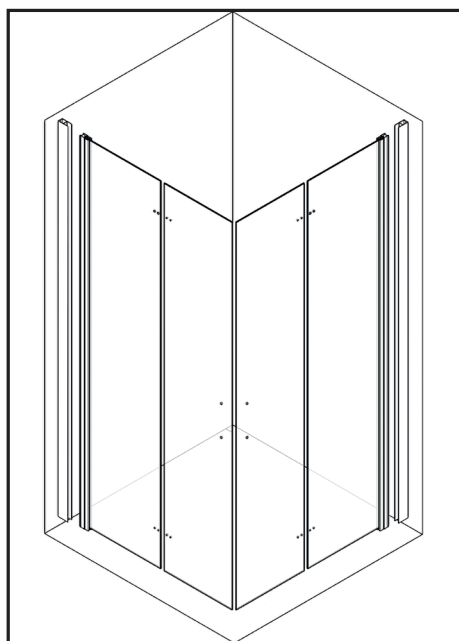

x8
8x55



x10
8*30



x8
6*30





x8
6*16



x4
6*10




x30

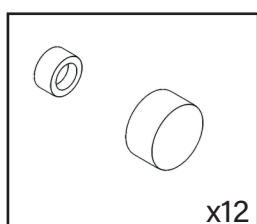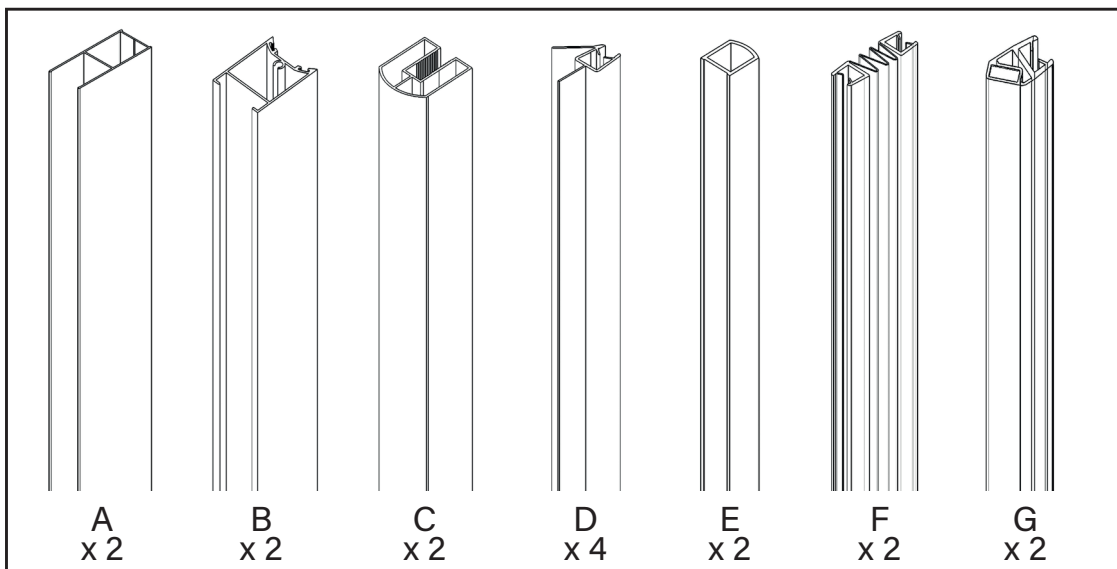


Screw caps

x12

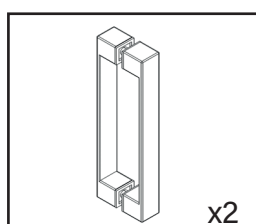


Handle

x2

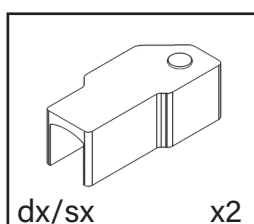


Ground fixing
bracket

x2

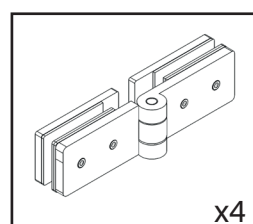

Cerniera

x4

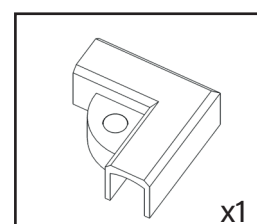

Angle fixing
bracket

x1





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profiles on the wall and use the plumb level.
3. Mark the holes in the wall with a pencil.
4. Drill holes in the wall.
5. Insert the wall plug and screw in the screws to secure the profiles.


IMPORTANT

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimum aesthetic and functional result.

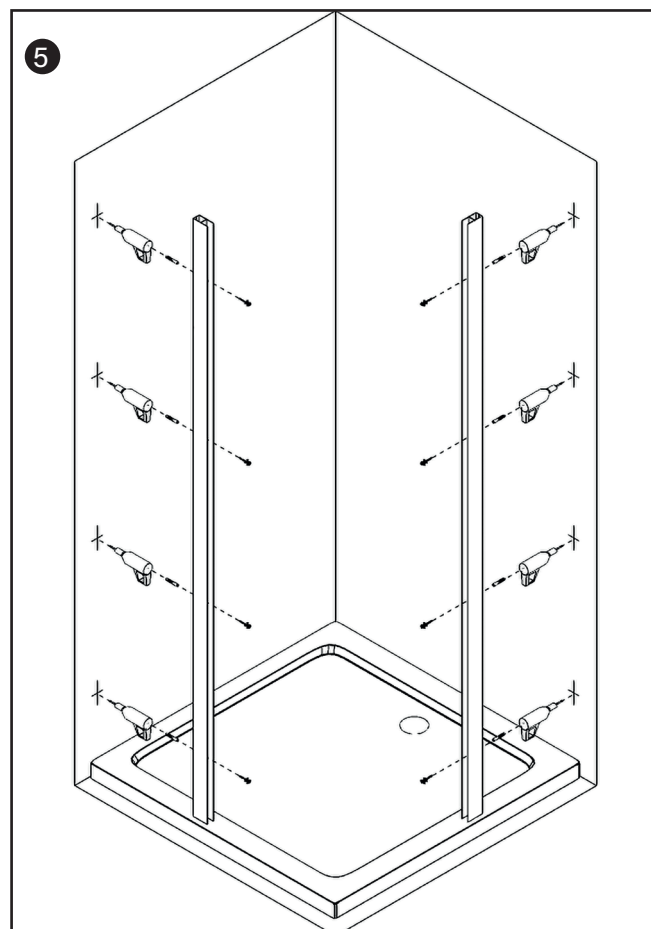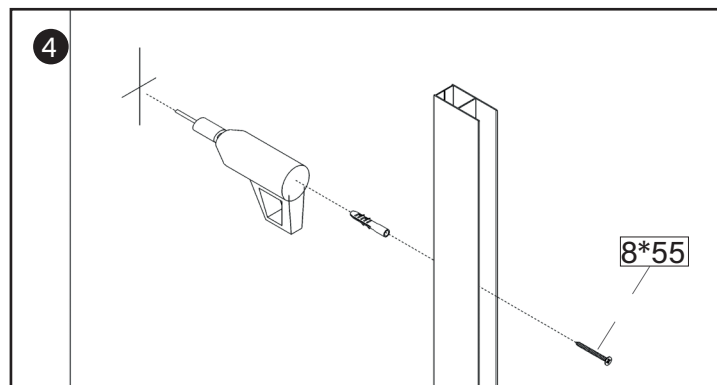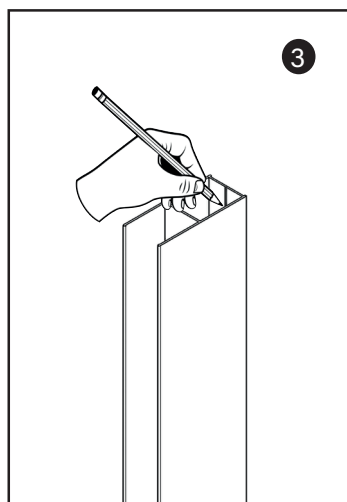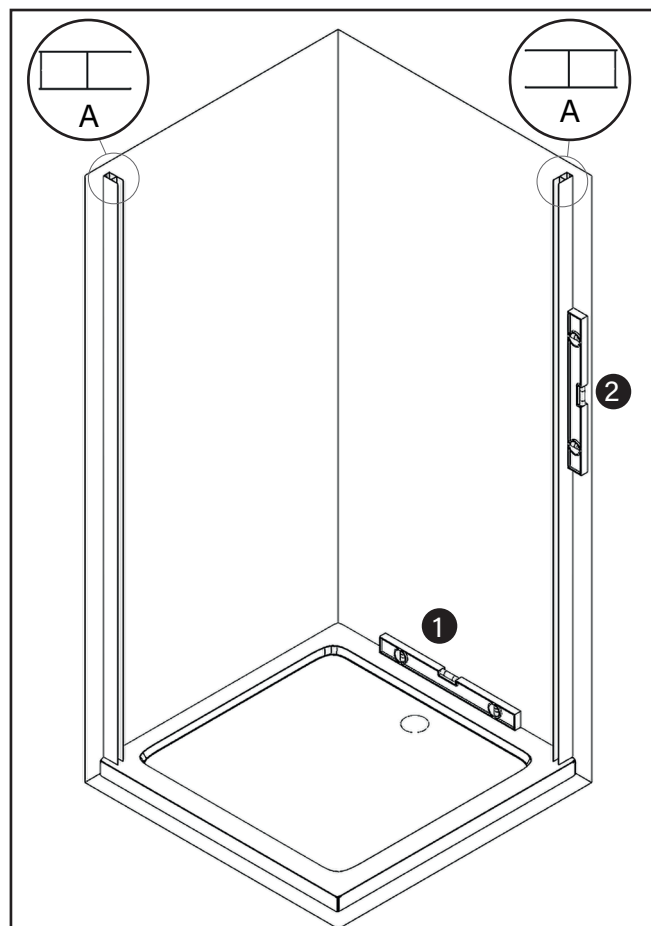



2° PASSAGE

1. Place the 6 mm glass panes on the door side inside the previously mounted wall profiles.

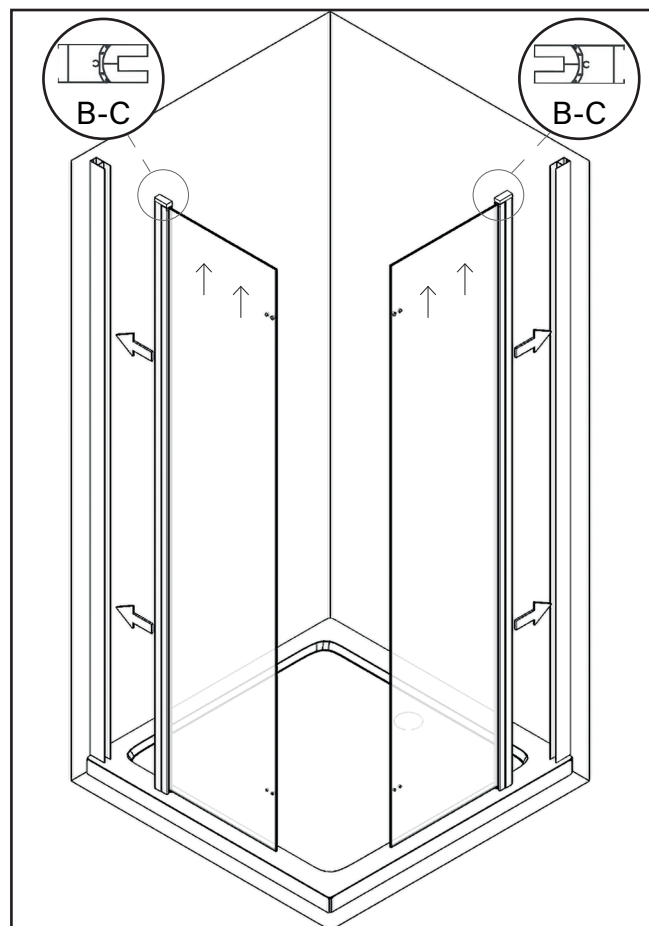




3° PASSAGE

1. Place the hinges on the 6 mm glass on the door side and fasten them to the glass as shown.
2. Insert the drip seals under the two panes.

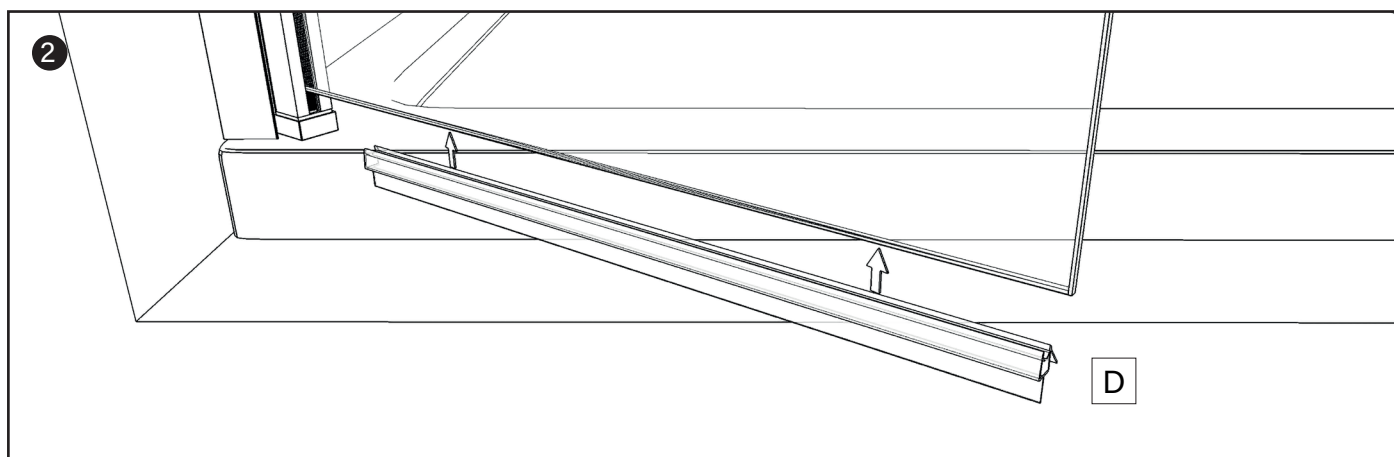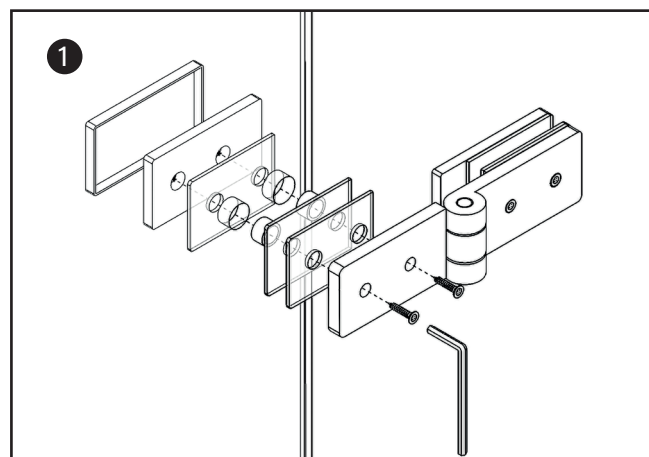




4° PASSAGE

1. Position the 6 mm glass on the door closing side.
2. Complete the fastening of the hinges to the glass as shown.
3. Repeat the previous steps for the other sash.

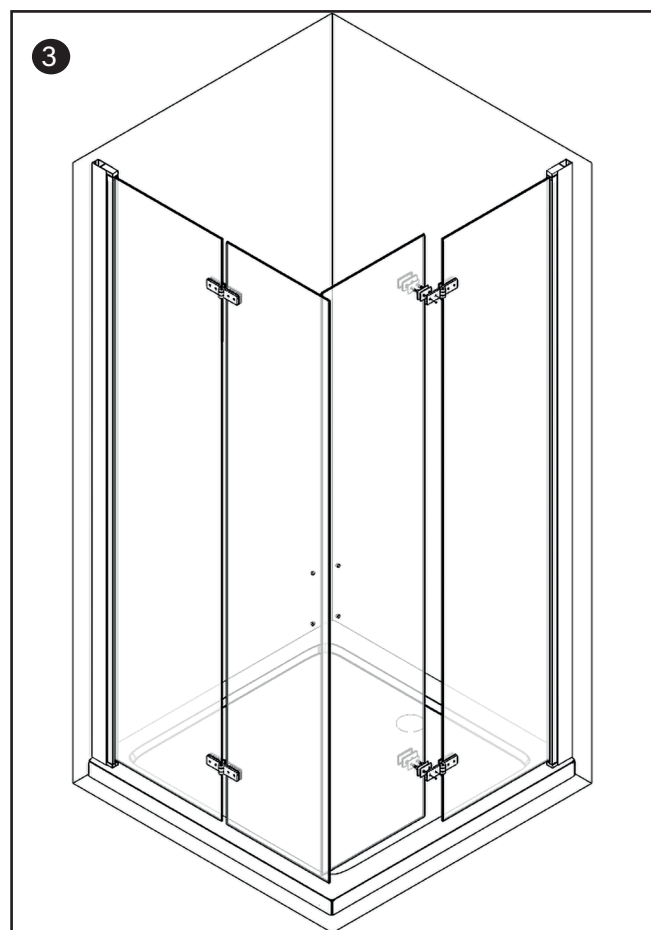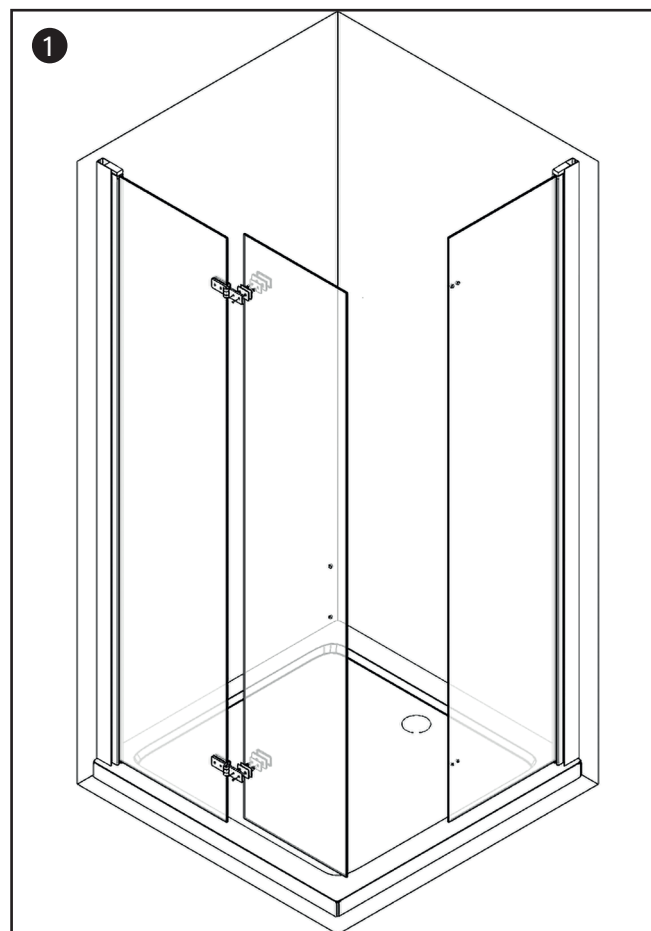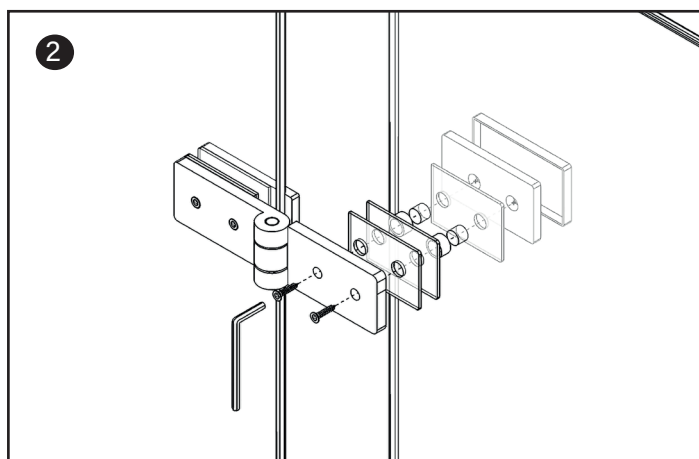

5° PASSAGE


1. Position the drip seal by shaping it, as shown in the figure, to allow the door to close properly and to seal against water.
2. Install the magnetic seals on the glass panes.

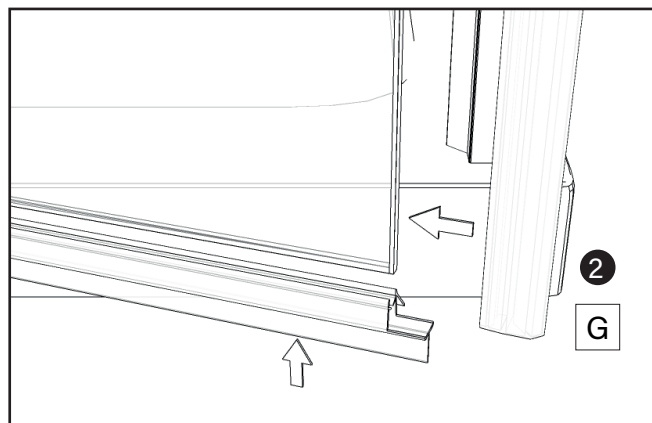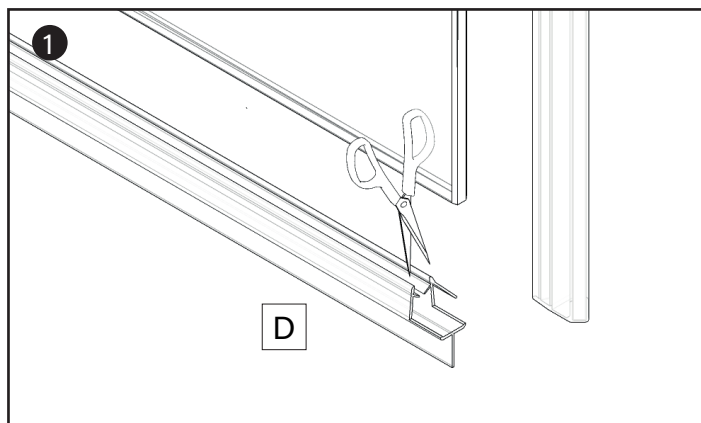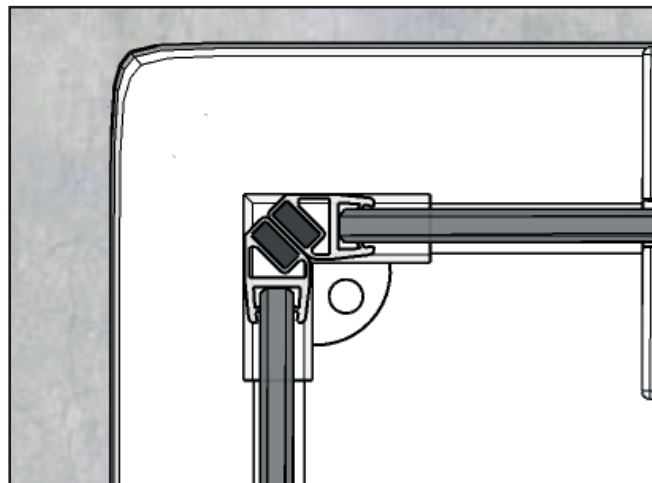

6° PASSAGE

1. Check the plumbness of the doors, then drill holes and attach the 6x16 screws for locking with the two wall profiles.

Note: A total of four holes must be drilled, two on each side, one at the top and one at the bottom. The screws will be covered with chrome-plated covers.

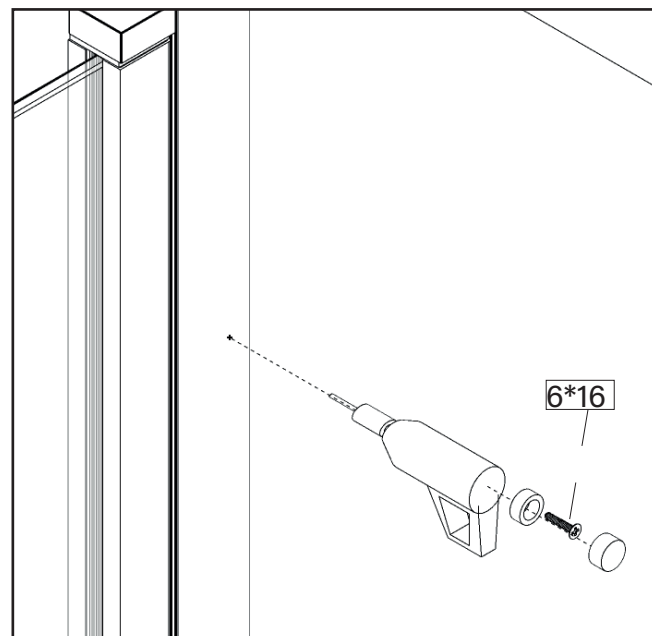




7° PASSAGE

1. Apply the extendable drip seal between the two panes.
2. Siliconise and position the lower sealing bar.
3. Siliconise and position the left and right fixing brackets.
4. Siliconise and place the angle bracket.

Note: The sealing profile can be installed with 6*16 screws if it is flush with the floor.


ATTENTION

The correct positioning of the lower retaining bar and the left and right fixing brackets is as shown in figure 5.

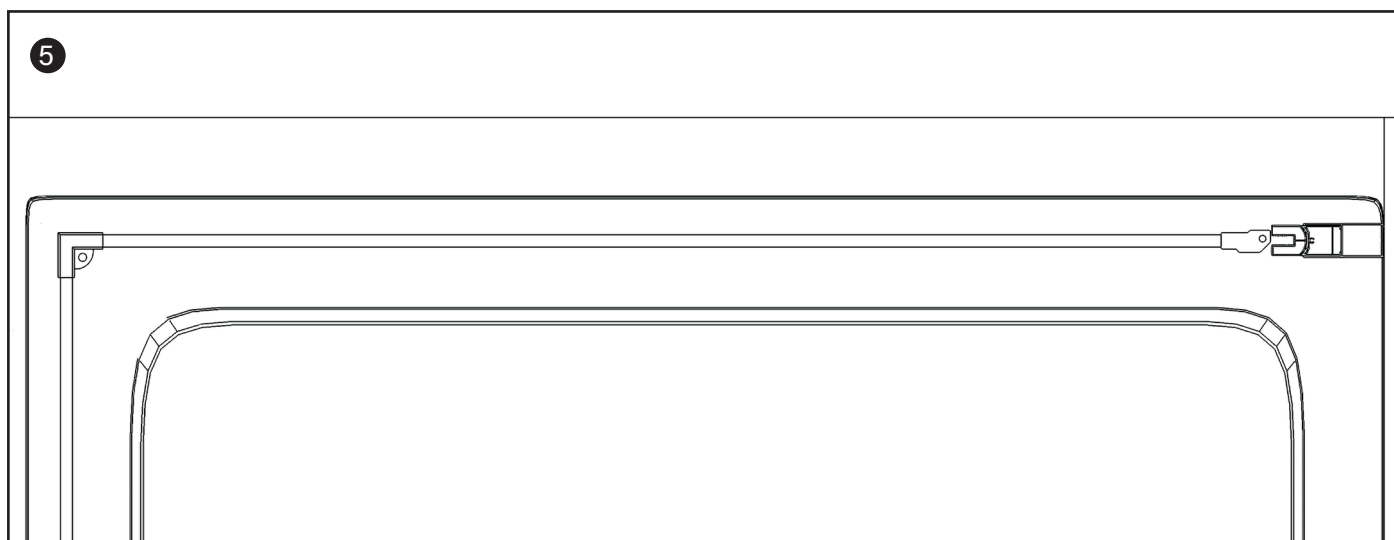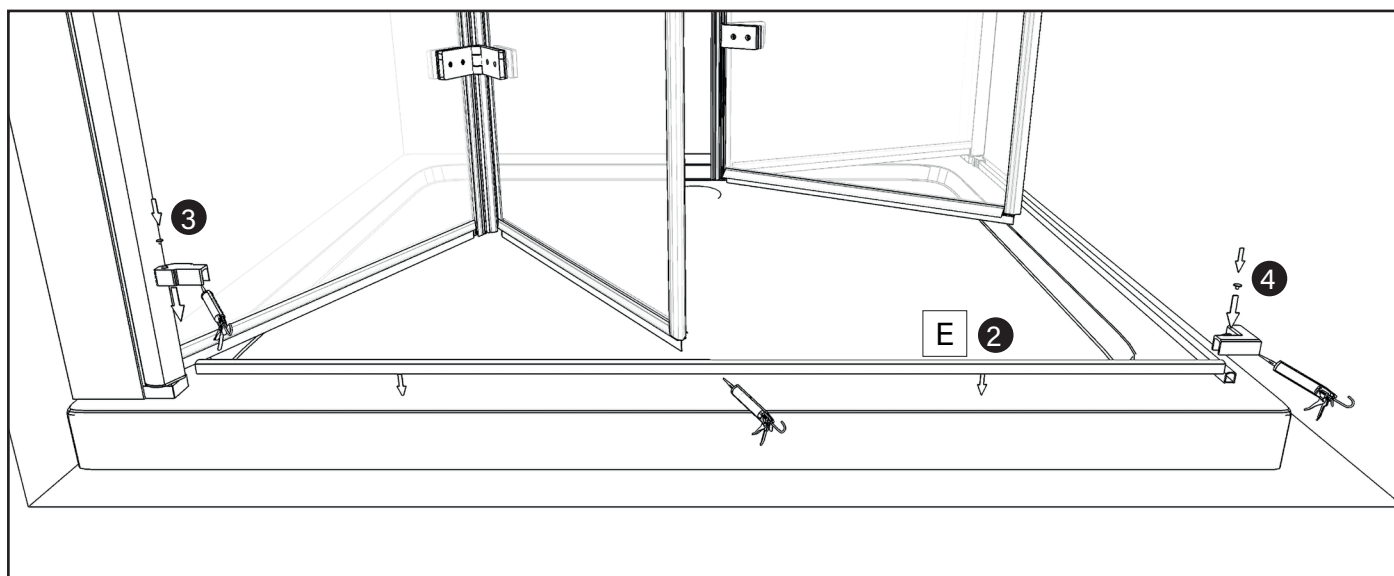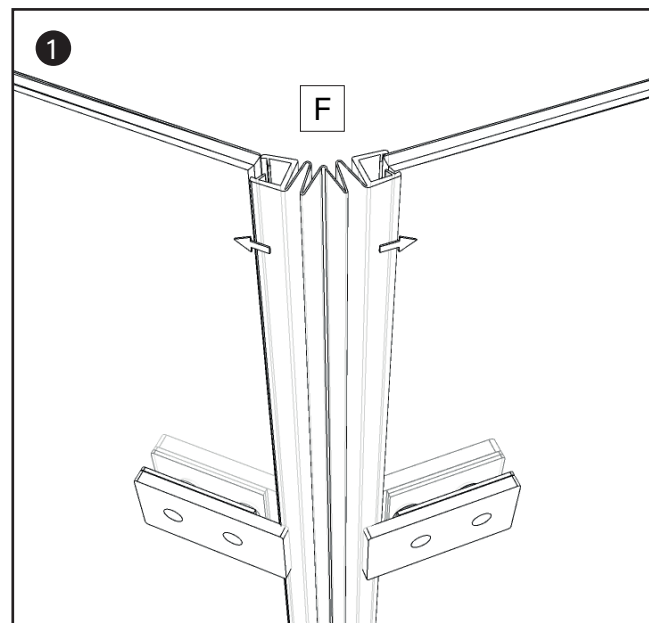

8° PASSAGE

1. Install the handles in the two doors (hole on the inside).

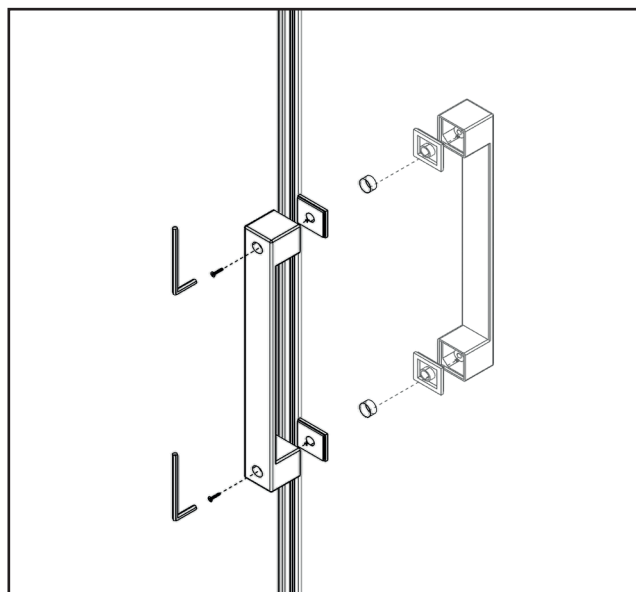

9° PASSAGE

1. Siliconise the outside of the shower enclosure around the entire perimeter as shown in the picture and wait 24 hours.

