

Seattle

DESCRIPTION

Sliding shower door made of 6 mm glass, reversible installation, possibility of quick release of the lower carriages.
Manual adjustment of wall profiles 2.5 cm per side.
Chromed aluminium frame, glass with anti-limescale treatment indicated by special labels.




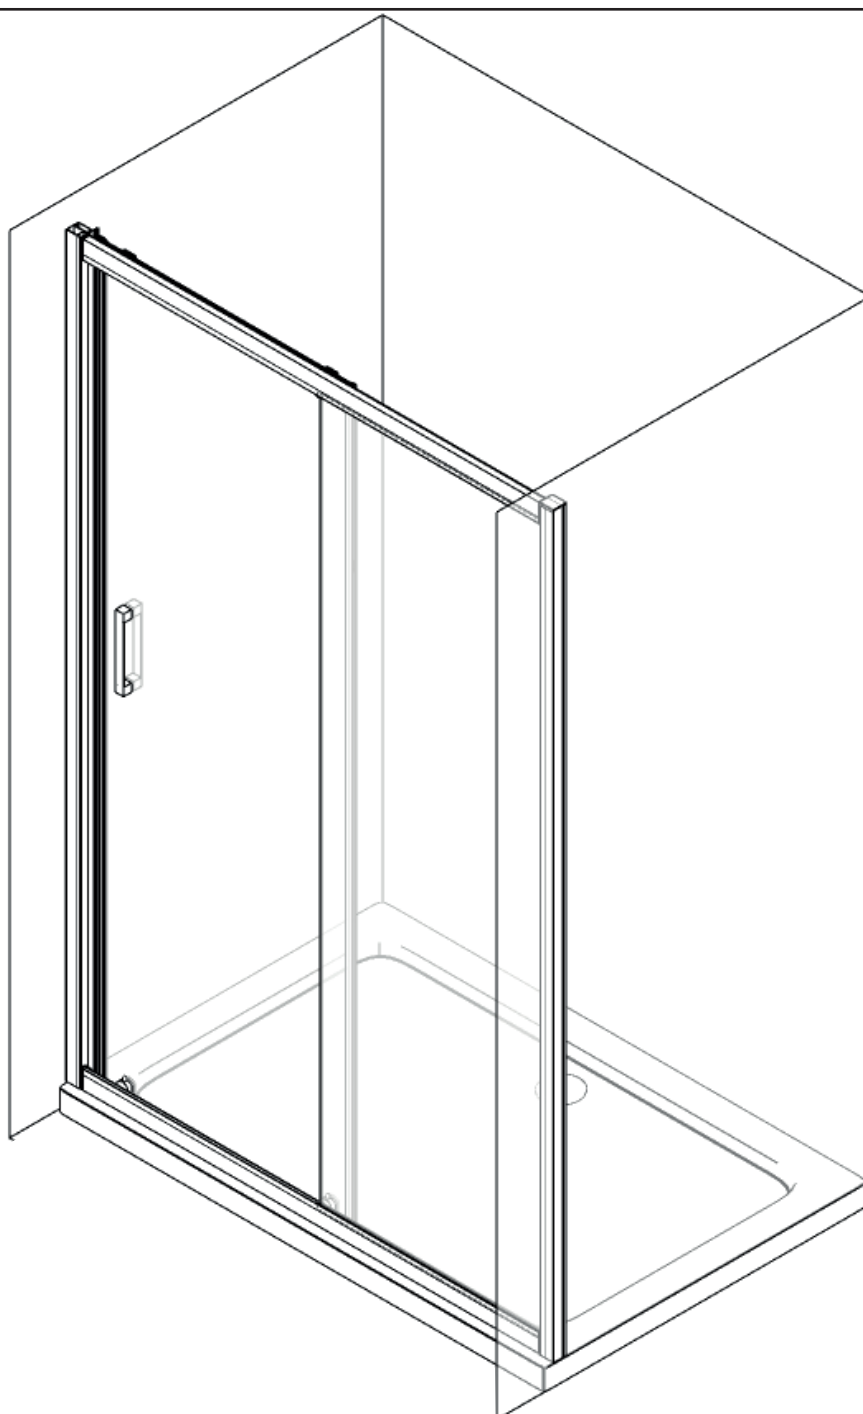



TABLE OF MEASURES

NICHE DOOR	MEASURES A
1000(scrollbar measures 87cm)	950 - 1000
1050(scrollbar measures 92cm)	1000 - 1050
1100(scrollbar measures 97cm)	1050 - 1100
1150(scrollbar measures 102cm)	1100 - 1150
1200(scrollbar measures 107cm)	1150 - 1200
1250(scrollbar measures 112cm)	1200 - 1250
1300(scrollbar measures 117cm)	1250 - 1300
1350(scrollbar measures 122cm)	1300 - 1350
1400(scrollbar measures 127cm)	1350 - 1400
1450(scrollbar measures 132cm)	1400 - 1450
1500(scrollbar measures 137cm)	1450 - 1500
1550(scrollbar measures 142cm)	1500 - 1550
1600(scrollbar measures 147cm)	1550 - 1600
1650(scrollbar measures 152cm)	1600 - 1650
1700(scrollbar measures 157cm)	1650 - 1700


REVERSIBLE

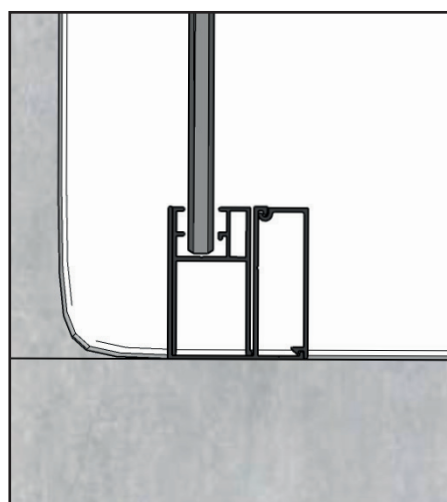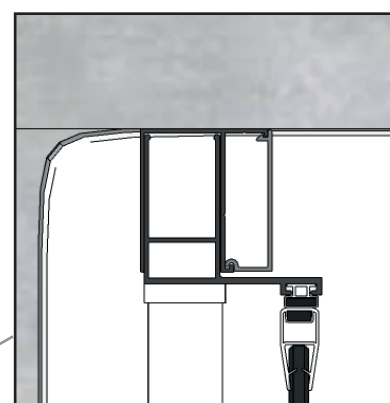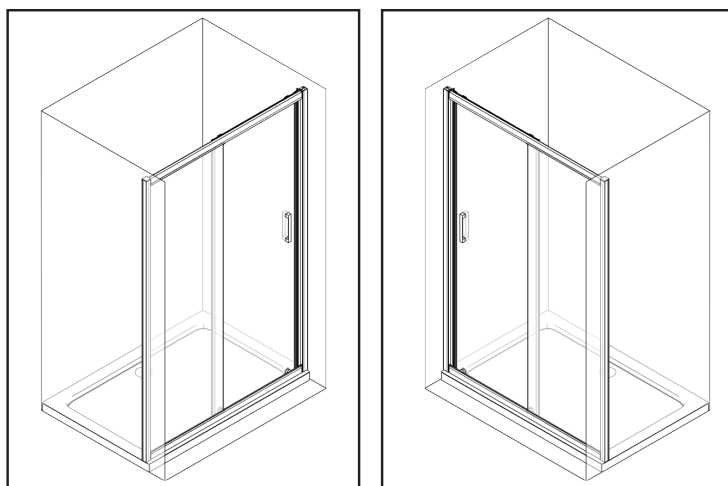




A

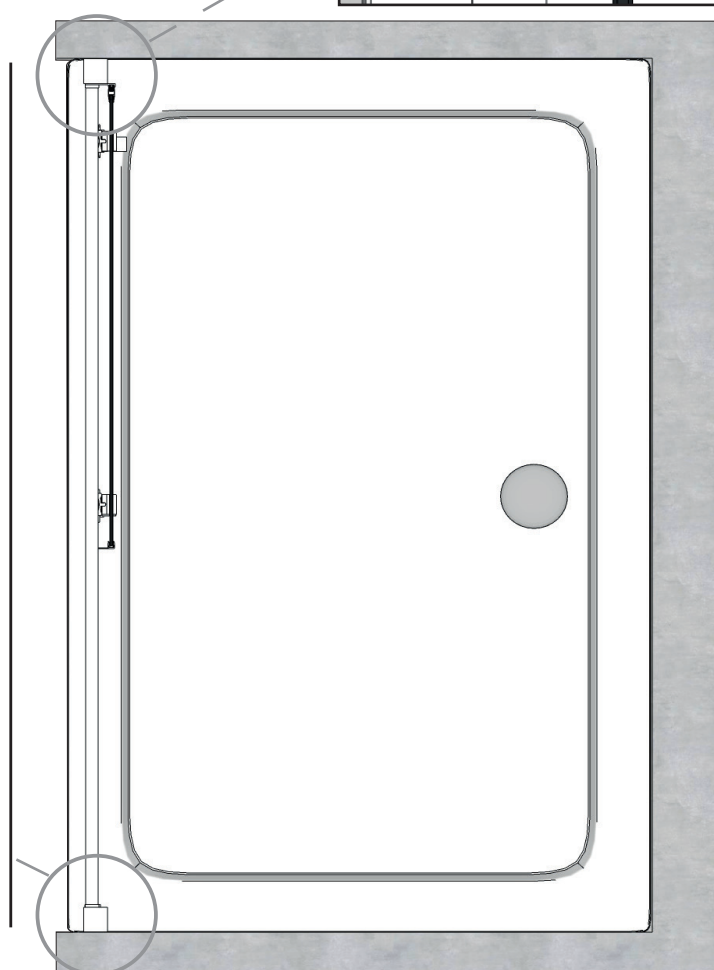


TOOLS REQUIRED

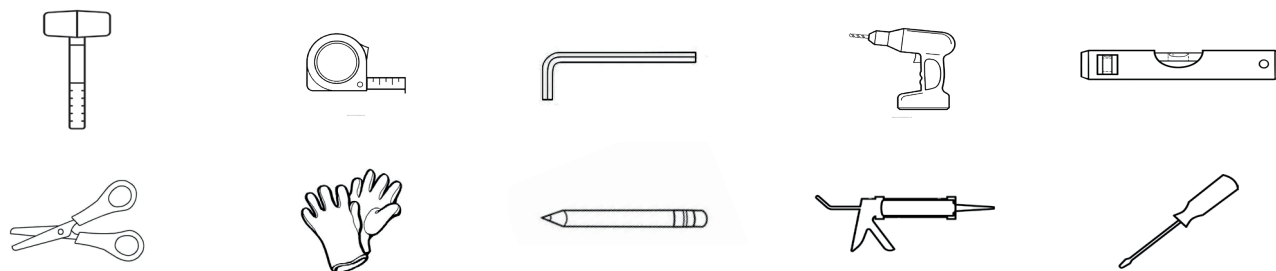


PACKAGE CONTENTS

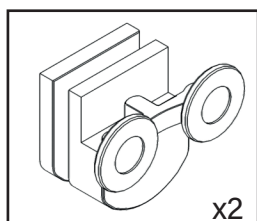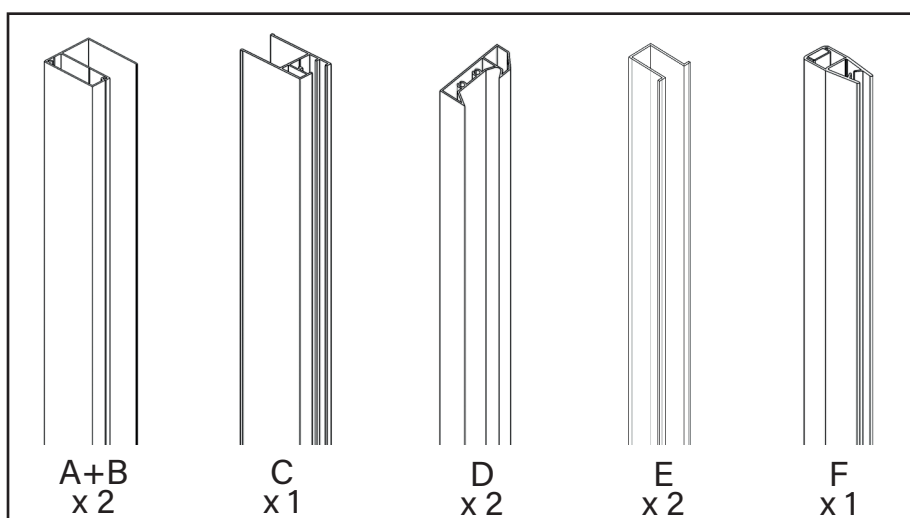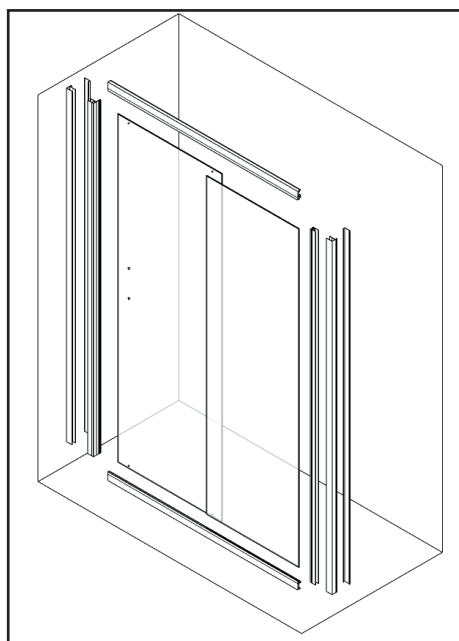


Upper wheels

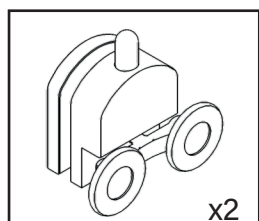


Removable lower wheels

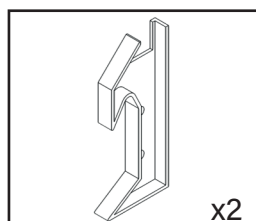


Fixed-side connector with slot

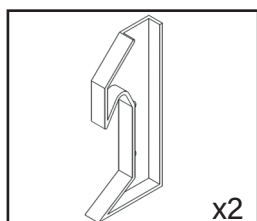


Sliding side connector

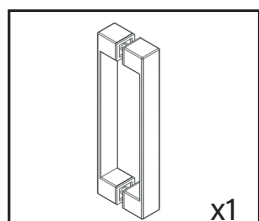


Handle

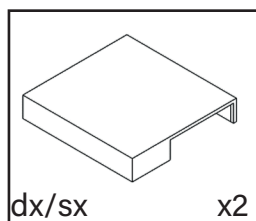


Top cover wall profile

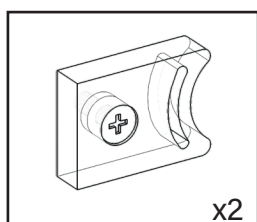


End of run

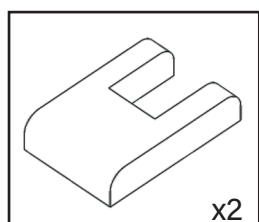

Glass retainer cover

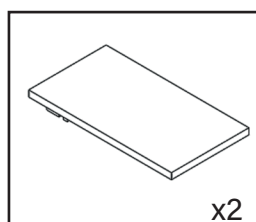

Upper fixed glass cover




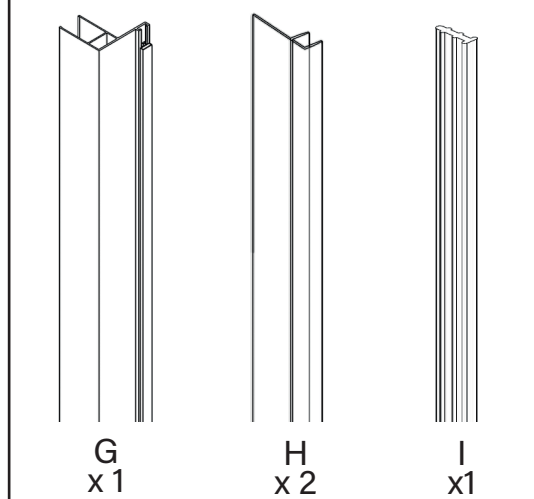


MOUNTING

1° PASSAGE





1. Check the levelling of the shower tray with the level.
2. Lay the profiles on the wall and use the level for plumbness.
3. Drill the holes in the wall with a pencil.
4. Drill the holes in the wall with the drill.
5. **IMPORTANT:** Only install the wall profile on the side where the door closes definitively on the wall, as it would be hidden by the magnet profile.

Note: On the fixed glass side, insert wall plugs in any case for subsequent steps.

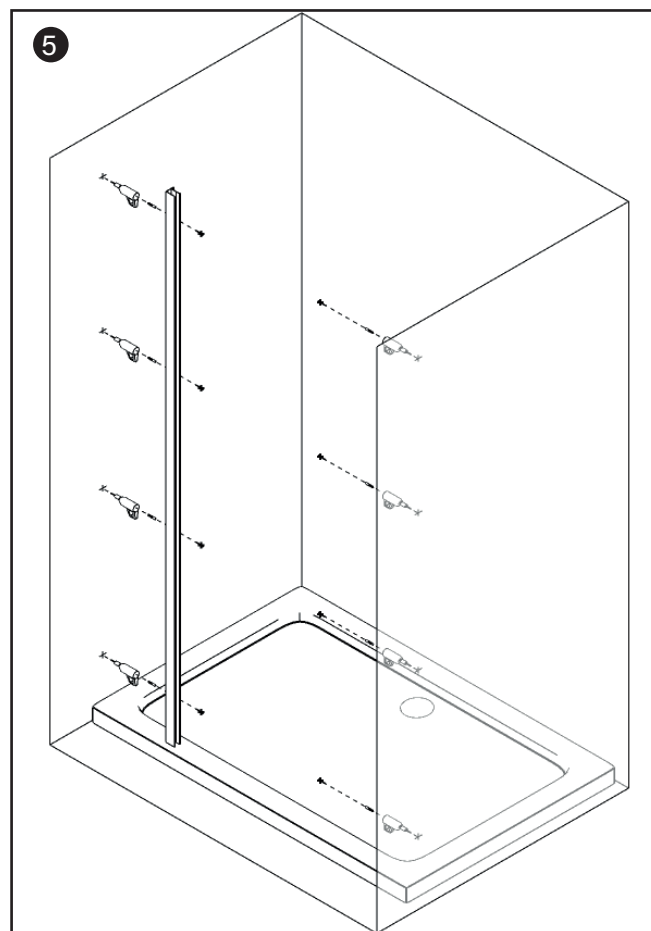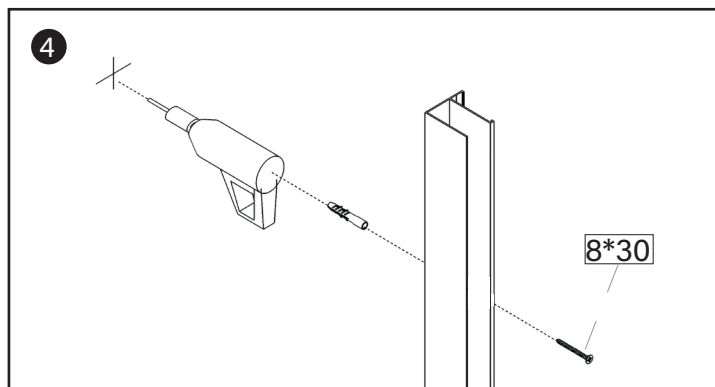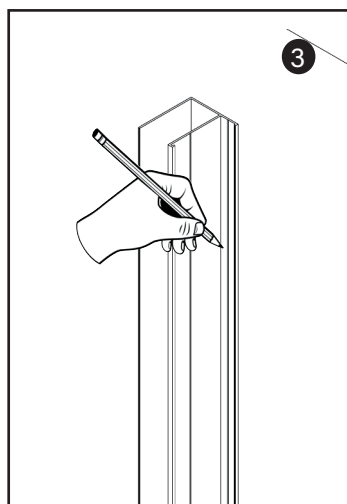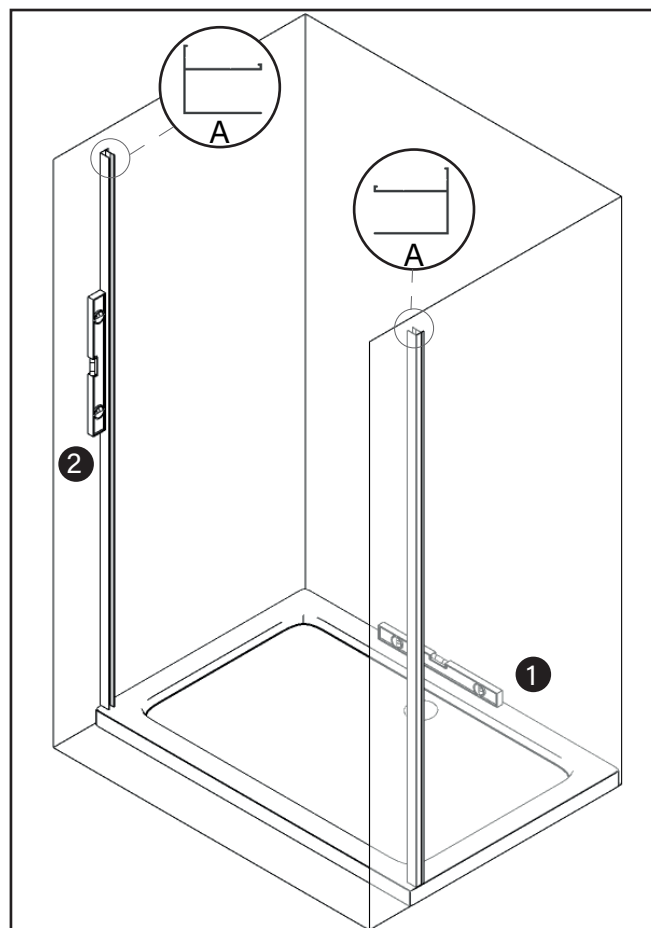



2° PASSAGE

1. Position the glass protection cover.
2. Place the gasket in the lower profile (glass protection gasket).
3. Use the 8x30 screw to connect the lower aluminium rail with the vertical profile; the connector must be inserted between the rail and the profile. In this way we construct the door frame (skeleton).
4. Insert the fixed glass pane as in the figure.

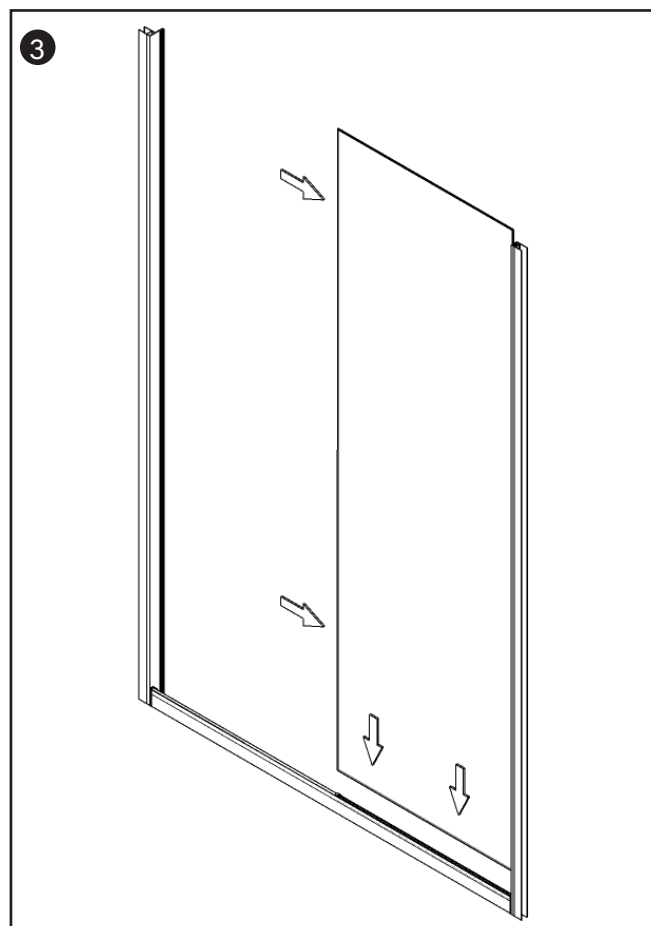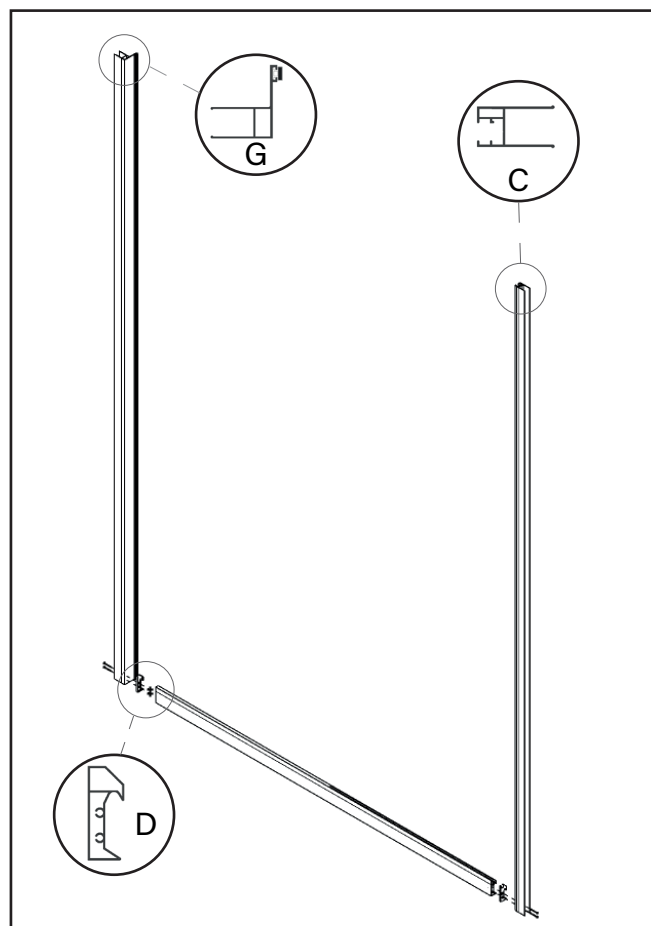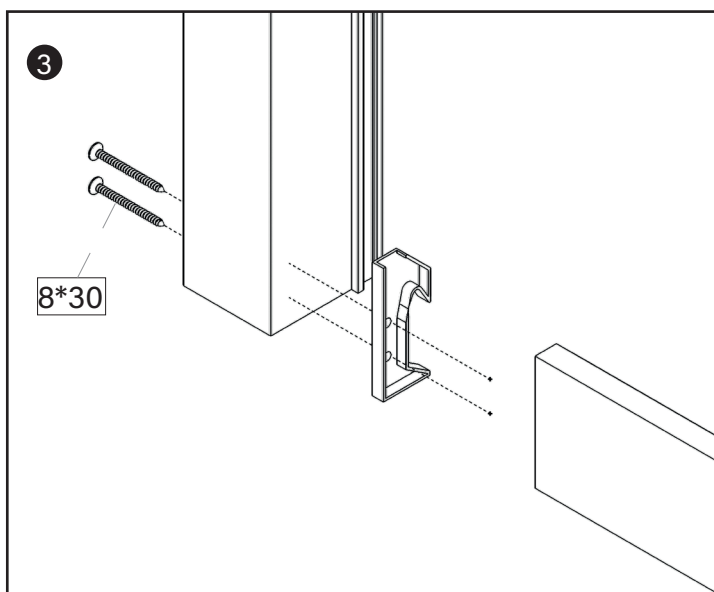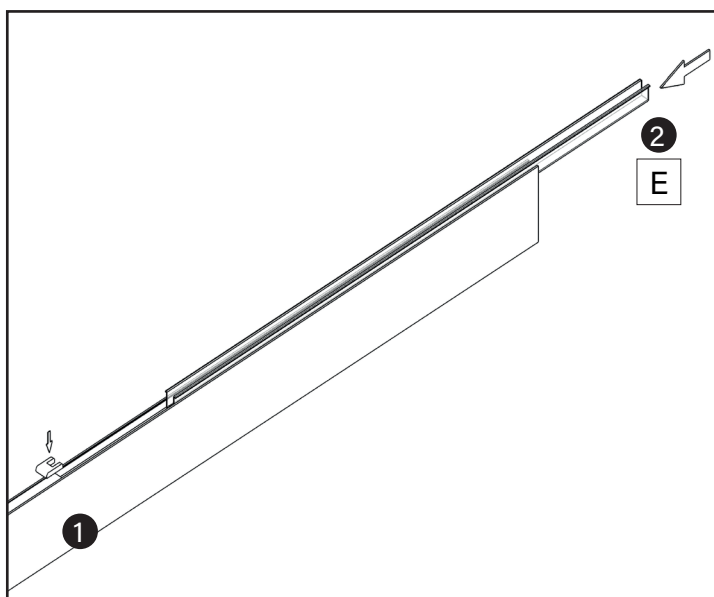

3° PASSAGE



1. Repeat step (2) above for the upper part of the frame.

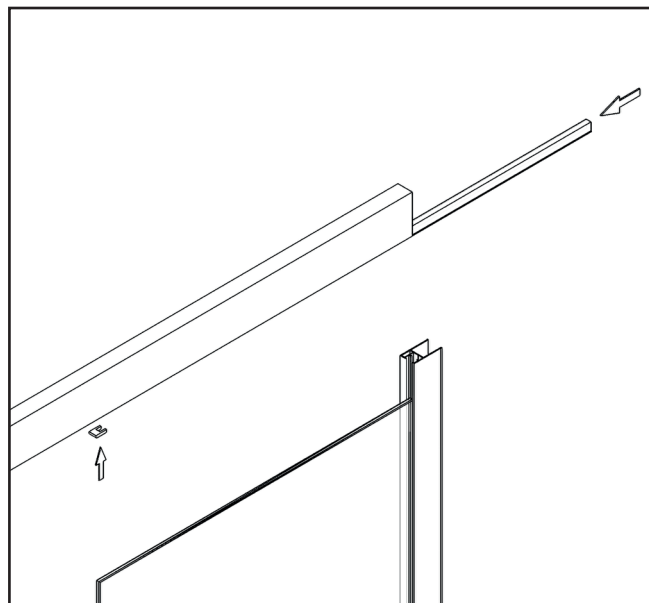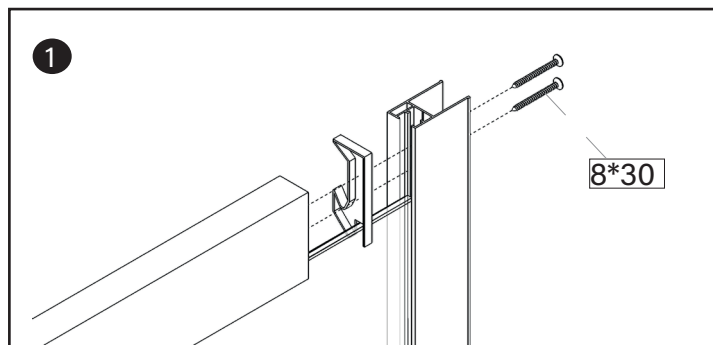

4° PASSAGE


1. Assemble the previously assembled frame/skeleton with the wall profile (fixed glass side).
2. Proceed with inserting the previously assembled frame into the profile initially fixed to the wall.

Note: adjust the extension of the frame by acting on the telescopic (1 profile fits inside the other).

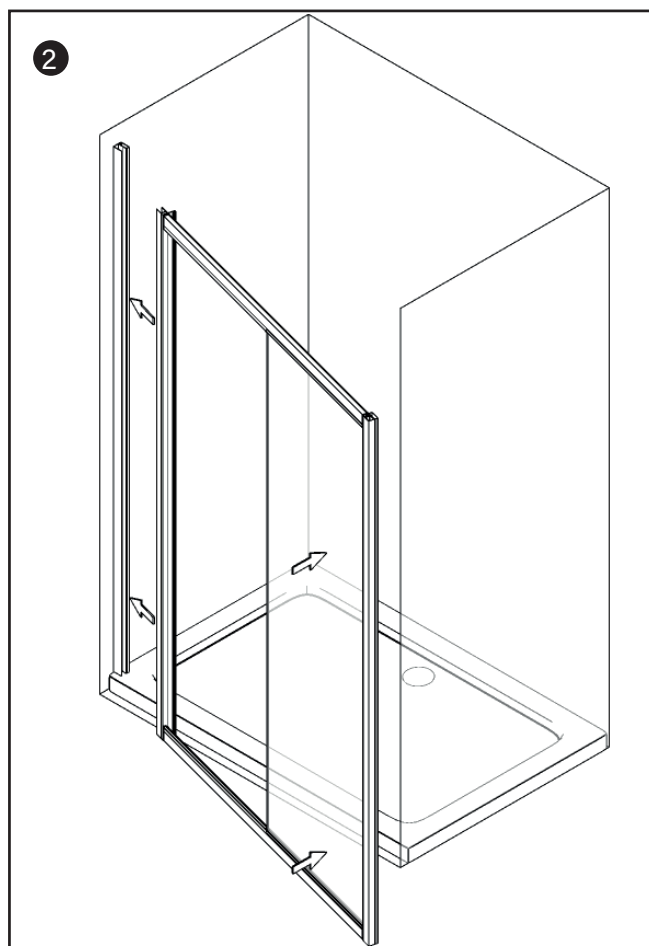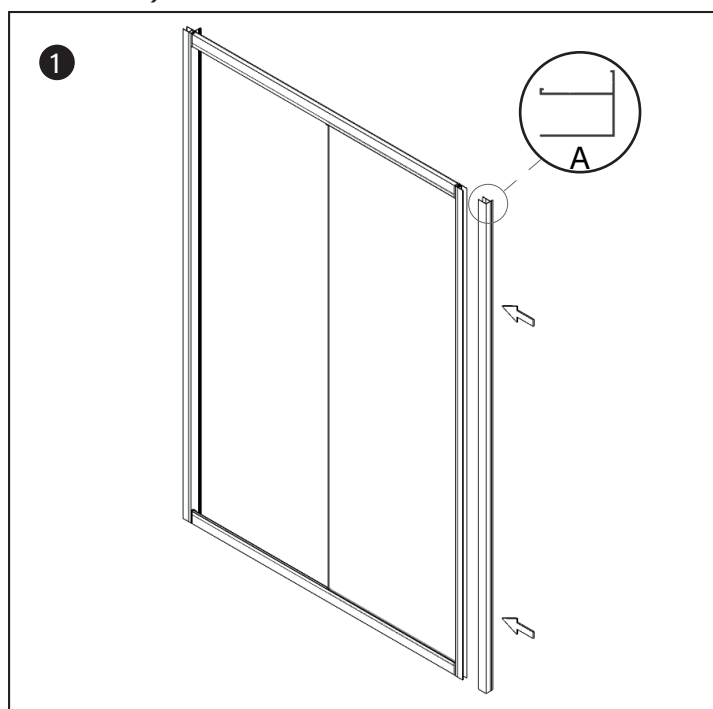

5° PASSAGE

1. Finish by fixing the wall profile (fixed glass side) to the wall using screws on previously inserted wall plugs .


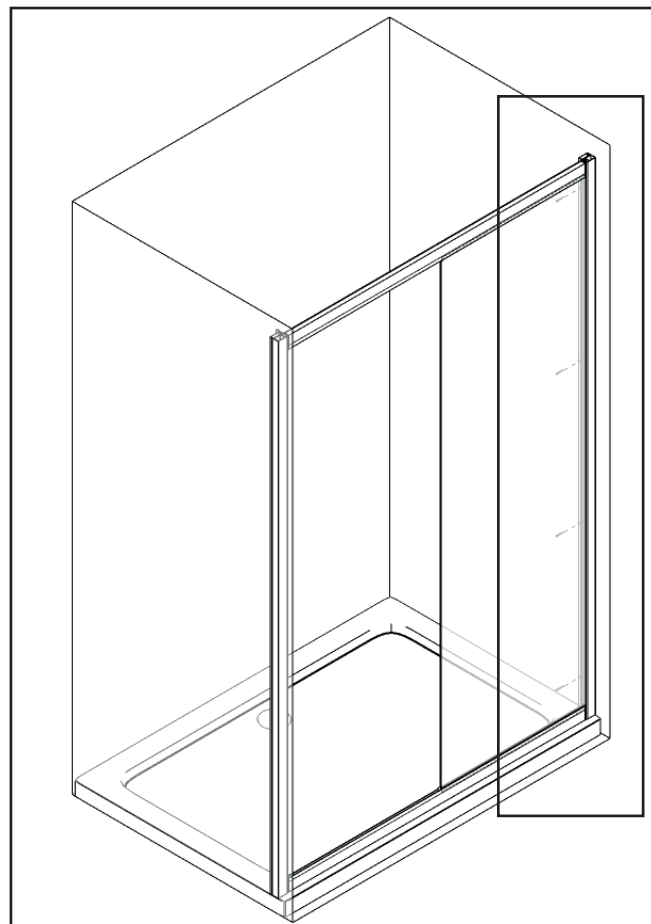


6° PASSAGE

1. Install the upper sliding wheels on the glass.

Note: The **upper castors** are adjustable; if, after installing the shower enclosure, the doors do not slide smoothly, they can be adjusted using the lower screw on the upper bearing.

2. Install the lower running wheels (with quick release button).

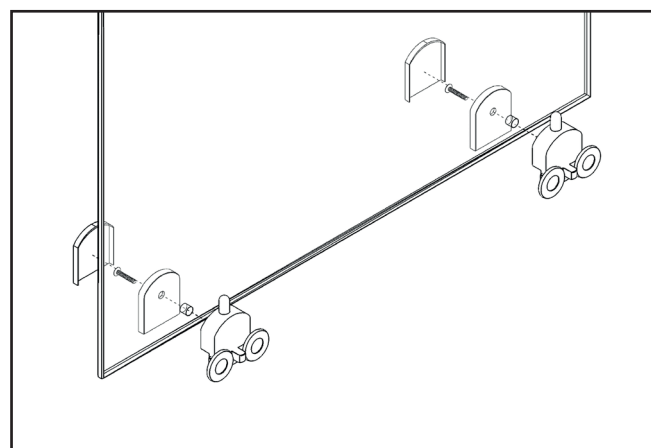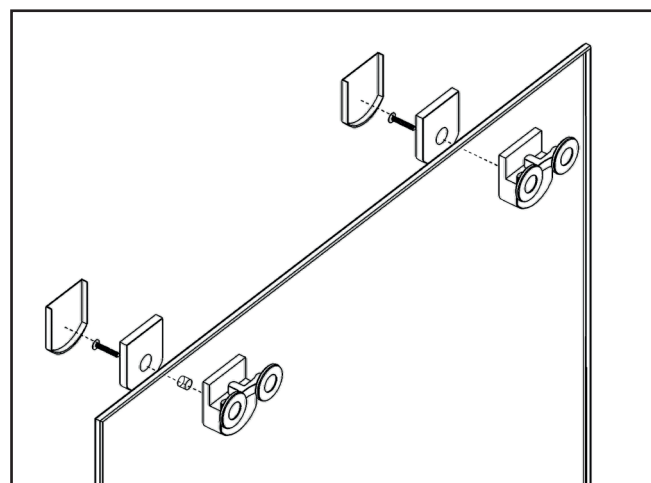




7° PASSAGE

1. Hook the door on the upper sliding track.

Note: Make sure the door is aligned, see previous step for adjustment.

2. Hook the wheels onto the lower track.



Note: The lower running wheels are detachable to facilitate routine cleaning and maintenance.

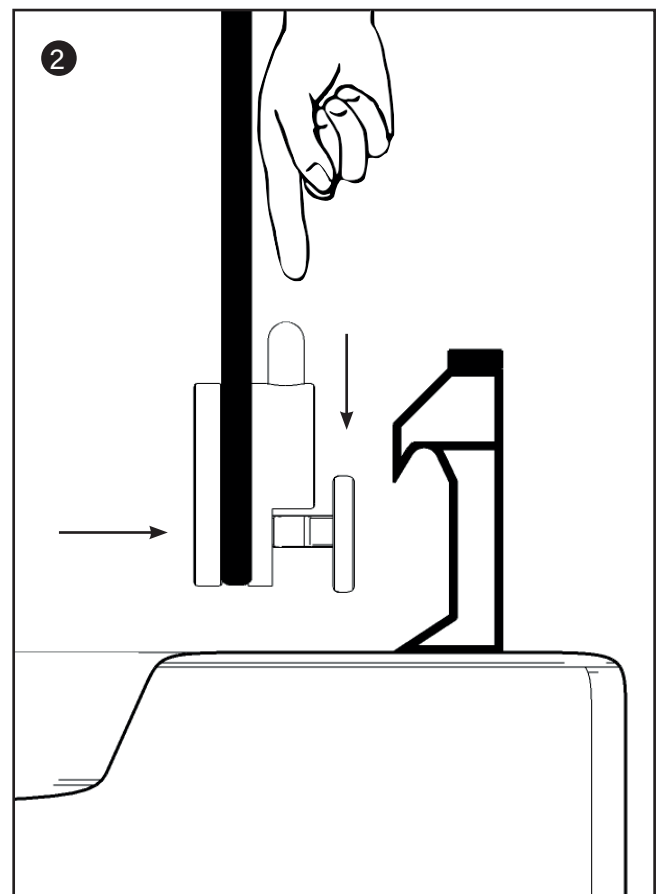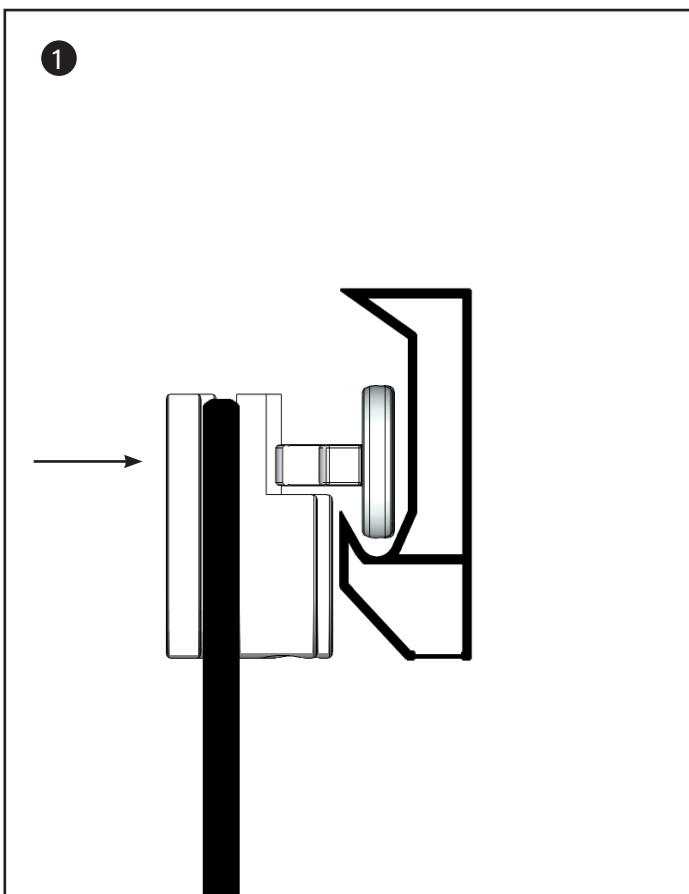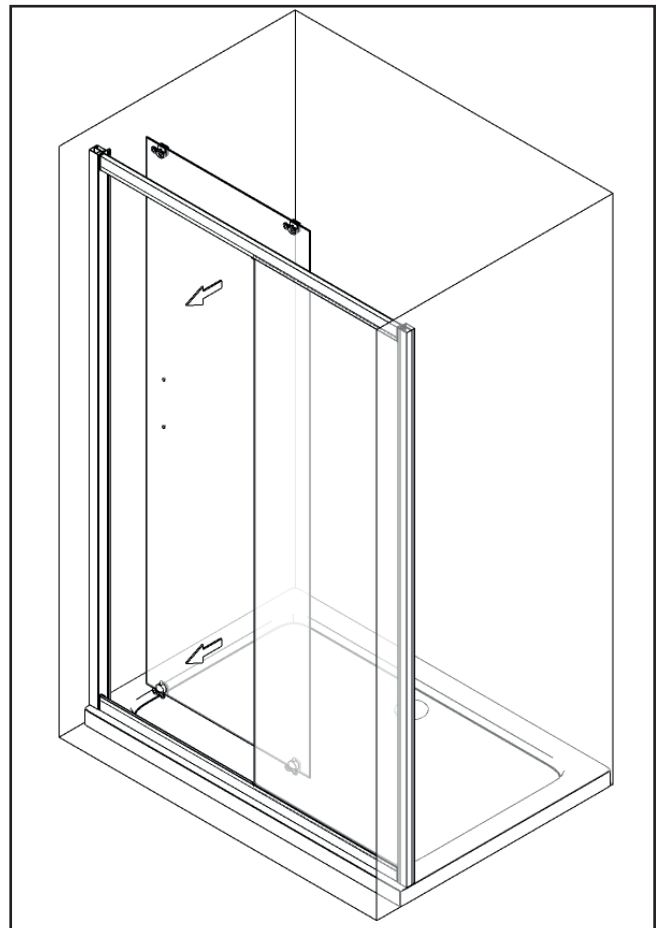

8° PASSAGE

1. Install the magnetic sealing gasket on the sliding glass.
2. Install the sealing gasket between the fixed glass and the sliding door.

Note: there is a higher and a lower gasket supplied, the lower one goes on the fixed glass, the higher one in the sliding glass.

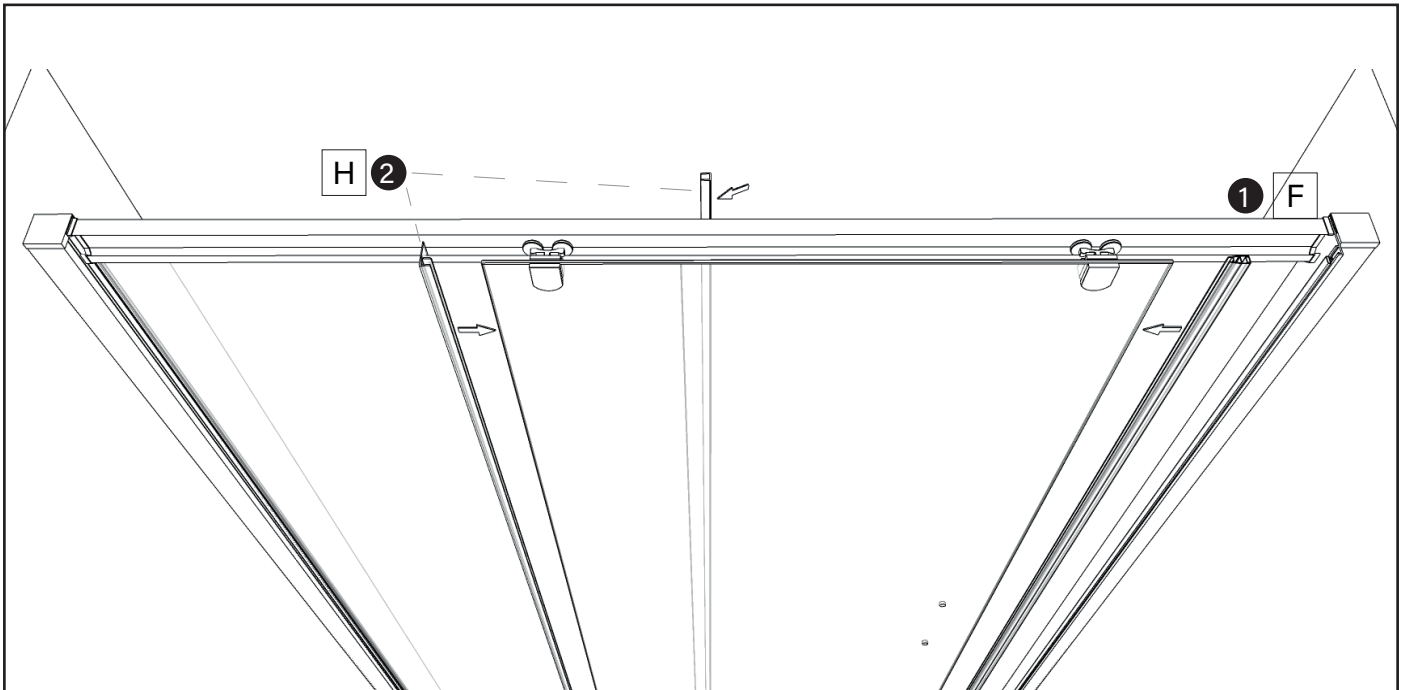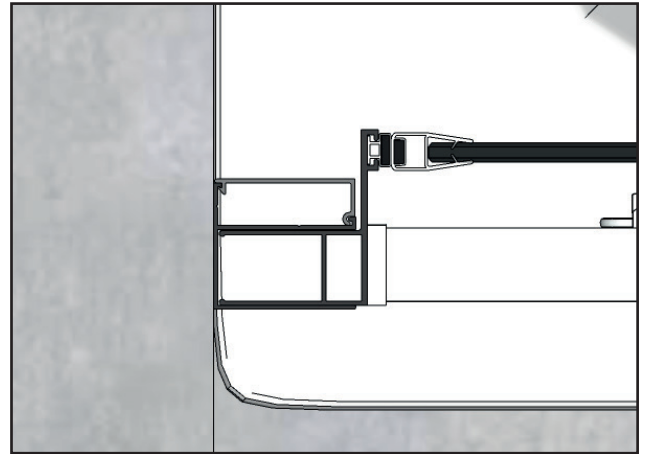


9° PASSAGE

1. Check plumbness, drill holes from the inside to secure the shower panel to the wall profiles using the 8x16 screws.

IMPORTANT: maximum adjustment 2.5 cm

Note: A total of 4 holes must be drilled, 2 holes per profile, 1 at the top and 1 at the bottom.

2. Cover the wall profile of the fixed wall with the aluminium cover to conceal the fixing screws and to protect them from water.


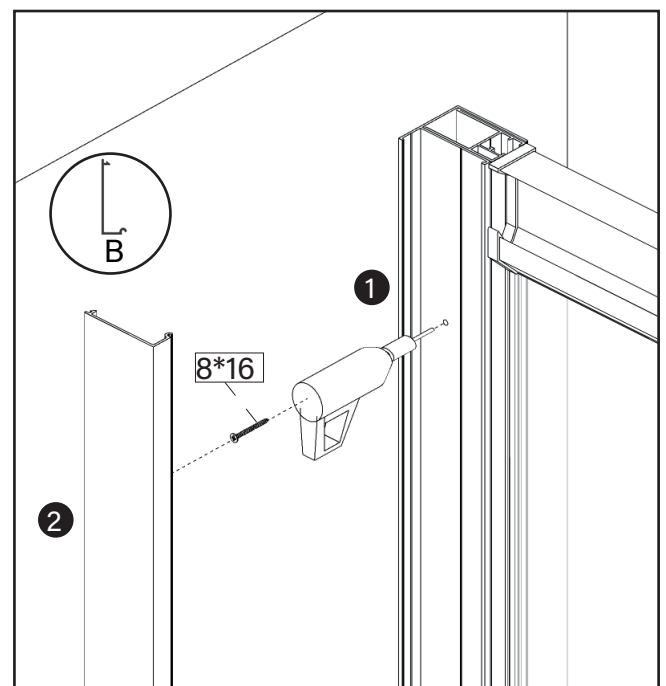


10° PASSAGE

1. Insert the flat gasket between the fixed glass and the aluminium profile (inner side).

You will find it rolled up in a bag!

2. Install the end stop on the rails above and below. Use the 8x12 screws provided, otherwise you risk puncturing the visible side of the running rail.

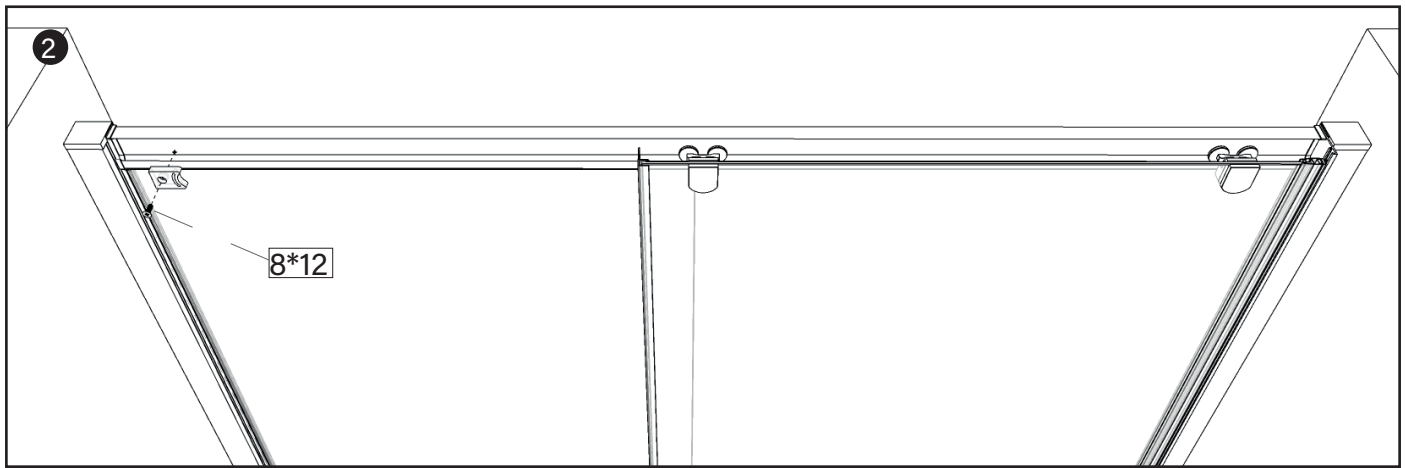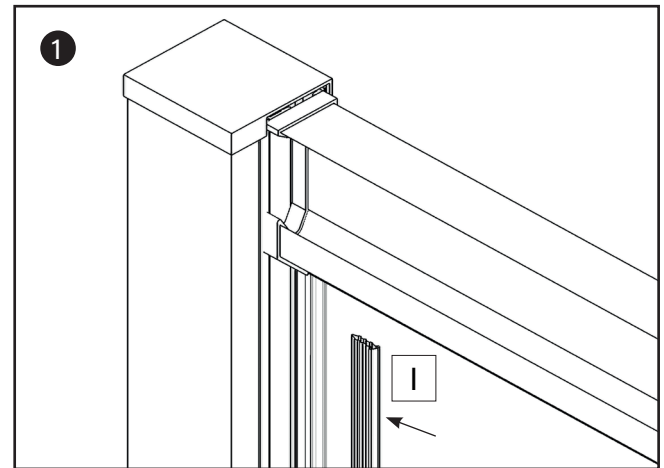**11° PASSAGE**

1. Install the handle (hole on the inside).
2. Install the cover caps at the top of the aluminium profiles.
3. Silicon the outside of the shower enclosure around the perimeter as shown in the picture and wait 24 hours.

