

Filadelfia WT

DESCRIPTION

Walk-in type fixed shower wall, configuration with T-shaped upper support arm, 8 mm clear tempered glass with Easy-Clean anti-limescale treatment and anti-bacterial chrome-plated aluminium profiles, height 200 cm. Reversible installation. Wall-mounted holding arm included.





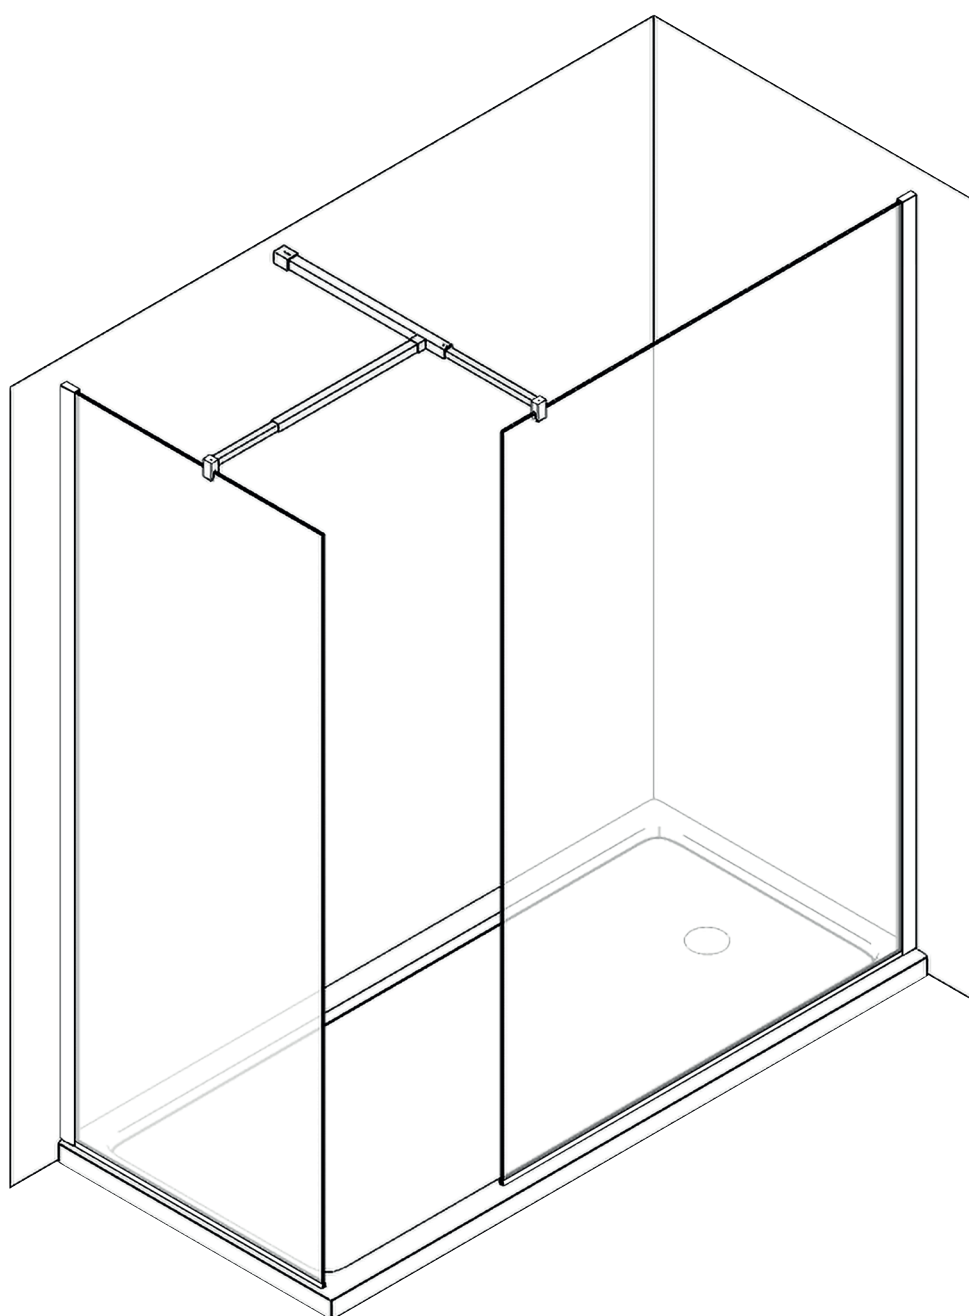


TABLE OF MEASURES


MODEL	MEASURES A-B
70	680 - 700
75	730 - 750
80	780 - 800
90	880 - 900
100	980 - 1000
110	1080 - 1100
120	1180 - 1200

REVERSIBLE

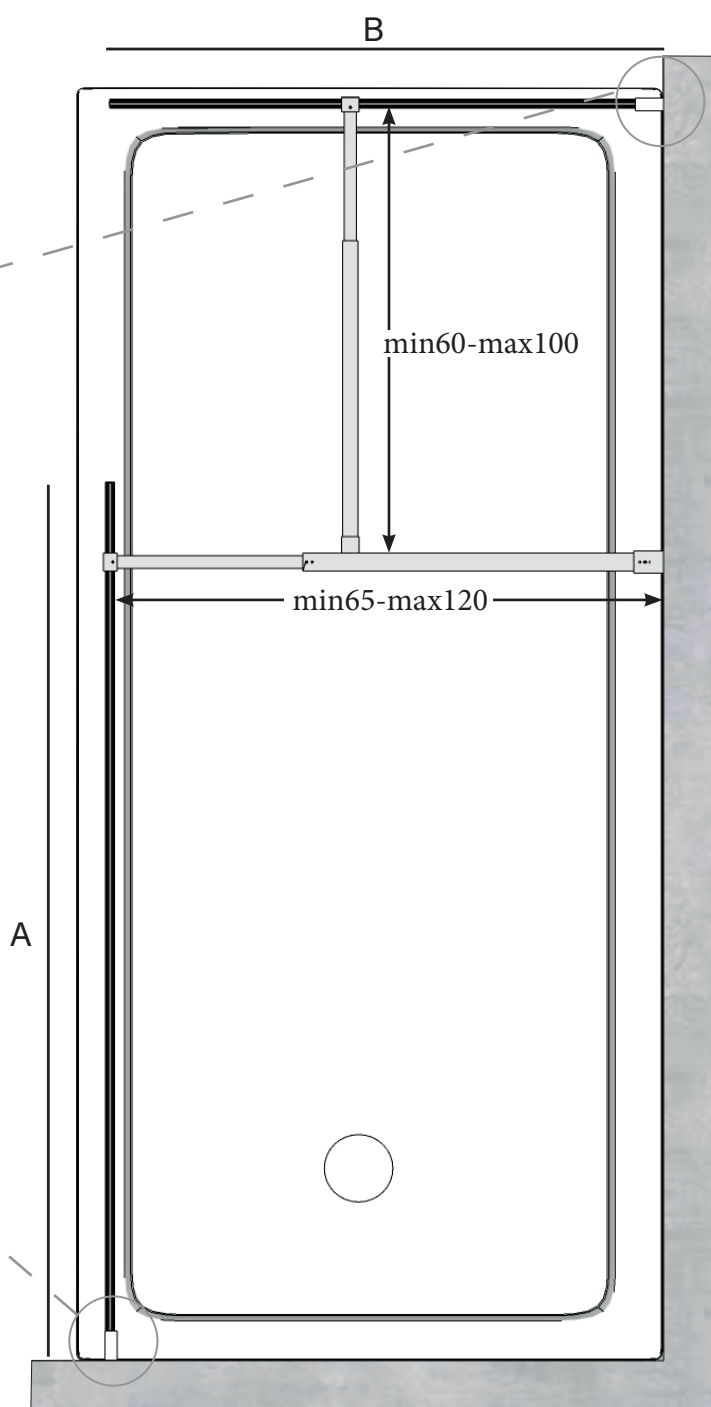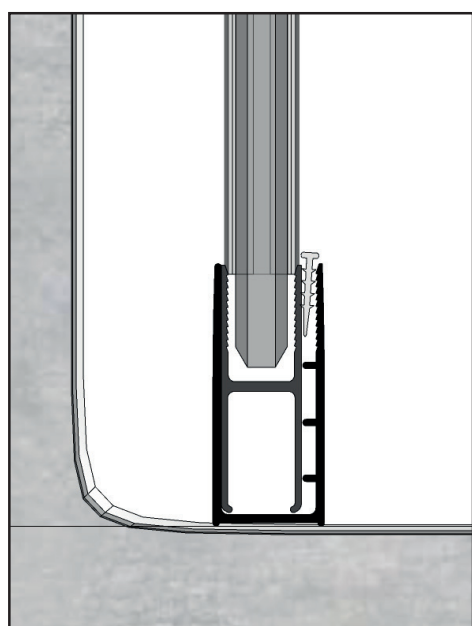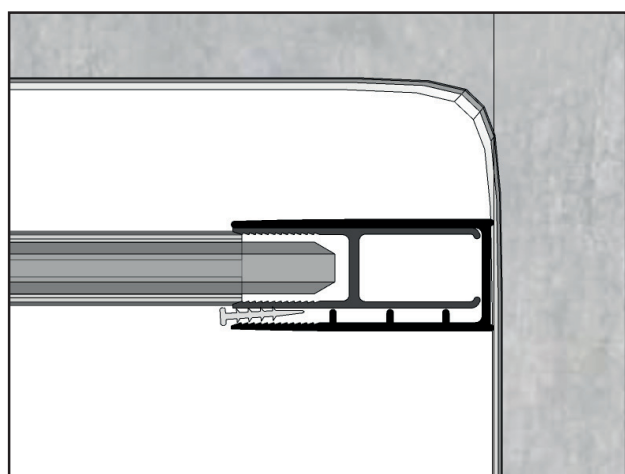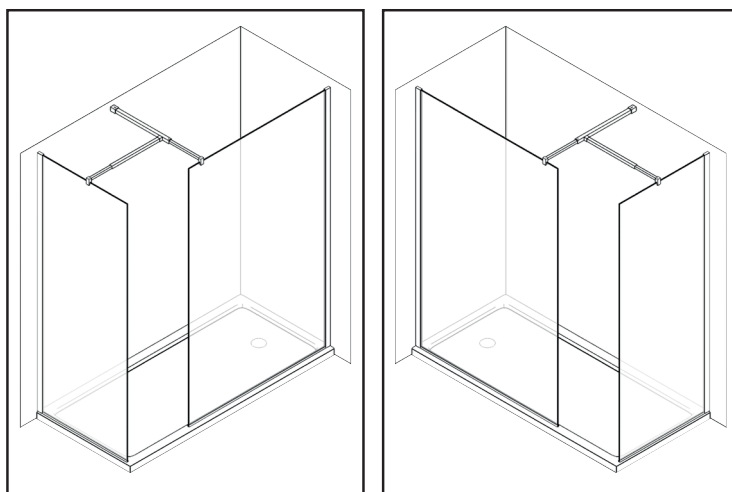


FILADELFIA WT

TOOLS REQUIRED

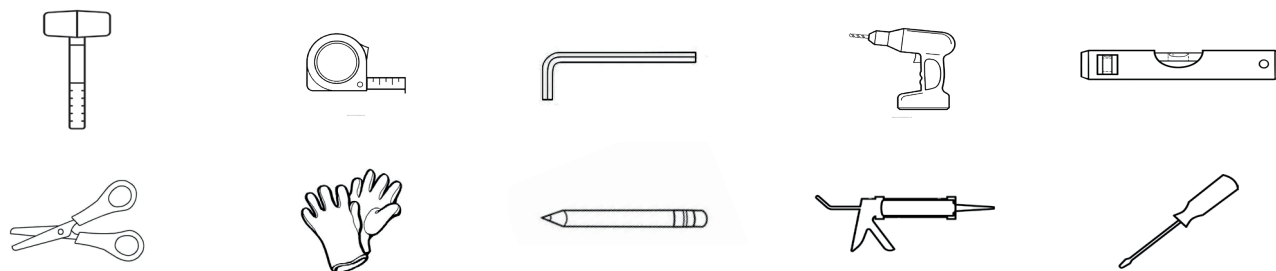

PACKAGE CONTENT (product shipped in two packages)

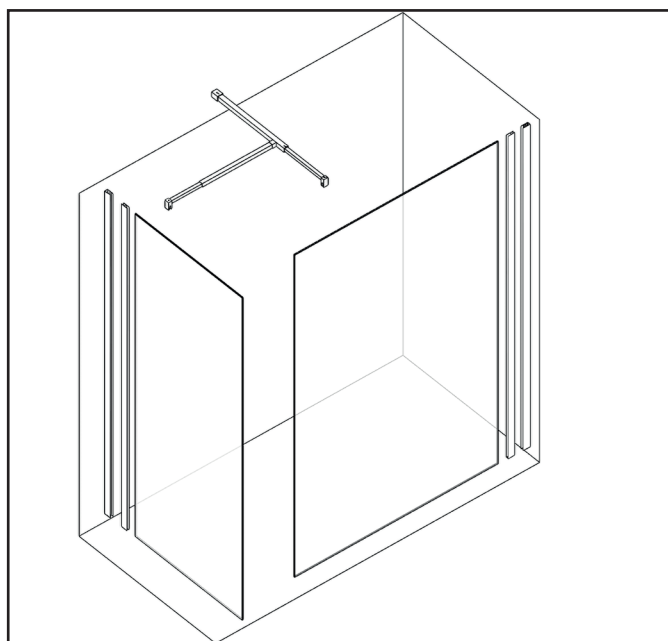


x8
8*30




x1
6*30



x9

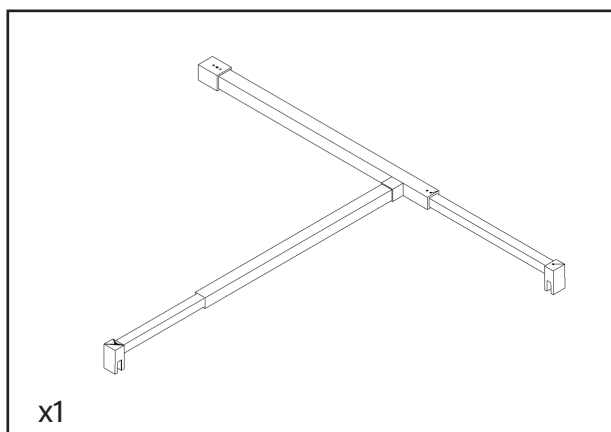

x1

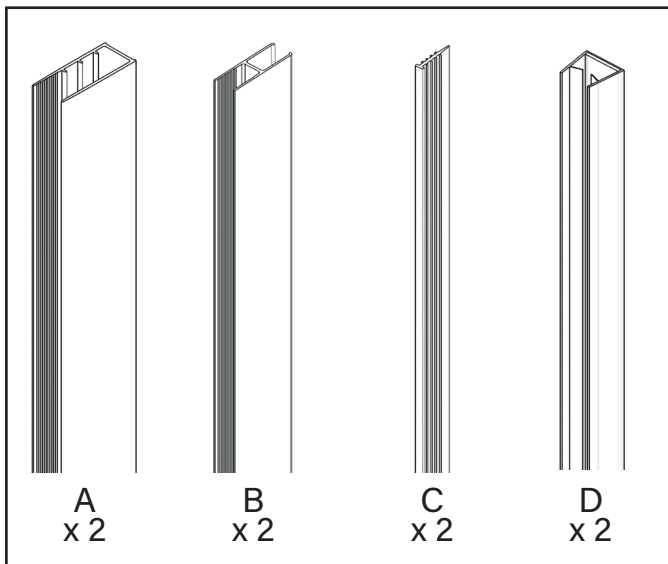


A
x 2

B
x 2

C
x 2

D
x 2

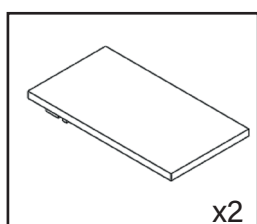

x2

Cover





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profiles on the wall and use the plumb level.
3. Mark the holes in the wall with a pencil.
4. Drill the holes in the wall.
5. Insert the wall plug and screw in the screws to secure the profiles.

IMPORTANT

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimum aesthetic and functional result.

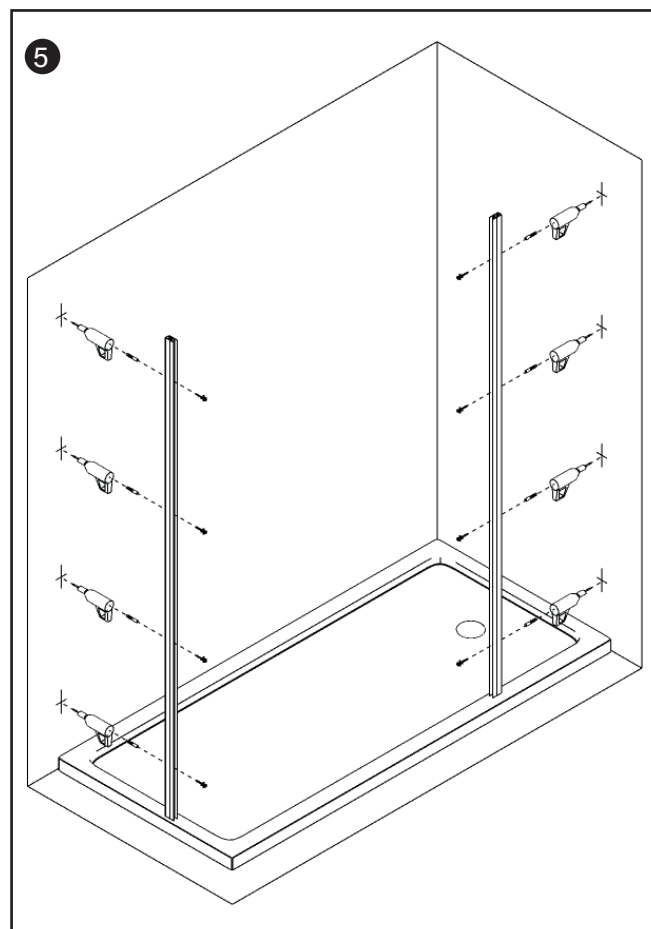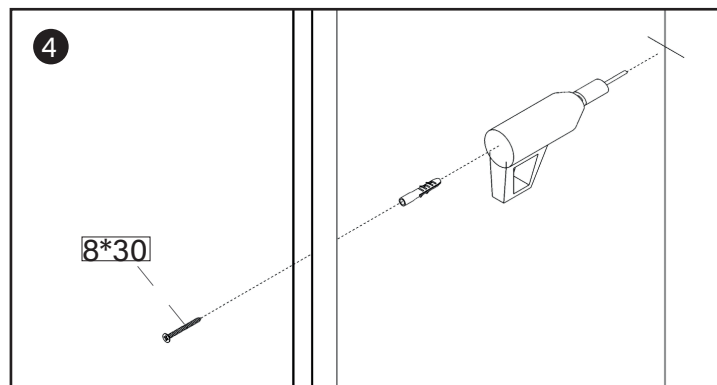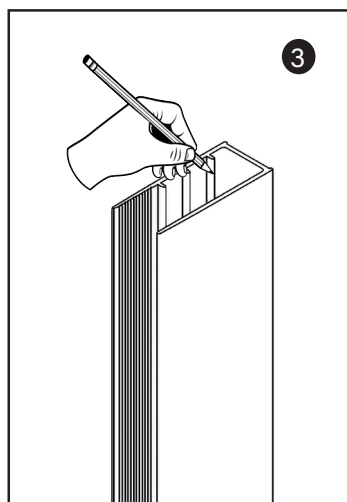
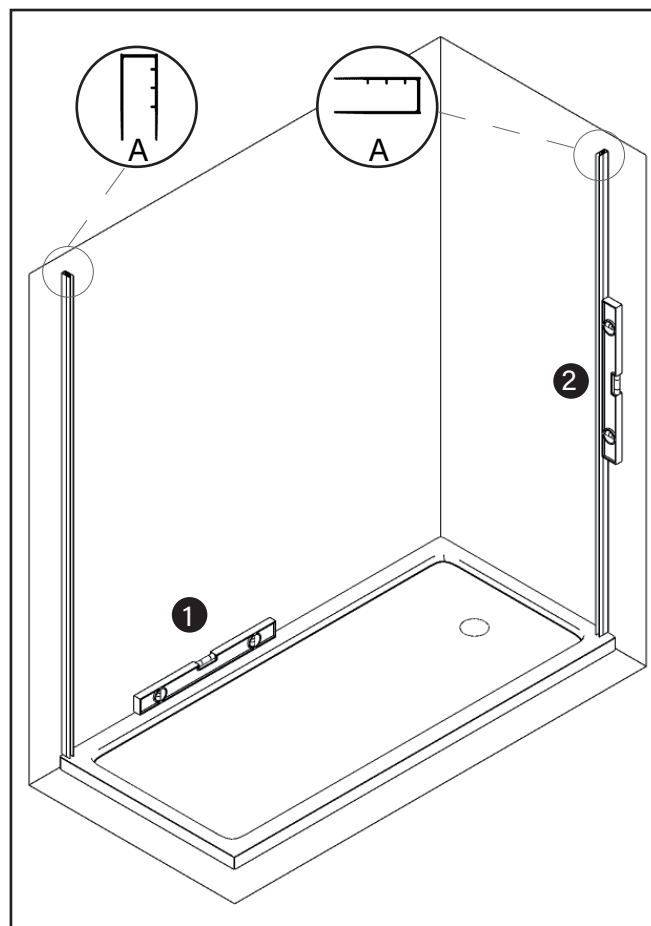


2° PASSAGE

1. Insert the gasket under the two glass plates.



ATTENTION

The frame protrudes on one side in relation to the glass, the protruding part serves as a seat for the under-glass gasket, it must therefore face downwards.

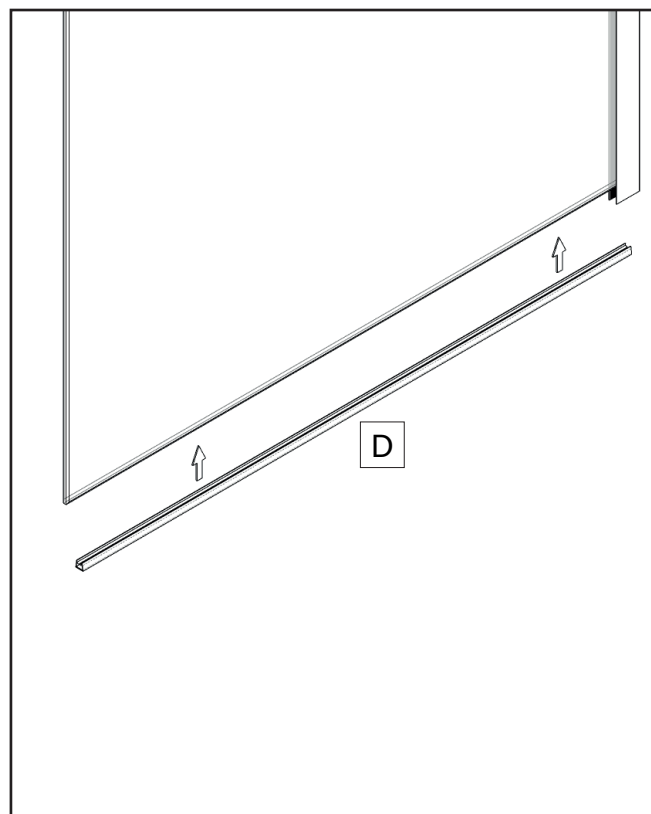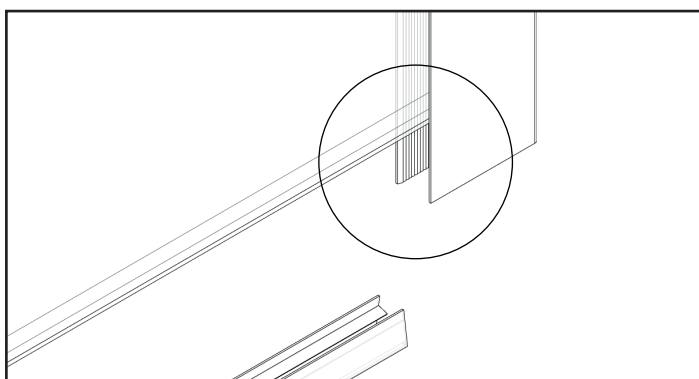








3° PASSAGE

1. Insert the two fixed glass panes into the wall profiles.
2. Insert the roll gasket between the two aluminium profiles.

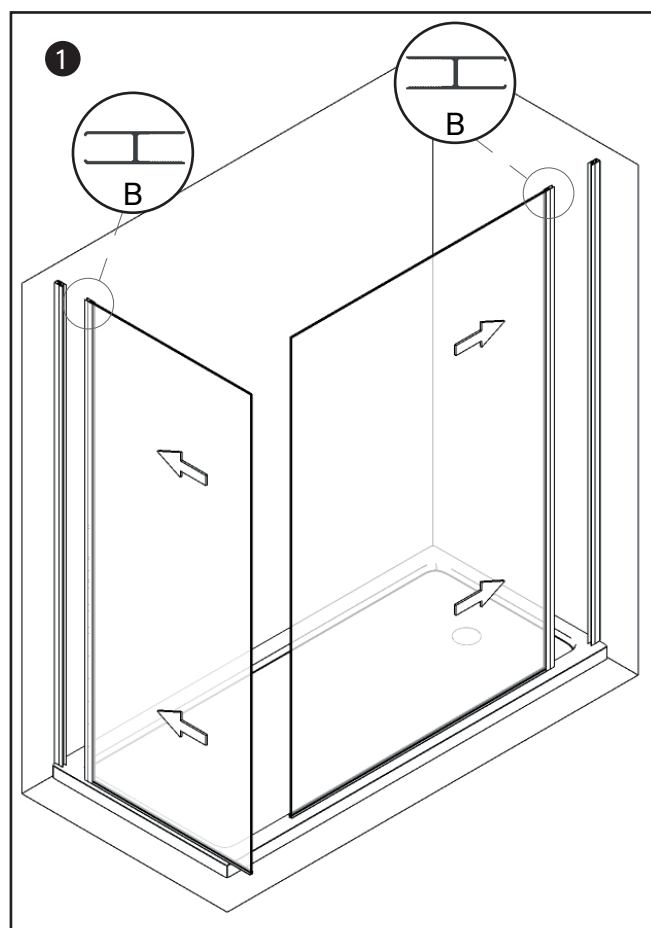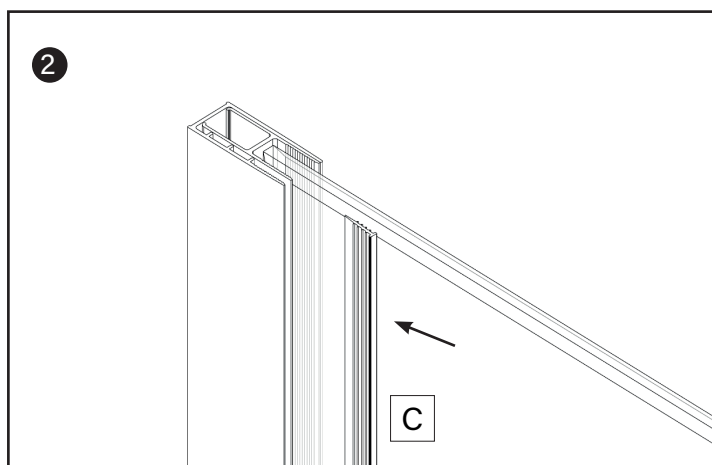


4° PASSAGE

1. Position the retaining bar holder on the wall and mark the hole with a pencil.
 2. Drill the hole in the wall with the drill, insert the wall plug and screw in the screws to secure the bracket.
 3. Insert the bar into the bracket and secure it with the hexagonal key.
 4. Position the sealing bar on the fixed walls, adjusting the extension by acting on the telescope.
 5. Tighten the screws for fixing to the glass.
 6. Secure the bar with the hexagonal key.
- Note:** the sealing bar is essential for the correct sealing of the shower enclosure, it guarantees resistance to stress on the fixed glass.

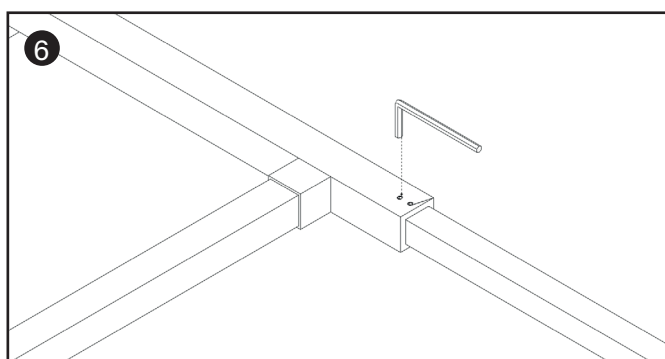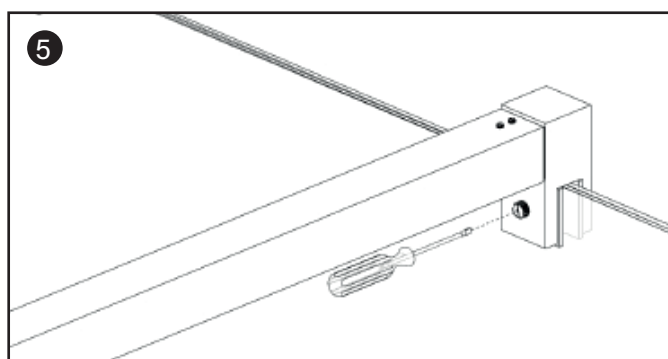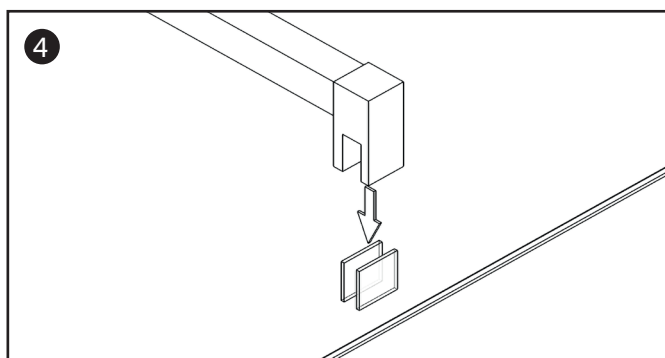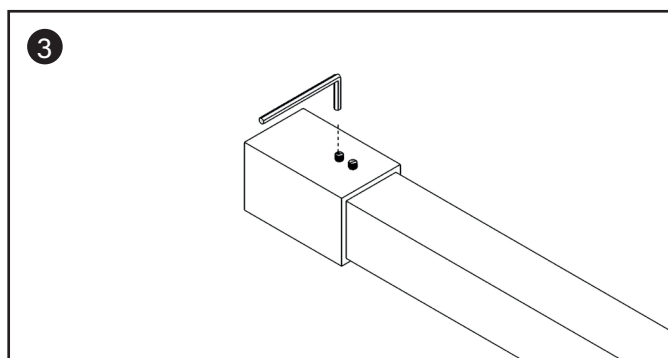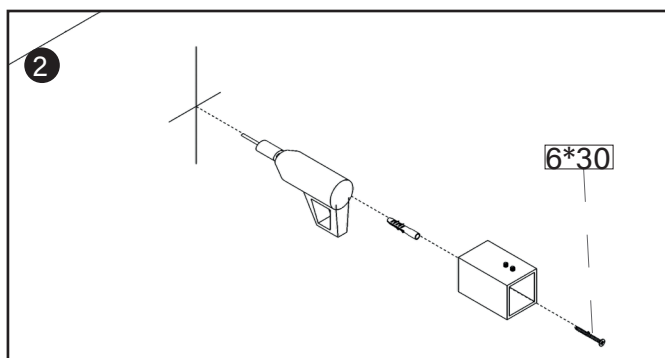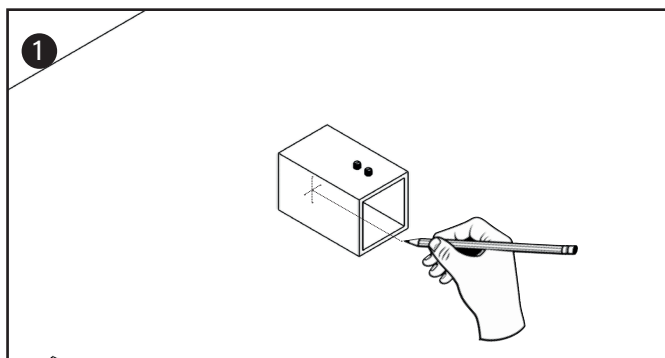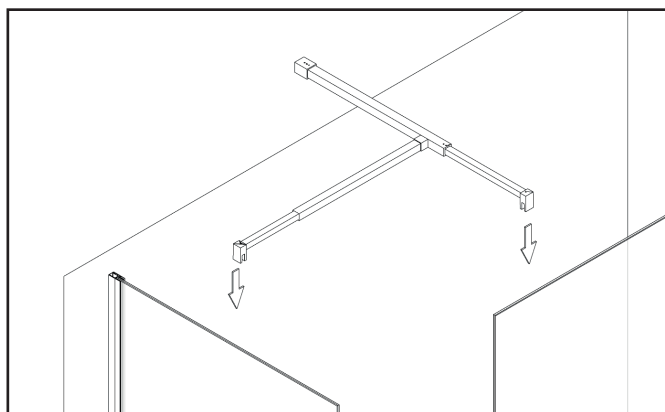

5° PASSAGE

1. Insert the two decorative profiles on top of the wall profiles.

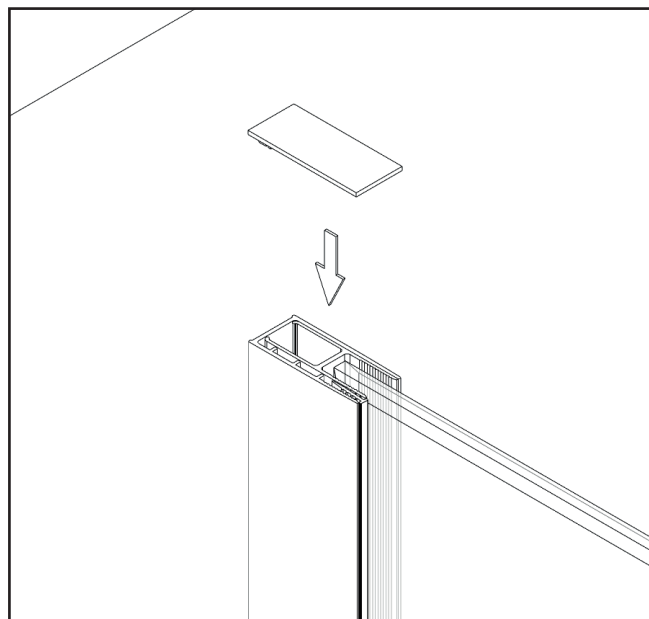

6° PASSAGE

1. Seal with silicone as shown and wait 24 hours.

