

Filadelfia+antina

DESCRIPTION

Fixed Walk-in shower wall with matching splash screen, in 8 mm clear tempered glass with Easy-Clean anti-lime-scale treatment and antibacterial chrome aluminum profiles, height 200 cm. Reversible installation. Wall support arm included.






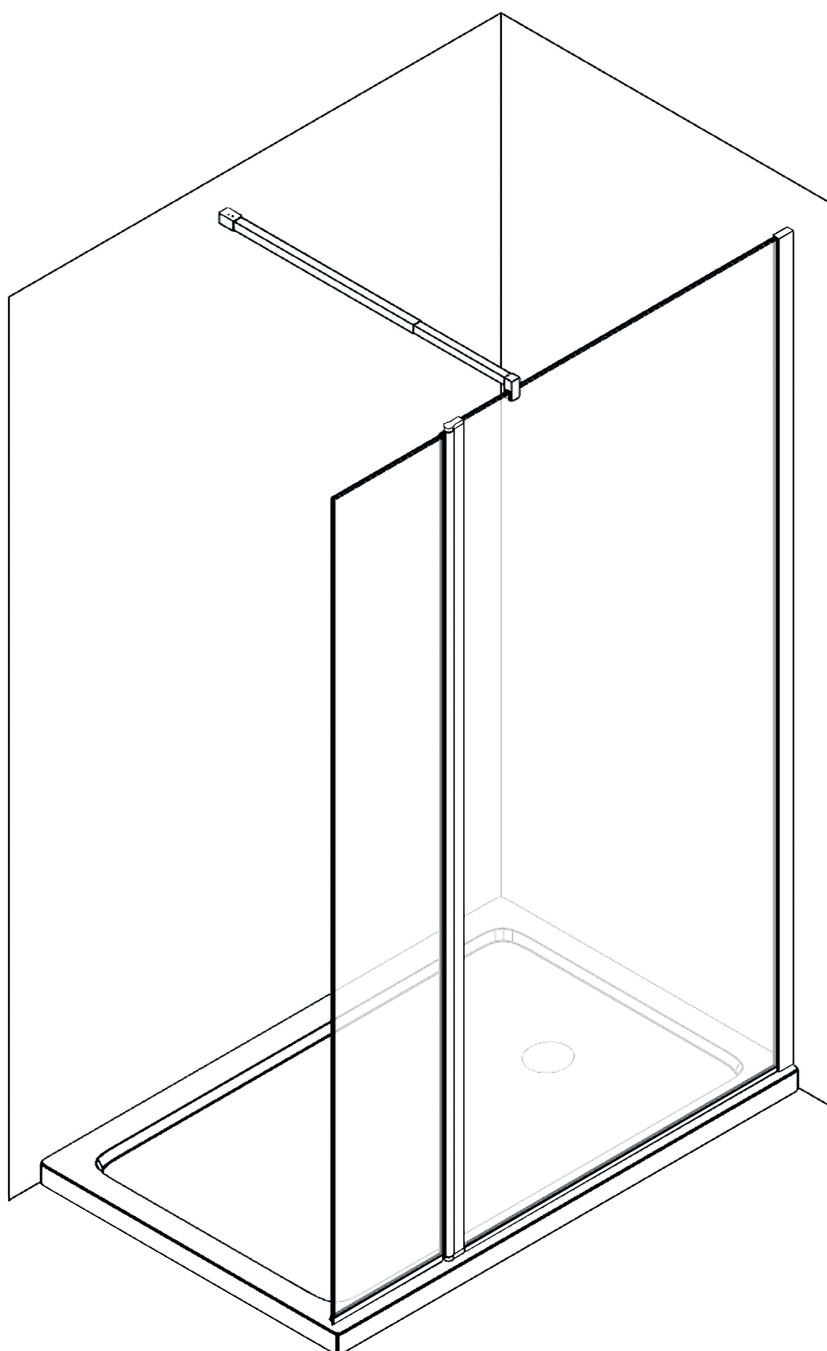


TABLE OF MEASURES





MODEL	A (closed)	B (open)
70+30	700-720	1005-1025
75+30	750-770	1055-1075
80+30	800-820	1105-1125
90+30	900-920	1205-1225
100+30	1000-1020	1305-1325
110+30	1100-1120	1405-1425
120+30	1200-1220	1505-1525
70+40	700-720	1105-1125
75+40	750-770	1155-1175
80+40	800-820	1205-1225
90+40	900-920	1305-1325
100+40	1000-1020	1405-1425
110+40	1100-1120	1505-1525
120+40	1200-1220	1605-1625

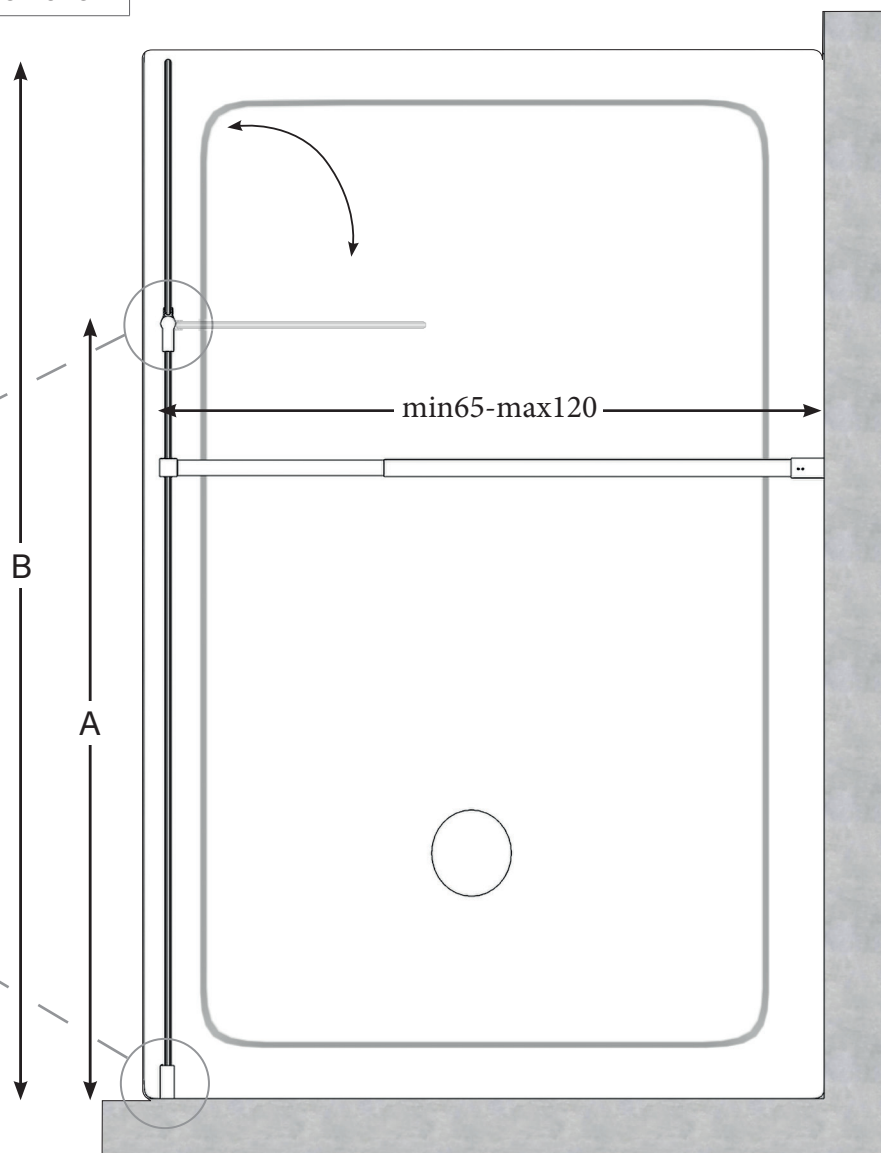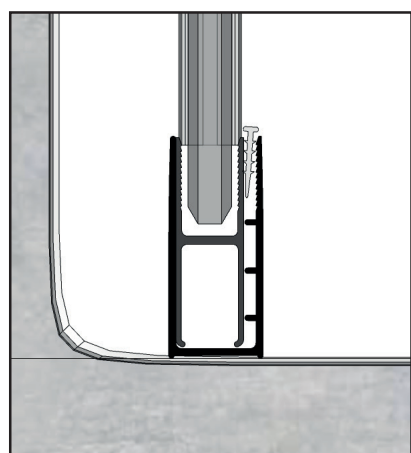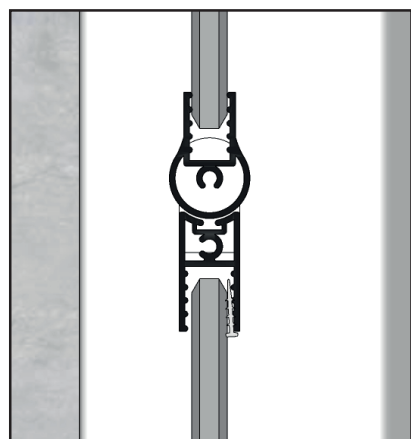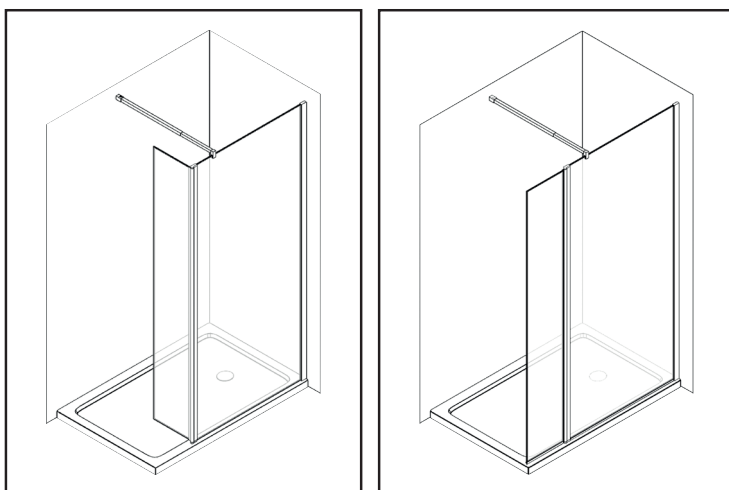

TOOLS REQUIRED

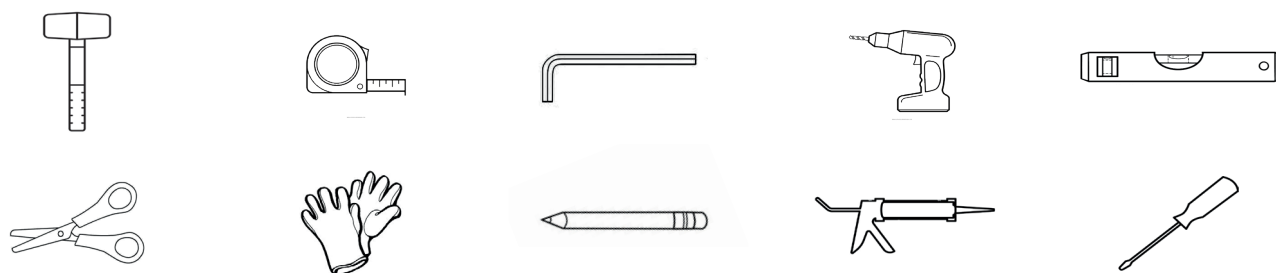

PACKAGE CONTENTS

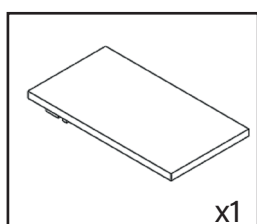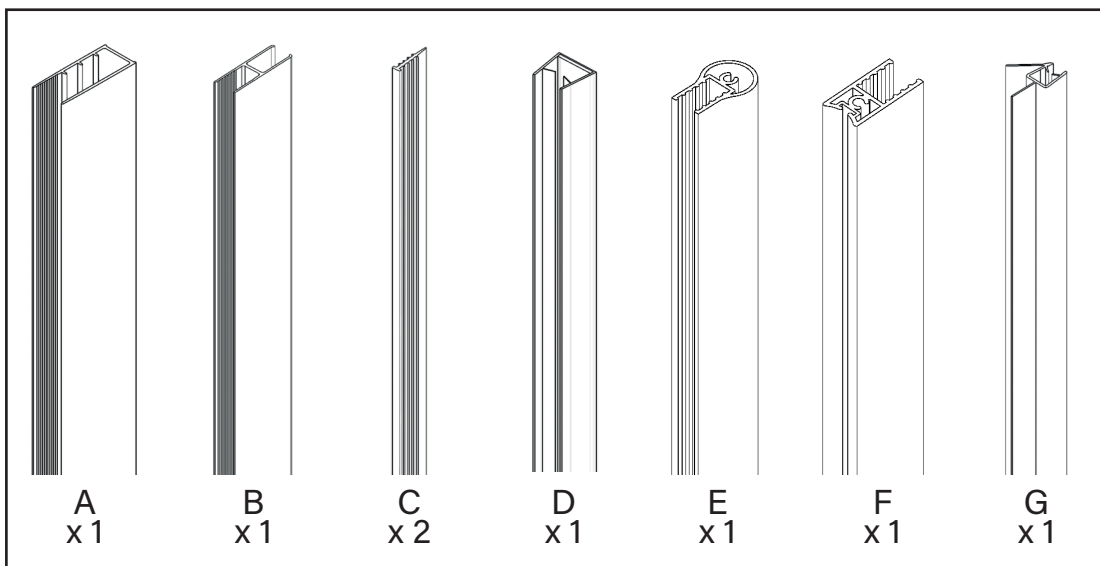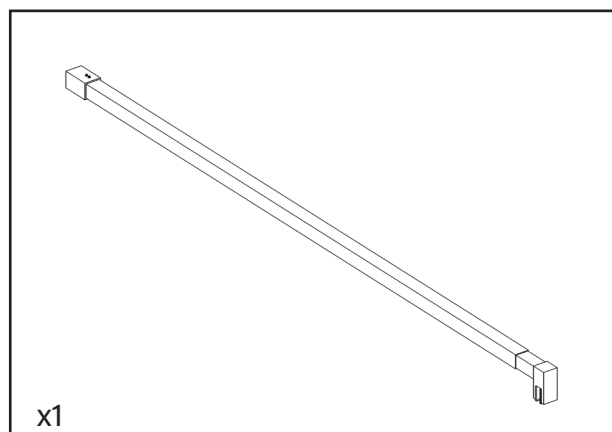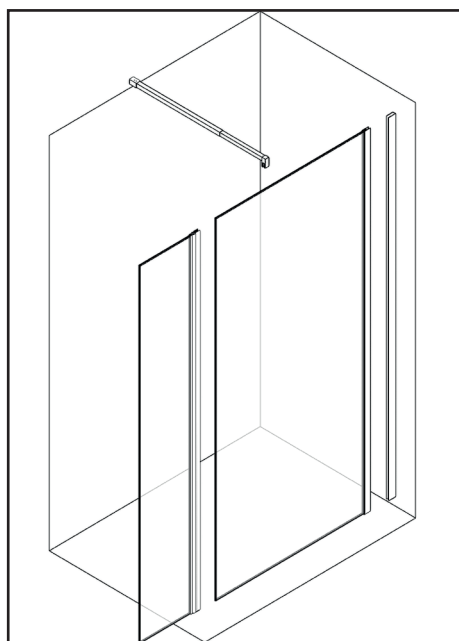

Profilo di copertura





MOUNTING

1° PASSAGE

1. Check that the shower tray is level.
2. Place the profile on the wall and use the plumb level.
3. Mark the holes in the wall with a pencil.
4. Drill the holes in the wall.
5. Insert the wall plug and screw in the screws to secure the profiles.

IMPORTANT

it is good practice not to mount the profiles close to the outer edge of the shower tray, always leave about 1 cm for an optimum aesthetic and functional result.

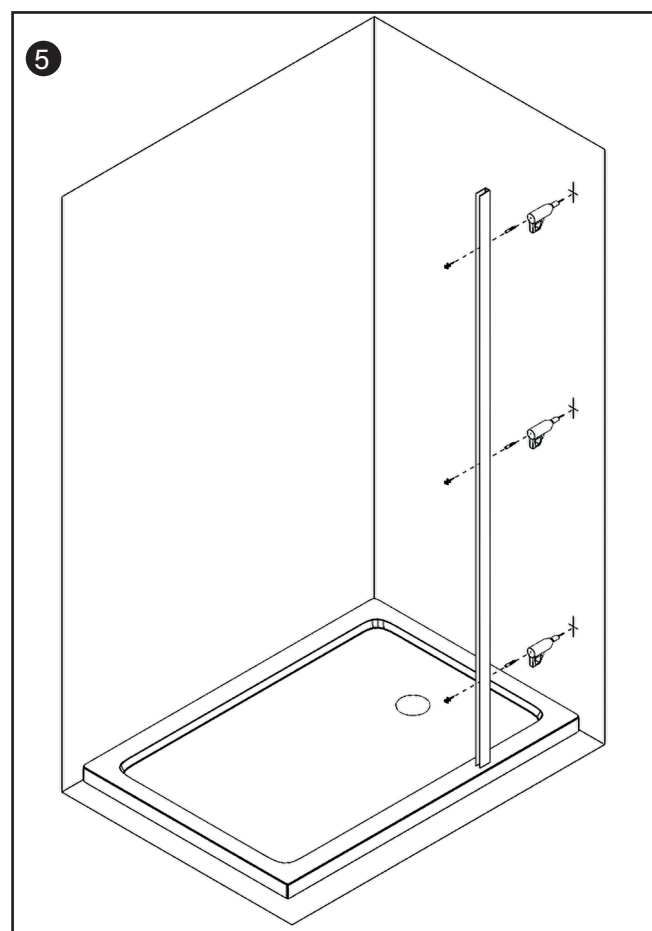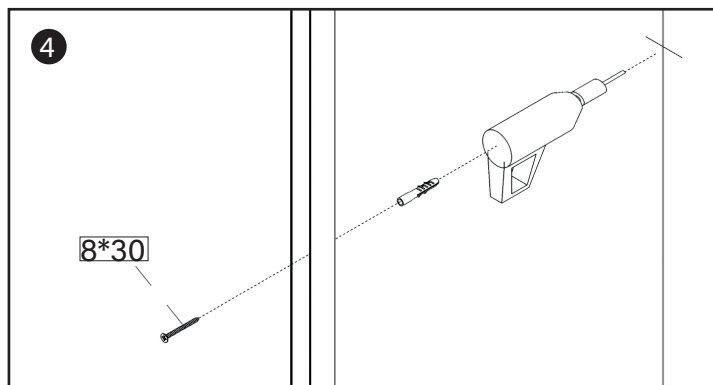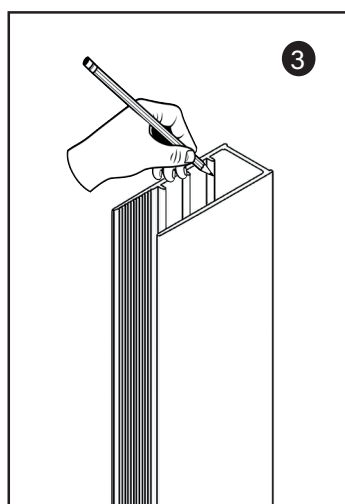
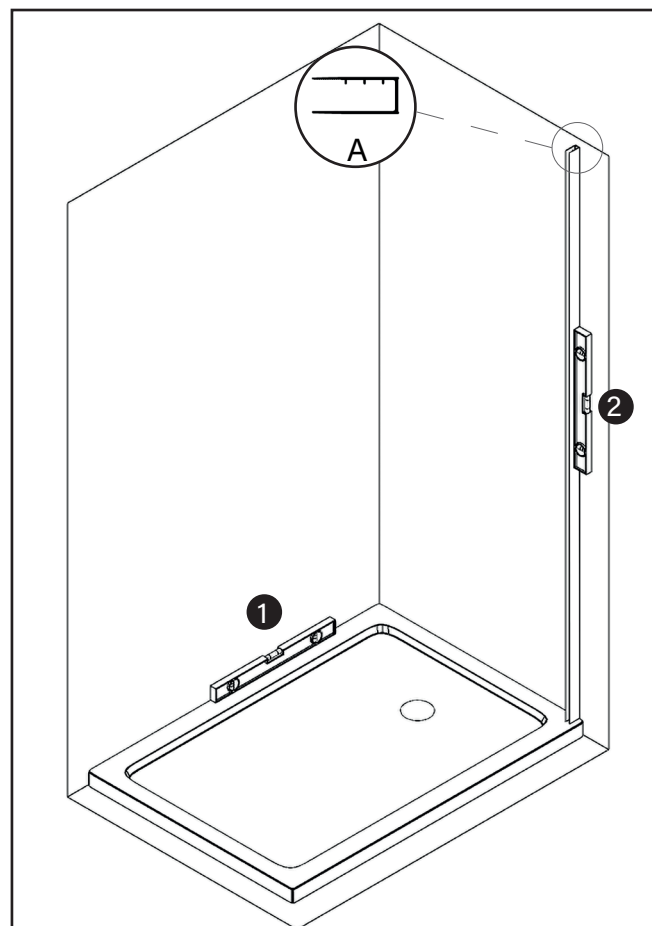


2° PASSAGE

1. Insert the seal under the glass pane.



ATTENTION

The frame protrudes on one side in relation to the glass, the protruding part serves as a seat for the under-glass gasket, it must therefore face downwards.

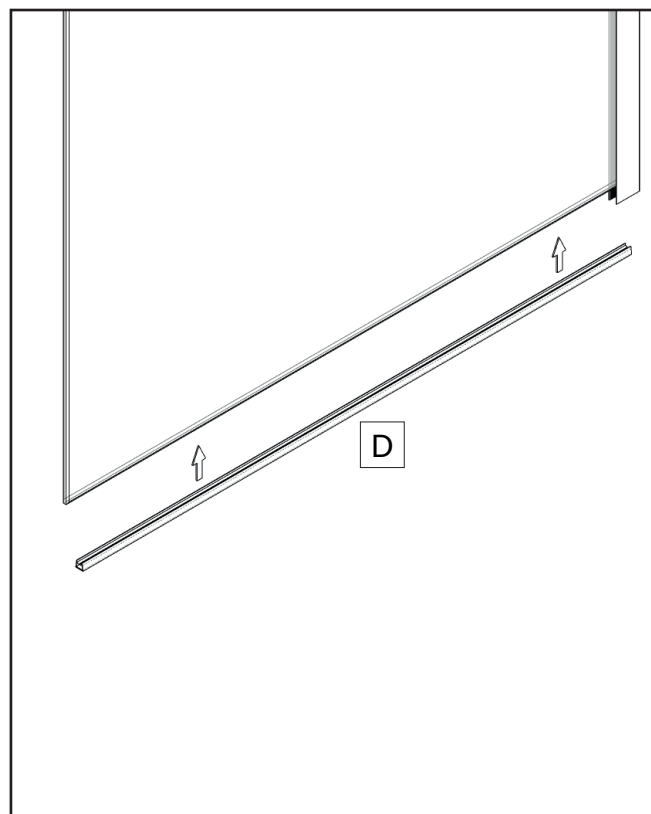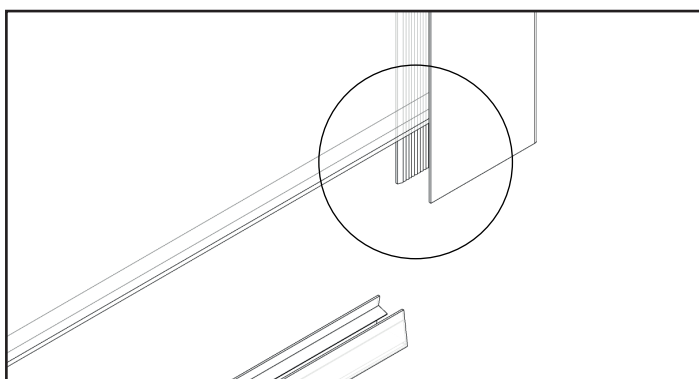

3° PASSAGE








1. Inserting the fixed glass inside the wall profile
2. Insert the roll gasket between the two aluminium profiles.

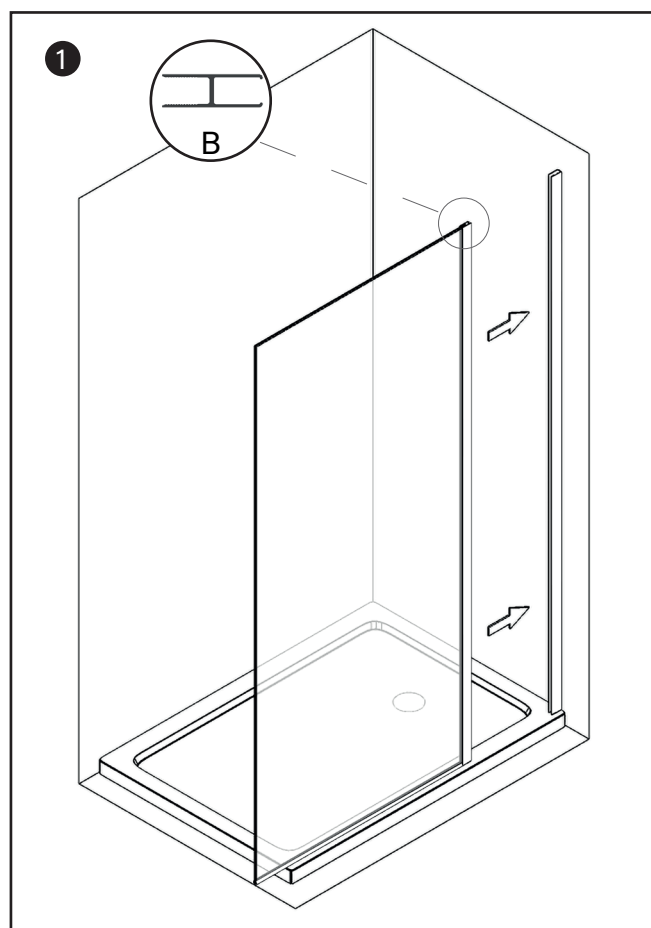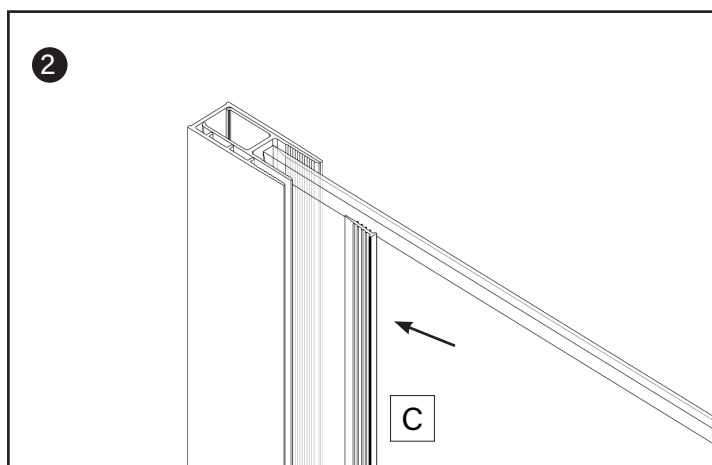

4° PASSAGE


1. Position the retaining bar holder on the wall and mark the hole with a pencil.
2. Drill the hole in the wall with the drill, insert the wall plug and screw in the screws to secure the bracket.
3. Insert the bar into the bracket and secure it with the hexagonal key.
4. Place the sealing bar on the fixed wall, adjusting the extension by acting on the telescope.
5. Tighten the screws for fixing to the glass.
6. Secure the bar with the hexagonal key.

Note: the horizontal sealing bar is essential for the correct sealing of the shower enclosure, it guarantees resistance to stress on the fixed glass.

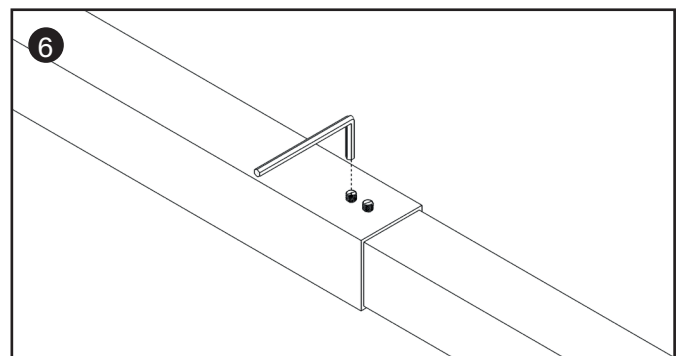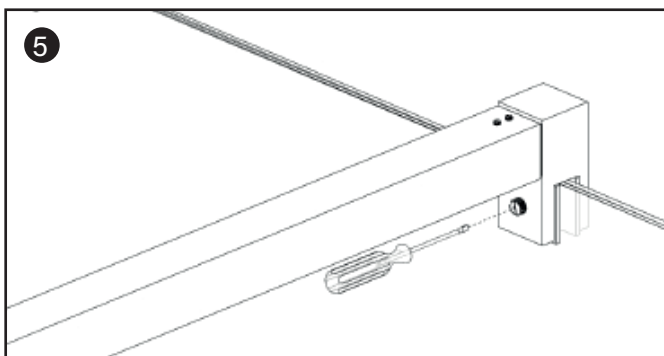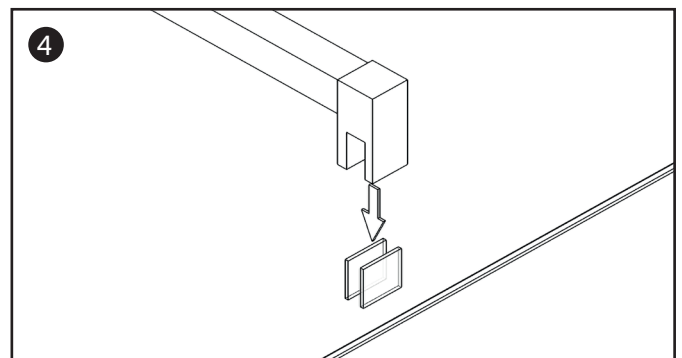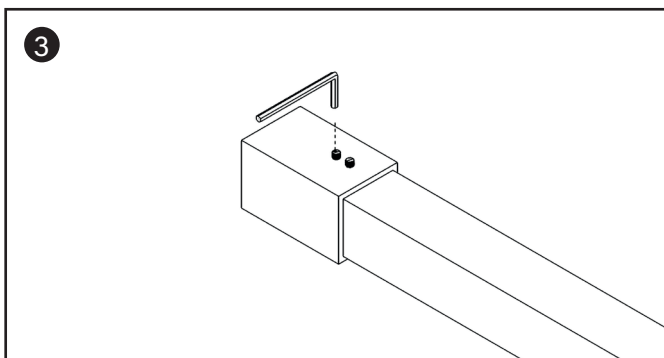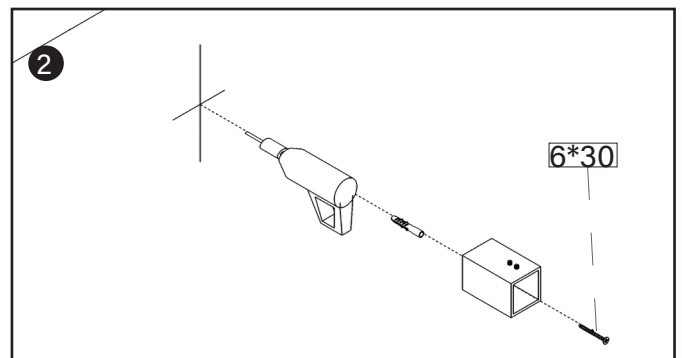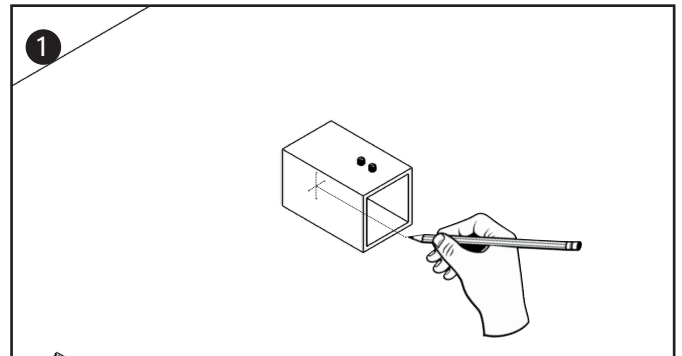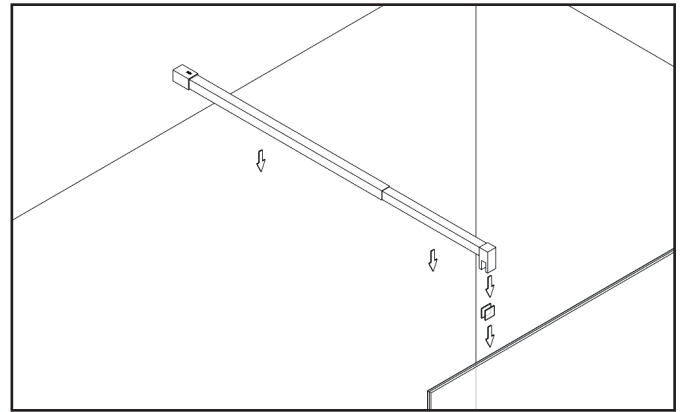



5° PASSAGE

1. Insert the gasket under the glass panel.

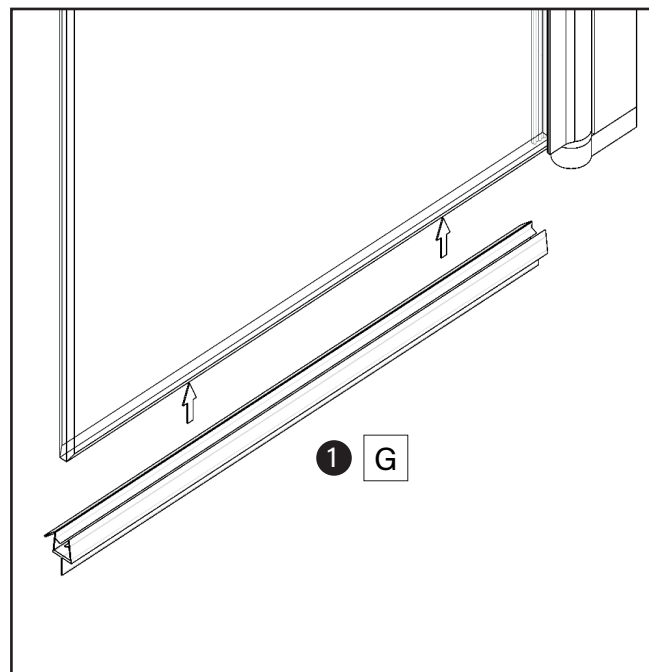



6° PASSAGE

1. Apply silicone to the door profile as shown in the figure.
2. Insert the door into the fixed glass.

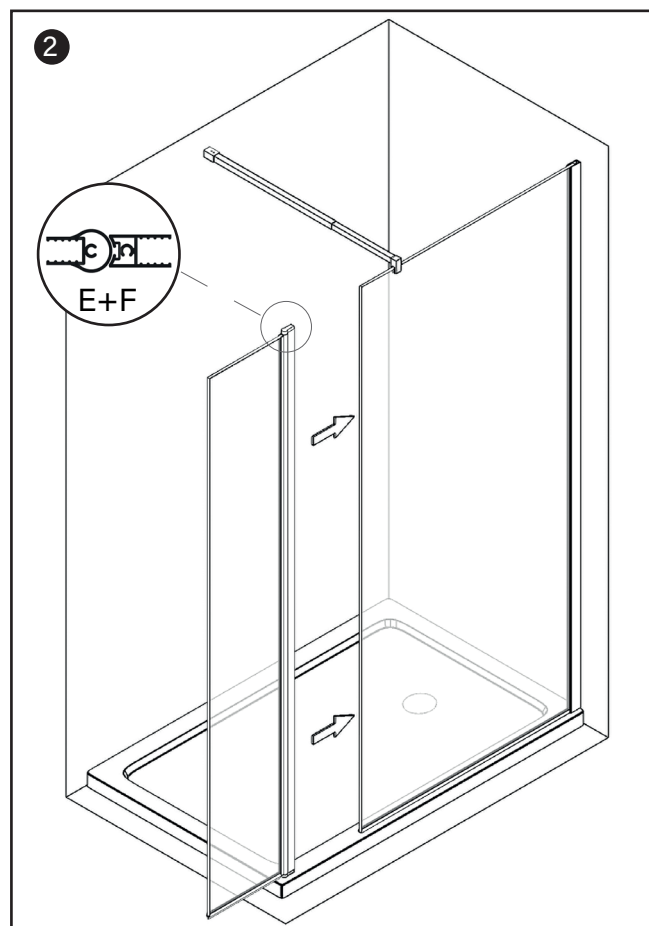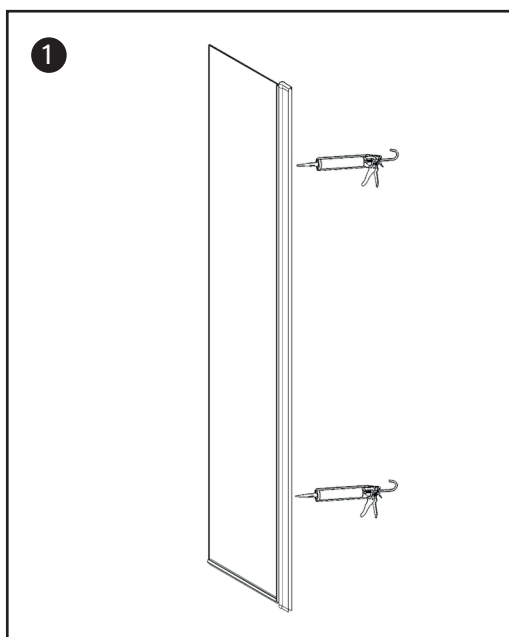

7° PASSAGE

1. Insert the roll gasket between the door profile and the fixed glass.
2. Insert the decorative profile on the top of the wall profile.

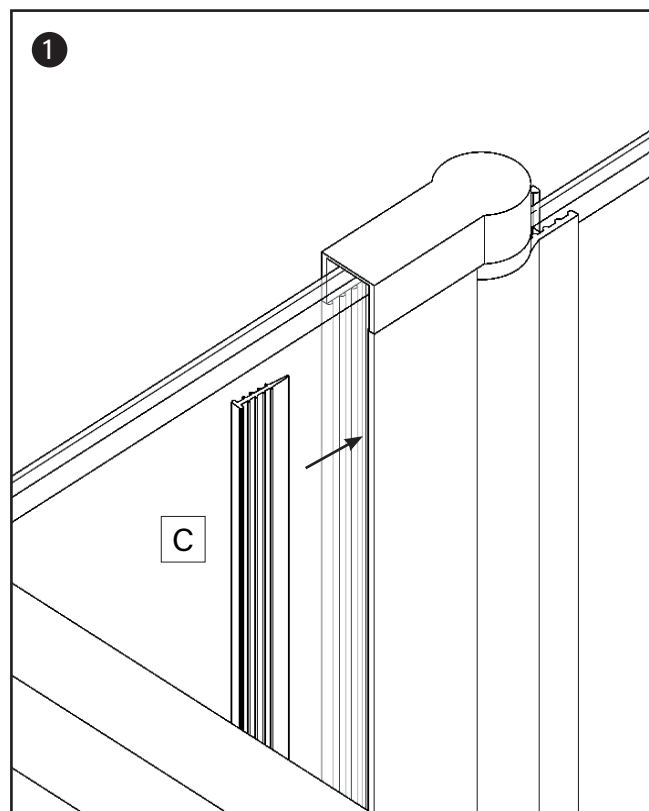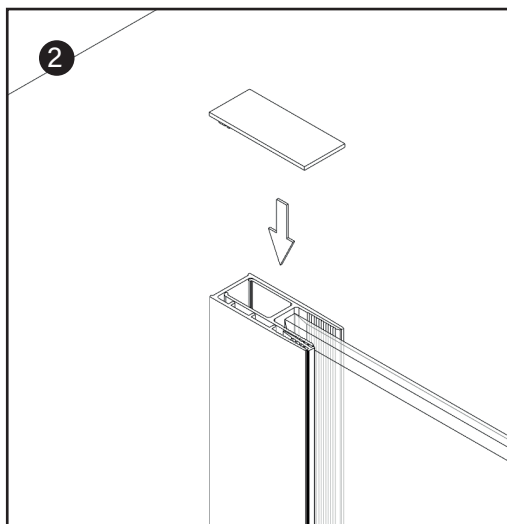

8° PASSAGE

1. Seal with silicone as in the figure and wait 24 hours.

