

New Orleans 2.0

DESCRIPTION

Two-Sided Shower Enclosure with Walk-in Sliding Door and Fixed Side Panel, made of 8mm Clear Tempered Glass with Easy-Clean Anti-Limescale Treatment and Antibacterial Chrome Aluminum Profiles, Height 200 cm. Reversible Installation. Wall Mounting Arm Included.







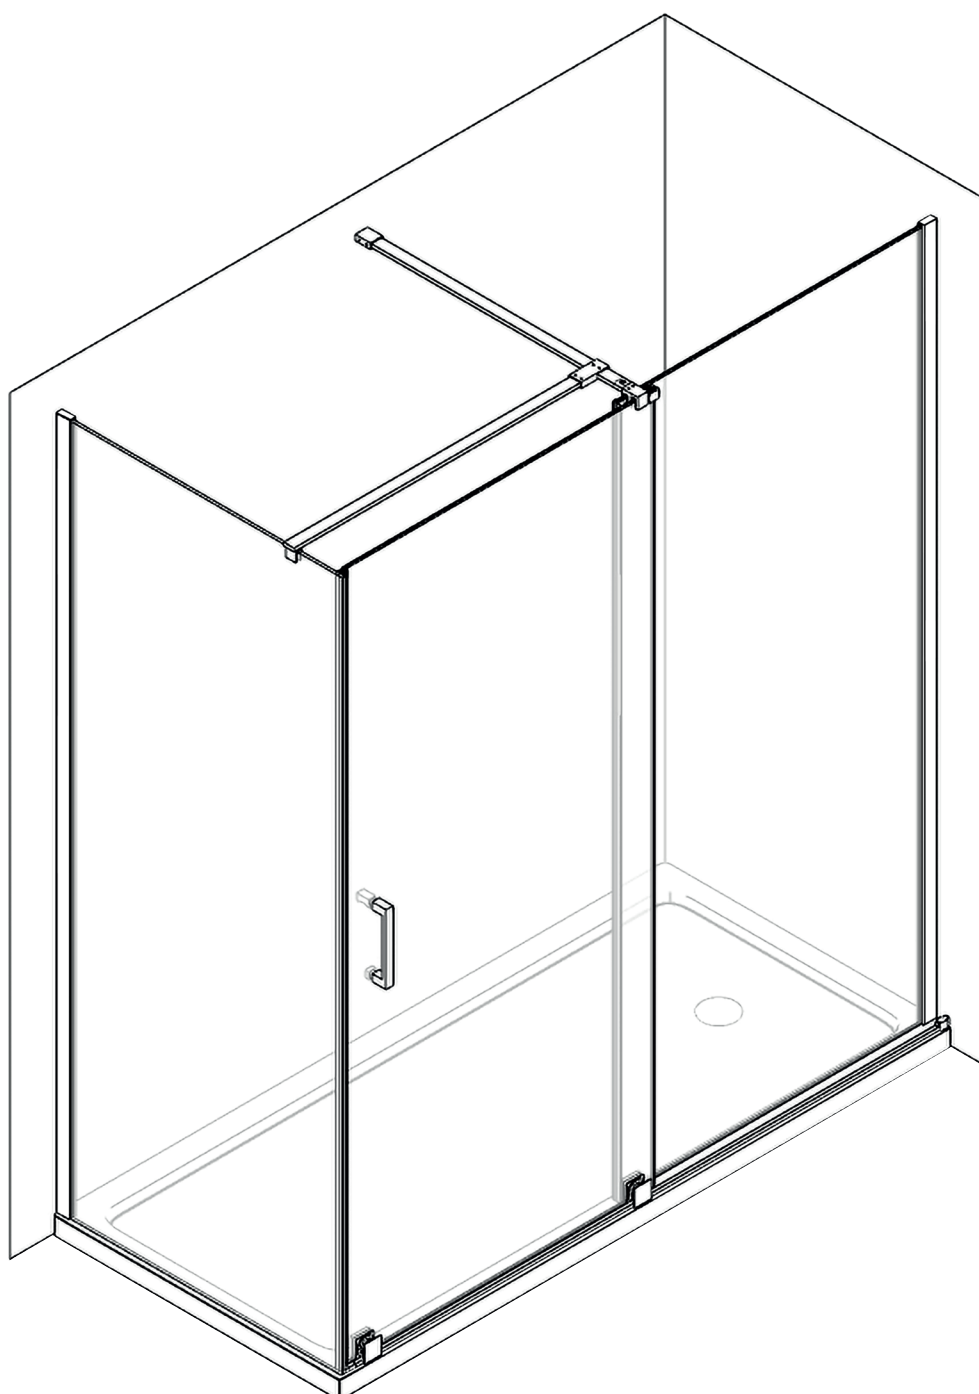


TABLE OF MEASURES


MODEL	MEASURES A
130	1260 - 1310
140	1360 - 1410
150	1460 - 1510
160	1560 - 1610
170	1660 - 1710
180	1760 - 1810
FIXED WALL	MEASURES B
70	680 - 700
75	730 - 750
80	780 - 800
90	880 - 900
100	980 - 1000
110	1080 - 1100
120	1180 - 1200

REVERSIBLE






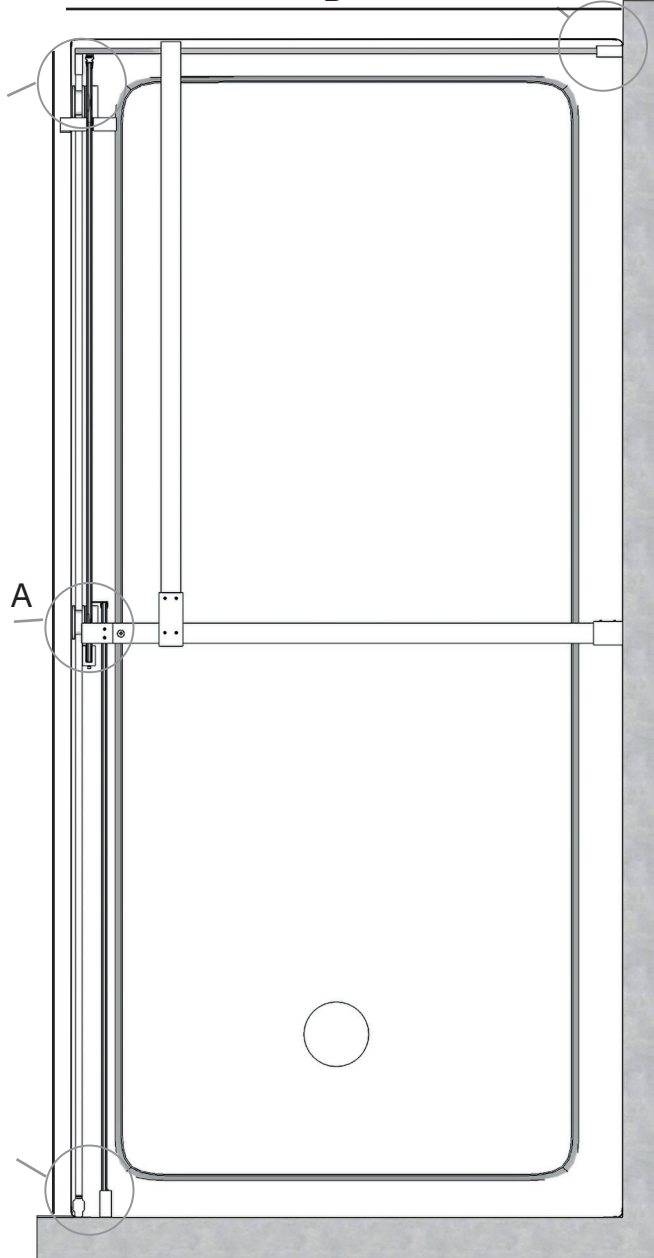
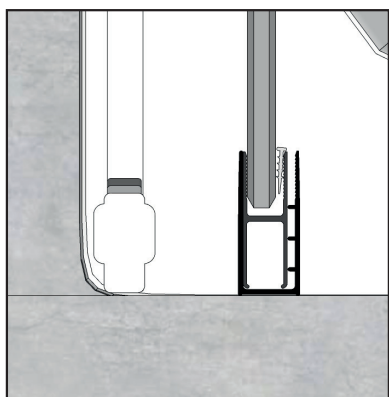
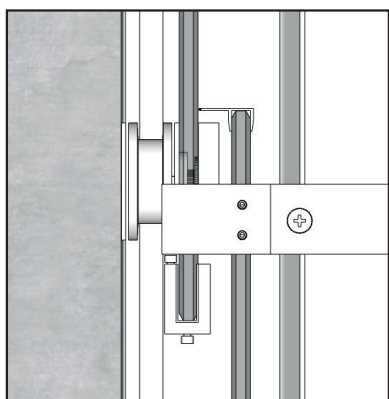
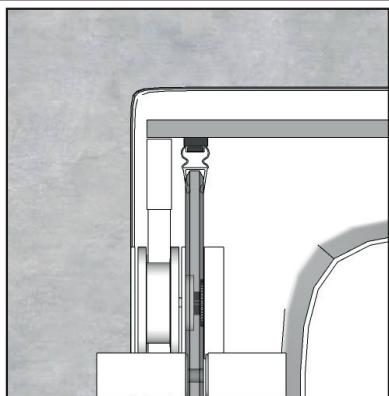
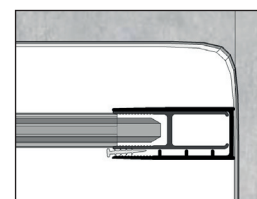
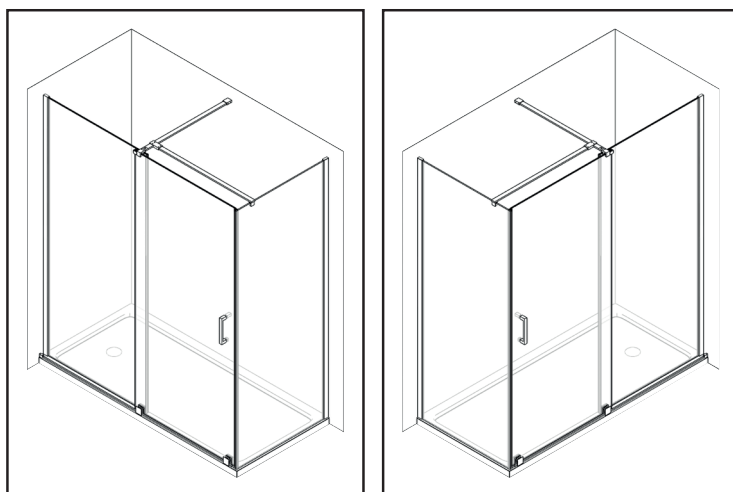


NEW ORLEANS 2.0

TOOLS REQUIRED

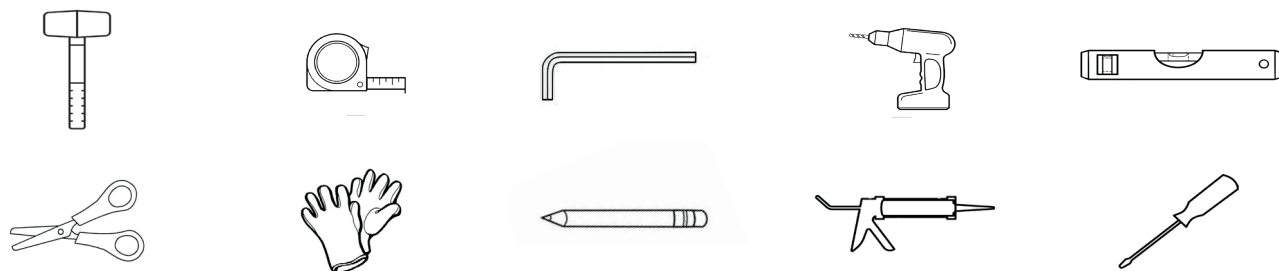


PACKAGE CONTENTS

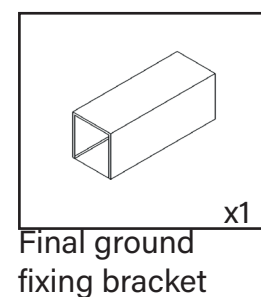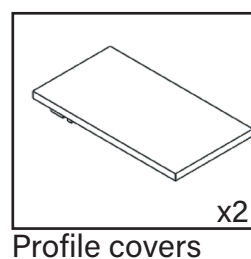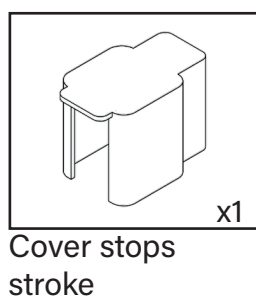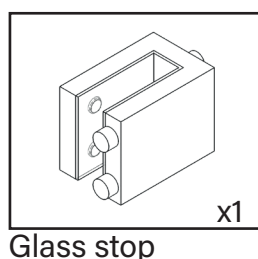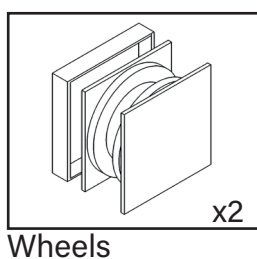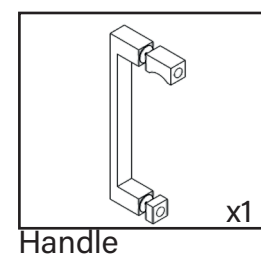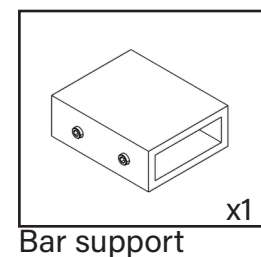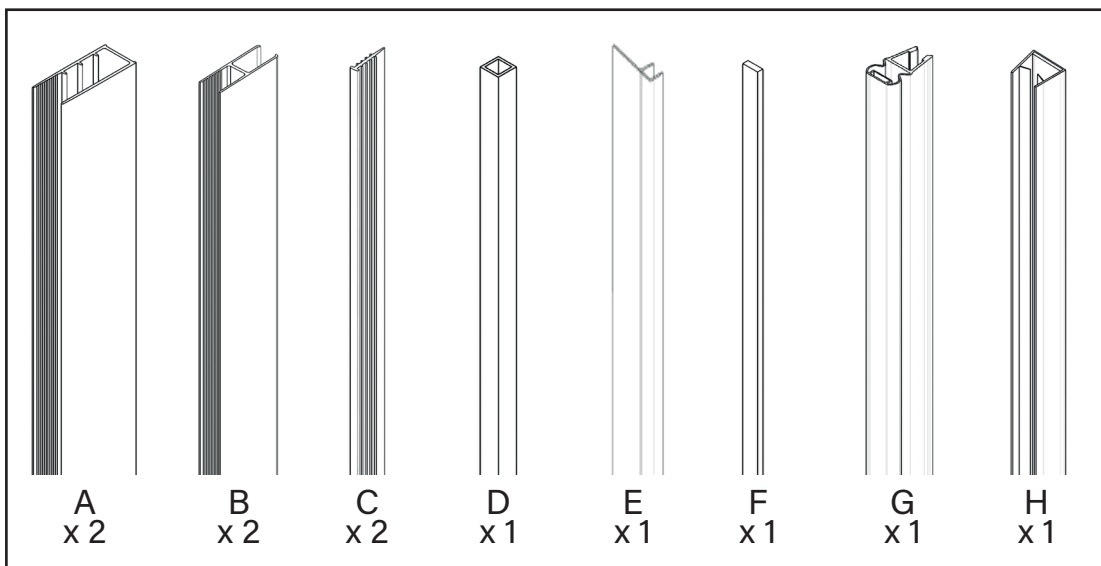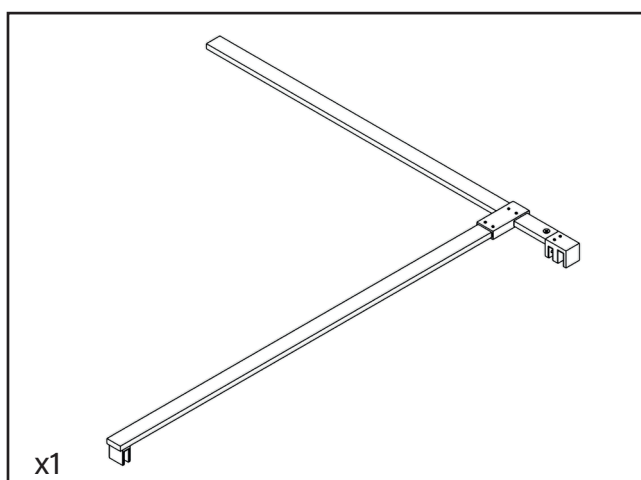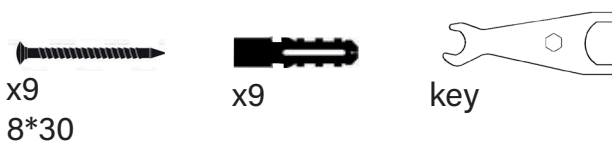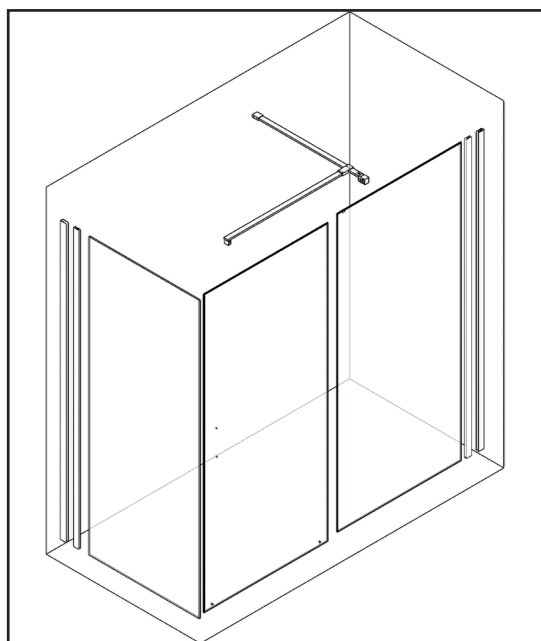

IMPORTANT

The door slides externally relative to the fixed glass, therefore, before installing the shower enclosure, ensure that the edge of the shower tray is at least 7 cm and carefully verify the distances indicated below before drilling holes for the wall profile.

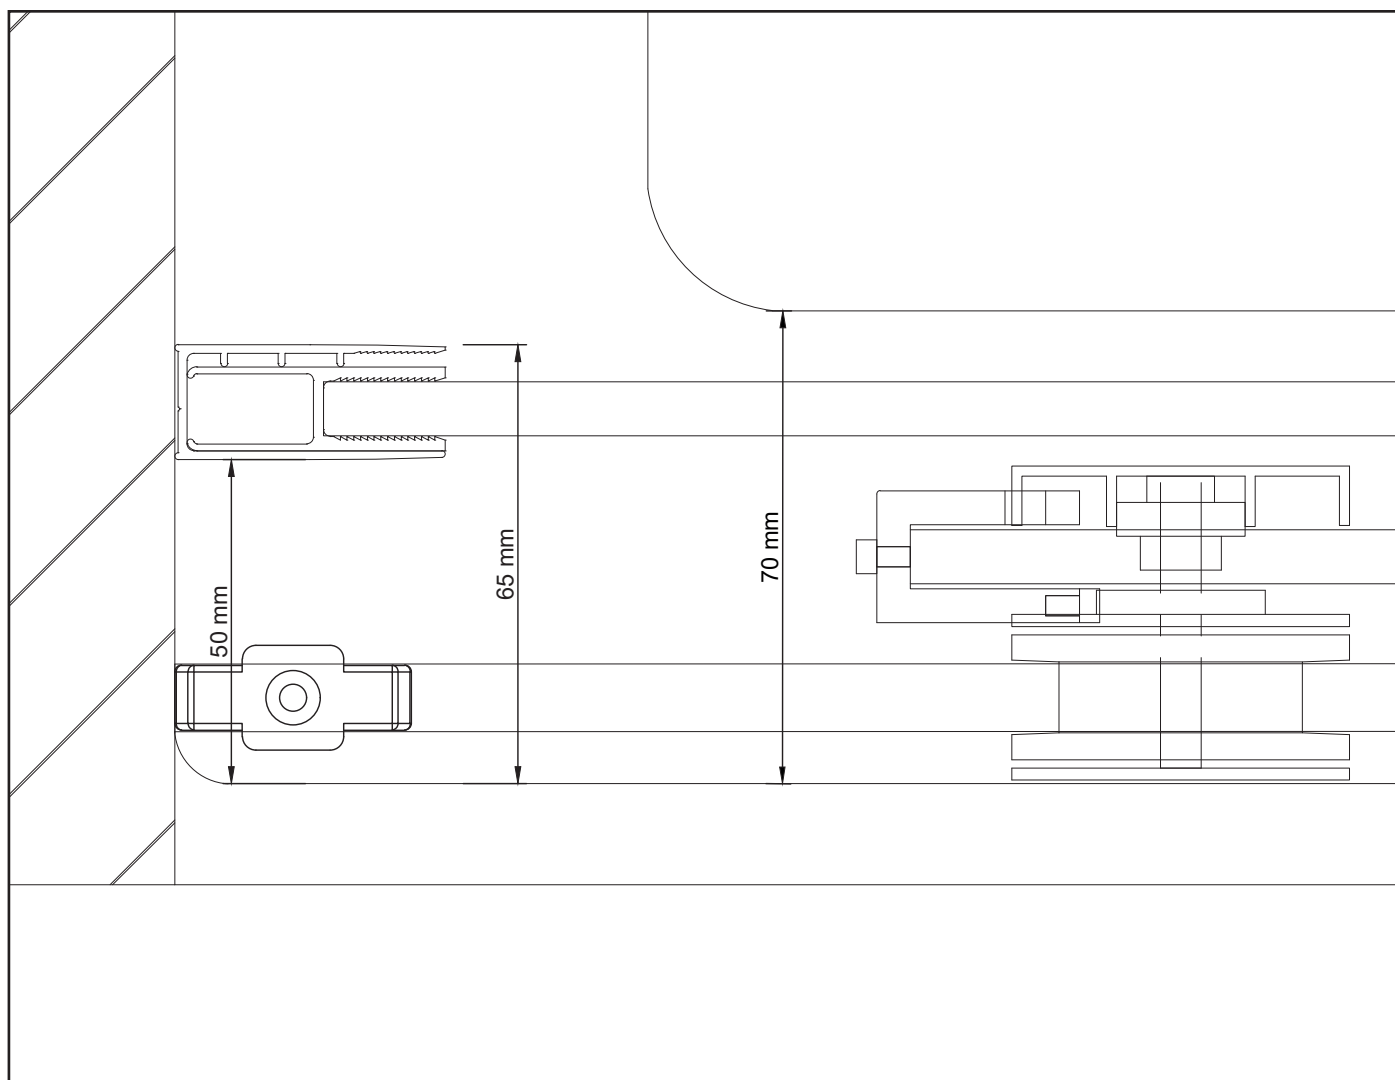






MOUNTING

1st STEP

1. Check the levelness of the shower tray with the bubble level.
2. Place the wall profiles and use the level for vertical alignment.
3. Mark the holes on the wall with a pencil.
4. Drill the holes in the wall with a drill.
5. Insert wall plugs and screw in the screws to secure the profiles.

IMPORTANT

The shower enclosure, when mounted on the shower tray, requires a ledge with a minimum width of 7 cm.

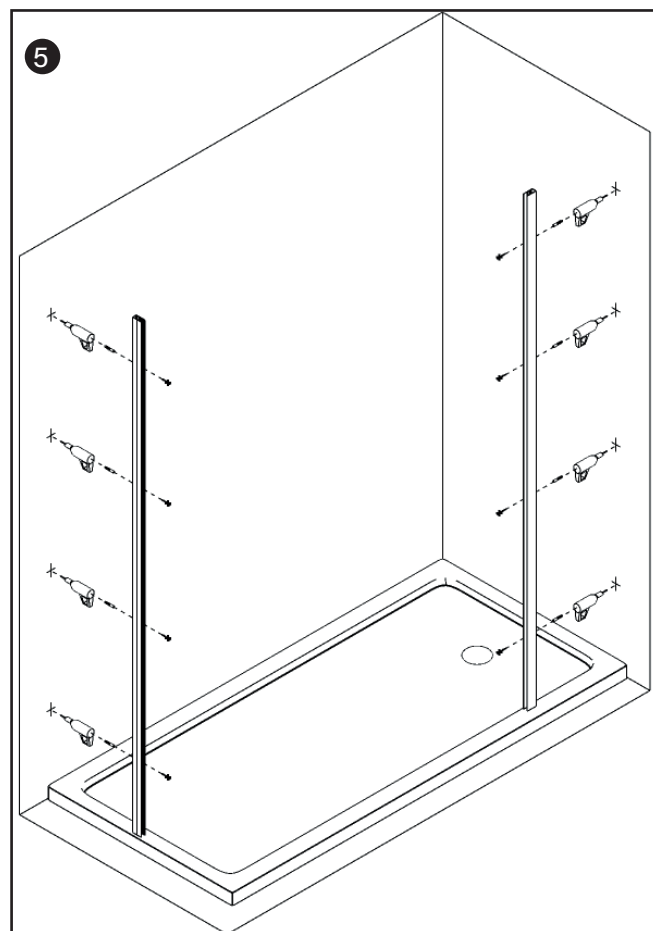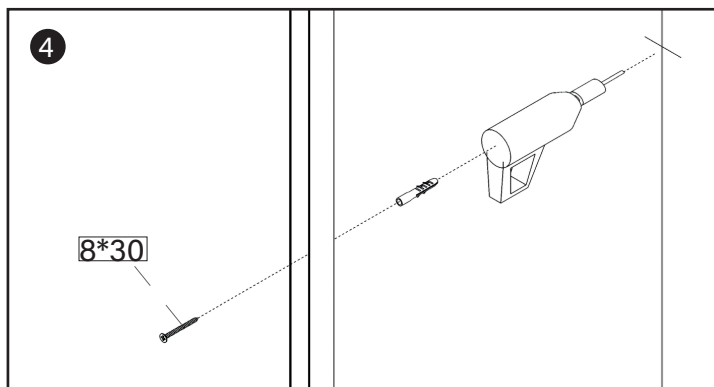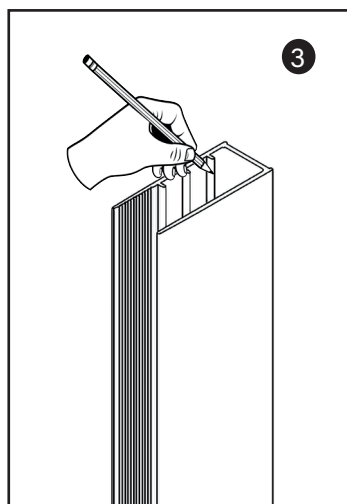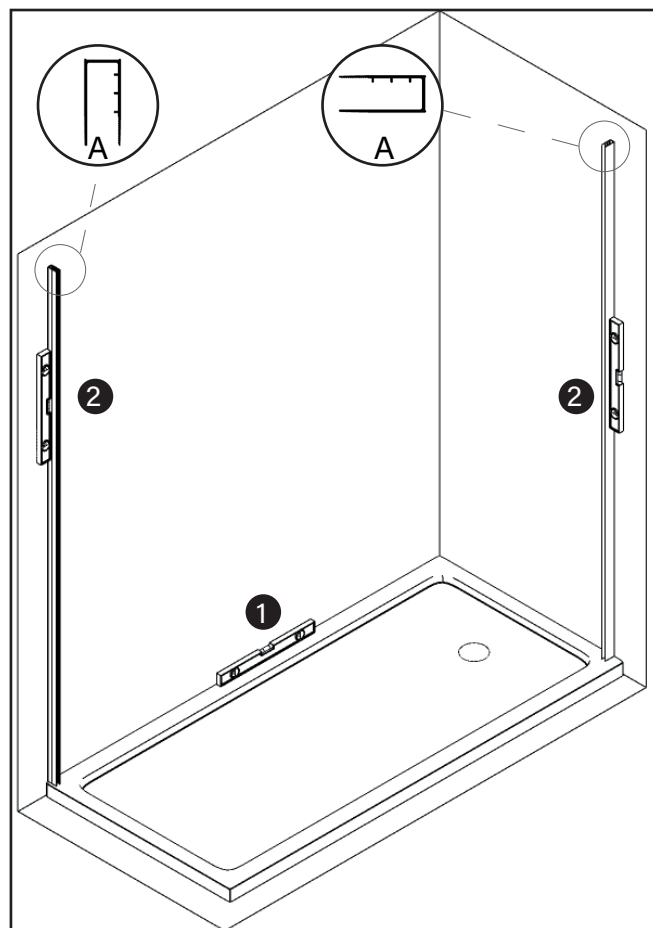
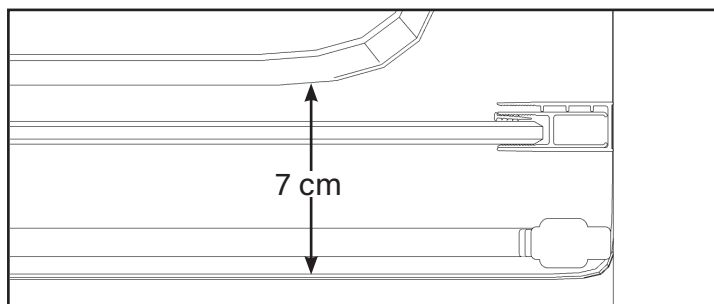


2nd STEP

1. Insert the seal under the glass plate of the fixed side wall.



CAUTION

The frame protrudes on one side relative to the glass; the protruding part serves as a seat for the under-glass seal, so it should be oriented downward.

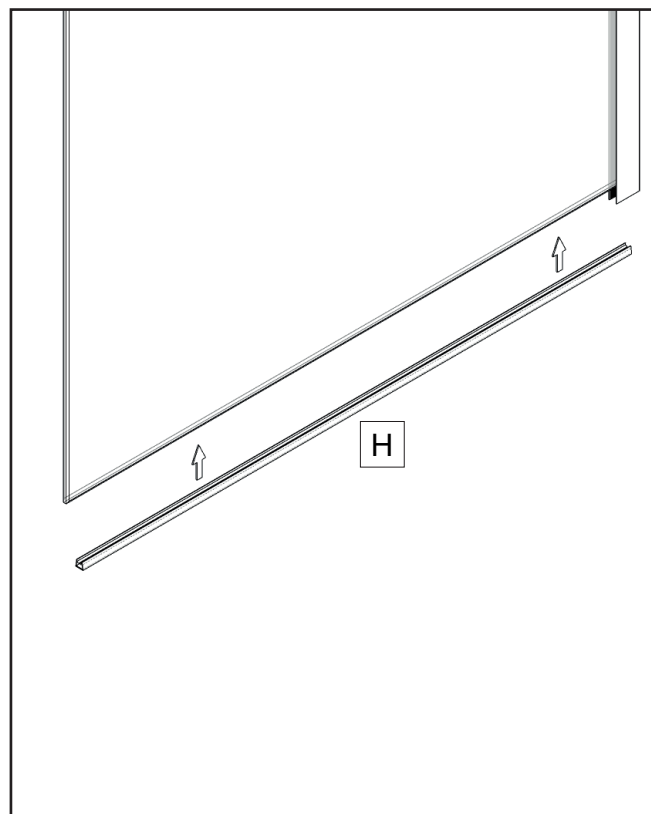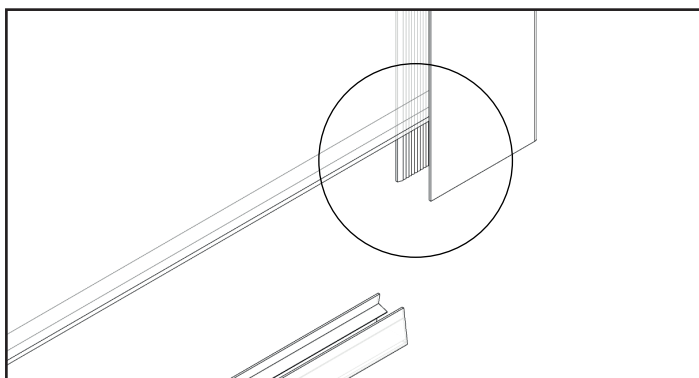

3rd STEP

1. Insert the fixed glass into the wall profile.
2. Insert the roll seal between the two aluminum profiles.

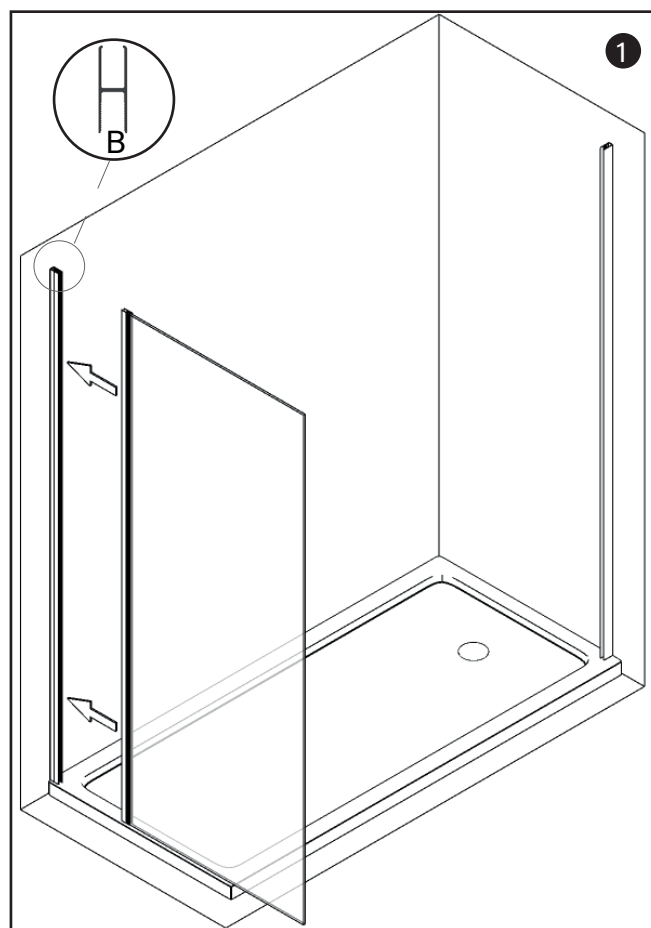
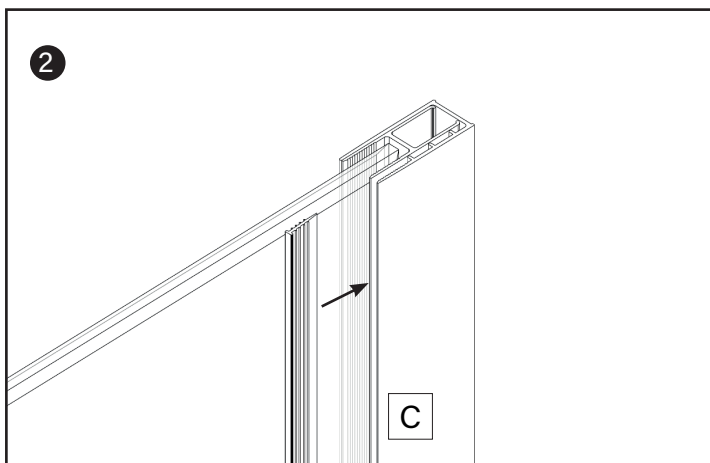


4th STEP

1. Insert the fixed glass into the wall profile on the door side.





NOTE: *Nothing should go under the fixed glass plate on the door side; it should be placed and sealed from the outside.*

2. Insert the roll seal between the two aluminum profiles on the inside.

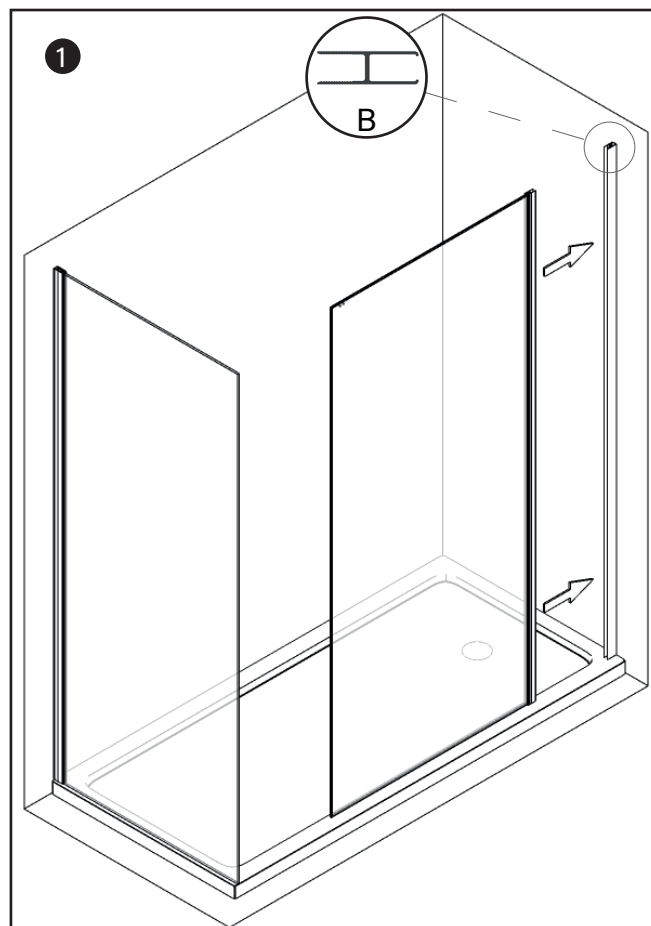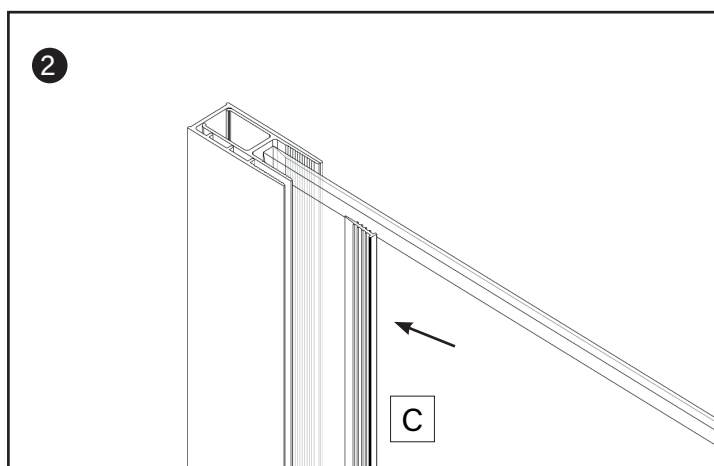

5rd STEP



1. Install the ground track along with the fixing support with silicone, at a distance from the glass of 3.4 cm.
2. Place the cover on the stroke stop.

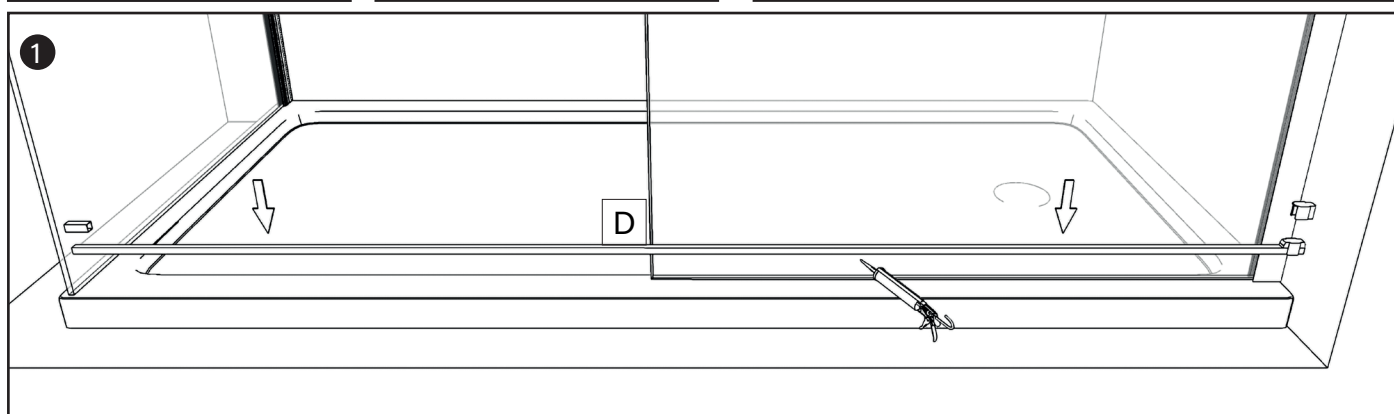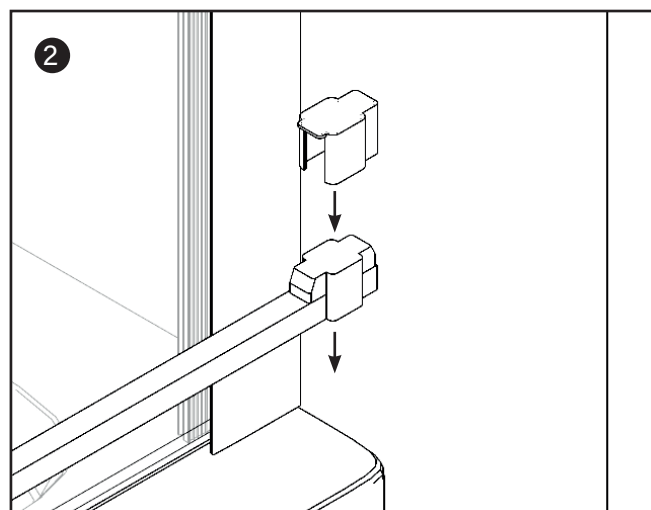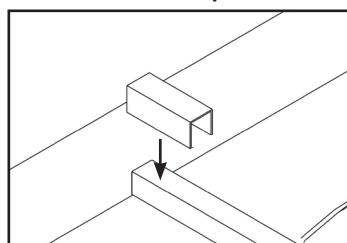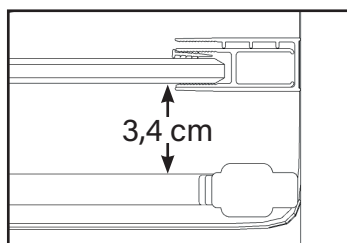

6th STEP




1. Join the two retaining bars for the fixed glass panels.
2. Secure the two bars with the hex key and screw the glass bracket to the bar.

IMPORTANT: *The lateral glass retaining bar should be placed at a distance of 15 cm.*

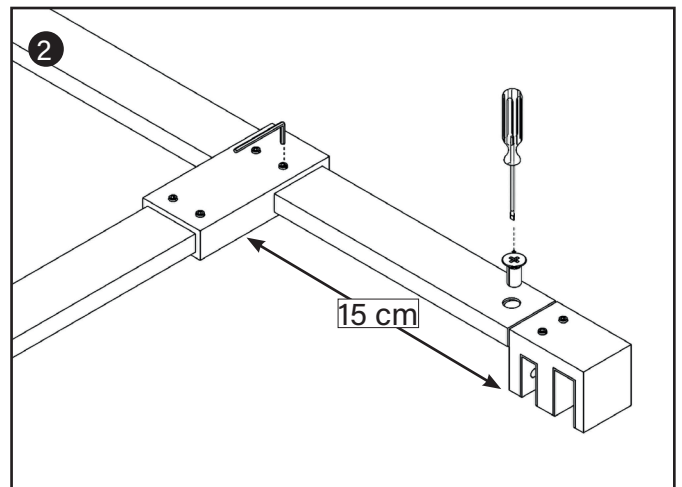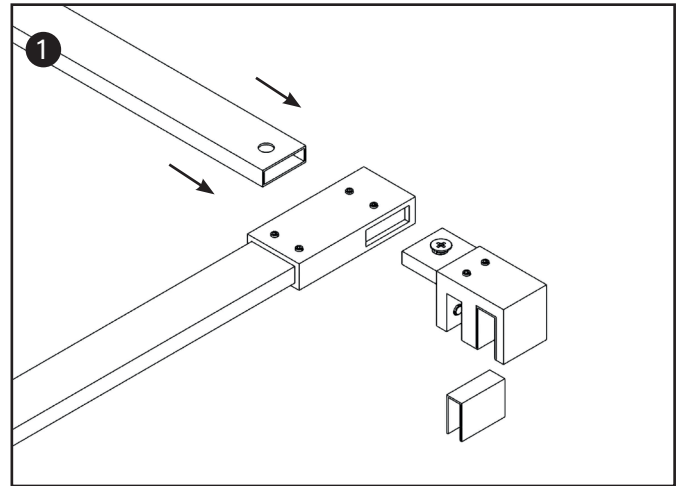

7th STEP




1. Check the glass distance and cut the retaining bar to size.
2. Position the wall retaining bar bracket and mark the hole with a pencil.
3. Drill the hole in the wall, insert the wall plug, and screw in the screws to secure the bracket.

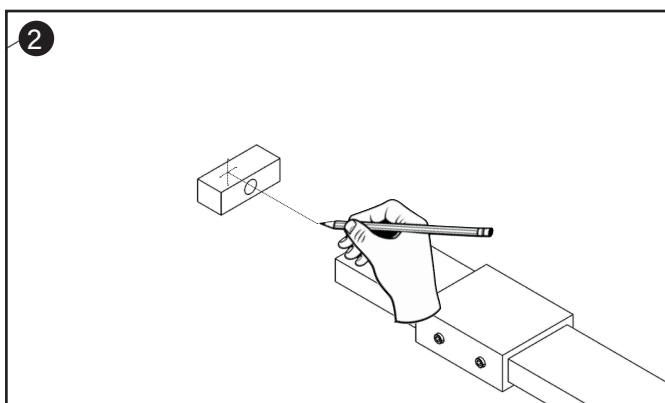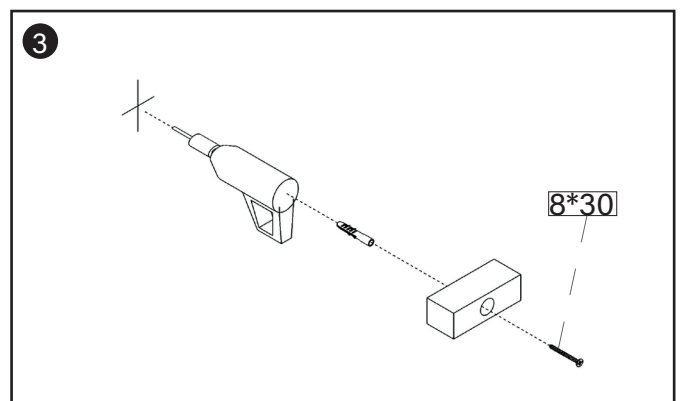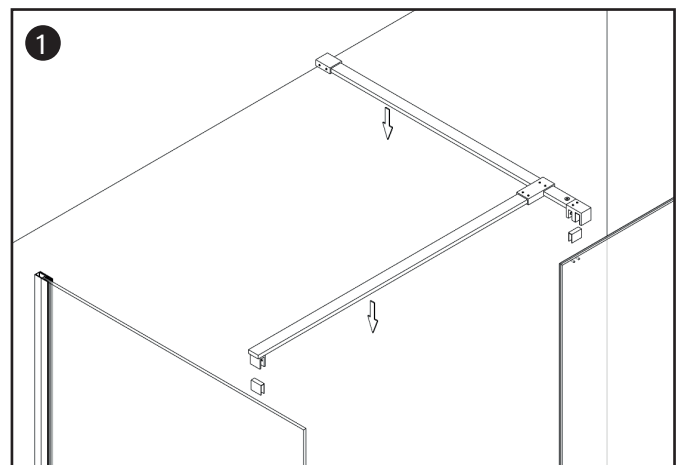

8th STEP

1. Insert the bar into the wall bracket without securing it.
2. Position the retaining bar on the two fixed walls without securing them.




Note: The horizontal retaining bar is crucial for the proper sealing of the shower enclosure and ensures resistance to stress on the fixed glass.

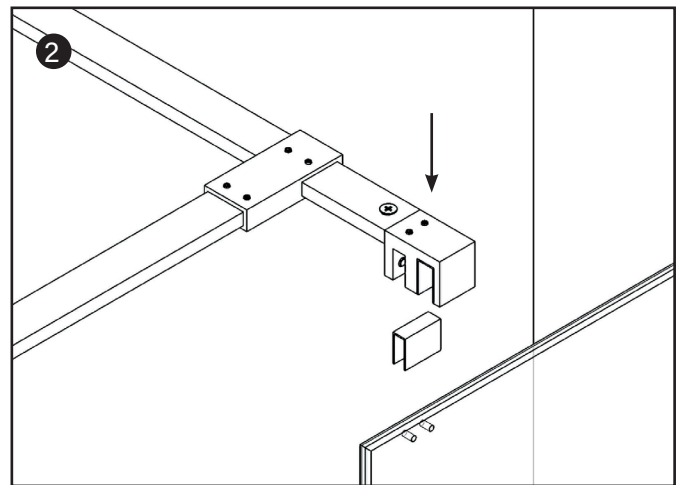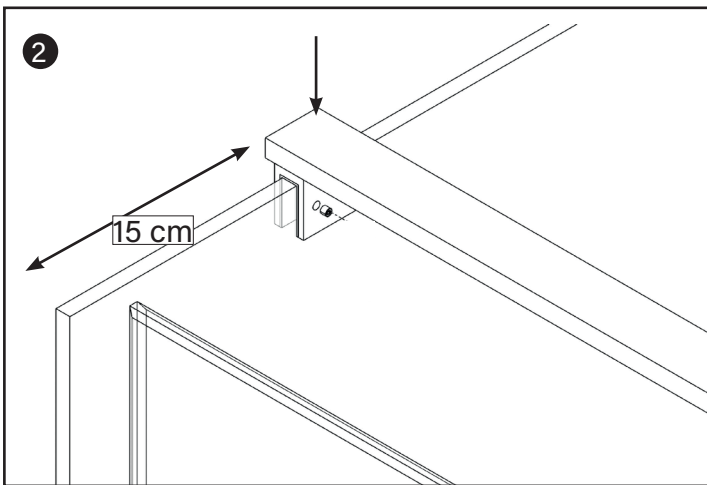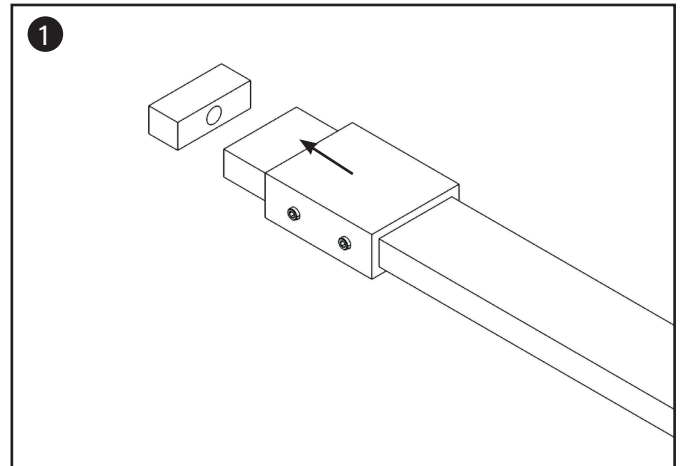

9th STEP




1. Insert the stopper with the seal into the sliding glass.
2. Secure the stopper with the hex key.
3. Install the two wheels in the sliding glass.

Note: The upper wheels are adjustable. If, after assembling the shower enclosure, the doors do not slide smoothly, they can be adjusted using the key.

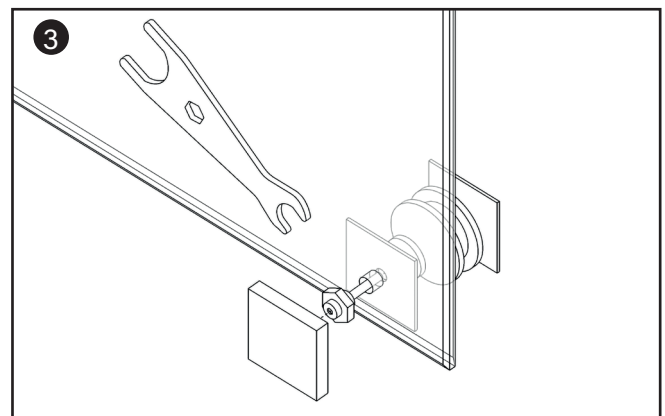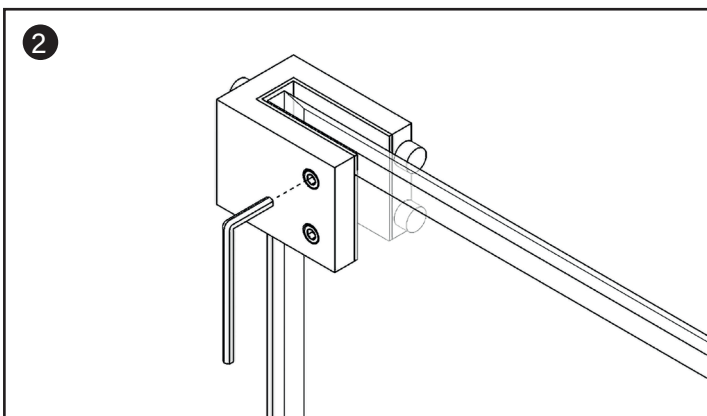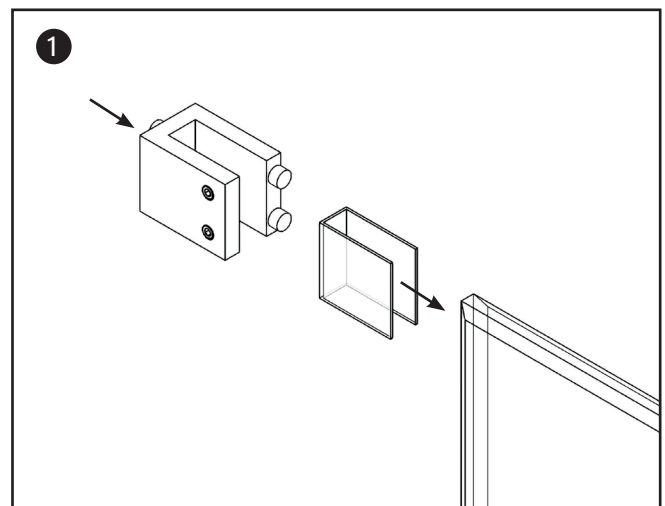



10th STEP

1. Lift the retaining bar and insert the sliding glass onto the track.
2. Secure the bar to the wall with the hex key.
3. Screw the screws with the hex key for attachment to the glass.

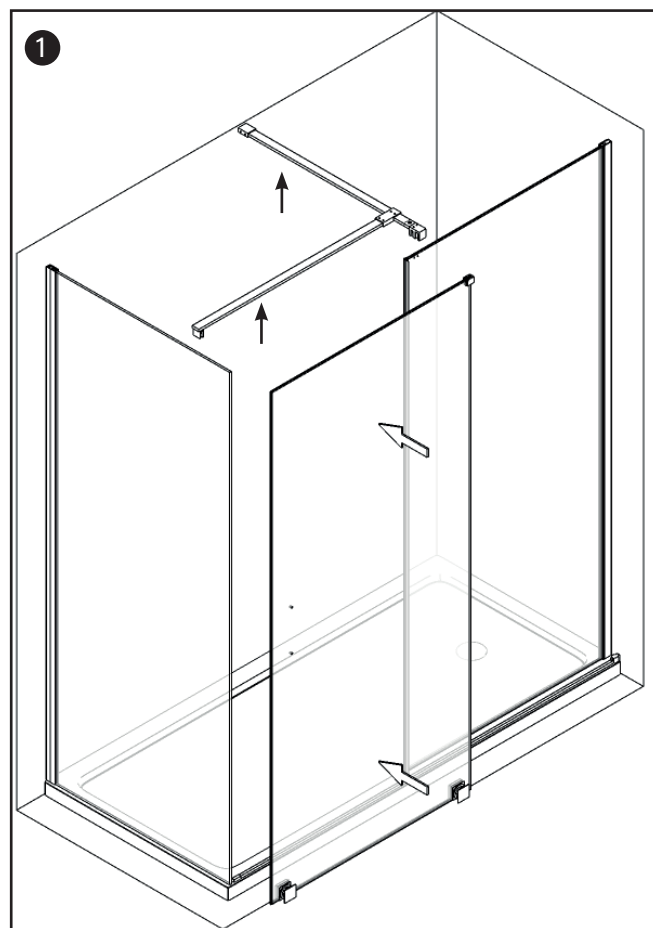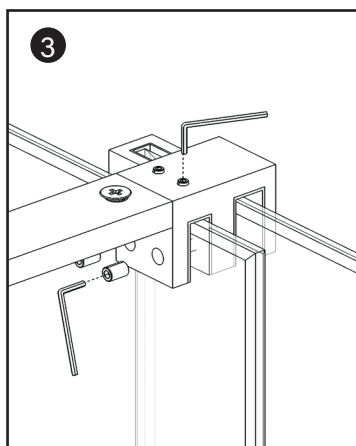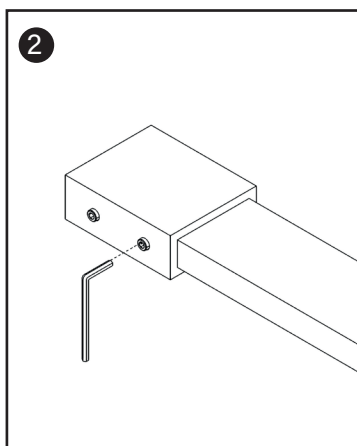



11th STEP

1. Remove the protective film from the adhesive magnet.
2. Attach the adhesive magnet to the fixed glass side at the closing point.
3. Install the magnetic closure seal on the sliding glass.

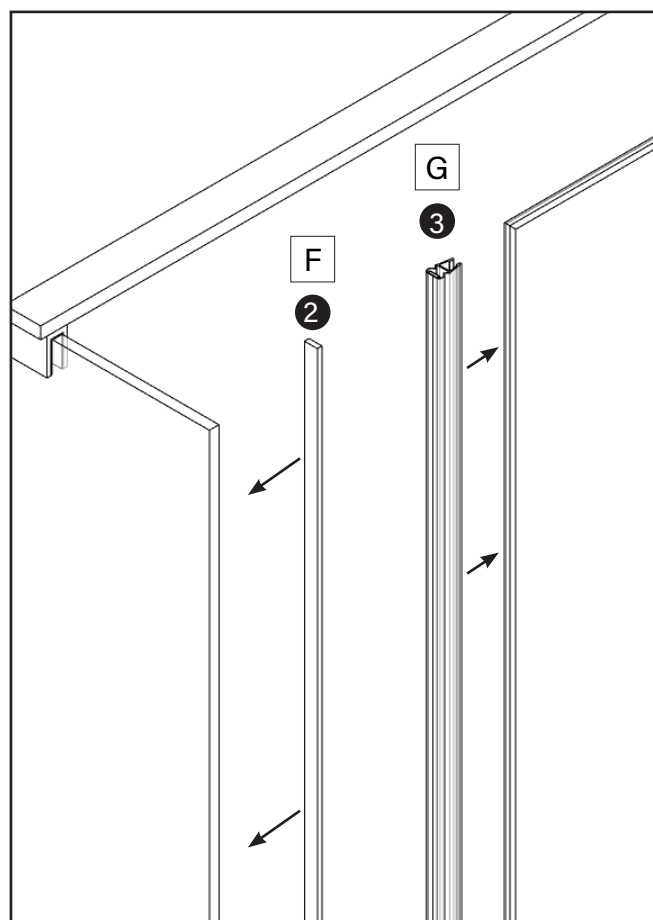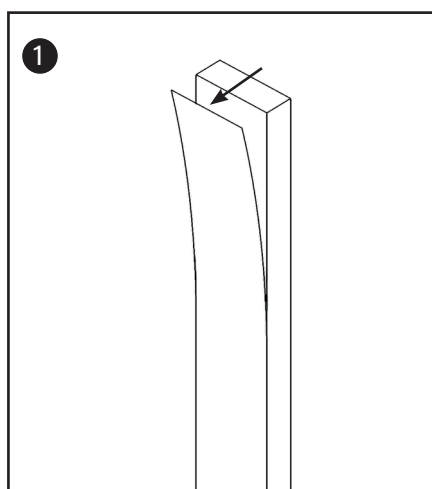

12th STEP

1. Insert the decorative profile on the top of the wall profiles.
2. Install the sealing gasket in the fixed glass.

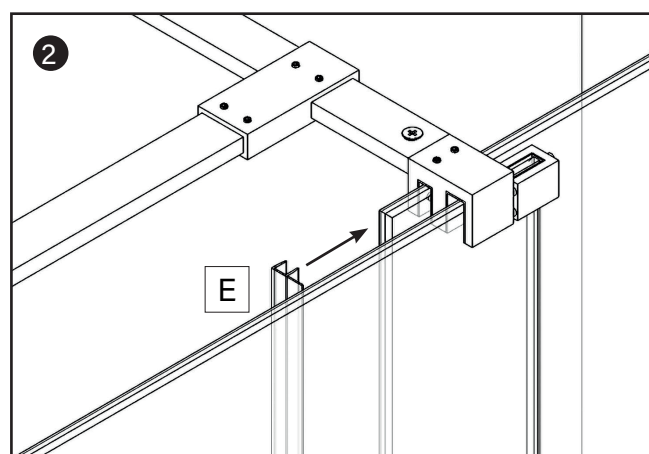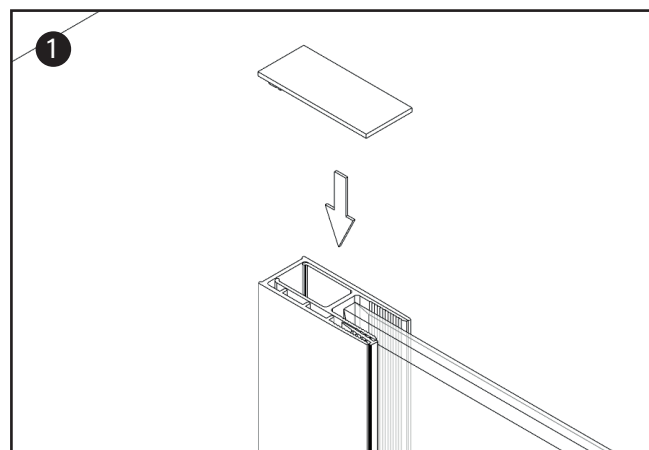

13th STEP

1. Install the handle on the sliding door.
2. Seal it with silicone as shown in the diagram and wait for 24 hours.

